

PFAFF

3568-12/52

Instruction manual

At the time of printing, all information and illustrations contained in this document were up to date.

Subject to alteration!

The reprinting, copying or translation of PFAFF Instruction Manuals, whether in whole or in part, is only permitted with our previous authorization and with written reference to the source.

G.M. PFAFF
Aktiengesellschaft

Postfach 3020
D-67653 Kaiserslautern

Königstr. 154
D-67655 Kaiserslautern

Editing / Illustrations
HAAS-Publikationen GmbH
D-53840 Troisdorf

| | Contents | Chapter - Page |
|----------|--|----------------|
| 1 | Safety | 1 - 1 |
| 1.01 | Directives | 1 - 1 |
| 1.02 | General notes on safety | 1 - 1 |
| 1.03 | Safety symbols | 1 - 2 |
| 1.04 | Important points for the user | 1 - 3 |
| 1.05 | Operating and specialist personnel | 1 - 3 |
| 1.05.01 | Operating personnel | 1 - 3 |
| 1.05.02 | Specialist personnel | 1 - 4 |
| 1.06 | Danger | 1 - 5 |
| 2 | Proper use | 2 - 1 |
| 3 | Specifications | 3 - 1 |
| 4 | Disposal of the machine | 4 - 1 |
| 5 | Transport, packaging and storage | 5 - 1 |
| 5.01 | Transport to the customer's premises | 5 - 1 |
| 5.02 | Transport within the customer's premises | 5 - 1 |
| 5.03 | Disposal of the packaging | 5 - 1 |
| 5.04 | Storage | |
| 6 | Explanation of the symbols | 6 - 1 |
| 7 | Controls | 7 - 1 |
| 7.01 | On/off switch | 7 - 1 |
| 7.02 | EMERGENCY OFF switch | |
| 7.03 | Foot switch | 7 - 2 |
| 7.04 | Start controls | 7 - 3 |
| 7.05 | Control panel on the sewing station | 7 - 4 |
| 7.05.01 | Display | 7 - 4 |
| 7.05.02 | Operation mode keys | 7 - 5 |
| 7.05.03 | Program station keys | 7 - 5 |
| 7.05.04 | Red function keys | 7 - 6 |
| 7.05.05 | Green function keys | 7 - 7 |
| 7.06 | Control panel on the folder station | 7 - 8 |
| 7.06.01 | Operation mode keys | 7 - 8 |

Table of Contents

| | Contents | Chapter - Page |
|-----------|---|----------------|
| | Contents | Chapter - Page |
| 7.06.02 | Station keys | 7 - 8 |
| 7.06.03 | Function keys | 7 - 8 |
| 7.07 | Jig changeover control | 7 - 9 |
| 8 | Mounting and commissioning the machine | 8 - 1 |
| 8.01 | Mounting | 8 - 1 |
| 8.02 | Commissioning | 8 - 2 |
| 8.02.01 | Turning the machine on/off | 8 - 3 |
| 8.02.02 | Adjusting the zero point | 8 - 4 |
| 9 | Preparation | 9 - 1 |
| 9.01 | Inserting the needle | 9 - 1 |
| 9.02 | Winding the bobbin thread, adjusting the thread tension | 9 - 2 |
| 9.03 | Changing the bobbin | 9 - 3 |
| 9.03.01 | Bobbin change, bobbin case and bobbin thread tension | 9 - 3 |
| 9.03.02 | Changing the bobbin from the top in MANUAL mode | 9 - 4 |
| 9.03.03 | Changing the bobbin from the top in AUTOMATIC mode | 9 - 5 |
| 9.04 | Threading the needle thread | 9 - 6 |
| 9.05 | Program number selection | 9 - 7 |
| 9.06 | Automatic change in program station | 9 - 8 |
| 9.07 | Jig monitor (optional) | 9 - 9 |
| 9.07.01 | Activating jig monitor (menu) | 9 - 9 |
| 9.07.02 | Determining the jig code | 9 - 10 |
| 9.08 | Placement of the cuttings | 9 - 11 |
| 9.09 | Changing the assembly | |
| 10 | Programming and sewing | 10 - 1 |
| 10.01 | Brief description of Input mode | 10 - 1 |
| 10.01.01 | Direct functions | 10 - 1 |
| 10.01.02 | Summary of functions in the 1st menu level | 10 - 1 |
| 10.01.03 | Summary of functions in the 2nd menu level | 10 - 1 |
| 10.02 | Description of the menu levels | 10 - 2 |
| 10.02.01 | 1st menu level | 10 - 3 |
| 10.02.02 | Entering the 2nd menu level | 10 - 3 |
| 10.02.03 | 2nd menu level | 10 - 3 |
| 10.03 | Examples for selecting functions | 10 - 4 |

| | Contents | Chapter - Page |
|-----------|--|----------------|
| 10.03.01 | Selecting a direct function | 10 - 4 |
| 10.03.02 | Selecting a function from the 1st menu level | 10 - 4 |
| 10.03.03 | Selecting a function from the 2nd menu level | 10 - 5 |
| 10.04 | Description of the menu levels | 10 - 6 |
| 10.04.01 | Functions in the 1st menu level | 10 - 6 |
| 10.04.02 | Functions in the 2nd menu level | 10 - 8 |
| 10.05 | Sewing | 10 - 13 |
| 10.05.01 | Sewing in the AUTOMATIC mode | 10 - 13 |
| 10.05.02 | Sewing in the MANUAL mode | 10 - 14 |
| 10.05.03 | Troubleshooting | 10 - 15 |
| 11 | Care and maintenance | 11 - 1 |
| 11.01 | Cleaning the machine | 11 - 2 |
| 11.02 | Lubricating the sewing head | 11 - 3 |
| 11.03 | Lubricating the zigzag drive | 11 - 4 |
| 11.04 | Lubricating the carriage guides of the X/Y control | 11 - 5 |
| 11.05 | Lubricating the jig changeover | 11 - 6 |
| 11.06 | Lubricating the stacker guides | 11 - 7 |
| 11.07 | Emptying the water trap of the compressed air unit | 11 - 7 |
| 11.08 | Checking and regulating air compression | 11 - 8 |
| 11.09 | Cleaning the air filter of the compressed air unit | 11 - 8 |
| 11.10 | Cleaning the blower air filter | 11 - 9 |
| 12 | Adjustment | 12 - 1 |
| 12.01 | Notes on adjustments | 12 - 1 |
| 12.02 | Tools, gauges and other accessories | 12 - 1 |
| 12.03 | Abbreviations | 12 - 1 |
| 12.04 | Removing/inserting sewing machine head | 12 - 2 |
| 12.05 | Checking and adjustment aids | 12 - 3 |
| 12.06 | Adjusting the sewing machine head | 12 - 4 |
| 12.06.01 | Counterweight | 12 - 4 |
| 12.06.02 | Centering the needle in the needle hole (in the direction of sewing) | 12 - 5 |
| 12.06.03 | Needle-bar-parallel guide | 12 - 6 |
| 12.06.04 | Setting zero stitch | 12 - 7 |

Table of Contents

| | Contents | Chapter - Page |
|----------|--|----------------|
| 12.06.05 | Zigzag stitch movement | 12 - 8 |
| 12.06.06 | Needle penetration symmetry | 12 - 9 |
| 12.06.07 | Centering the needle in the needle hole (across the direction of sewing) | 12 - 10 |
| 12.06.08 | Zigzag stitch width | 12 - 11 |
| 12.06.09 | Hook bearing | 12 - 12 |
| 12.06.10 | Hook lubrication | 12 - 13 |
| 12.06.11 | Gear box drive belt | 12 - 14 |
| 12.06.12 | Preadjusting the needle height | 12 - 15 |
| 12.06.13 | Needle bar rise, hook-to-needle clearance and bobbin case position stop | 12 - 16 |
| 12.06.14 | Final adjustment of needle height | 12 - 17 |
| 12.06.15 | Bobbin case opener position | 12 - 18 |
| 12.06.16 | Bobbin case opener movement | 12 - 19 |
| 12.06.17 | Counter presser lifting stroke | 12 - 20 |
| 12.06.18 | Needle guard movement | 12 - 21 |
| 12.06.19 | Needle guard position | 12 - 22 |
| 12.06.20 | Counter presser height | 12 - 23 |
| 12.06.21 | Counter presser position | 12 - 24 |
| 12.06.22 | Presser | 12 - 25 |
| 12.06.23 | Needle thread tension release | 12 - 26 |
| 12.06.24 | Thread check spring | 12 - 28 |
| 12.06.25 | Thread puller | 12 - 29 |
| 12.06.26 | Bobbin winder | 12 - 30 |
| 12.06.27 | Synchronizer | 12 - 31 |
| 12.07 | Adjusting the thread trimmer | 12 - 32 |
| 12.07.01 | Mounting/dismounting the control unit | 12 - 32 |
| 12.07.02 | Preadjusting the control cam | 12 - 33 |
| 12.07.03 | Roller lever | 12 - 34 |
| 12.07.04 | Latch | 12 - 35 |
| 12.07.05 | Engaging solenoid | 12 - 36 |
| 12.07.06 | Actuating lever | 12 - 37 |
| 12.07.07 | Engaging lever | 12 - 38 |
| 12.07.08 | Cutting test | 12 - 39 |
| 12.07.09 | Thread catcher position | 12 - 40 |
| 12.07.10 | Control cam (final adjustment) and catch spring | 12 - 41 |

| | Contents | Chapter - Page |
|-----------|--|----------------|
| 12.08 | Adjusting the folding and feed devices | 12 - 42 |
| 12.08.01 | Adjusting the switch vanes on the X/Y control | 12 - 42 |
| 12.08.02 | Home position of the feed arm | 12 - 43 |
| 12.08.03 | Feed changeover | 12 - 44 |
| 12.08.04 | Sewing jig position at the sewing station | 12 - 45 |
| 12.08.05 | Aligning the sewing jig | 12 - 46 |
| 12.08.06 | Sewing jig position at the folding station (home position) | 12 - 47 |
| 12.08.07 | Proximity switches | 12 - 48 |
| 12.08.08 | Height of the loading plate | 12 - 49 |
| 12.08.09 | Height of pocket plate support | 12 - 50 |
| 12.08.10 | Basic dimensions of the folder | 12 - 51 |
| 12.08.11 | Height of the folder device | 12 - 52 |
| 12.08.12 | Position of pocket plate arm | 12 - 53 |
| 12.08.13 | Pocket plate position | 12 - 54 |
| 12.08.14 | Trim pocket plate height adjustment | 12 - 55 |
| 12.08.15 | Watch pocket plate height adjustment | 12 - 56 |
| 12.08.16 | Die of the trim assembly | 12 - 57 |
| 12.08.17 | Die of the watch pocket assembly | 12 - 59 |
| 12.08.18 | Position of folder plates | 12 - 60 |
| 12.08.19 | Actuating sequence of the folder plates | 12 - 61 |
| 12.08.20 | Position of corner folders | 12 - 62 |
| 12.08.21 | Parallelism of seam to pocket | 12 - 63 |
| 12.08.22 | Centering the pocket seam | 12 - 64 |
| 12.08.23 | Distance of seam to pocket | 12 - 65 |
| 12.08.24 | Seam backtack distance | 12 - 66 |
| 12.08.25 | Stacker | 12 - 67 |
| 12.08.26 | Variable trim assembly | 12 - 68 |
| 12.09 | Shaping folder plates | 12 - 69 |
| 12.09.01 | New installation/self-manufacture of folder plates | 12 - 69 |
| 12.09.02 | Slanting the lateral folder plates | 12 - 70 |
| 13 | Control system | 13 - 1 |
| 13.01 | SERVICE function | 13 - 1 |
| 13.02 | Error messages | 13 - 6 |
| 13.02.01 | Sewing motor | 13 - 6 |

Table of Contents

| | Contents | Chapter - Page |
|-----------|-----------------------------------|----------------|
| | Contents | Chapter - Page |
| 13.02.02 | Disk errors | 3 - 7 |
| 13.02.03 | Feed motor | 13 - 8 |
| 13.03 | List of locks | 13 - 9 |
| 14 | Wiring diagrams | 14 - 1 |
| | Reference list | 14 - 1 |
| | Layout plan | 14 - 5 |
| | Circuit diagram | 14 - 6 |
| | Sewing motor | 14 - 13 |
| | Stepping motor | 14 - 14 |
| | Connection serial interface | 14 - 15 |
| | 220V/24V mains supply | 14 - 16 |
| | 24V supply | 14 - 17 |
| | Frequency converter | 14 - 18 |
| | Control panel-PLC interface | 14 - 19 |
| | Block diagram | 14 - 20 |

1 Safety

1.01 Directives

This machine was built in accordance with the European regulations stated in the Conformity and Manufacturer's Declaration.

In addition to this Instruction Manual, also observe all generally accepted, statutory and other regulations and legal requirements - also those of the country in which the machine will be operated - and all valid environmental protection regulations!

Applicable local regulations of the social insurance society for occupational accidents or other supervisory organizations are to be strictly adhered to!

1.02 General notes on safety

- This machine must only be operated by adequately trained operators and only after having completely read and understood the Instruction Manual!
- All Notes on Safety and Instruction Manuals of the motor manufacturer are to be read before operating the machine!
- The Danger and Safety Instructions on the machine itself are to be followed!
- This machine must only be used for the purpose for which it is intended and must not be operated without its safety devices. All applicable safety regulations must be observed.
- When sewing parts (e.g. needle, presser foot, needle plate, feed dog or bobbin) are exchanged, when the machine is being threaded, when the machine is left unattended and during maintenance work, the machine is to be separated from the power supply by turning off the On/Off switch or removing the plug from the mains!
- Daily maintenance work must only be carried out by appropriately trained personnel!
- Repair work and special maintenance work must only be carried out by specialists or appropriately trained personnel!
- For maintenance and repair work on pneumatic devices, the machine must be separated from the source of pneumatic power! The only exceptions allowed are for adjustments and function testing by appropriately trained personnel!
- Work on electrical equipment must only be carried out by appropriately trained specialist personnel!
- Work is not permitted on parts and equipment which are connected to the power supply! Exceptions to this are contained in the regulations EN 50110.
- Modifications and alterations to the machine must only be carried out pursuant to all relevant safety regulations!

- Only spare parts which have been approved by us are to be used for repairs!
We expressly point out that any replacement parts or accessories not supplied by us have not been tested and approved by us. The installation and/or use of any such products may result in negative changes to the constructional characteristics of the machine. We are not liable for any damage which may be caused by non-original parts.

1.03 Safety symbols



Danger!
Points to be observed.



Danger of injury to operating and specialist personnel!

1.04 Important points for the user

- This Instruction Manual is a component part of the machine and must be available to the operating personnel at all times.
The Instruction Manual must be read before operating the machine for the first time.
- The operating and specialist personnel is to be instructed on the safety equipment of the machine and regarding safe work methods.
- It is the duty of the user to only operate the machine in perfect running order.
- It is the obligation of the user to ensure that none of the safety mechanisms are removed or deactivated.
- It is the obligation of the user to ensure that only authorized persons operate and work on the machine.

Further information can be obtained at the point of sale.

1.05 Operating and specialist personnel

1.05.01 Operating personnel

Operating personnel are persons responsible for the preparation, operating and cleaning of the machine as well as taking care of problems arising in the sewing area.

The operating personnel is obliged to observe the following points and must:

- always observe the Notes on safety in the Instruction Manual!
- never use any working methods which could reduce the level of safety in using the machine!
- not wear loosely fitting clothing or jewelery such as chains or rings!
- also ensure that only authorized persons have access to the potentially dangerous area around the machine!
- always immediately report to the user any changes in the machine which may reduce its level of safety!

1.05.02 Specialist personnel

Specialist personnel are persons who have completed expert education/training in the fields of electrics, electronics, pneumatics and mechanics. They are responsible for the lubrication, maintenance, repair and adjustment of the machine.

The specialist personnel is obliged to observe the following points and must:

- always observe the Notes on Safety in the Instruction Manual!
- switch off the On/Off switch before carrying out adjustments or repairs and ensure that it cannot be switched on again unintentionally!
- never work on parts and devices which are still connected to the power supply! The only exceptions to this directive are found in the regulations EN 50110.
- for maintenance and repair work on pneumatic devices, the machine must be separated from the source of pneumatic power! The only exceptions allowed are for function testing.
- replace the protective coverings and close the electrical control box after all repairs or maintenance work!

1.06

Danger



A working area of **1 meter** is to be kept free both in front of and behind the machine while it is in operation, so that it is always easily accessible.



Never reach into the sewing area while sewing!
Danger of injury by the needle!



Never leave objects on the table or in the needle plate area while adjusting the machine settings! Objects can become trapped or be slung away!
Danger of injury!

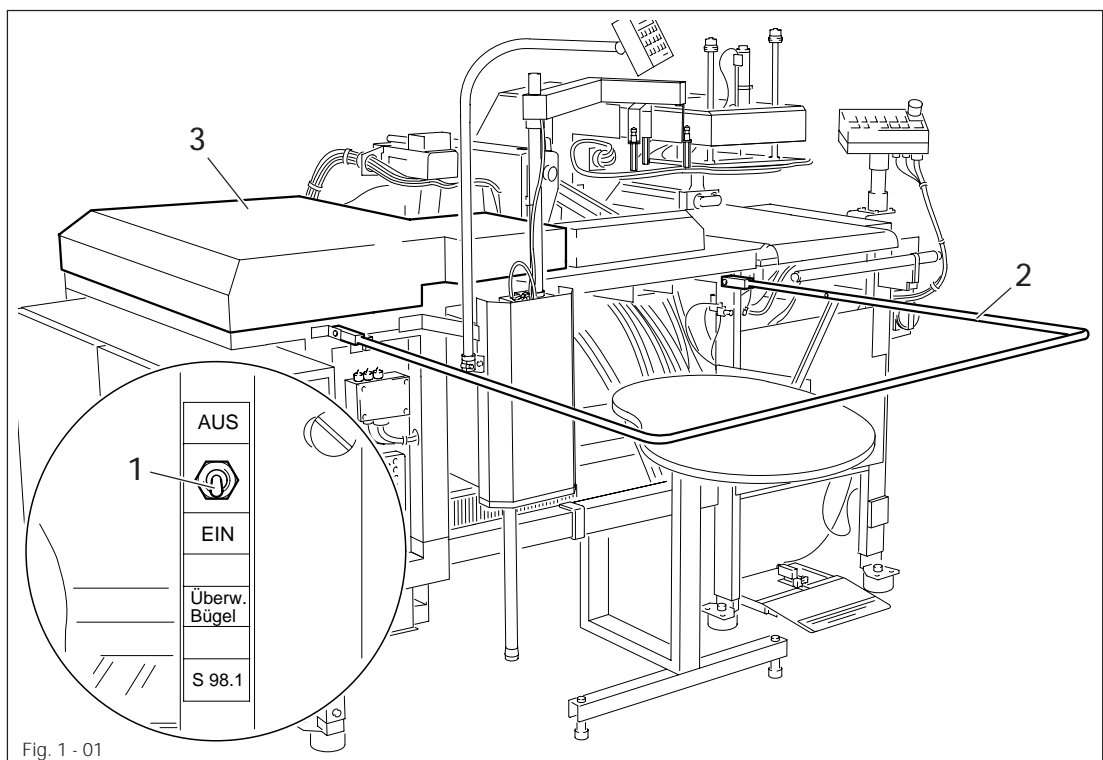


Fig. 1 - 01



Before operating the machine, make sure that safety switch **1** in the control box is switched on. Do not operate the machine under any circumstances if the safety switch **1** has been turned off! Danger of injury!



The machine must not be operated without safety bar **2**!
Danger of injury by the transport arm when it is swinging back and forth!



The machine must only be operated with the cover **3** closed!
Danger of injury by the moving parts of the XY control!



The machine must not be operated without the sewing head's protective devices such as the take-up lever guard and the belt guard!
Danger of injury by the movement of the take-up lever or by the rotating V-belt!

2 Proper use

The PFAFF 3568-12/52 was designed for folding and sewing watch pockets or trim (pocket lining) onto jeans and similar articles. Seams are created using the program functions.



Any and all uses of this machine which have not been approved of by the manufacturer are considered to be inappropriate! The manufacturer cannot be held liable for any damage caused by the inappropriate use of the machine! The appropriate use of the machine means that all operational, adjustment, maintenance and repair measures required by the manufacturer are to be observed!

3 Specifications

| | |
|---|---|
| Sewing head: | PFAFF 918 -650/00 -900/51 |
| Sewing speed: | max. 4100 spm ⁻¹ |
| Stitch length: | max. 6 mm |
| Stitch type: | 301 (lockstitch) 304 (zigzag lockstitch) |
| Needle system: | 1955-07-MR5 |
| Needle size: | 110 - 140 Nm |
| Sewing motor: | AEG Permanent Magnet AC Servo-Motor |
| Motor speed: | max. 4500 rpm ⁻¹ |
| Connection voltage: | 230 V, 50 - 60 Hz AC |
| Power requirement: | approx. 1000 VA |
| Working air pressure: | min. 6 bar |
| Air consumption: | approx. 27 l / cycle |
| Working noise level: | |
| Emission at workplace at n = 4100 spm ⁻¹ : | 78 dB(A) |
| Dimensions of machine: | |
| Length: | approx. 2200 mm |
| Width: | approx. 1500 mm |
| Height: | approx. 2010 mm |
| Net weight: | approx. 653 kg |
| Gross weight: | approx. 840 kg |

4 Disposal of the machine

- The proper disposal of the machine is the responsibility of the customer.
- The materials used are steel, aluminium, brass and various plastics. The electrical equipment consists of plastics and copper.
- The machine must be disposed of in accordance with applicable local environmental protection regulations.



Special care is to be taken that parts soiled by lubricants are separately disposed of in accordance with the applicable local environmental protection regulations!

5 Transport packaging and storage

5.01 Transport to the customer's premises

Within Germany, machines are delivered without packaging.
Machines for export are packaged.

5.02 Transport within the customer's premises

The manufacturer bears no liability for transport within the customer's premises or to the location of use.

5.03 Disposal of the packaging

The packaging of these machines consists of paper, cardboard and VCE fibre. The proper disposal of the packaging is the responsibility of the customer.

5.04 Storage

The machine can be stored for up to 5 months if not in use. During this time it should be protected from dust and moisture.
For longer storage the individual parts of the machine, especially the moving parts, should be protected against corrosion, e.g. by a film of oil.

6 Explanation of the symbols

In the following section of this Instruction Manual, certain tasks or important pieces of information are accentuated by symbols.

The symbols used have the following meanings:



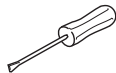
Note, information



Cleaning, care




Lubrication, greasing



Servicing, repairing, adjustment, maintenance
(only to be carried out by specialist personnel)


7 Controls

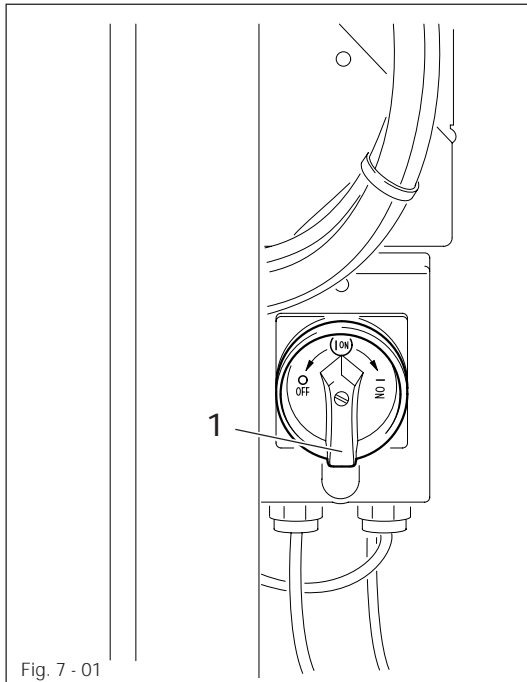7.01 On/off switch



- By turning switch 1, the power supply to the machine is switched on or off.

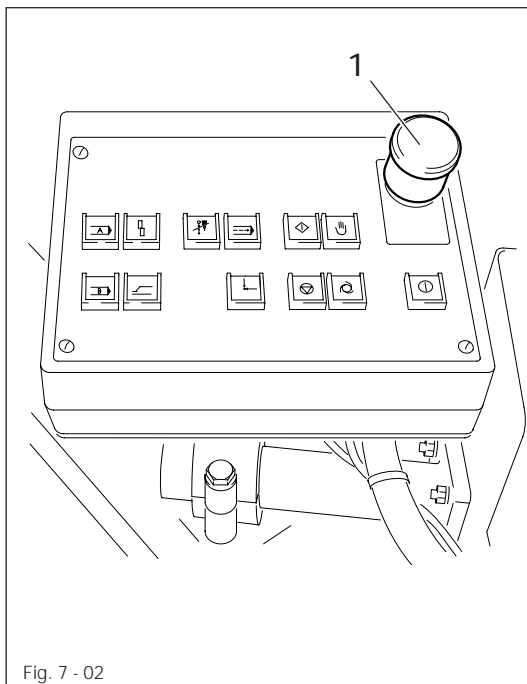7.02 EMERGENCY OFF switch



- By pressing the EMERGENCY OFF switch 1, the machine can be stopped in case of an emergency.
- Before the machine is turned back on, the EMERGENCY OFF switch 1 must be released by pulling it up.

7.03 Foot switch

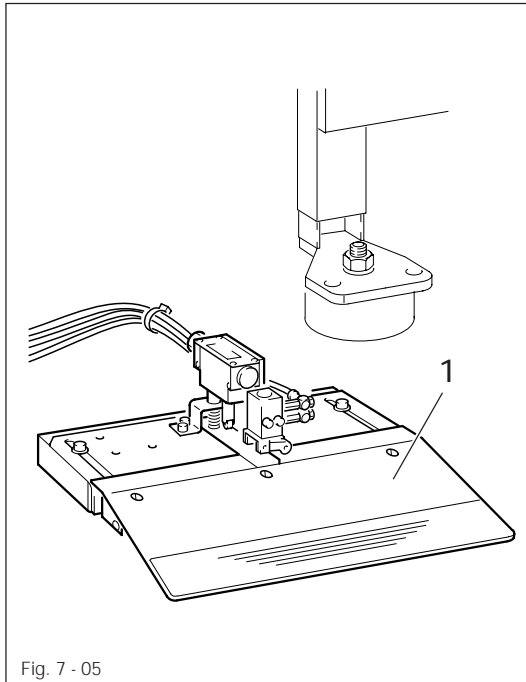


Fig. 7 - 05

- The function of the foot switch 1 can be adjusted to the various requirements for placing in the workpiece.
- The foot switch is adjusted via the menu.

By switching the functions HOME POSITION POCKET PLATE IN FRONT and PLAIN FABRIC on or off, the following menu combinations can be created:

| Menu combinations | Foot switch functions |
|---|--|
| HOME POSITION POCKET PLATE IN FRONT on PLAIN FABRIC on | no function |
| HOME POSITION POCKET PLATE IN FRONT on PLAIN FABRIC off | Lower pocket plate. (When the foot switch is activated again, the pocket plate remains raised so that the material can be aligned.) |
| HOME POSITION POCKET PLATE IN FRONT off PLAIN FABRIC on | Move forward pocket plate. |
| HOME POSITION POCKET PLATE IN FRONT off PLAIN FABRIC off | 1.Operation of switch: Move forward pocket plate. 2.Operation of switch: Lower pocket plate. (When the foot switch is activated again, the pocket plate remains raised so that the material can be aligned.) |



Refer to **chapter 10 Programming and sewing** for information on selecting functions.

7.04

Start controls

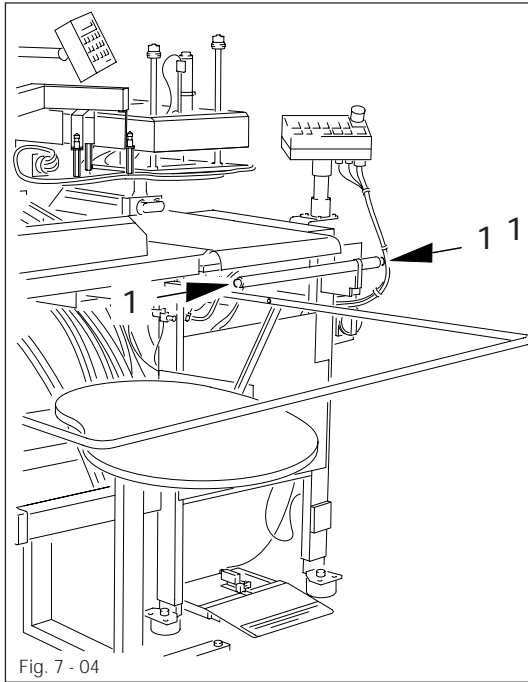


Fig. 7 - 04

- In **MANUAL** operation mode, when both start controls 1 are activated simultaneously a function is carried out according to the table below.
- In **AUTOMATIC** operation mode, when both start controls 1 are activated simultaneously the entire program sequence is started independent of the selected menu combination.
- The start controls 1 also are used to continue the program after the bobbin has been replaced.

By switching the functions HOME POSITION POCKET PLATE IN FRONT and PLAIN FABRIC on or off, the following menu combinations can be created:

| Menu combinations | Start control functions |
|---|---|
| HOME POSITION POCKET PLATE IN FRONT on PLAIN FABRIC on | Lower pocket plate and move forward folder |
| HOME POSITION POCKET PLATE IN FRONT on PLAIN FABRIC off | Move forward folder |
| HOME POSITION POCKET PLATE IN FRONT off PLAIN FABRIC on | Lower pocket plate and move forward folder |
| HOME POSITION POCKET PLATE IN FRONT off PLAIN FABRIC off | Move forward folder |



Refer to **chapter 10 Programming and sewing** for information on selecting functions.

7.05 Control panel on the sewing station

This control panel is used primarily for setting up the machine.

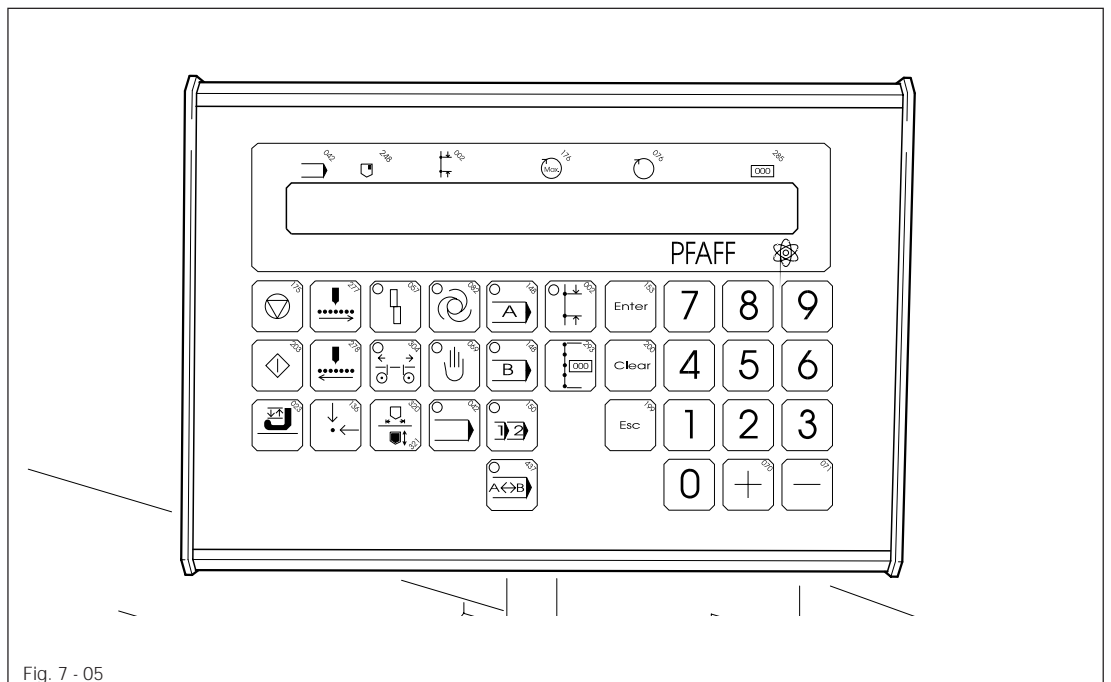




Fig. 7 - 05


7.05.01 Display


- The current value appears in the top line under the corresponding symbol.

 ⁰⁴² Program number (0-99)

 ²⁴⁸ Jig code (option)

 ⁰⁰² Stitch length (in mm)

 ¹⁷⁶ Maximum speed (in min⁻¹)

 ⁰⁷⁶ Actual speed (in min⁻¹)

 ²⁸⁶ Counter

- Various texts (e.g. input prompt, error message, etc.) appear in the bottom line of the display. Next to the symbol "#" is the text number of the text displayed (the text number is used for unique assignment of the texts in the various languages).

7.05.02 Operation mode keys

The system has three operation modes.

The operation mode selected is indicated by the light diode of the corresponding key.



Operation mode **AUTOMATIC**



Operation mode **MANUAL**



Operation mode **INPUT**



For operation within the individual operation modes, only certain functions can be used depending on the mode.

7.05.03 Program station keys

These keys activate functions in all three operation modes: **AUTOMATIC**, **MANUAL** and **INPUT**.

Via the keys, you can choose between 2 programs directly (e.g. varying backtacking for left and right pockets). The activated program station is indicated by the light diode.



Program station A

To select program station A.



Program station B

To select program station B.

7.05.04 Red function keys

These keys only have functions in the operation modes **AUTOMATIC** and **MANUAL**.



Program stop
Interrupt sewing program.



Program start
Start sewing program.
Continue program following interruption.



Presser/thread trapper
Raise or lower presser.
Open or close thread trapper.



Seam pattern forwards
Sew seam pattern forwards step by step.
Combined with the **program start key**, the seam pattern sequence is carried out automatically.



Seam pattern backwards
Sew seam pattern backwards step by step.
Combined with the **program start key**, the seam pattern sequence is carried out automatically.



Home position
Bring X/Y carriage and sewing to start position.



Reset key
Acknowledge error correction.



Change bobbin
In home position:
Move transport arm to folder station and tilt sewing machine upward.
In seam program:
Move stacker forward or backward respectively.



Transport arm/sewing jig
In sewing index (sewing jig linked to the sewing station):



Move transport arm to sewing or folder station.
In transport index (sewing jig linked to transport arm):
Raise or lower sewing jig.

7.05.05 Green function keys

These keys only have functions in the operation mode **INPUT**.



Program selection

When the function is activated (diode lit), a previously stored program can be selected via the **number keys** or the **plus/minus keys**.



Automatic station change

When the function is activated (diode lit), after every sewing operation there is an automatic change between program stations A and B.



Stitch length change

When the function is activated (diode lit), the value for the stitch length can be changed via the **number keys** or the **plus/minus keys**. The value entered must be confirmed with the **Enter key**.



Reset stitch counter

For resetting the bobbin thread stitch counter following an unplanned bobbin change.



Enter key

For confirming input values and dialogs (entry into functions).



Clear key

For resetting input values.



Esc key

For interrupting functions without assuming input values (return to previous menu level).



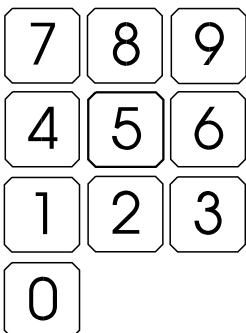
Plus key

For increasing the input values in increments, answering dialog questions with "yes" and for paging up in the menu mode.



Minus key

For decreasing the input values in increments, answering dialog questions with "no" and for paging down in the menu mode.



Number keys

For entering number values and direct selection of menu functions.

7.06 Control panel on the folder station

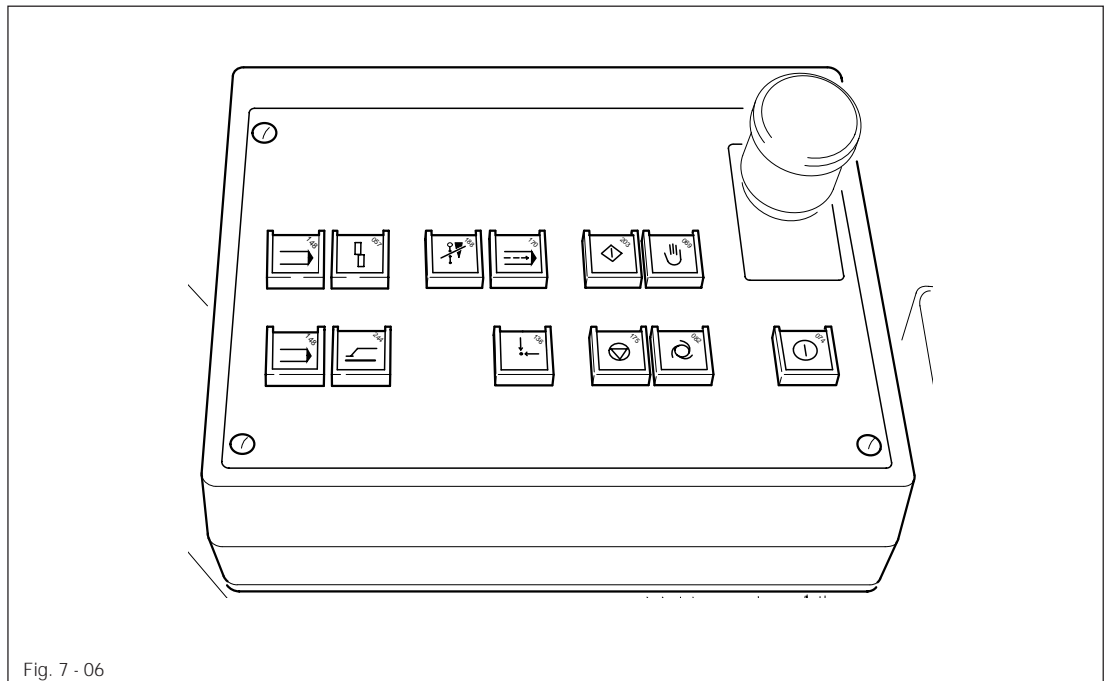


Fig. 7 - 06

7.06.01 Operation mode keys

The keys have the same function as those on the control panel of the sewing station (refer to chapter 7.07.02 Operation mode keys).



Operation mode **AUTOMATIC**



Operation mode **MANUAL**

7.06.02 Station keys



Program station A
Select program station A.



Program station B
Select program station B.

7.06.03 Function keys



Reset key
Acknowledges error correction.



Label
Adds label (without function on model 3568-12/52).



Do not sew

All functions are carried out except sewing.



Folder movement

Carries out folder functions step by step.
(Single steps of the machine without sewing.)
(Only in **MANUAL** operation mode.)



Home position

Brings folder and transport arm into starting position.



Program start

Starts sewing program.
Continues program after an interruption.



Program stop

Interrupts sewing program.



Switch on key

Turns on the machine.

7.07 Jig changeover control

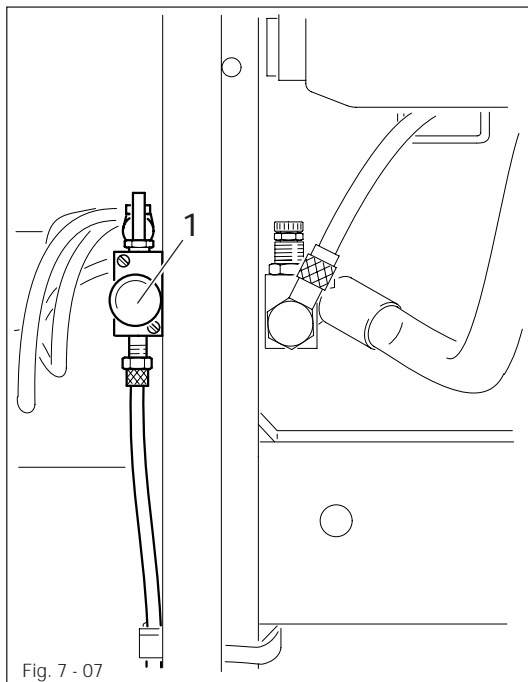


Fig. 7 - 07

- When control 1 is activated, the sewing jig and the transport arm (jig changeover) are disconnected.

8 Mounting and commissioning the machine

After unpacking the machine, check it for any transport damage. In case of damage, inform the shipping company and the responsible PFAFF dealer.

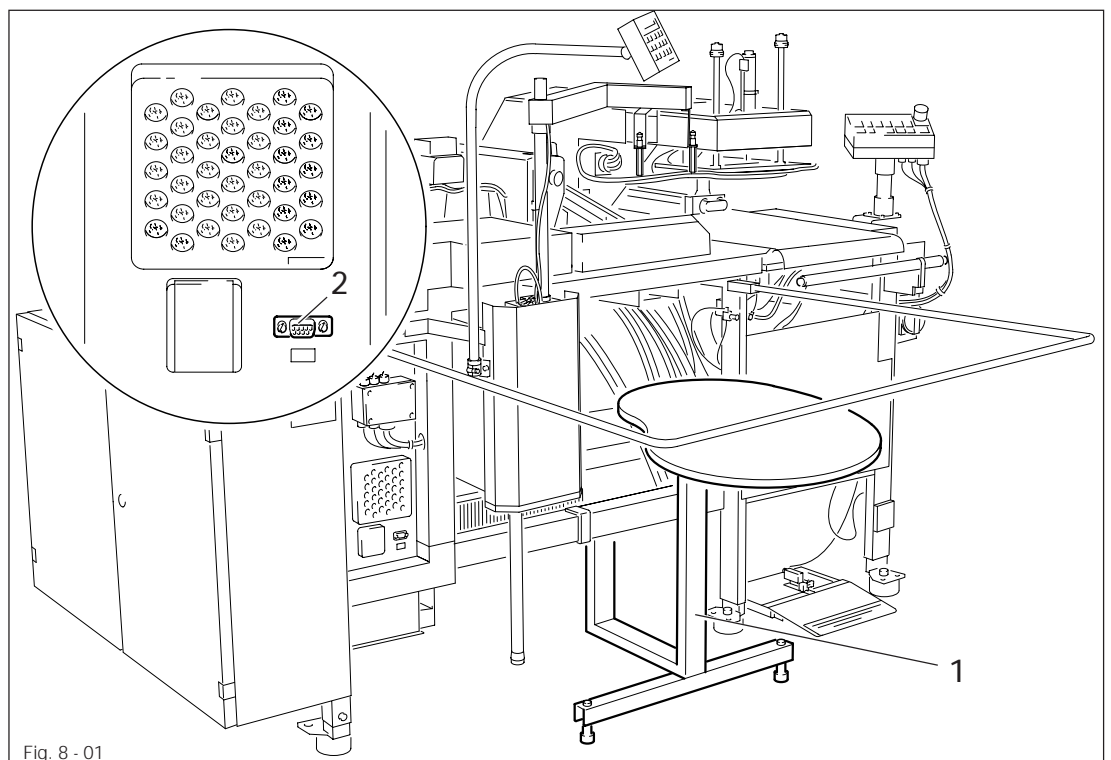


The machine must only be mounted and commissioned by qualified personnel!
All relevant safety regulations are to be observed!



8.01 Mounting

Suitable connections for supplying electricity and compressed air must be available at the machine's location (refer to **chapter 3 Specifications**).

The location where the machine is set up must have a flat, sturdy surface.



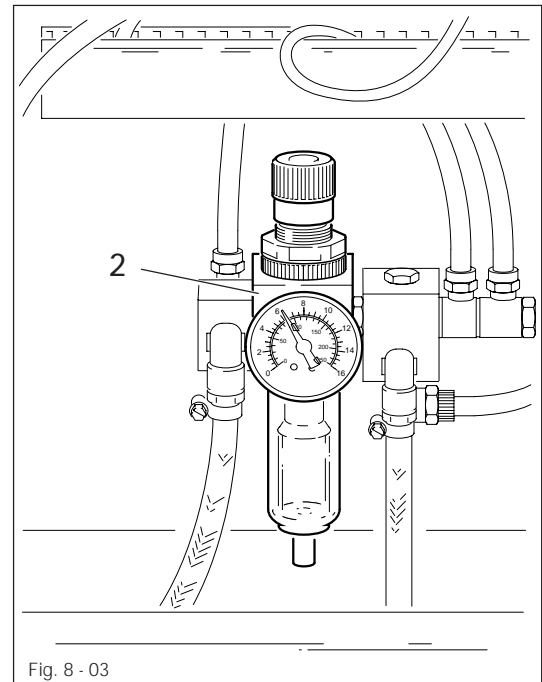
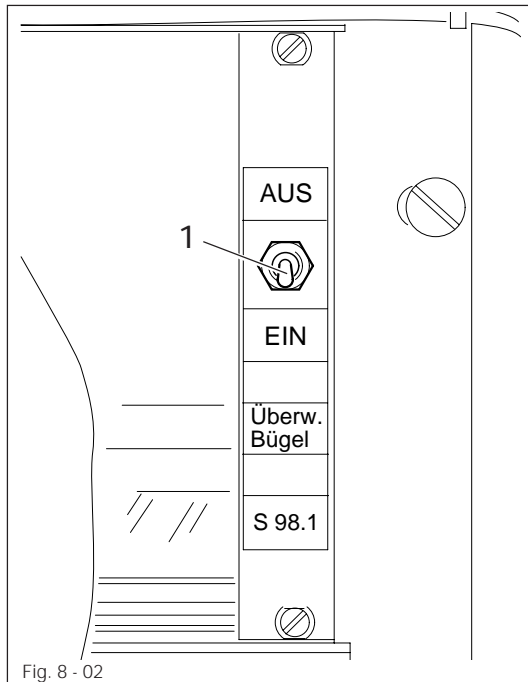
- Lift the machine with a forklift from the shipping pallet.
- Screw the six enclosed rubber springs onto the legs.
- Set down the machine on the ground and make sure it is standing horizontally by pushing the legs.
- Attach work table 1, with stacker frame and align.
- Plug disk drive into socket 2.



The safety switch 1 in the control box must be turned on before commissioning the machine! The machine must not be operated when the safety switch 1 is turned off! Danger of injury!

- Clean the machine thoroughly, checking the electrical cables and pneumatic connecting hoses for any damage.
- Oil machine and/or fill with oil (see **chapter 11 Care and maintenance**).
- Have specialists ensure that the machine's motor can be operated with the available electricity supply and that it is connected correctly to the power supply. If not, the machine **must not** be operated.
- Connect the machine to the compressed air system. The pressure gauge on the air lubricator 2 must indicate a pressure of 6 bar. If necessary, set the gauge to this value (see **Chapter 11.08 Checking and regulating air compression**)

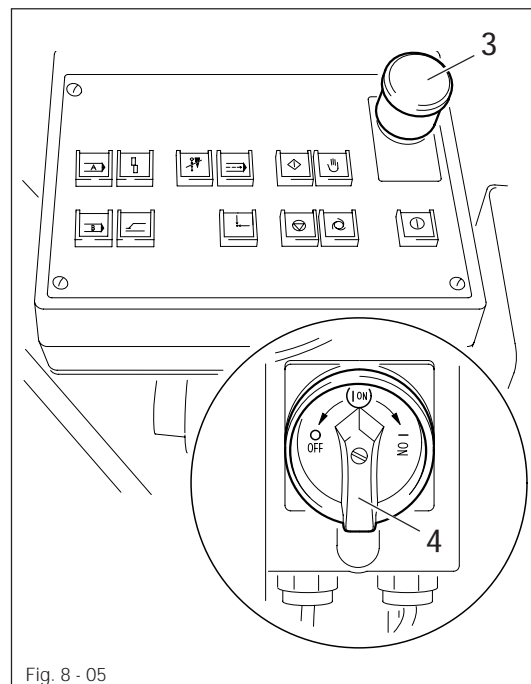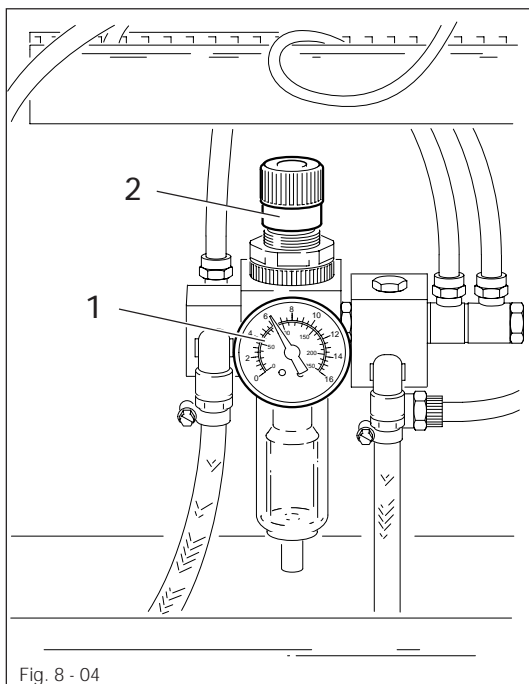8.02.01 Turning the machine on/off



- Check air pressure on pressure gauge 1. If necessary, adjust air pressure adjusting knob 2.
- If necessary, release EMERGENCY OFF switch 3 by pulling up on it.
- Turn master switch 4 to "ON".



- Press the **On key** on the control panel of the folder. The machine is now in the **INPUT** operation mode.



When the machine is commissioned, the zero point must first be checked and/or adjusted (see chapter 8.02.02 Adjusting zero point).

- To switch the machine off, turn the master switch 4 to the „OFF“ position.



In emergencies, the machine can be stopped immediately by pressing down the EMERGENCY OFF switch 4.

Mounting and commissioning the machine

8.02.02 Adjusting zero point

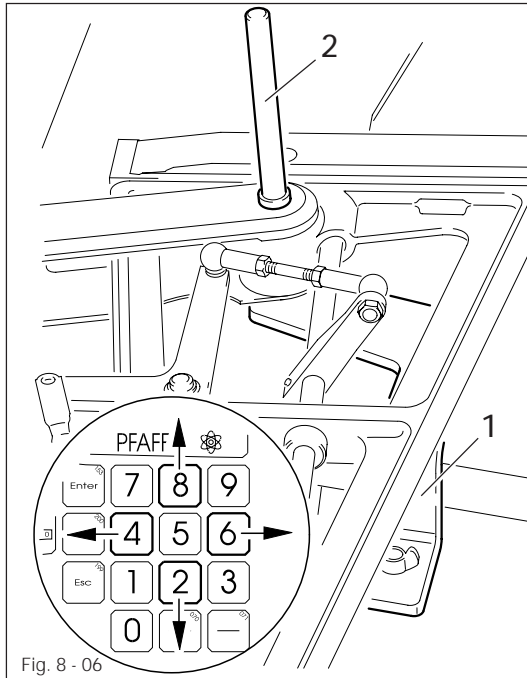


Fig. 8 - 06

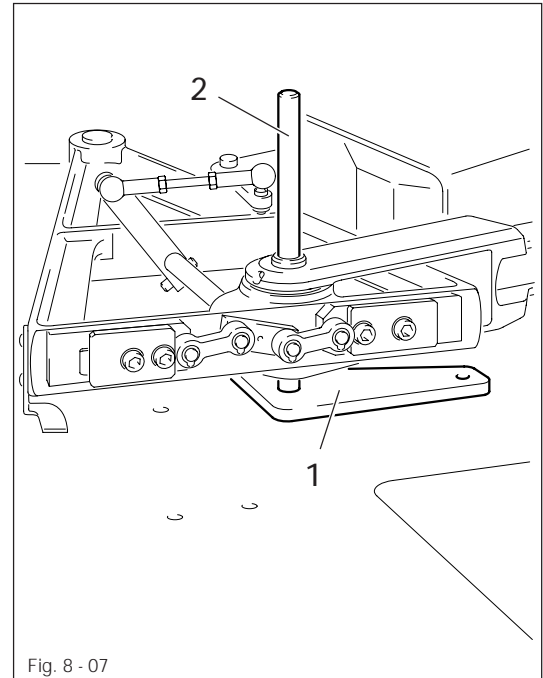


Fig. 8 - 07



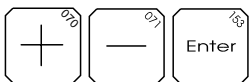
It is necessary to adjust the zero point when the machine is commissioned and after replacing the CPU or one of the proximity switches of the X/Y control.



Only use the numbered zero-point gauge which belongs to the machine! The individual gauge vary from machine to machine.



- Select **INPUT** mode.
Display: "CHOOSE FUNCTION OR SCROLL #250"



- Via the **plus/minus key**, select the **2nd menu** and confirm with **Enter**.
Display: "- 2. MENU #261"



- In the **2nd menu**, press number key "**6**" to select the **SERVICE** function.
Display: "SERVICE #800"



- Via the number key "**5**" select the **ADJUST ZERO POINT** function.
Display: "PRESS HOME KEY #007"



- Press **home key**.
Display: "ZERO POINT GAUGE INSERTED ? #867"

- Open cover of X/Y carriage control
- Insert zero point gauge **1** and screw on.



- Confirm with **Enter**.

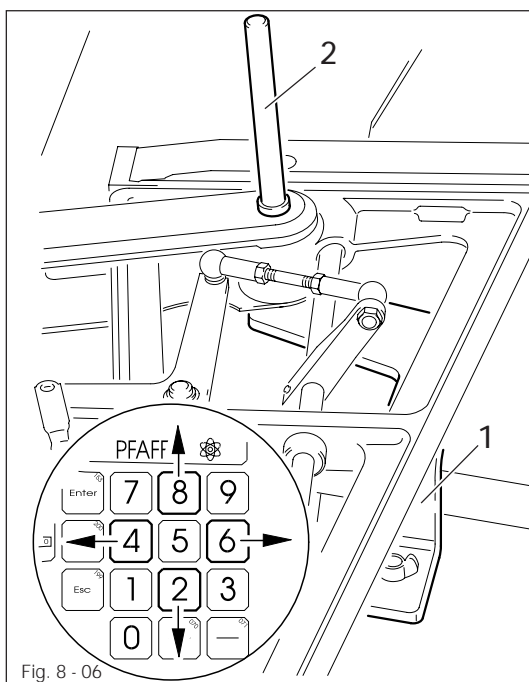


Fig. 8 - 06


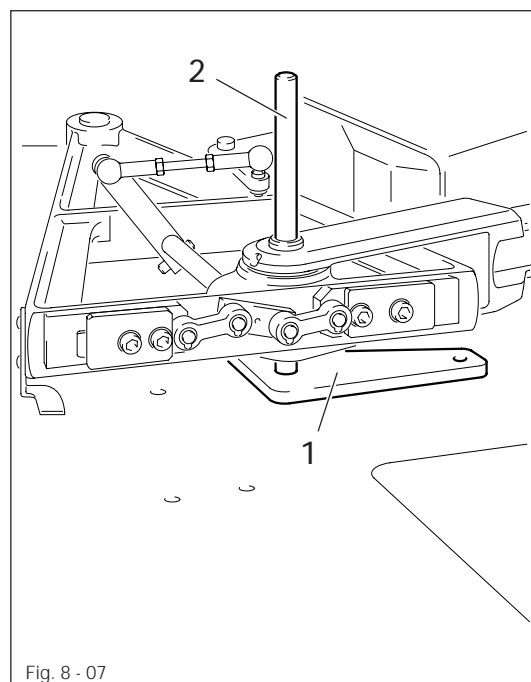


Fig. 8 - 07

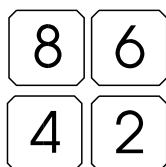

- Insert adjustment pin 2 into the hole in the X/Y control. Move X/Y carriage with the number keys "4", "6", "2" and "8" in such a way that the end of adjustment pin 2 falls easily into the **back** hole of the zero point gauge 1. (see Fig. 8-06).

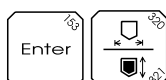
- Remove adjustment pin 2.



- Press **Enter**.
Display: "SERVICE #800"



- Select **MANUAL** mode to bring the X/Y control to home position.



- Press **transport arm/sewing jig** to swing the transport arm to the sewing station.



- Press **home position** key twice.
- Insert adjustment pin 2 into the hole in the X/Y control (see Fig. 8-07).

- The end of the adjustment pin 2 must now easily fall into the **front** hole of the zero point gauge 1. If this is not the case, the switch vanes of the X/Y carriage must be adjusted (see **chapter 12.08.01 Adjusting the switch vanes on the X/Y control**).
- Remove zero point jig 1.

9

Preparation



All regulations and instructions in this Instruction Manual are to be observed!
Special attention is to be paid to the safety regulations!



All preparation work is only to be carried out by appropriately trained personnel.
Make sure, in particular, that the safety switch in the control box is turned on.

9.01

Inserting the needle

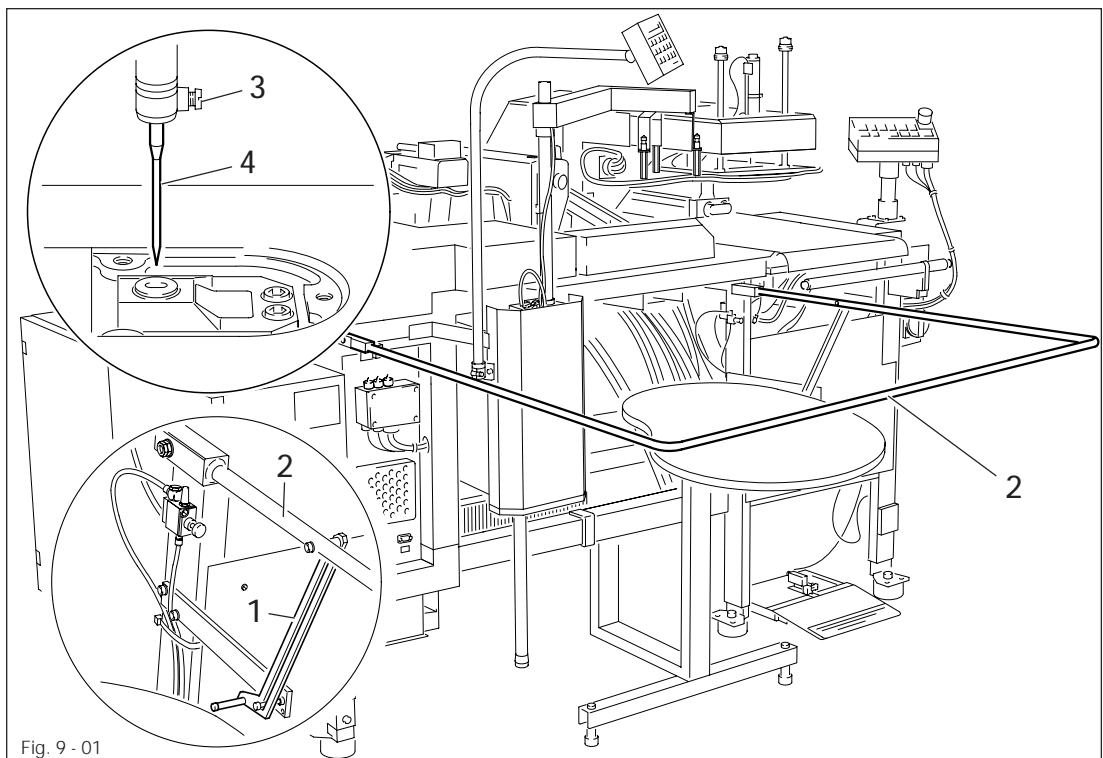


Fig. 9 - 01

- Lift ratchet lever 1 and swing safety bar 2 downwards.



- Press **seam pattern forwards** key.



- Press **transport arm/ sewing jig** key.

- Loosen screw 3 and insert needle 4 until it stops in such a way that the long needle groove is pointing to the folder station.

- Tighten screw 3.



- Press **transport arm/ sewing jig** key.



- Press **seam pattern backwards**.

- Swing back safety bar 2 to its starting position.

9.02 Winding the bobbin thread, adjusting the thread tension

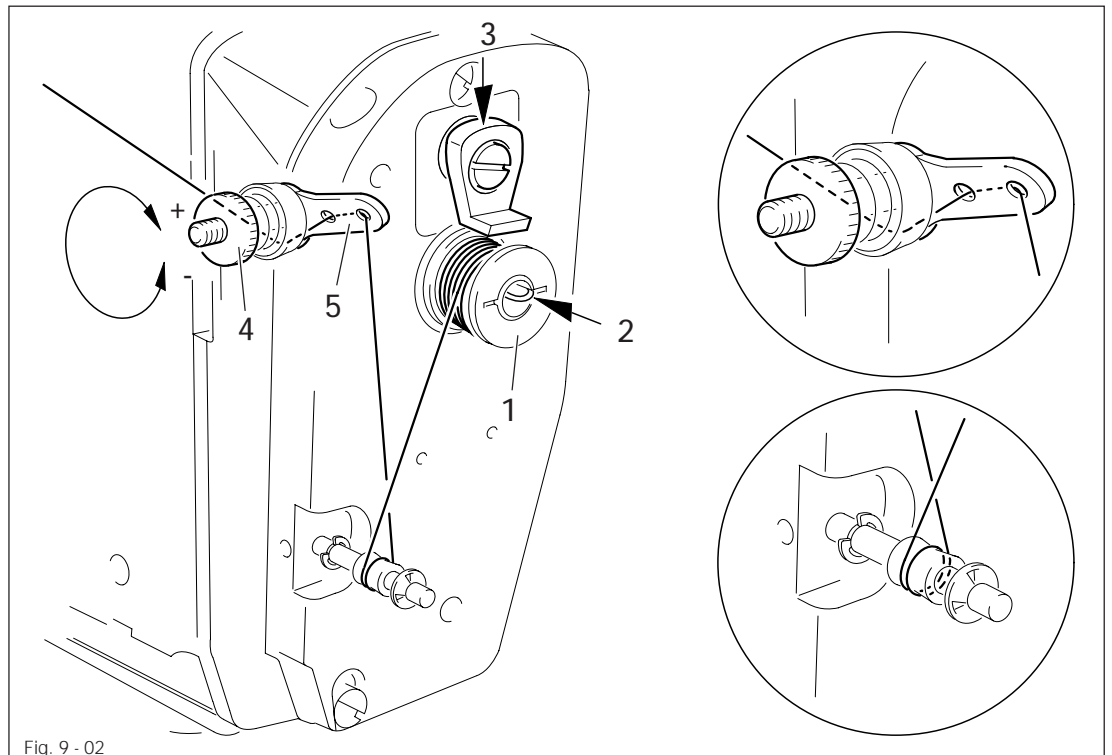


Fig. 9 - 02

- Place an empty bobbin 1 onto bobbin shaft 2.
- Thread the bobbin in accordance with Fig. 9-02 and wind it clockwise around bobbin 1 a few times.
- Switch on the bobbin winder while at the same time pressing bobbin winder spindle 2 and cam 3.



The bobbin fills up while you are sewing.

- If the bobbin 1 is not filled evenly, align thread guide 5 and adjust the bobbin thread tension with knurled screw 4.
- The bobbin winder stops automatically when bobbin 1 is full.

9.03 Changing the bobbin

9.03.01 Bobbin change, bobbin case and bobbin thread tension

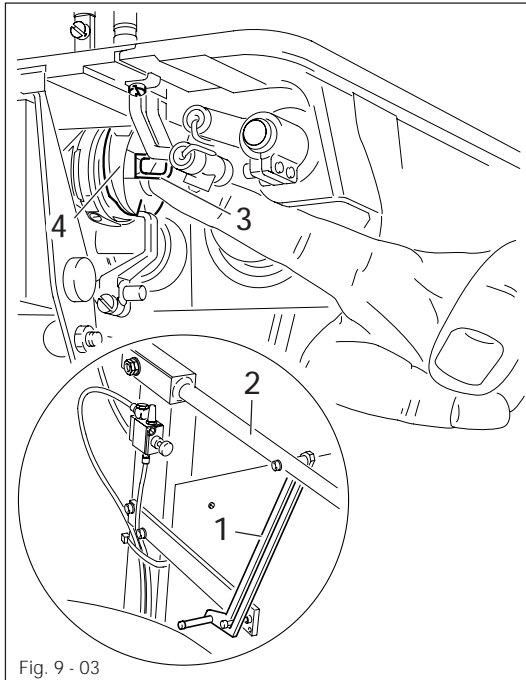


Fig. 9 - 03

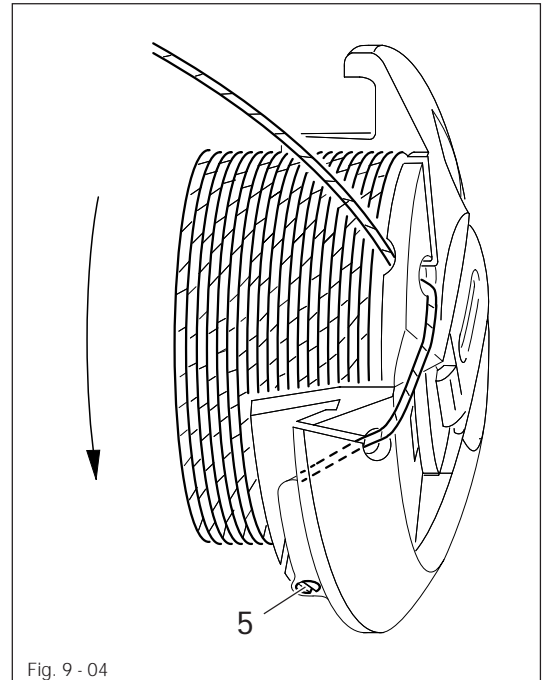


Fig. 9 - 04

- Lift ratchet lever 1 and swing safety bar 2 downwards.



- Press **change bobbin** key (stacker moves forward).

Remove bobbin case:

- Raise latch 3 and remove bobbin case 4.

Inserting bobbin in bobbin case:

- Insert the bobbin so that the bobbin turns in the direction of the arrow when the thread is pulled.
- Thread according to **Fig. 9-04** and regulate the thread tension at screw 5.

Inserting bobbin case:

- Raise latch 3 and insert bobbin case 4 with the bobbin in the hook.
- Release latch 3 and press lightly on bobbin case 4 until it engages properly.



- Press **change bobbin** key.
- Swing back safety bar 2 to starting position.

9.03.02 Changing the bobbin from the top in MANUAL mode

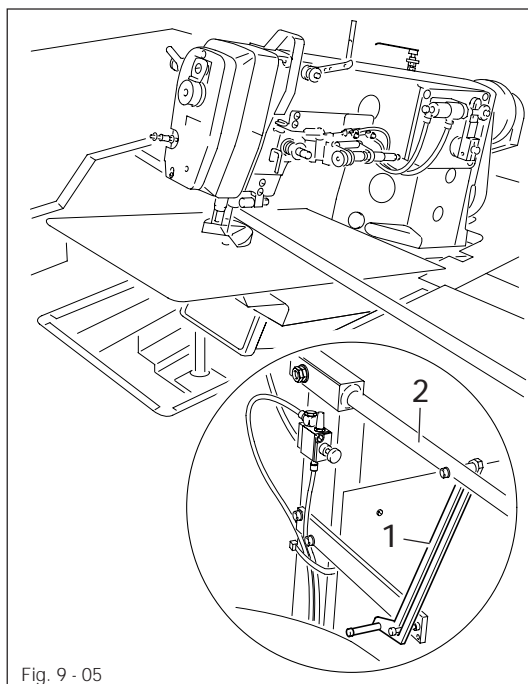


Fig. 9 - 05

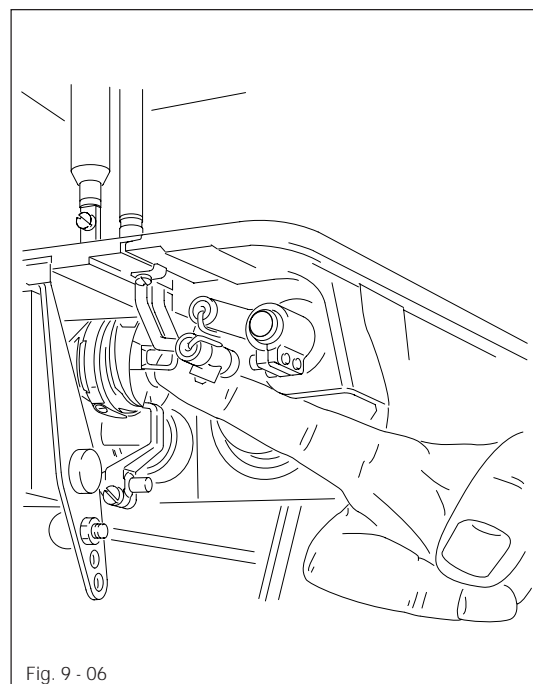


Fig. 9 - 06



To replace the bobbin this way, the function **BOBBIN CHANGE FROM TOP** in the 2nd menu must be activated (see **chapter 10.03.03 Selecting a subfunction from the 2nd menu level**).



- With the machine in its home position, press the **change bobbin** key. (Feed arm with sewing jig/swung over to folder station, stacker swivels out and sewing head tilts back.)
- Lift ratchet lever **1** and swing safety bar **2** down.
- Carry out bobbin change (see **9.03.01 Bobbin change, bobbin case and bobbin thread tension**).
- Return safety bar **2** to its starting position.
- Activate the start keys on the folder station. (Sewing head tilts down, stacker engages and feed arm with sewing jig swings round to sewing station).

9.03.03 Changing the bobbin from the top in AUTOMATIC mode

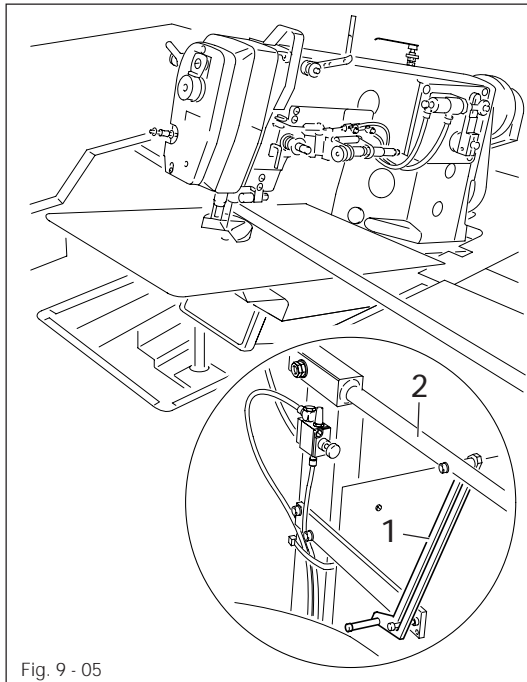


Fig. 9 - 05

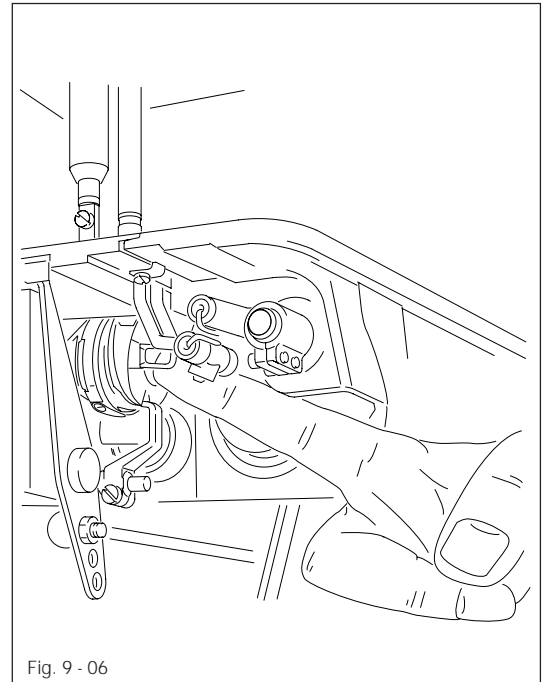


Fig. 9 - 06

When the number of the selected bobbin thread stitches has been completed, the stacker disengages and remains in this position.

Display: "CHANGE BOBBIN

#055"



The light diode of the **reset key** is lit and the sewing head automatically tilts up.

- Lift ratchet lever 1 and swing safety bar 2 down.
- Carry out bobbin change (see 9.03.01 Bobbin change, bobbin case and bobbin thread tension).
- Return safety bar 2 to its starting position.



- Press **reset key** (light diode of the key goes off).
- Press the start keys on the folder station simultaneously (program is then continued).



When the machine is stopped during the sewing operation, the bobbin can only be changed from below since the sewing head cannot be tilted up (see 9.03.01 Bobbin change, bobbin case and bobbin thread tension).

9.04 Threading the needle thread

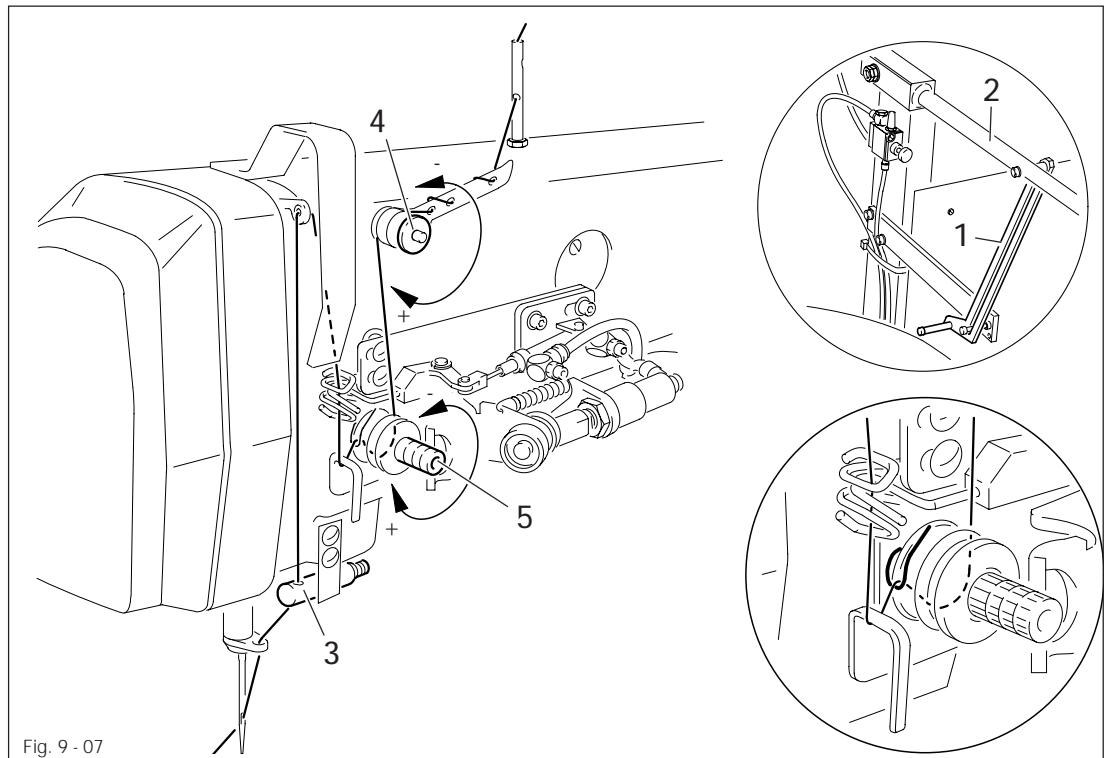

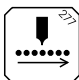




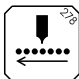


Fig. 9 - 07

- Lift ratchet lever 1 and swing safety bar 2 down.
- 
 - Press **presser/thread trapper key** (presser is lowered and thread trapper 3 opens).
- 

When the machine is in transport index:

 - Press **seam pattern forwards key**
- 

 - Press **transport arm/sewing jig** and **Enter** keys simultaneously (transport arm moves to folder station).
 - Thread the needle thread according to **Fig. 9-07**.
 - Adjust the thread pre-tension at nut 4.
 - Regulate the thread main tension at nut 5.
- In the sewing index:



 - Press **transport arm/sewing jig** and **Enter** keys simultaneously (transport arm moves to folder station).
 - Thread the needle thread according to **Fig. 9-07**.
 - Adjust the thread pre-tension at nut 4.
 - Regulate the thread main tension at nut 5.
- 
 - Press the **seam pattern backwards key**.
 - Swing back safety bar 2 to its starting position.

9.05 Program number selection

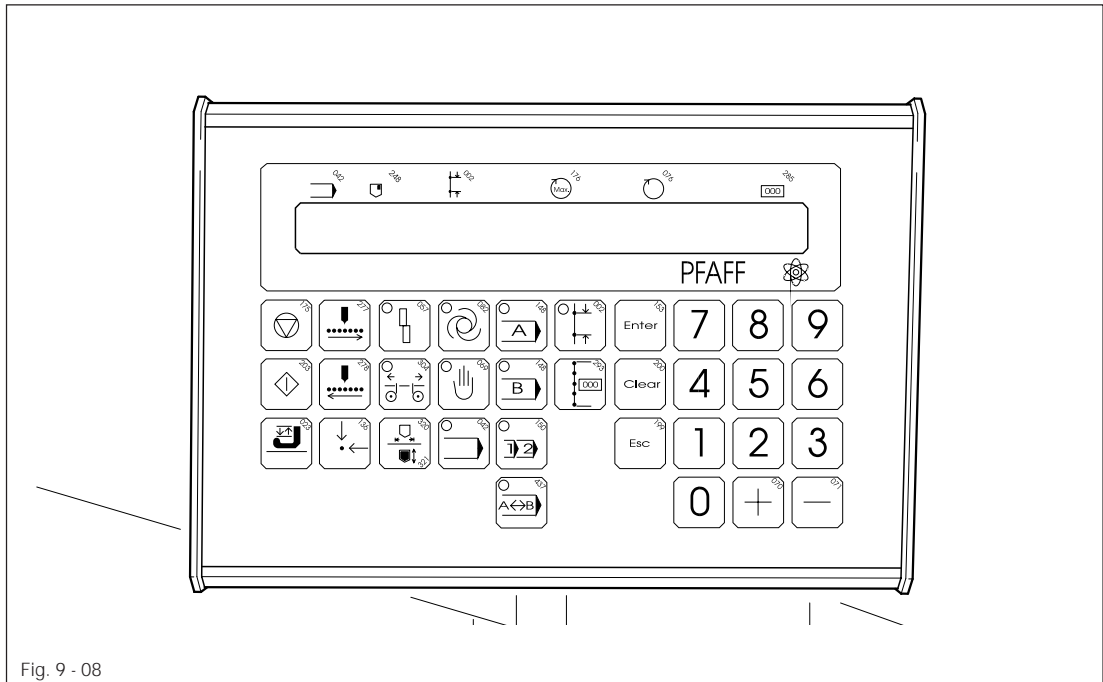
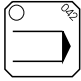
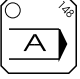
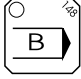



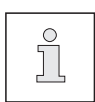


Fig. 9 - 08

- 
 - Select the **INPUT** mode.
Display: "CHOOSE FUNCTION OR SCROLL #250"
- 

 - Via the **station keys** select the program station in which the desired program is to be stored.
- 
 - Press the **program selection key**.
- 
 - Enter the number of the desired program with the **number keys**.
- 
 - End the input with the operation mode keys **AUTOMATIC** or **MANUAL**.



If the program selected is not in the machine memory, after you have made an entry, a warning is output.

Display: "PROGRAM NOT IN MEMORY #051"



When you change programs, remember that it may be necessary to also change the sewing jig and the folder part set.

9.06 Automatic change in program station

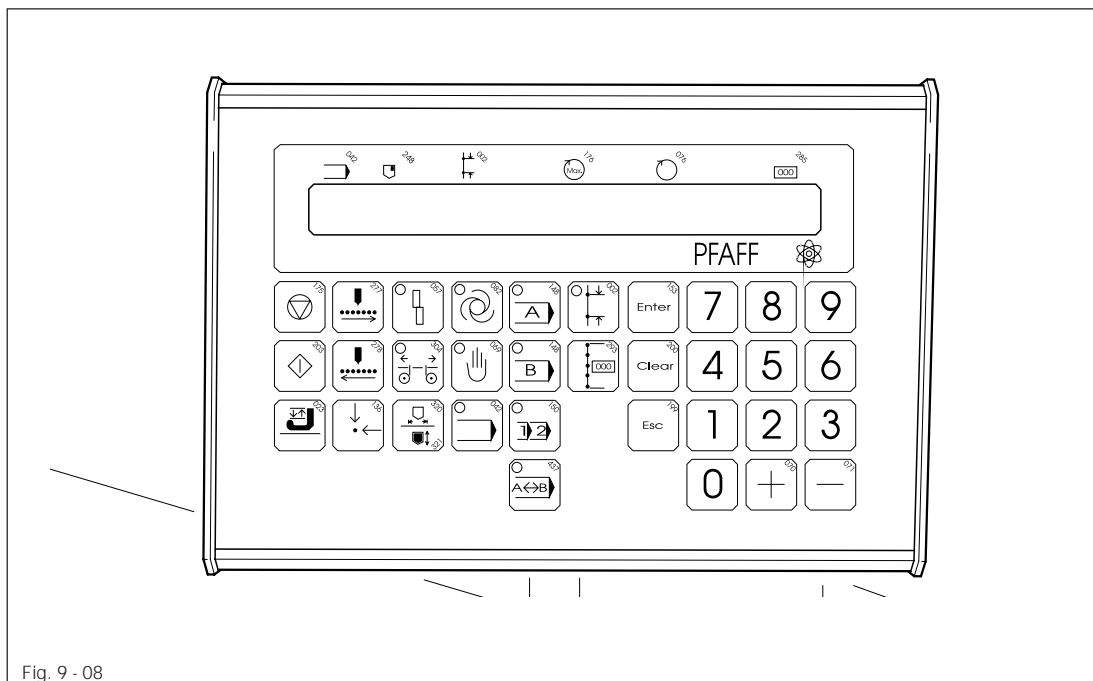


Fig. 9 - 08



If you want to change back and forth between two sewing programs, a program must be stored in each of both program stations (see **chapter 9.05 Program number selection**).



- Select the **INPUT** mode.

Display: "CHOOSE FUNCTION OR SCROLL #250"



- Press **automatic station change** key.



- End the input via the **AUTOMATIC** or **MANUAL** operation mode keys.



- Via the station keys, select the program station with the program you want to begin with.

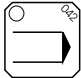







9.07 Jig monitor (optional)


To make it possible to monitor the jig, the sewing jig is given a code using magnets which the control can recognize via an additional device.

This is a means of preventing pairing a sewing program with the wrong sewing jig which could cause the needle to break.


If you want to monitor the jig, the function must be active in the menu, and a jig code must be entered in the sewing program.

9.07.01 Activating jig monitor (menu)

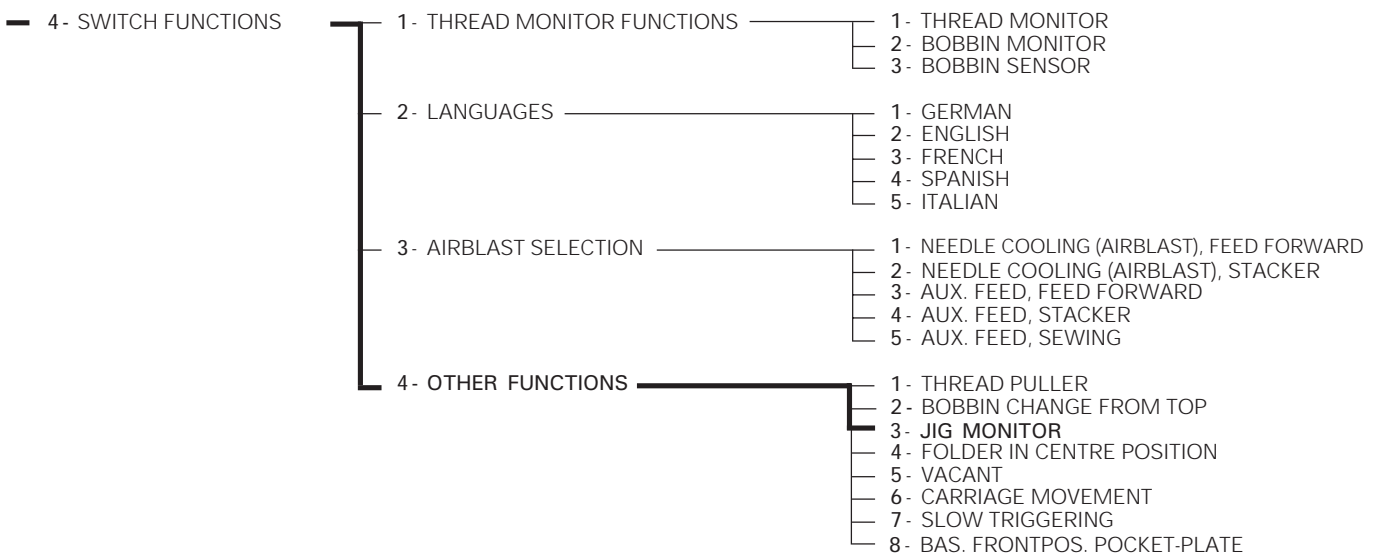- 
 - Select the **INPUT** mode.
 - Display: "CHOOSE FUNCTION OR SCROLL #250"
- 
 - Via the **plus/minus keys**, scroll through the functions until you find display:
 - Display: "-2. MENU #261"
- 
 - Call up the 2nd menu level by pressing **Enter**.
 - Display: "2. MENU #300"
- 
 - Press **number key 4**.
 - Display: "SWITCH FUNCTIONS #560"
- 
 - Press **number key 4** again.
 - Display: "OTHER FUNCTIONS #660"
- 
 - Press **number key 3**.
 - Display: "JIG MONITOR OFF (ON:1) #675"
- 
 - Press **number key 1**.
 - Display: "JIG MONITOR ON (OFF:0)#676"
- 
 - Press **Enter** key.
 - Display: "-2. MENU #261"



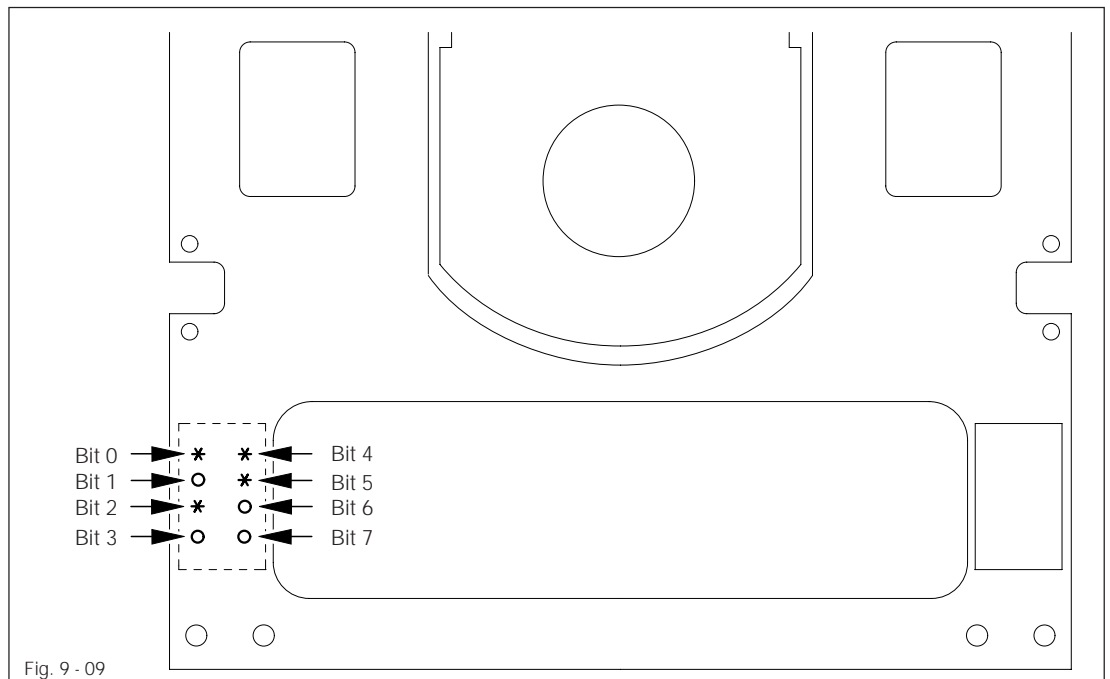9.07.02 Determining the jig code




The jig code is entered in the sewing program as a number value (0-99).
The code is created on the jig as a binary number by arranging the magnets in a particular way.

Example: decimal number (25) is equal to the binary combination (0010) (0101)
 tens place (2) ones place (5)

Bit assignment

| Ones place Tens place | Bit 3 Bit 7 | Bit 2 Bit 6 | Bit 1 Bit 5 | Bit 0 Bit 4 |
|--------------------------|----------------|----------------|----------------|----------------|
| 0 | free | free | free | free |
| 1 | free | free | free | magnet |
| 2 | free | free | magnet | free |
| 3 | free | free | magnet | magnet |
| 4 | free | magnet | free | free |
| 5 | free | magnet | free | magnet |
| 6 | free | magnet | magnet | free |
| 7 | free | magnet | magnet | magnet |
| 8 | magnet | free | free | free |
| 9 | magnet | free | free | magnet |

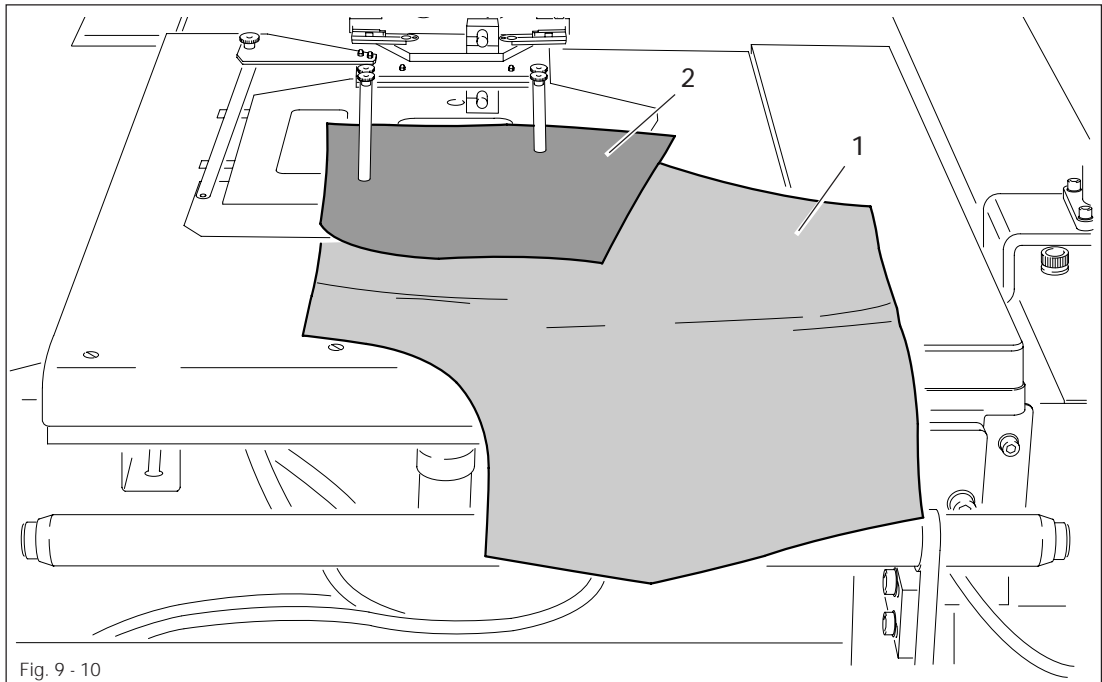9.08 Placement of the cuttings



- Lay cutting 1 on the loading plate and align according to the markings.
- The placement and alignment of the trim or watch pocket cuttings depends on the menu combination selected (see Chapter 7.03 Foot switch).

Menu combination: HOME POSITION POCKET PLATE IN FRONT ON
PLAIN FABRIC ON

- Slide cutting 2 onto the pocket plate as shown in Fig. 9-10.

Menu combination: HOME POSITION POCKET PLATE IN FRONT ON
PLAIN FABRIC OFF

- Slide cutting 2 onto the pocket plate as shown in Fig. 9-10.
- Activate the foot switch (pocket plate is lowered).
- To align the pattern of the cutting and pocket, activate the foot switch again and hold (pocket plate is raised).

Menu combination: HOME POSITION POCKET PLATE IN FRONT OFF
PLAIN FABRIC ON

- Activate the foot switch (pocket plate moves forward).
- Slide cutting 2 onto the pocket plate as shown in Fig. 9-10.

Menu combination: HOME POSITION POCKET PLATE IN FRONT ON
PLAIN FABRIC OFF

- Activate the foot switch (pocket plate moves forward).
- Slide the pocket cutting 2 onto the pocket plate according to Fig. 9-10.
- Activate the foot switch (pocket plate is lowered).
- Activate the foot switch (pocket plate is lowered).

9.09 Changing the assembly



Seam program and assembly must be synchronised and always used together!
Incorrect combinations can cause serious damage to the machine!

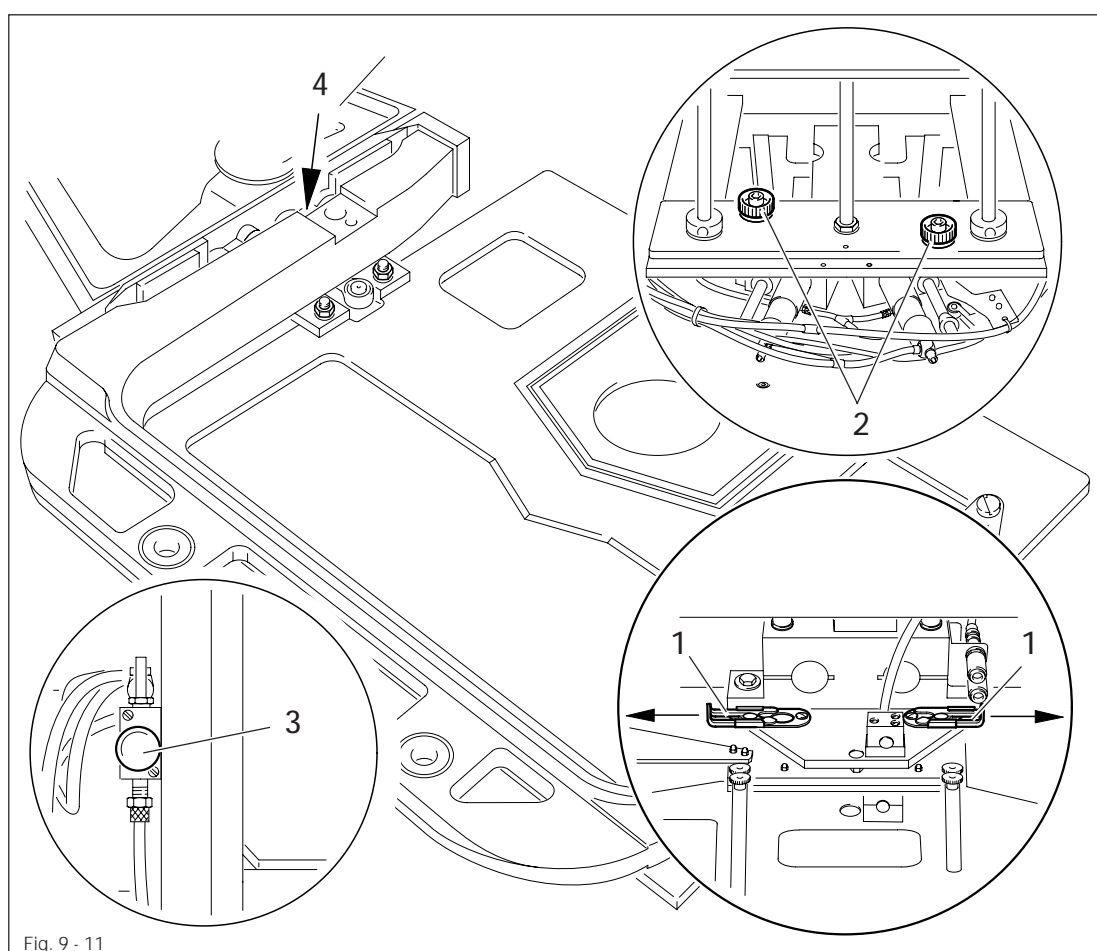


Fig. 9 - 11

- Slide latches 1 out and remove the pocket plate with retainer.
- Press start double keys (folder moves to front).
- Press the key for **step-by-step folder movement** on the folder's control panel (folder lowers to centre position).
- Unscrew the coupling ring on the folder's pneumatic coupling and remove pneumatic coupling.
- Remove screws 2 and detach the folder unit.
- Insert a new folder unit and tighten screws 2.
- Re-attach the pneumatic coupling and tighten the ring.





- Press the key for **home position** on the folder's control panel (folder moves to home position).
- Insert a new pocket plate with retainer and slide in latches 1.
- Press key 3 (changeover 4 will be activated).
- Remove the sewing jig frame from changeover 4.
- Push the sewing jig out of its frame.
- Insert a new sewing jig and fit it into the changeover together with the sewing jig frame.
- Press key 3 once again (sewing jig is held tight).
- Change the program number (see **Chapter 9.05 Program number selection**).

10 Programing

10.01 Brief description of Input mode



In the **INPUT** mode, it is necessary to differentiate between functions which can be selected directly and those of the 1st and 2nd menu levels.

10.01.01 Direct functions

Direct functions are functions which are required more often than other functions. They can be selected directly via the corresponding keys.



Program station A



Program station B



Program selection



Automatic program change



Stitch length change



Reset stitch counter

10.01.02 Summary of the functions in the 1st menu level

Functions which are required frequently are stored at this menu level. As is true for the direct functions, additional subfunctions cannot be selected. The only exception is if you want to enter the 2nd menu level.

Display: "CHOOSE FUNCTION OR SCROLL #250" (basic condition - 1st menu)

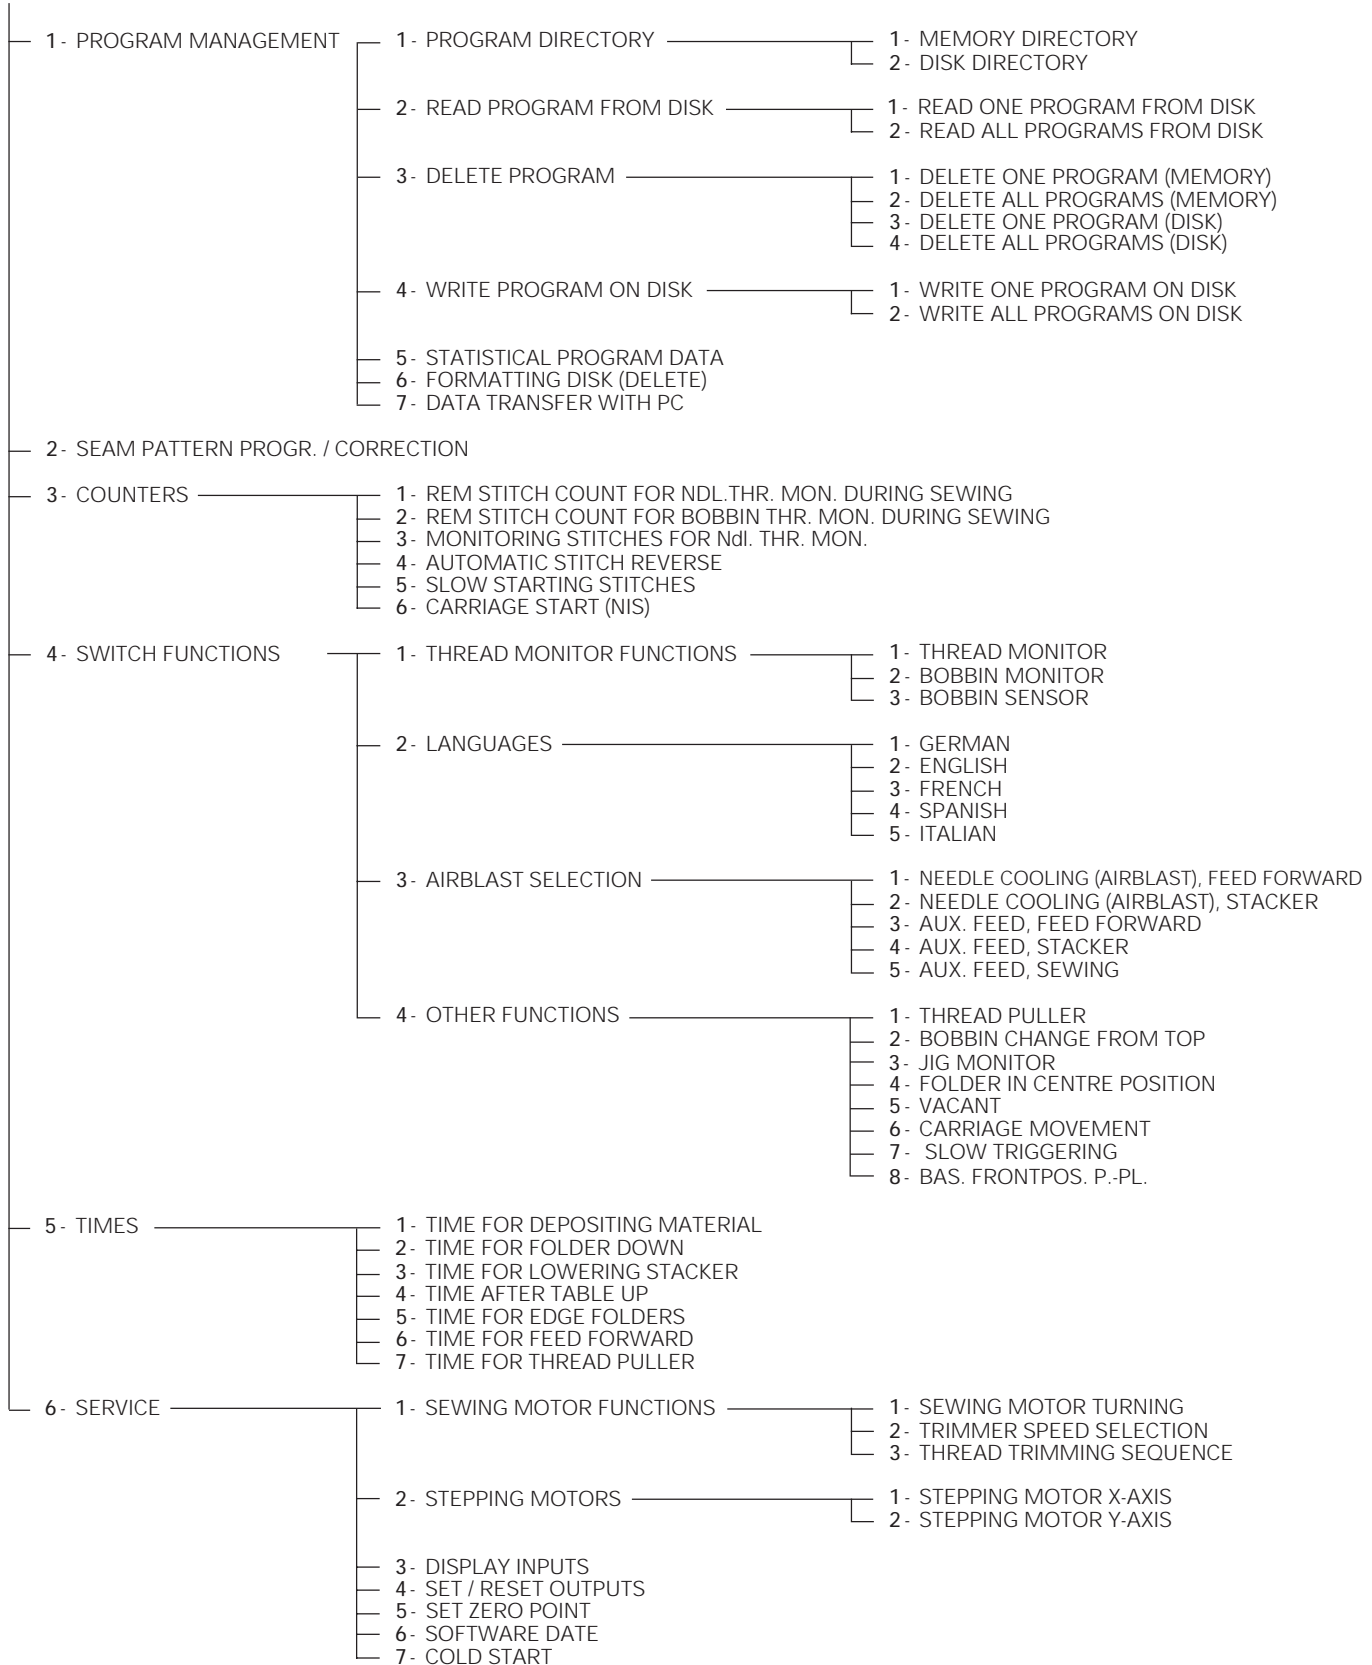
- 1- PIECE COUNTER
- 2- BOBBIN PRESELECT
- 3- TIMES FOR STACKER POSITIONS (A/B)
- 4- MAXIMUM SPEED
- 5- REDUCED SPEED
- 6- ZIGZAG DELAY ON
- 7- ZIGZAG DELAY OFF
- 8- INTERMEDIATE STOP
- 9- NUMBER OF EDGE FOLDERS
- 0- PLAIN FABRIC
- Entry into 2. Menu (only available by pressing plus/minus keys)

10.01.03 Summary of the functions in the 2nd menu level

Functions which are used less frequently are found in this menu level. Here, the functions are divided into main and subfunctions.






Display: "2. MENU

#300" (basic condition 2nd menu)




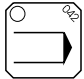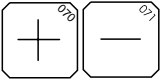

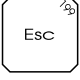10.02 Description of the menu levels




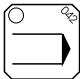
10.02.01 1st menu level

-  ● After selecting the **INPUT** mode, you reach the basic position.
 Display: "CHOOSE FUNCTION OR SCROLL #250"
-  ● Via the **plus/minus keys**, you can scroll between the functions.
 e.g. Display: "1- PIECE COUNTER #251"
-  ● Use the **Enter key** to enter the function (display) selected in this manner.
-  ● The functions can also be called directly by pressing the corresponding number via the **number keys** (see chapter 10.01.02 Summary of the functions in the 1st menu level).
-  ● Selected functions can be interrupted via the **Esc key**.

10.02.02 Entering the 2nd menu level

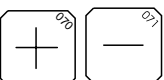-  ● Select **INPUT** mode (basic position 1st menu).
 Display: "CHOOSE FUNCTION OR SCROLL #250"
-  ● Scroll through the functions with the **plus/minus keys** until you find the display:
 Display: "-2. MENU #261"
-  ● Call the 2nd menu level by pressing **Enter** (basic position - 2nd menu).
 Display: "-2. MENU #300"






10.02.03 2nd menu level

-  ● After entering the 2nd menu level, you can also scroll back and forth between the main functions with the **plus/minus keys**.
 e.g. Display: "3- COUNTERS #303"
-  ● To enter the function (display) selected in this way, use the **Enter key**.
 z.B. Display: "COUNTERS #530"
-  ● Here, the functions can also be called directly via the **number keys** (see chapter 10.01.03 Summary of the functions in the 2nd menu level).
 - Behind most of the main functions are subfunctions which can be scrolled through (**plus/minus keys**), and which can be selected in the same way as the main functions (**Enter key** or **number keys**).
-  ● The functions can be interrupted with **Esc** (input values are not assumed). This will return you to the superordinate main or subfunctions.

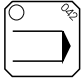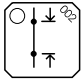10.03 Examples for selecting functions

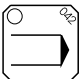
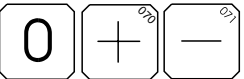

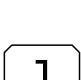
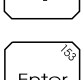
10.03.01 Selecting a direct function

To change the stitch length, for example, you must proceed as follows:

- 
 - Select **INPUT** mode.
Display: "CHOOSE FUNCTION OR SCROLL #250"
- 
 - Press the **stitch length change** key.
e.g. Display: "PROGRAM:1 STICHL.3.20 #262"
- 
 - Enter the number of the program to be changed via the **number keys** (e.g. 34)
e.g. Display: "PROGRAM:34 STICHL.2.50 #262"
- 
 - Change the stitch length value using the **plus/minus** or the **number keys**.
e.g. Display: "PROGRAM:34 STICHL.2.80 #262"
- 
 - Confirm the entry with the **Enter** key.
Display: "STITCH GENERATION RUNNING #264"
- The new stitch length value is assumed.
Display: "CHOOSE FUNCTION OR SCROLL #250"

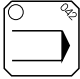
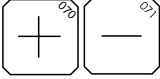






10.03.02 Selecting a function from the 1st menu level


To activate the PLAIN MATERIAL function, it is necessary to proceed as follows:

- 
 - Select **INPUT** mode.
Display: "CHOOSE FUNCTION OR SCROLL #250" (basic position 1st menu)
- 
 - Scroll through the functions with the **plus/minus** keys until you find the display:
Display: " 0- PLAIN FABRIC #260"
- 
 - Via the **Enter** key, enter the selected function.
(If the **number key 0** is pressed, you will enter immediately from the basic position.)
Display: "PLAIN FABRIC OFF (ON:1) #291"
- 
 - Press **number key 1** to activate the function.
Display: "PLAIN FABRIC ON (OFF:0)#292"
- 
 - Confirm the entry with the **Enter** key.
Display: "CHOOSE FUNCTION OR SCROLL #250"

10.03.03 Selecting a subfunction from the 2nd menu level

The BOBBIN CHANGE FROM TOP function is to be activated. In this example, only a description of how to enter this function with the number keys is given. The individual functions can be selected as described in the above examples, as well as via the **plus/minus** keys and called with the **Enter** key.

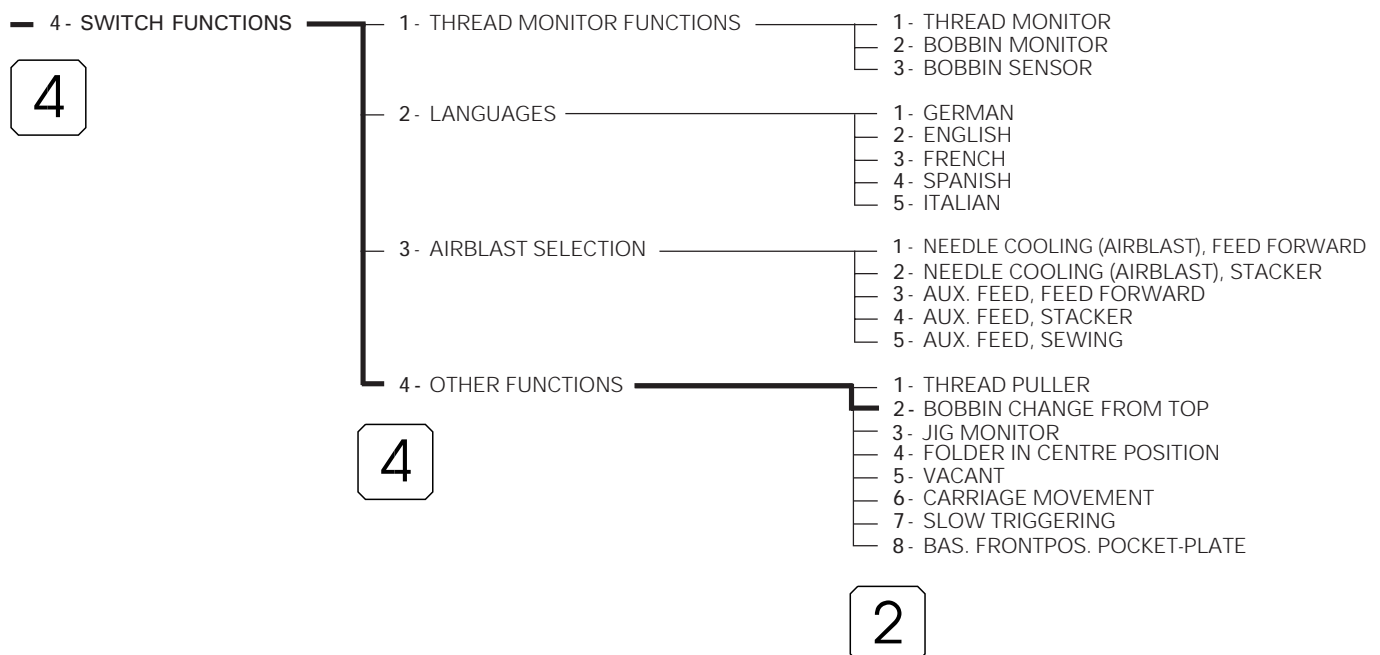- 
 - Select **INPUT** mode (basic position 1st menu).
Display: "CHOOSE FUNCTION OR SCROLL" #250" (basic position 1st menu)
- 
 - Scroll through the functions with the **plus/minus** keys until you find the display:
Display: "-2. MENU" #261"
- 
 - Call the 2nd menu level by pressing **Enter**
Display: "2. MENU" #300" (basic position 2nd menu)
- 
 - Press **number key 4**.
Display: "SWITCH FUNCTIONS" #560"
- 
 - Press **number key 4** again.
Display: "OTHER FUNCTIONS" #660"
- 
 - Press **number key 2**.
Display: "BOBBIN CHANGE FROM TOP OFF (ON:1) #673"
- 
 - Press **number key 1**.
Display: "BOBBIN CHANGE FROM TOP ON (OFF:0)#674"
- 
 - Press **Enter**.
Display: "-2. MENU" #261"



From the basic position in the 2nd menu level, the required function can also be called directly by entering the number combination 4-4-2.

10.04 Explanation of the menu functions

10.04.01 Functions in the 1st menu level

1- PIECE COUNTER



Provides information on the current daily production (max. display value: 65565).

The value can be reset to "0" with the **Clear key**.

The value is not changed when the machine is turned off. If the max. display value is exceeded, the counter is reset automatically.

2- BOBBIN PRESELECT

When the preset stitch count is reached, the machine stops automatically at the end of the seam pattern to change the bobbin. When this function is selected, the value entered is displayed.

The value can be changed using the **plus/minus keys** or the **number keys**.

3- TIMES FOR STACKER POSITIONS (A/B)



This function is used to set the stacker positions for program stations A and B.

The time can be changed with the **plus/minus** or **number keys**. The longer the set time, the further the stacker extends before the material is deposited.



4- MAXIMUM SPEED

When this function is selected, the max. speed which has been set is displayed.

The value can be changed using the **plus/minus keys** or the **number keys**.

5- REDUCED SPEED

When this function is selected, the reduced speed which has been set is displayed.

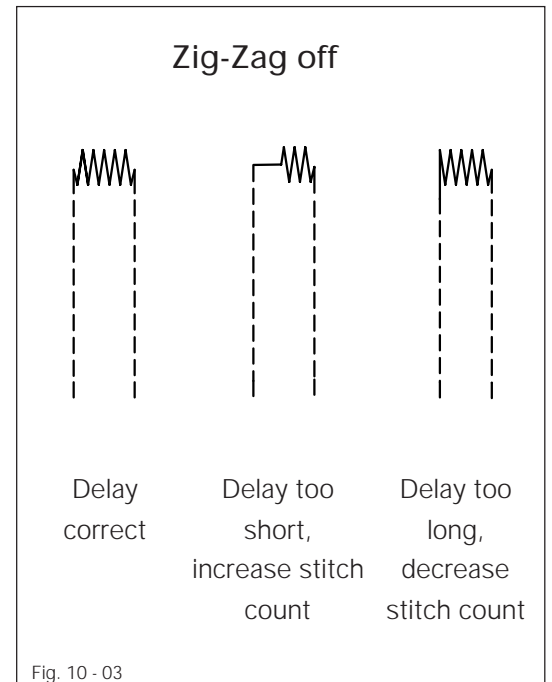
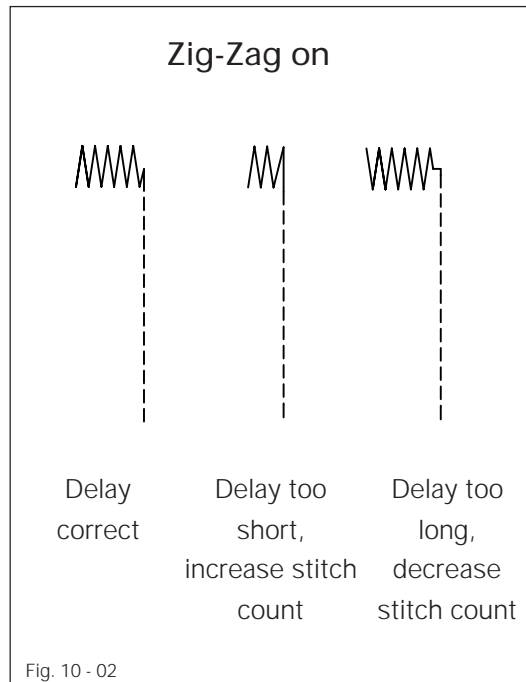
The value can be changed using the **plus/minus keys** or the **number keys**.

6- ZIGZAG DELAY ON

Displays the stitch count according to which the command "Zigzag on" is output before the bar tack is started. The stitch count can be changed using the **plus/minus keys** or the **number keys** (see Fig. 10.02).

7- ZIGZAG DELAY OFF

Displays the stitch count according to which the command "Zigzag off" is output before the end of the bar tack. The stitch count can be changed using the **plus/minus keys** or the **number keys** (see Fig. 10.02).




Due to the delay of the valve and cylinder, output of the commands for DELAY ZIGZAG ON and OFF must be delayed as a function of the speed.

8- INTERMEDIATE STOP

When this function is selected, the display shows whether the function is on or off. In the **AUTOMATIC** mode, the function causes a program stop after the folding operation is completed. After pressing both start controls the program is continued. Via the **number keys 1 and/or 0**, the function can be turned on or off.



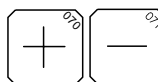9- NUMBER OF EDGE FOLDERS



This function is used for entering the number of edge folders which corresponds to the folder assembly installed. If the folding procedure is to be suppressed, a "0" must be entered.



The number can be entered with the **plus/minus** or **number keys**.

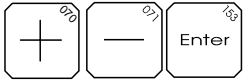
0- PLAIN FABRIC

This function changes the foot switch and start control functions for processing plain fabric. When the function is selected, the display indicates whether the function is on or off.



Via the **number keys 1 and/or 0**, the function can be turned on or off.

-2. MENU



After selecting this function via the **plus/minus keys**, you can enter the 2nd menu level by pressing **Enter**.

10.04.02 Functions in the 2nd menu level

The functions are divided into main and subfunctions here.

1- PROGRAM MANAGEMENT

All of the subfunctions are listed here which have to do with organizing the sewing programs.

1- PROGRAM DIRECTORY

From these subfunctions, further subfunctions can be selected.

1- MEMORY DIRECTORY

2- DISK DIRECTORY

Depending on the selected subfunction, all of the programs of the memory or all of the programs on a disk are listed.

If one line in the display is not sufficient for displaying all of the programs, the **Enter key** serves as a scrolling function.



2- READ PROGRAM FROM DISK

From this subfunction, further subfunctions can be called.

1 - READ ONE PROGRAM FROM DISK

2 - READ ALL PROGRAMS FROM DISK

Depending on the selected subfunction, all of the programs or one particular program on a disk can be read into the machine memory.

3- DELETE PROGRAM

From this subfunction, further subfunctions can be called.

1 - DELETE ONE PROGRAM (MEMORY)

2 - DELETE ALL PROGRAMS (MEMORY)

3 - DELETE ONE PROGRAM (DISK)

4 - DELETE ALL PROGRAMS (DISK)

Depending on the selected subfunction, all of the programs or one particular program in the machine memory or on a disk can be deleted.

4- WRITE PROGRAM ON DISK

From this subfunction, further subfunctions can be called.

1 - WRITE ONE PROGRAM ON DISK

2 - WRITE ALL PROGRAMS ON DISK

Depending on the selected subfunction, all of the programs or one particular program from the machine memory can be written on a disk.

5- STATISTICAL PROGRAM DATA

The following program data are displayed with this main function:

- stitch count and program length in bytes
- stitch count and obstacles
- jig code

6- FORMATTING DISK (DELETE)

Via this main function, disks can be reformatted (720 KB).



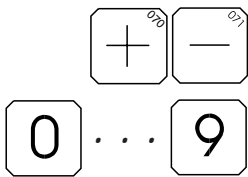
All of the data on the disk are deleted when the disk is formatted.

7- DATA TRANSFER WITH PC

Via this function, the control is made ready to transmit in order to communicate directly with a PC via the SYS 3000 software.

2- SEAM PATTERN PROGR. / CORRECTION

Programs can be created directly on the machine or corrected. To do this, a separate programming field is required. A detailed explanation of programming is discussed in a separate manual.



3- COUNTERS

The user can program counters according to his requirements in the subfunctions.

The values are always changed using the **plus/minus keys** or the **number keys**.

1- REM STITCH COUNT FOR NDL. THR. MON. DURING SEWING

The number of stitches can be set for which the needle thread monitor is not activated while the workpiece is being sewn on.

2- REM STITCH COUNT FOR BOBBIN THR. MON. DURING SEWING

The number of stitches can be set for which the bobbin thread monitor is not activated.

3- MONITORING STITCHES FOR Ndl. THR. MON.

The number of stitches can be set for which a thread disturbance is to be ignored. A small number of stitches means that the needle thread monitor is more sensitive.

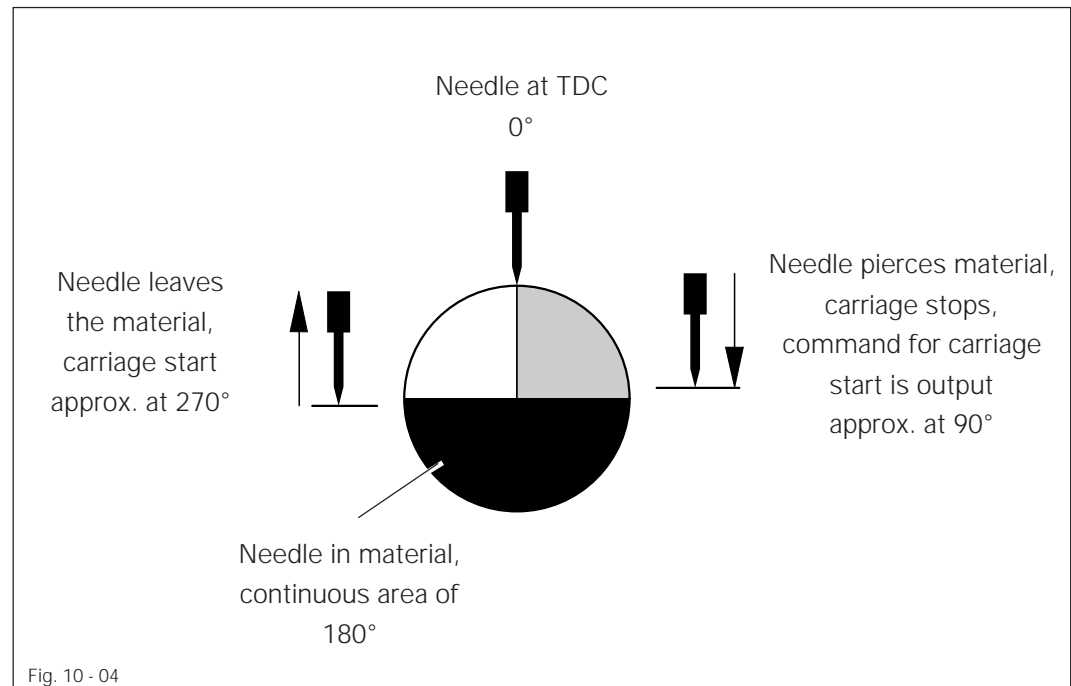
4- AUTOMATIC STITCH REVERSE

The number of stitches can be set by which, when there is a thread disturbance, the needle automatically goes back.

5- SLOW STARTING STITCHES

The number of stitches can be set which are to be carried out when sewing on the workpiece with reduced speed.

6- CARRIAGE START (NIS = needle in material)



The command for the carriage start is output when the needle pierces the material. However, the carriage actually starts when the needle leaves the material (constant 180° later). The point in time for the output of the carriage start command can be changed in the range of 0 - 360°.



Under certain conditions, the stitch formation can be influenced by the setting. To avoid thread disturbances, the value should be between 60° and 120°.

4- SWITCH FUNCTIONS

Under this main function, the user can program machine functions according to his requirements in the subfunctions.

1- THREAD MONITOR FUNCTIONS

Thread monitor functions are listed here which can be turned on or off via the number keys 1 or 0.



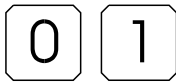
- 1- THREAD MONITOR
- 2- BOBBIN MONITOR
- 3- BOBBIN SENSOR (option)

2- LANGUAGES

Several languages are listed here from which the desired user language can be selected.

- 1- GERMAN
- 2- ENGLISH
- 3- FRENCH
- 4- SPANISH
- 5- ITALIAN

3- AIRBLAST SELECTION



An airblast function is listed here which can be turned on or off via the **number keys 1** or **0**.

1- NEEDLE COOLING (AIRBLAST), FEED FORWARD

When the function is active, it prevents the starting thread from being pushed under the presser during fabric transport to the sewing station.



4- OTHER FUNCTIONS

Under this subfunction are other subfunctions which can be turned on or off with the **number keys 1** or **0**.

1 - THREAD PULLER

Increases the amount of thread when starting sewing.

2 - BOBBIN CHANGE FROM TOP

Sewing head tilts up automatically for changing the bobbin.

3 - JIG MONITOR (option)

4- FOLDING IN THE CENTRE POSITION

The folding procedure is performed in the centre position. This function must be switched on if an assembly for watch pockets is being used.

5- VACANT

Without function.

6- CARRIAGE MOVEMENT

When this function is on, the carriage moves continuously during sewing.

When this function is on, the carriage moves intermittently, e. g. when the needle is in the material the carriage feed stops.

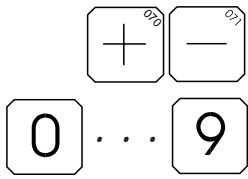
7- SLOW TRIGGERING

The triggering speed of the sewing jig from zero point to sewing on point is reduced to prevent thin material from shifting.

8 - HOME POSITION POCKET PLATE IN FRONT

When this function is on, the pocket plate moves automatically forward for inserting the pocket cutting.

When the function is not active, the pocket plate moves forward only after the foot switch has been pressed.



5- TIMES

Under this main function, times are listed which can be set via the **plus/minus keys** or the **number keys**.

1- TIME FOR DEPOSITING MATERIAL

Prior to the stacking procedure, the stacker should move low enough to ensure that the material can be safely stacked. The setting depends on the material used.

2- TIME FOR FOLDER DOWN

The time is to be set so that the function "folder down" already begins during the function "folder forward", but is just ended in the forward end position of the folder.

3- TIME FOR LOWERING STACKER

The time should be set so that the stacker does not move down until the sewing jig has cleared the stacker area.

4- TIME AFTER TABLE UP

The time is to be set so that the folder plates don't move back until the table is at the top.

5- TIME FOR EDGE FOLDERS

The time is to be set so that the folder moves to the top after the folder plate is at the back end position.

6- TIME FOR FEED FORWARD

The time is to be set so that the sewing jig feed from the folder station to the sewing station is carried out after the pocket plate has moved out of the jig area.

7- TIME FOR THREAD PULLER

The time is to be set so that the thread puller cylinder can carry out the complete stroke.

6- SERVICE

The service functions are only intended for the mechanics. A detailed description is found in the service manual for the machine control.

1- SEWING MOTOR FUNCTIONS

1- SEWING MOTOR TURNING

2- TRIMMER SPEED SELECTION

3- THREAD TRIMMING SEQUENCE

2- STEPPING MOTORS

1- STEPPING MOTOR X-AXIS

2- STEPPING MOTOR Y-AXIS

3- DISPLAY INPUTS

4- SET / RESET OUTPUTS

5- SET ZERO POINT

6- SOFTWARE DATE

7- COLD START

10.05 Sewing



This machine must only be operated by adequately trained operators!
The operators must also ensure that only authorized persons have access to the potentially dangerous area around the machine!



The program may only be started after the cover 1 of the X/Y carriage control has been closed!



During the program cycle, do not reach into the folder or the sewing station area! Danger of serious injury!



During the program cycle, do not reach into the swivel range of the transport arm! Danger of serious injury!

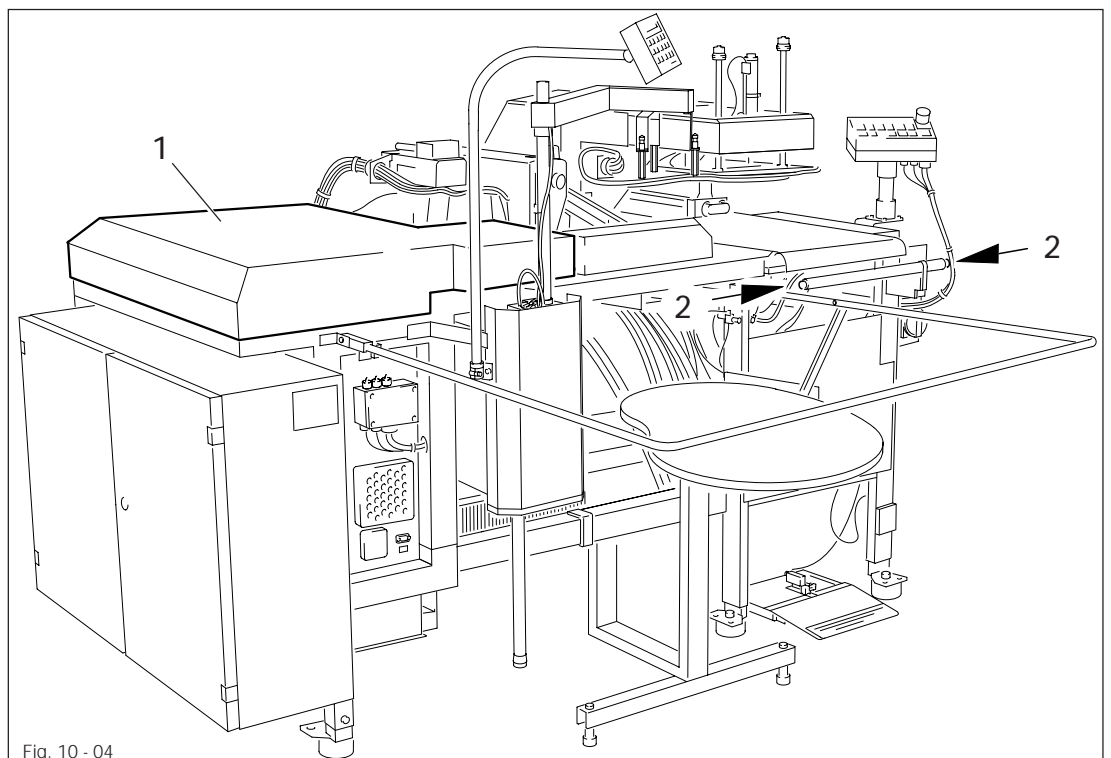


Fig. 10 - 04

10.05.01 Sewing in the AUTOMATIC mode



- Insert workpiece and align (see chapter 9.08 Placement of the cuttings).

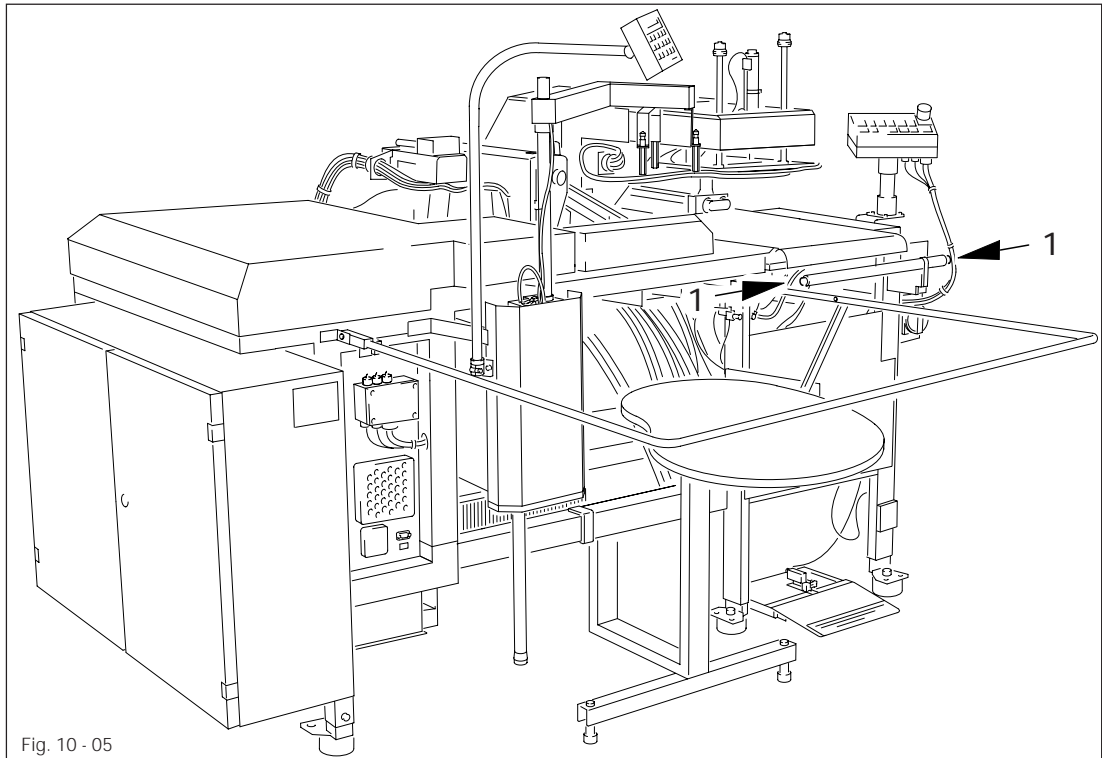
- Select **AUTOMATIC** mode.



- Press key for **program start**.
(Machine switches to automatic program cycle).

- Press start controls 2 at the same time (the entire work cycle is carried out automatically).

10.05.02 Sewing in the MANUAL mode



- Insert workpiece and align (see chapter 9.08 Placement of the cuttings).
- Select **MANUAL** mode.
- Press start controls 1 at the same time (the function is dependent on the menu selection; see chapter 7.04 Start controls).
- Start the cycle of functions of the folder by pressing the **folder movement** key repeatedly.

Operating sequence for sewing on watch pockets

- move pocket plate in centre position
- move folder to front and centre position
- edge folder on
- lower pocket plate and folder
- move edge folder to rear
- raise folder
- move folder to rear
- lower sewing jig
- swing feed arm with sewing jig to the folding station, stacker is activated
- lower sewing jig
- move pocket plate to rear
- move pocket plate in centre position
- swing feed arm with sewing jig to the sewing station.

- Press **program start** key (sewing program will start).

Operating sequence for sewing on trim

- Lower folder and loading plate
- move edge folders in, loading plate up and edge folders out
- raise folder
- swing feed arm with sewing jig to the folding station, stacker is activated
- move folder to rear
- lower sewing jig
- move pocket plate to rear
- swing feed arm with sewing jig to the sewing station.



- Press **program start** key (sewing program will start).

10.05.03 Disturbances

If thread breakage occurs, the following message appears, for example, in the control panel display of the sewing station:

Display: "THREAD ERROR #008"

- The machine moves back automatically by the number of stitches selected in the menu and stops.
- Thread the needle (see **chapter 9.04 Threading the needle thread**).



- If necessary, press the **seam pattern forwards** and/or **seam pattern backwards** keys until you come to the position from which sewing is to be continued.



- Press **program start** key (program cycle is continued).



For further error messages see **Chapter 13 Control system**.

11 Care and maintenance

| | |
|---|---------------------|
| Clean the entire machine | weekly |
| Clean the hook compartment | several times daily |
| Clean needle area | several times daily |
| Check oil level for sewing head lubrication | weekly |
| Check oil level for zigzag drive | daily before use |
| Lubricate X/Y carriage guides | every 6 months |
| Lubricate jig changeover | every 6 months |
| Lubricate stacker guides | every 6 months |
| Check air pressure | daily before use |
| Clean air filter of the compressed air unit | as required |
| Clean the blower air filter | as required |



These maintenance intervals are calculated for the average running time of a single-shift operation. If the machine is operated more often, shorter intervals are recommended.

11.01 Cleaning the machine

The required cleaning cycle for the sewing machine is dependent on the following factors:

- Single or multi-shift operation
- Accumulation of dust from the various fabrics

Thus, appropriate cleaning instructions can only be determined on an individual basis for each machine.

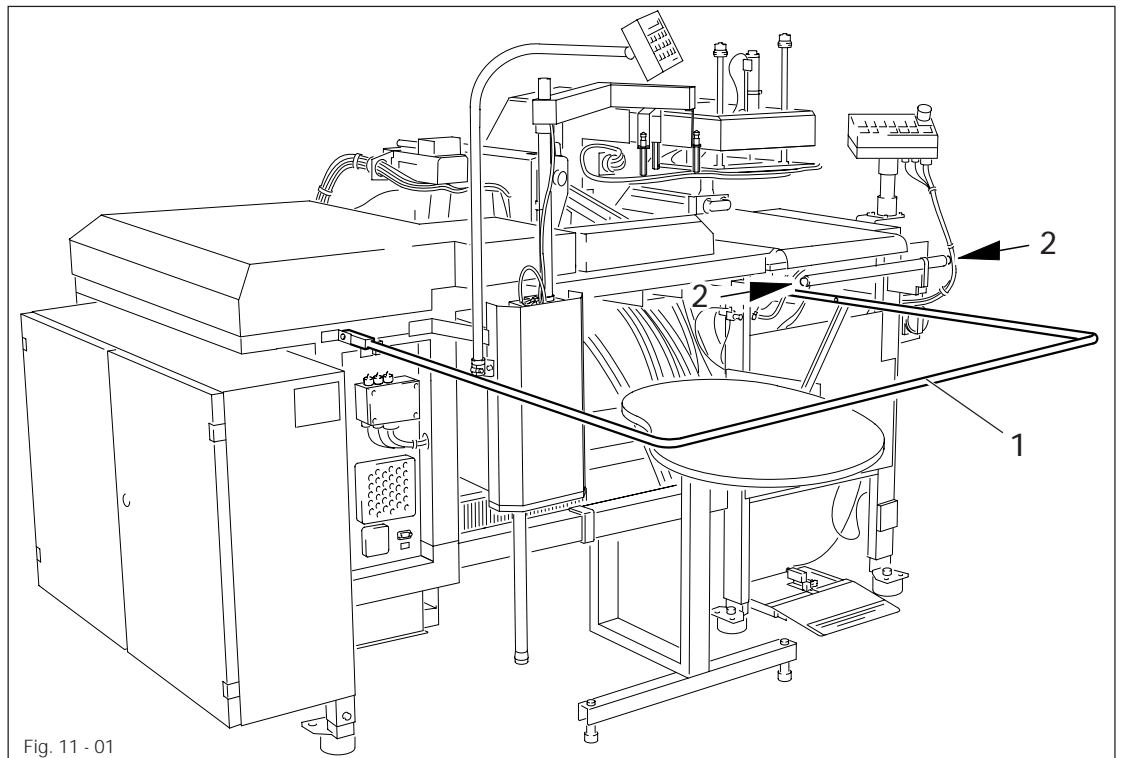


Fig. 11 - 01

To avoid operation disturbances, we recommend the following cleaning work for a machine in single shift operation:



- Clean the hook compartment and the needle area of the sewing head several times daily.
- Clean the entire machine at least once a week.

To do this:



- Select **MANUAL** operation mode.



- With the machine in home position, press the **change bobbin** key. (Feed arm with sewing jig swings to folder station, stacker swivels out and sewing head tilts back.)
- Raise ratchet lever and swing safety bar **1** downwards.
- After cleaning, swing safety bar **1** back up into its starting position.
- Press start controls **2** simultaneously. (Sewing head tilts down, stacker engages and feed arm with sewing jig swings in to the sewing station.)



When the machine is being cleaned, make sure that safety bar **1** is lowered!
Otherwise danger of injury by sudden starting of the machine!

11.02 Lubricating the sewing head

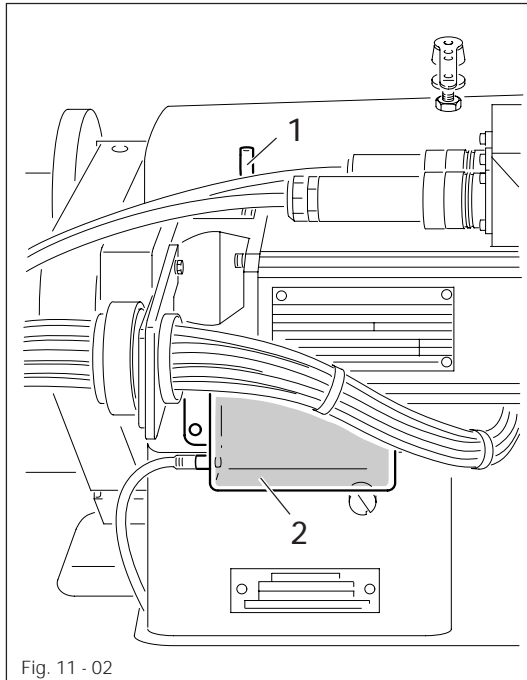


Fig. 11 - 02

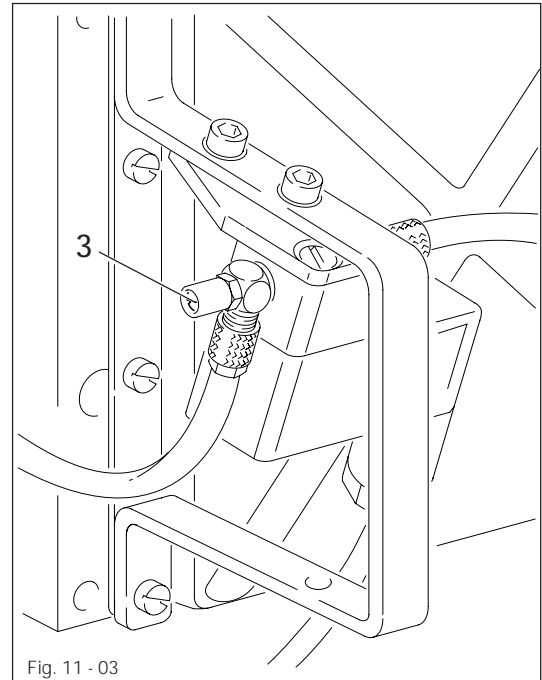


Fig. 11 - 03



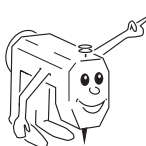
Only use oil with a mean viscosity of 22.0 mm²/s at 40°C and a density of 0.865 g/cm³ at 15°C.



- Raise ratchet lever and swing safety bar toward the machine.
- Pour oil through the hose 1 into oil reservoir 2.
- Before the machine is first operated or whenever the machine has been at a standstill for a longer period of time, also add a few drops of oil to the hook race.
- The oil flow rate can be regulated by turning the screw 3 at the underside of the machine.
- Swing back safety bar to its starting position.



The wicks in the oil reservoir 2 must always be immersed in oil!



We recommend PFAFF sewing machine oil, part no. 280-1-120 144.

11.03 Lubricating the zigzag drive

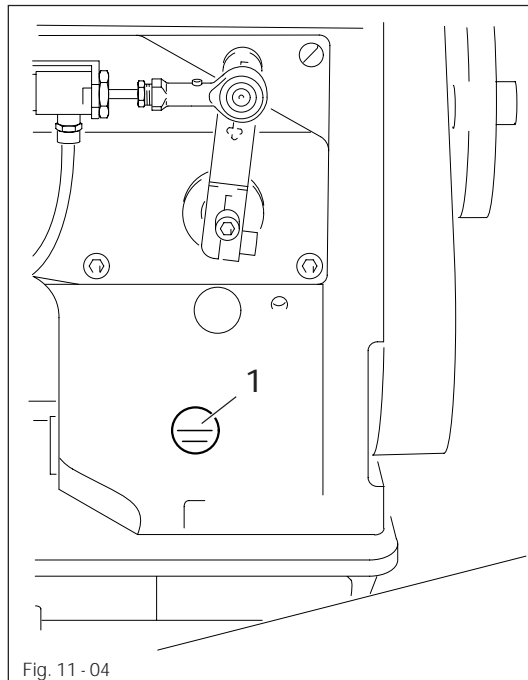


Fig. 11 - 04

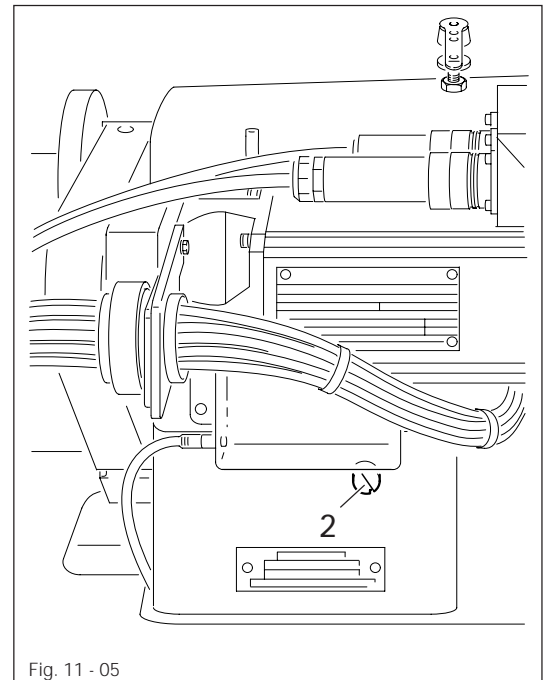


Fig. 11 - 05



Always check the oil level at window 1 before operating the machine!



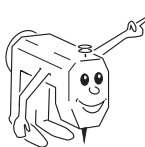
Only use oil with a mean viscosity of 22.0 mm²/s at 40°C and a density of 0.865 g/cm³ at 15°C.

When required:

- Lift the ratchet levers and swing safety bar 1 down.
- Unscrew screw 2.
- Pour in oil until it is level with the uppermost mark.
- Tighten screw 2.
- Return safety bar to its starting position.





Never allow the oil level to fall below the lower mark on the window 1!



We recommend PFAFF sewing machine oil, Part no. 280-1-120 144.

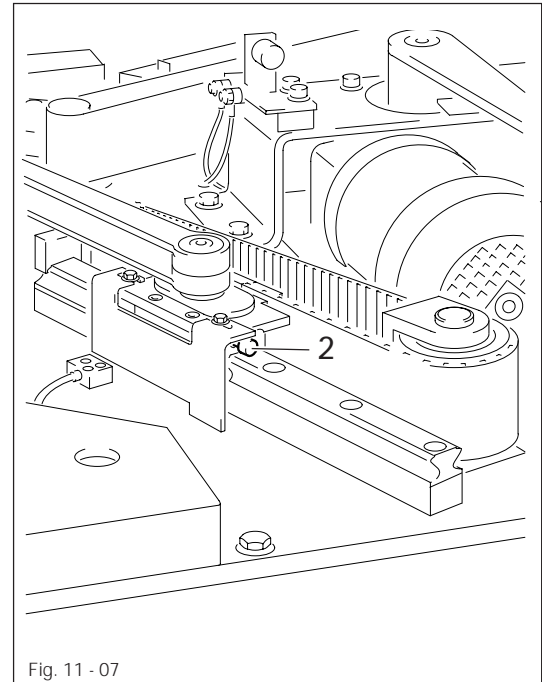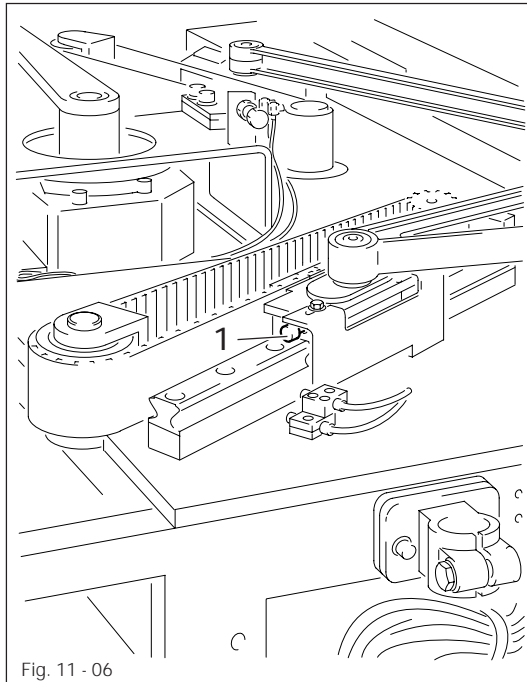11.04 Lubricating the carriage guides of the X/Y control




Turn off main switch and ensure that it cannot be turned on accidentally!



Only use heavy-duty grease with a penetration of 265-295 and a dripping point of 185°C.



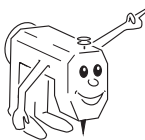- Open X/Y control cover.
- Lubricate both guides via the grease nipples 1 and 2 with a grease gun. This should be done every 6 months for single-shift operation and every 3 months for double-shift operation.
- Close X/Y control cover.



We recommend lithium soap grease, Molykote BR 2 plus,
Part no. 280-1-120-207.

11.05 Lubricating jig changeover

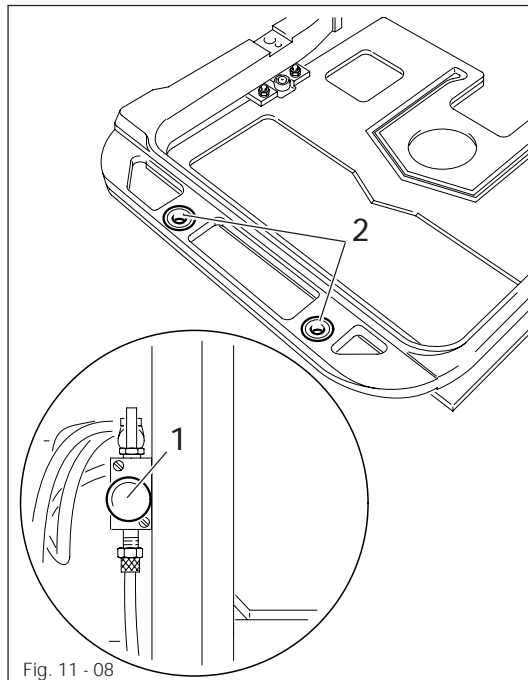


Fig. 11 - 08

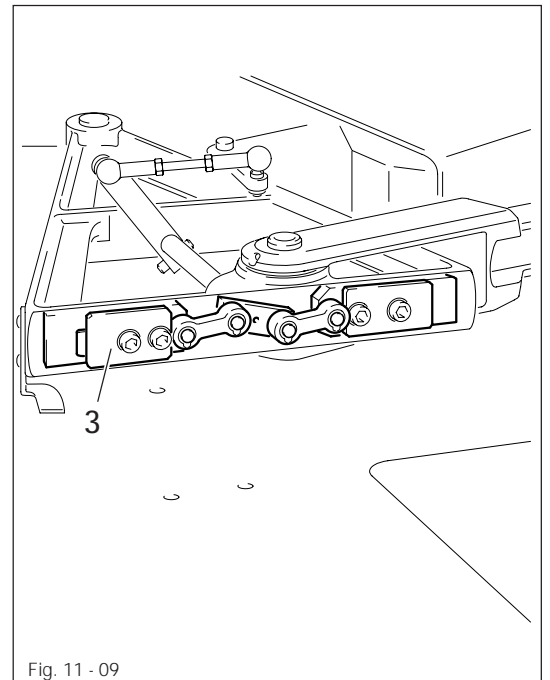


Fig. 11 - 09



Grease the parts described below regularly with Retinax G (sodium-base grease; dripping point 135°C), Part. no. 280-1-120 243.

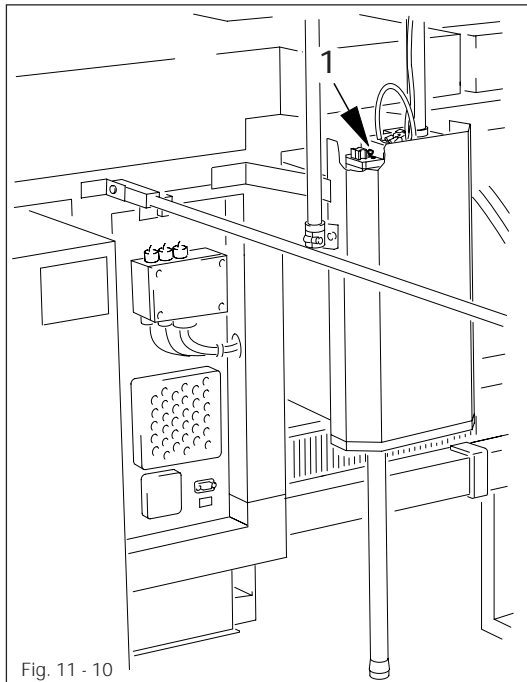


- Press the **home position** key on the control panel of the folder station. (Transport arm with sewing jig swings to home position).
- Press key **1** for the sewing jig changeover. (Changeover of transport arm and sewing jig frame is released.)



- Remove sewing jig frame and grease the changeover bushes **2**.
- Also lightly grease the catch **3** of the X/Y control.
- Position the sewing jig frame on the transport arm and activate key **1**. (Changeover is now closed again.)

11.06 Lubricating the stacker guides




Switch off at the mains switch and secure against restarting!




Use only high-performance lubricator with a penetration of 265-295 and a dripping point of 185°C.

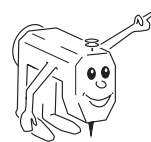- Using a grease gun, lubricate the guide rails through lubricating nipple 1 every six months with single shift operation and every three months with double shift operation.



We recommend lithium soap grease, Molykote BR 2 plus , Partno. 280-1-110-207.

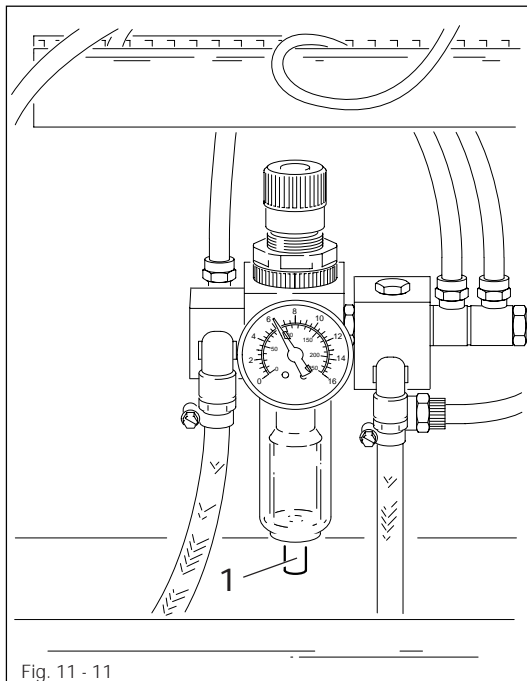11.07 Emptying the water trap of the compressed air unit




Make sure that knurled bushing 1 is turned out as far as it will go (left-handed thread).



When the water level rises, the automatic outflow opens and the water drains off.

- Place a suitable receptacle beneath the drainage opening.

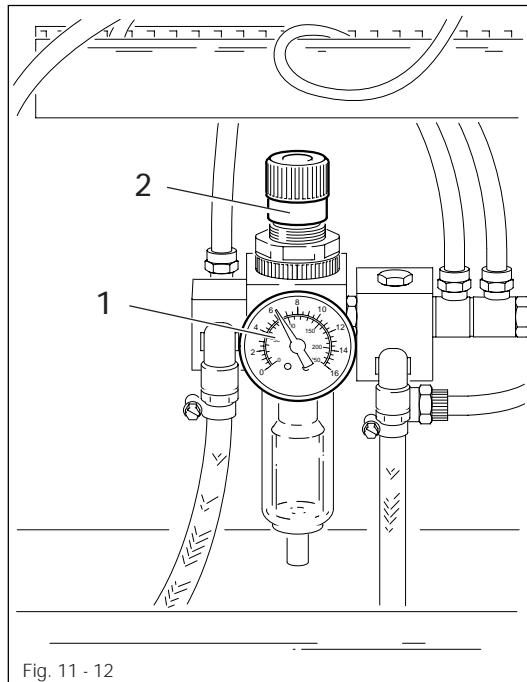
11.08 Checking and regulating air compression



Pressure gauge 1 should show a pressure of **6 bar!**

- Always check the air compression on pressure gauge 1 before operating the machine.
- If necessary, this level must be set by turning knob 2.

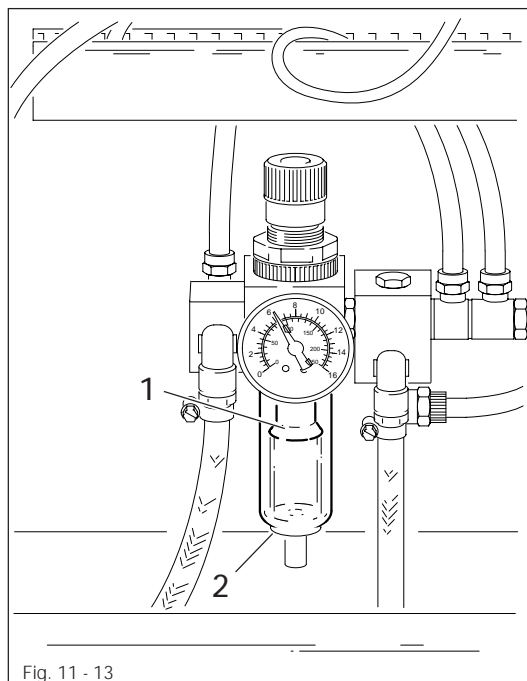11.09 Cleaning the air filter of the compressed air unit





Should a pressure level of **6 bar** no longer be attainable, filter element **1** must be cleaned.



Switch off machine!
Turn off compressed air!

- Unscrew drum 2.
- Remove filter element 1.
- Clean filter element 1 and drum 2 with benzine.
- Blast filter element 1 from the inside out with compressed air.
- When refitting drum 2 make sure that seals are positioned properly.

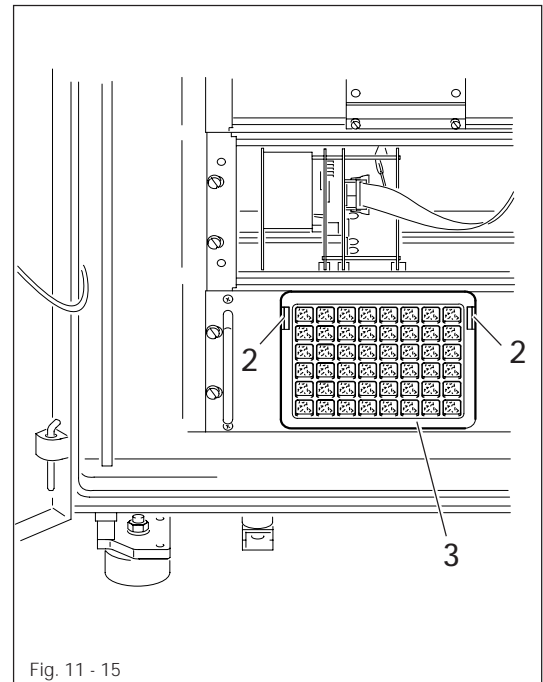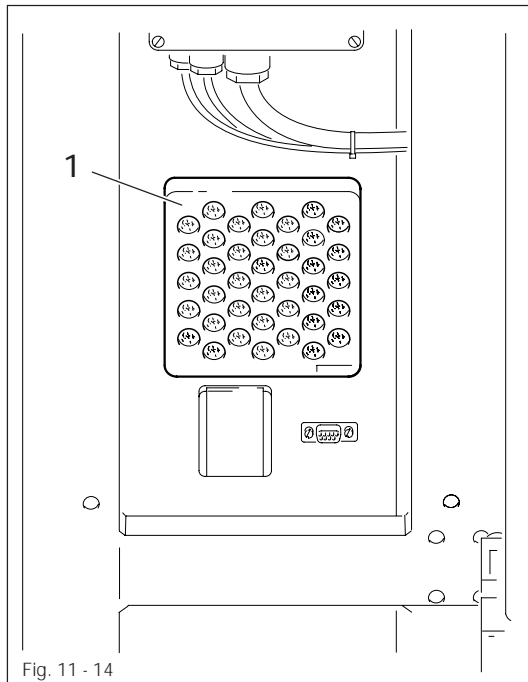11.10 Cleaning the blower air filter



Cleaning the blower air filter at the base of the machine:



- Remove cover 1.
- Take out filter element and clean with compressed air.
- Insert filter element and replace cover 1.

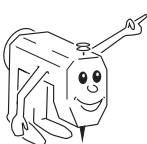
Cleaning the blower air filter in the control box:



Before opening the control box, be sure to turn off the main switch and ensure that it cannot be switched back on accidentally!



- Open control box!
- Press inward on the catches 2 and open cover 3.
- Take out filter element and clean with compressed air.
- Insert filter element and replace cover 3.



We recommend that you enter a record of each time the blower air filter is cleaned in the maintenance chart on the inside of the control box door.

12 Adjustment



Before beginning any adjustment work, observe all relevant safety regulations!

12.01 Notes on adjustments

All adjustments in these adjustment instructions are based on a completely assembled machine. Covers on the machine which have to be removed for checks and adjustment work and later remounted are not mentioned. The screws or nuts in () are for securing machine parts and must be loosened before the adjustment and retightened after all adjustments are carried out.

12.02 Tools, gauges and other accessories

- 1 set of screwdrivers with blade widths from 2 to 10 mm
- 1 set of wrenches with jaw widths from 6 to 22 mm
- 1 set of Allan keys from 1.5 to 6 mm
- 1 universal screwdriver with interchangeable blades
- 1 adjustable wrench
- 1 250g hammer
- 1 circlip pliers for circlips (Seeger circlip ring pliers)
- 1 pair of tweezers (slanted)
- 1 metal rule (0.3 mm thick)
- 1 brass arbor (8 mm dia., 250 mm in length)
- 1 adjustment pin (5 mm diameter), Part No. 13-030 341-05
- 1 hook bearing adjustment gauge, Part No. 91-129 996-01
- 1 adjustment pin (zero point adjustment)
- 1 edge guide (800 - 1000 mm in length)
- 1 bottle of Loctite
- Sewing thread and test material

12.03 Abbreviations

TDC = top dead center

BDC = bottom dead center

Removing/inserting sewing machine head



Turn off compressed air.

Switch off main switch and ensure that it cannot be turned back on accidentally.


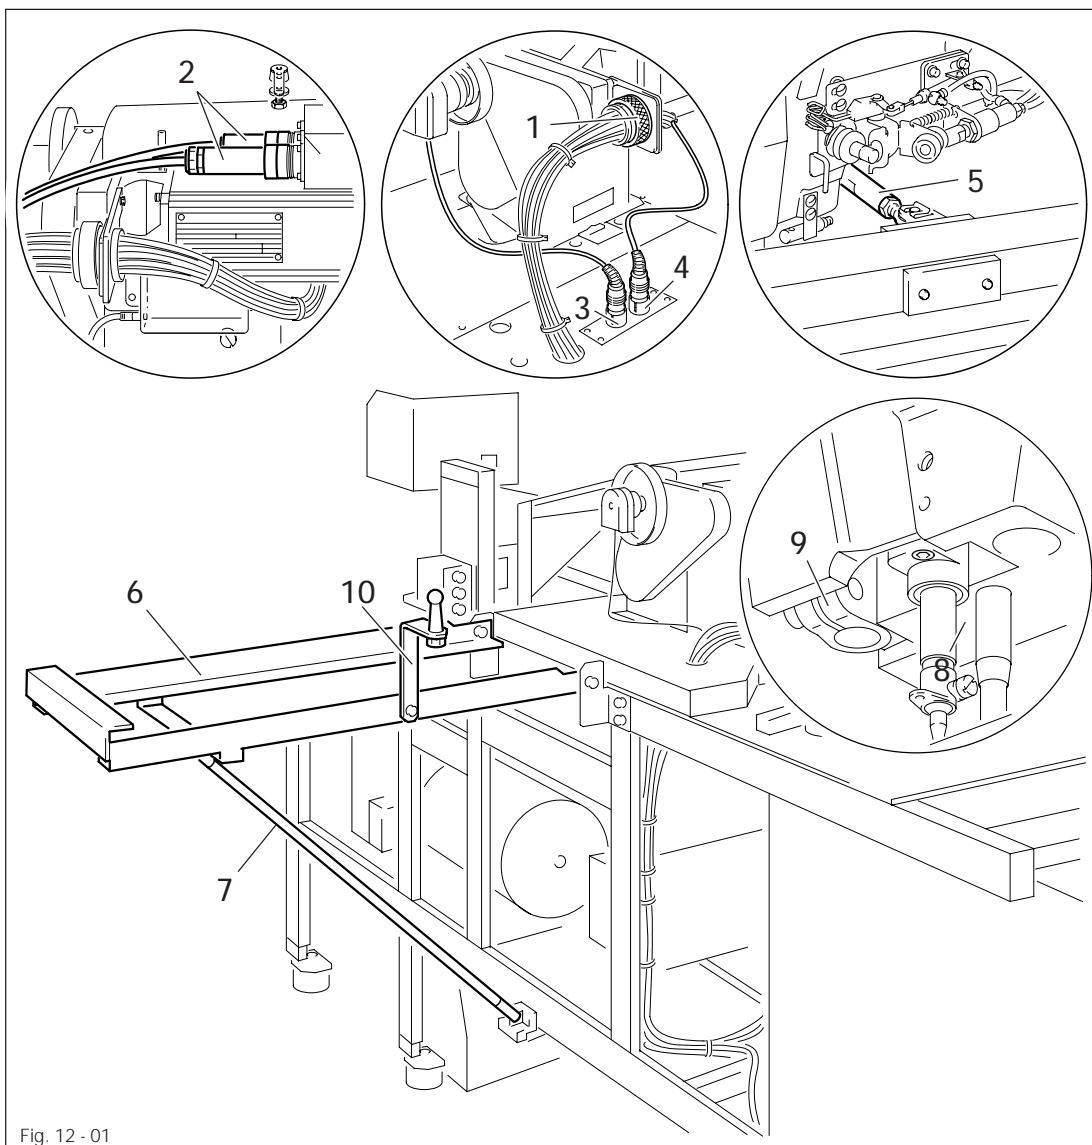


Fig. 12 - 01

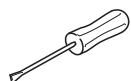

- When **removing**, unplug pneumatic power supply (knurled bush 1).
- Fold down bar and disconnect plug 2.
- Unplug plugs 3 and 4.
- Disconnect pull rod 5 on transport arm.
- Position frame 6 horizontally and connect support 7.
- Remove split pin 8 and push down lever 9.
- Remove sewing machine head.
- For work beneath the bedplate, raise support 10 and tilt back sewing machine. Make sure that the rounded end on support 10 engages in the ball pin of the sewing machine.
- To **insert** the machine head, carry out the steps above in reverse.
- Ensure that after the machine head is tilted upright lever 9 is secured with the split pin 8.

12.05 Checking and adjustment aids



By blocking holes 1-4, the required needle bars positions can be fixed precisely.


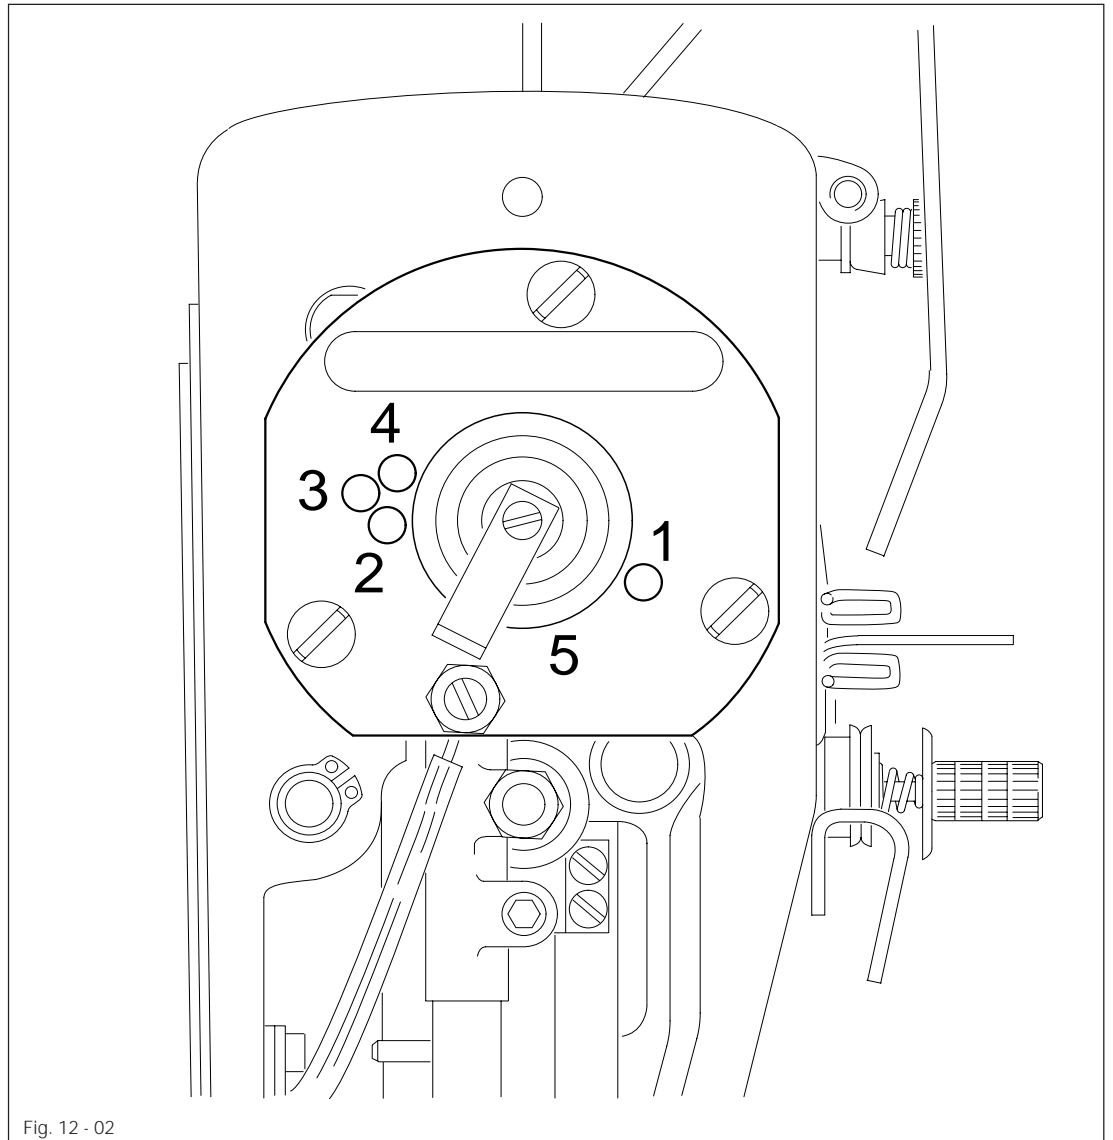


Fig. 12 - 02

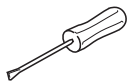

- Turn the handwheel until the needle bar is in approximately the required position.
- Place the adjustment pin in the appropriate hole and apply pressure.
- Rotate the handwheel back and forth slightly until the adjustment pin engages in the crank slot behind the bearing plate, thus blocking the machine.

| | | |
|--------|---|---|
| Hole 1 | = | 2.4 mm past the bottom dead center of the needle bar (2.4 past BDC) |
| Hole 2 | = | top dead center of the needle bar (TDC) |
| Hole 3 | = | 0.25 mm past the top dead center of the needle bar (0.25 past TDC) |
| Hole 4 | = | 1.0 mm past the top dead center of the needle bar (1.0 past TDC) |

Adjustment

12.06 Adjusting the sewing machine head

12.06.01 Counterweight

Requirement

In needle bar position BDC the largest eccentricity of the counterweight **1** must be at the top.


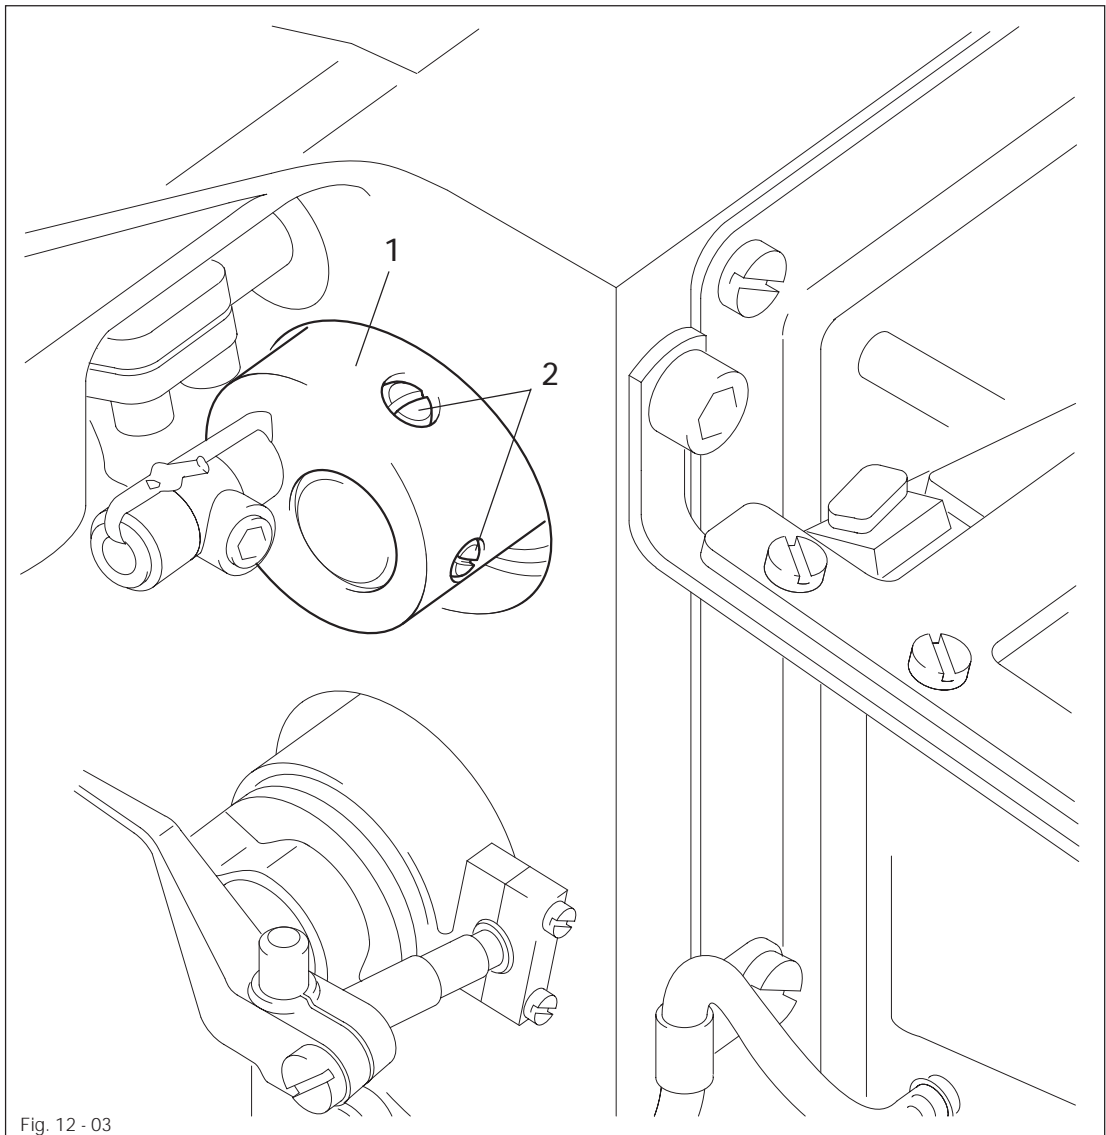


Fig. 12 - 03

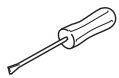

- Move needle bar to BDC.
- Turn counterweight **1** (screws **2**) according to the **requirement**.

12.06.02 Centering the needle in the needle hole (in the direction of sewing)

Requirement

In straight stitch position, viewed in the direction of sewing, the needle must be centered in the needle hole in the hook bearing adjustment gauge 4.


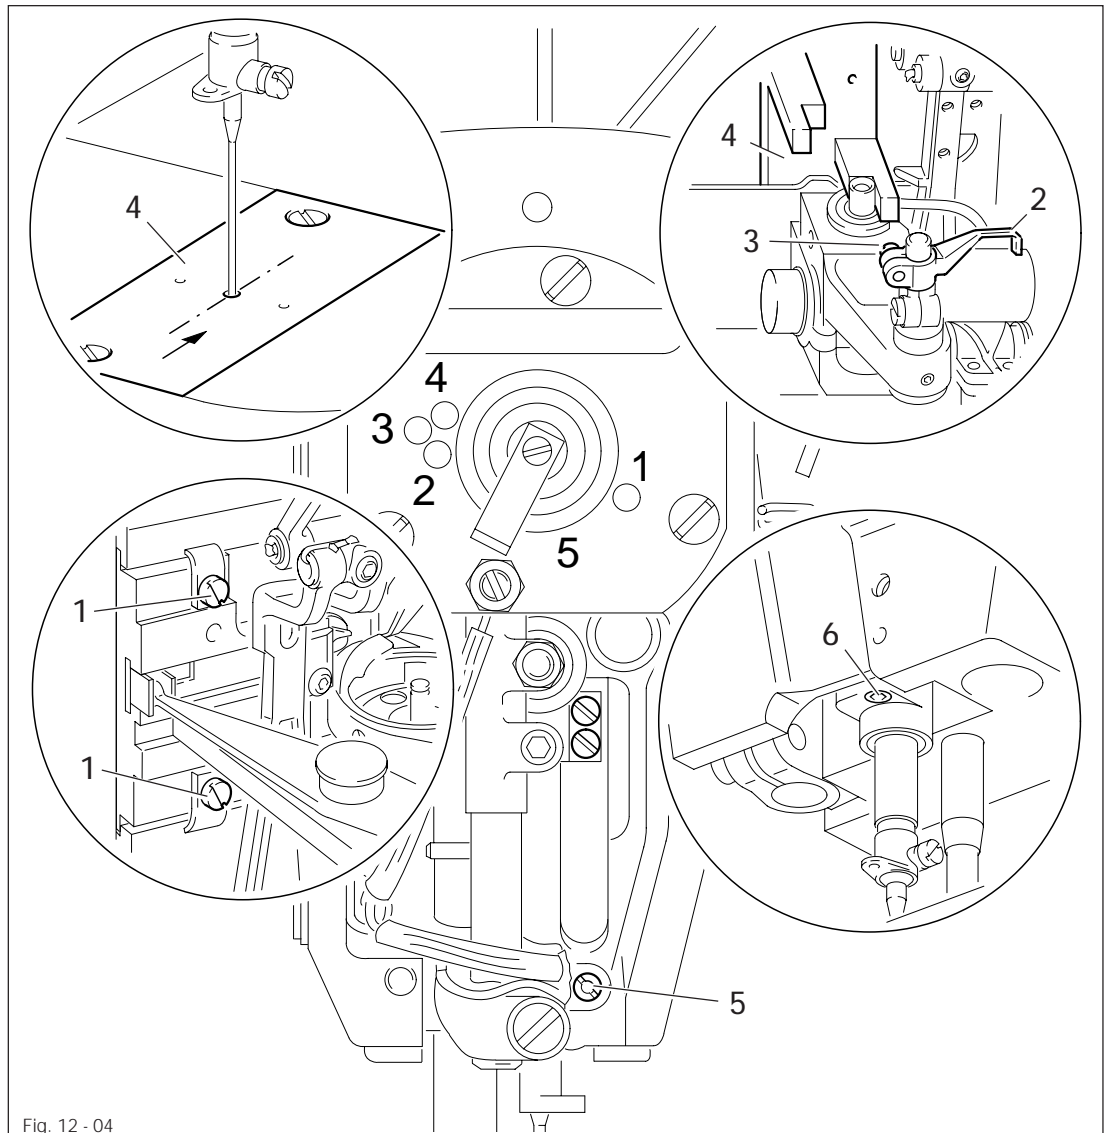


Fig. 12 - 04

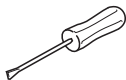

- Unscrew counter presser and needle guard.
- Insert a new needle.
- Loosen screws 1 and remove thread trimmer unit.
- Swing bobbin opener 2 (screw 3) to the right and remove hook.
- Fit hook bearing adjustment gauge 4 so that the numbers "418 - 419" can be read from the right. Bring needle bar to BDC.
- Turn eccentric pin 5 (screw 6) according to the **requirement**.



The hook bearing adjustment gauge 4 remains fitted for further adjustments.

Requirement

The guide rod **5** must be parallel to the needle bar.


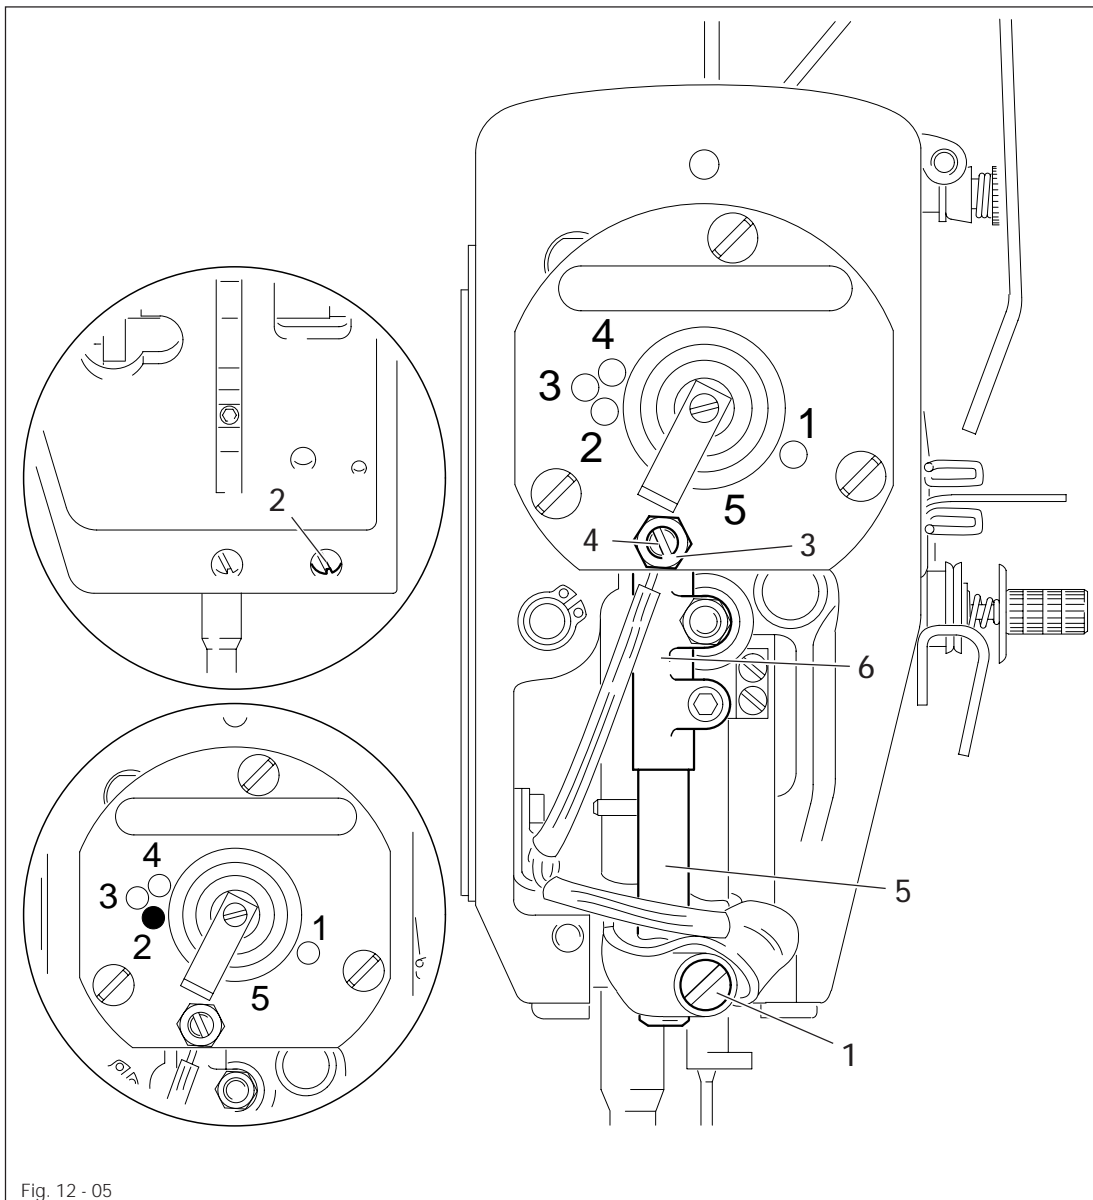


Fig. 12 - 05


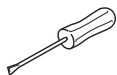


- Move needle bar to TDC (hole 2).
- Loosen screws 1, 2 and nut 3.
- Position the greatest eccentricity of pin 4 toward the bottom.
- Move the recess of the guide bar 5 against the eccentric pin 4.
- Turn eccentric pin 4 according to the **requirement** and tighten nut 3.
- Push guide rod 5 down and then up as far as it will go, making sure that the bush 6 does not move sideways (if necessary, readjust eccentric pin 4).
- Move guide rod 5 against the eccentric pin 4 as far as it will go and tighten screws 1 and 2.

12.06.04 Setting zero stitch

Requirement

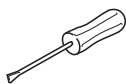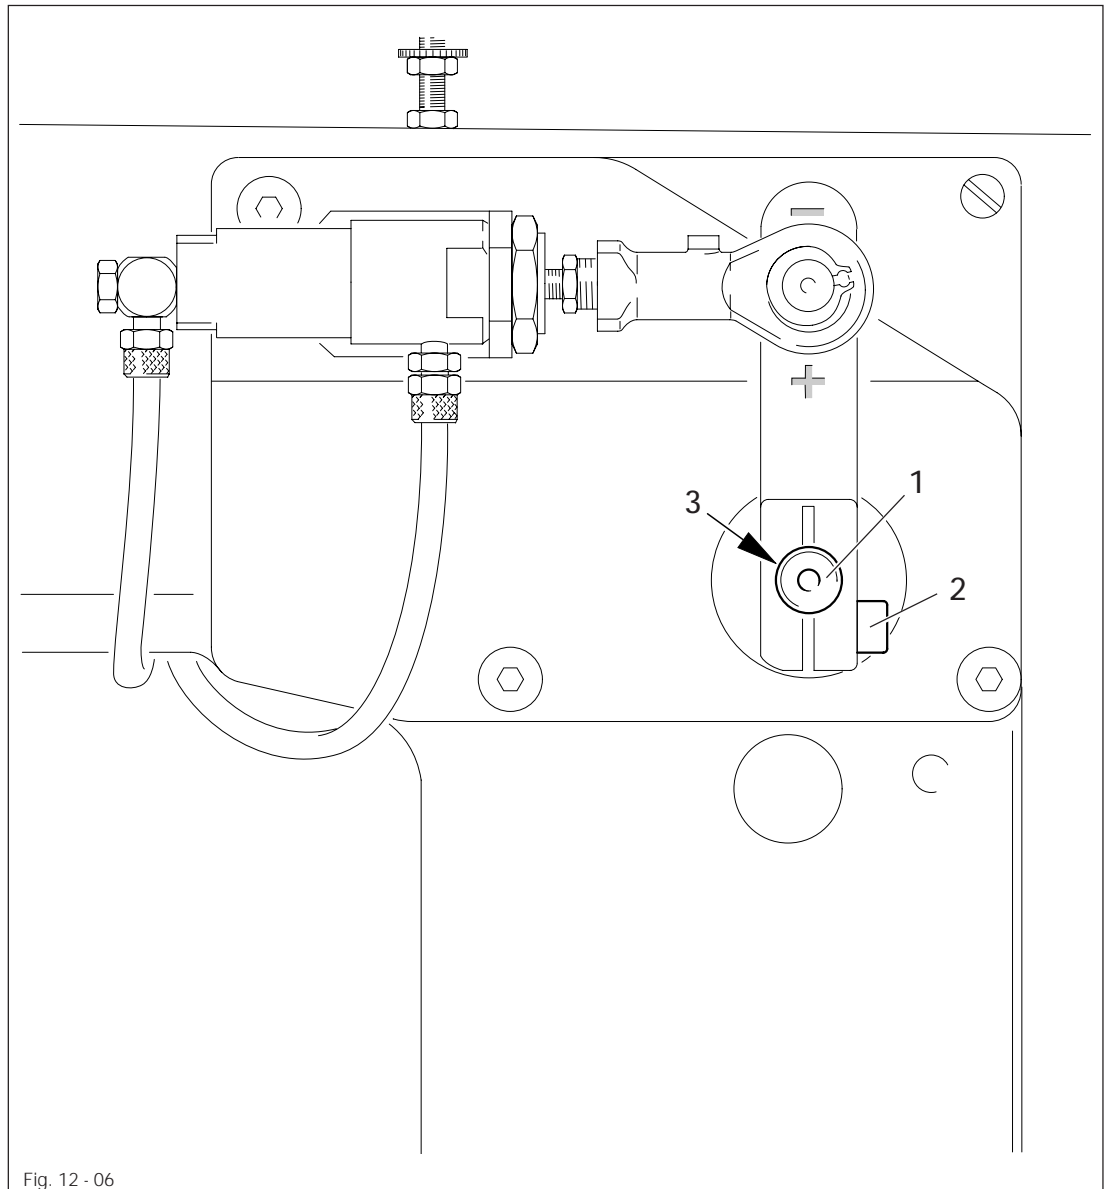In straight stitch position (cylinder plunger fully retracted), the needle bar must not carry out a zigzag movement when the handwheel is turned.



- Place a piece of paper over the needle plate cutout and, by turning the handwheel, perforate with the needle.
- Turn handwheel backwards until the paper is perforated again.
- Both perforations must be congruent. Otherwise, turn the regulator shaft 1 (screw 2) according to the **requirement**.



In order to turn the regulator shaft 1, insert a pin in the hole 3.

12.06.05 Zigzag stitch movement

Requirement

When the needle, coming from the right point of needle entry, is in TDC (hole 2), the needle bar must not move when the zigzag stitch width regulator is operated.


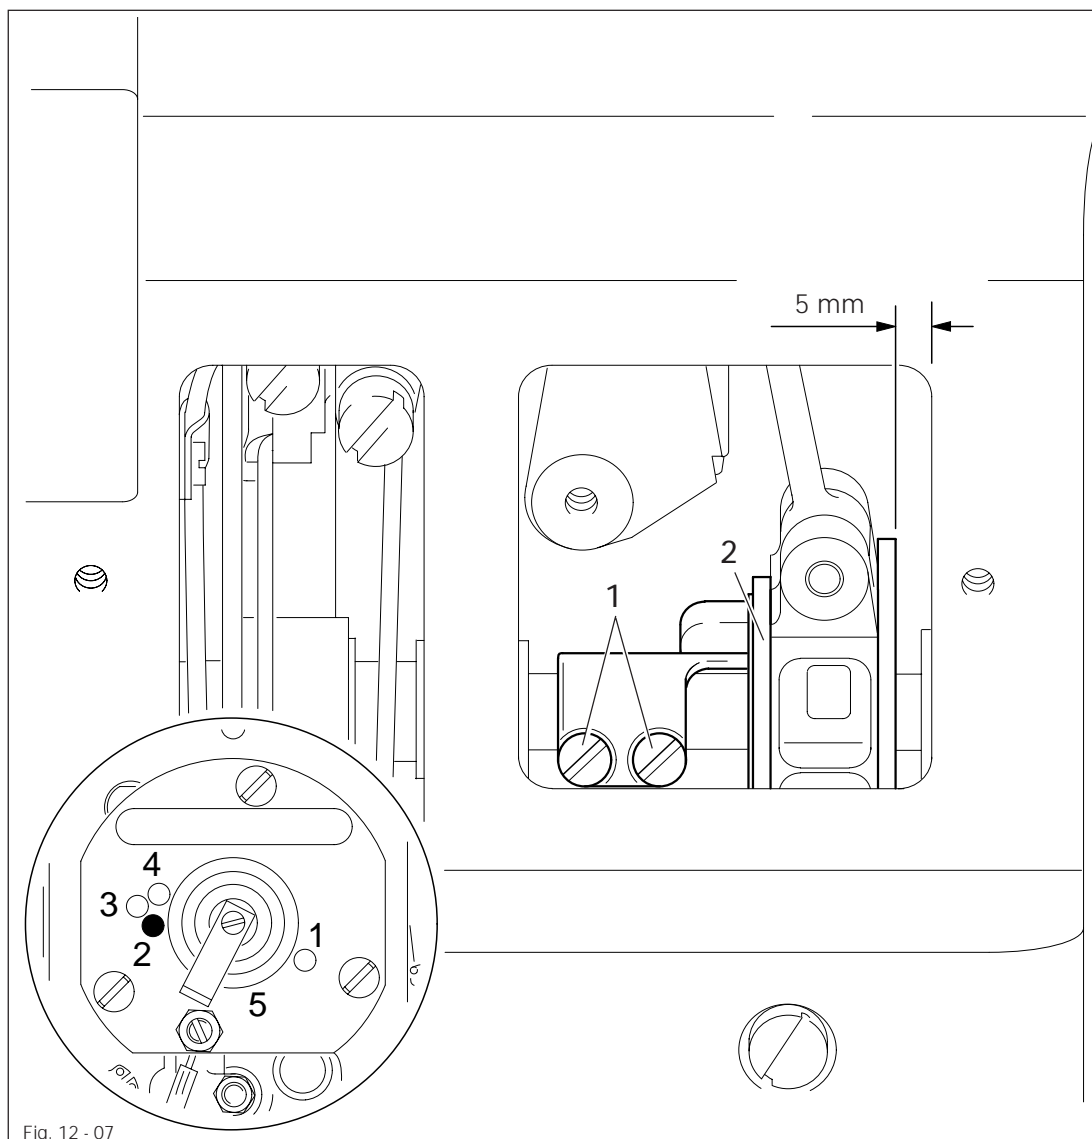


Fig. 12 - 07

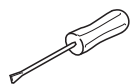

- Loosen screws 1 slightly.
- Bring needle bar to TDC (hole 2).
- Move eccentric 2 until the distance from it to the right inner side of the housing is approx. 5 mm.
- Turn eccentric 2 according to the requirement and tighten screws 1.

12.06.06 Needle penetration symmetry

Requirement

1. In straight stitch position, the needle must penetrate exactly the center of the needle hole.
2. For the largest zigzag stitch setting, the point of needle penetration to the right and left must be at the same distance to the center point of needle penetration.


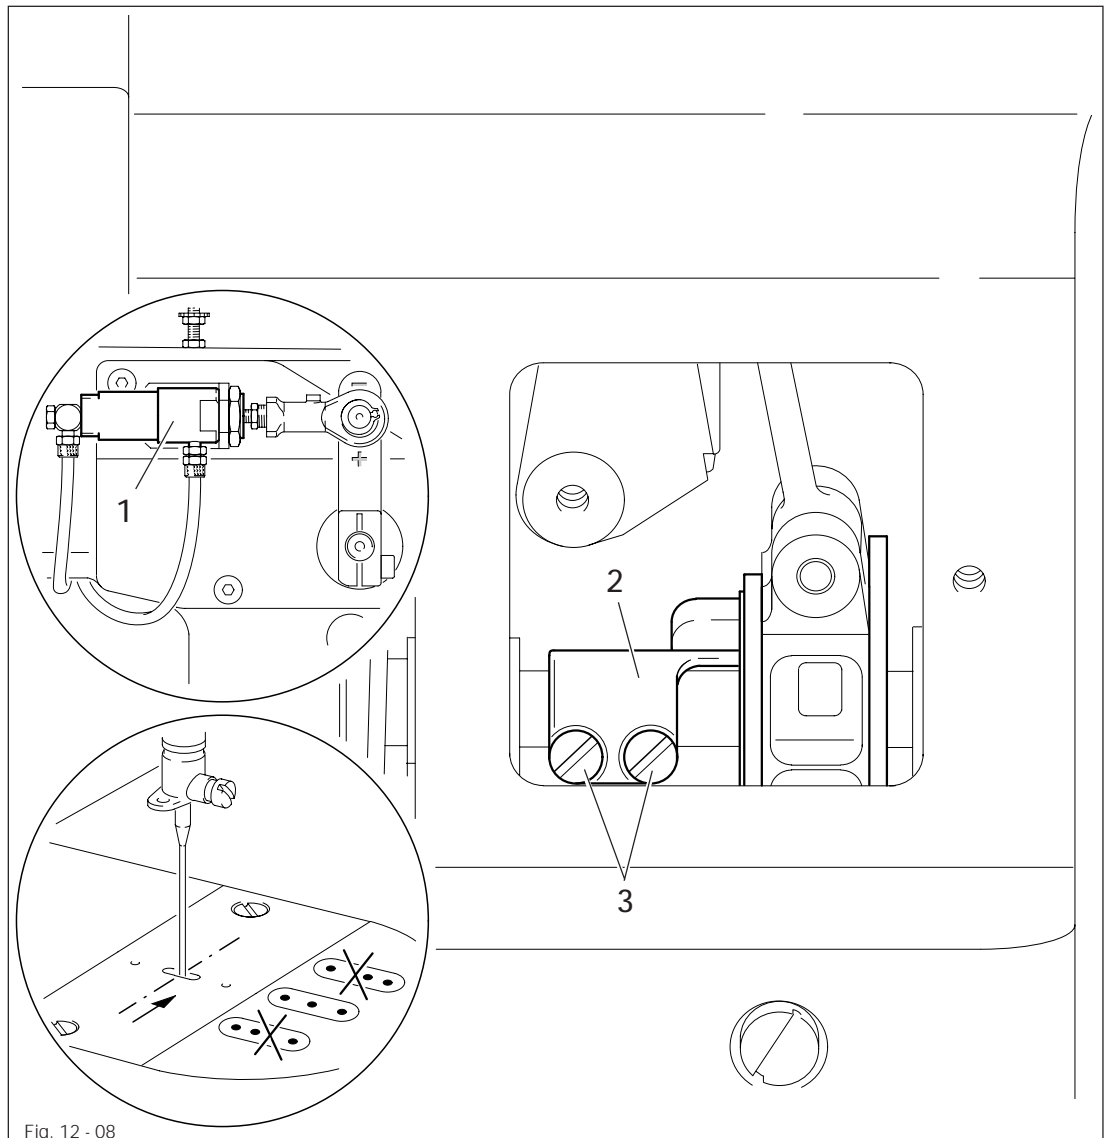


Fig. 12 - 08

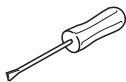



- Fully retract the plunger of the cylinder 1.
- Place a piece of paper under the needle and perforate it.
- Turn so that the needle moves up somewhat and extend the plunger of cylinder 1 fully.
- Perforate the paper left and right by turning the handwheel forward and backward.
- Move eccentric 2 sideways (screws 3) according to the requirement.
- Check adjustment in **chapter 12.06.02 Centering the needle in the needle hole (in the direction of sewing)**, and adjust if required.

Adjustment

12.06.07 Centering the needle in the needle hole (across the direction of sewing)

Requirement

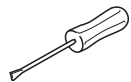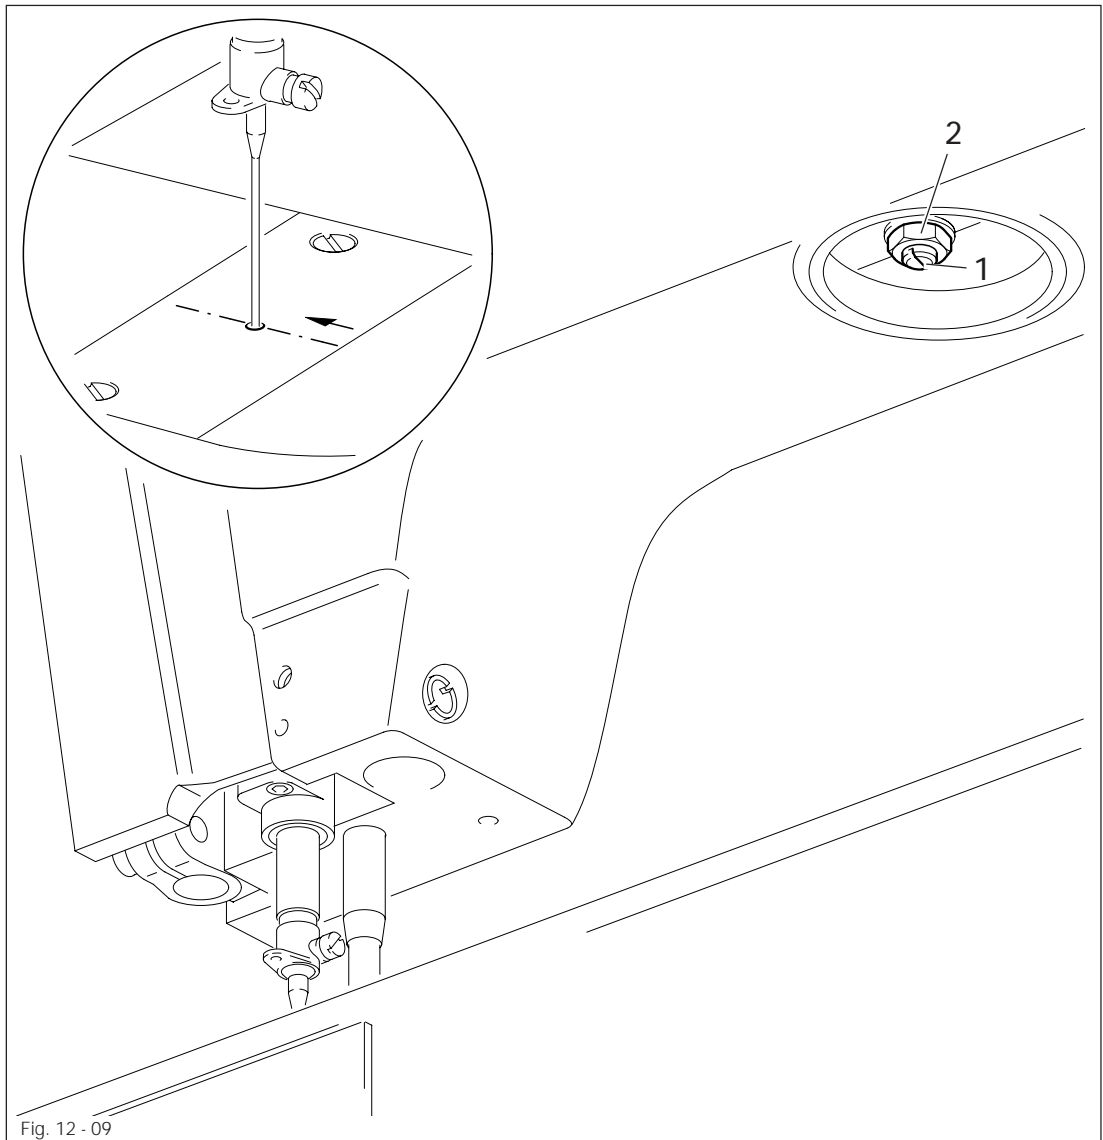In straight stitch position, viewed across the direction of sewing, the needle must be centered exactly in the needle hole in the hook bearing adjustment gauge.





- Bring needle bar to BDC.
- Turn eccentric pin 1 (nut 2) according to the requirement.

12.06.08 Zigzag stitch width

Requirement

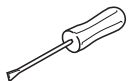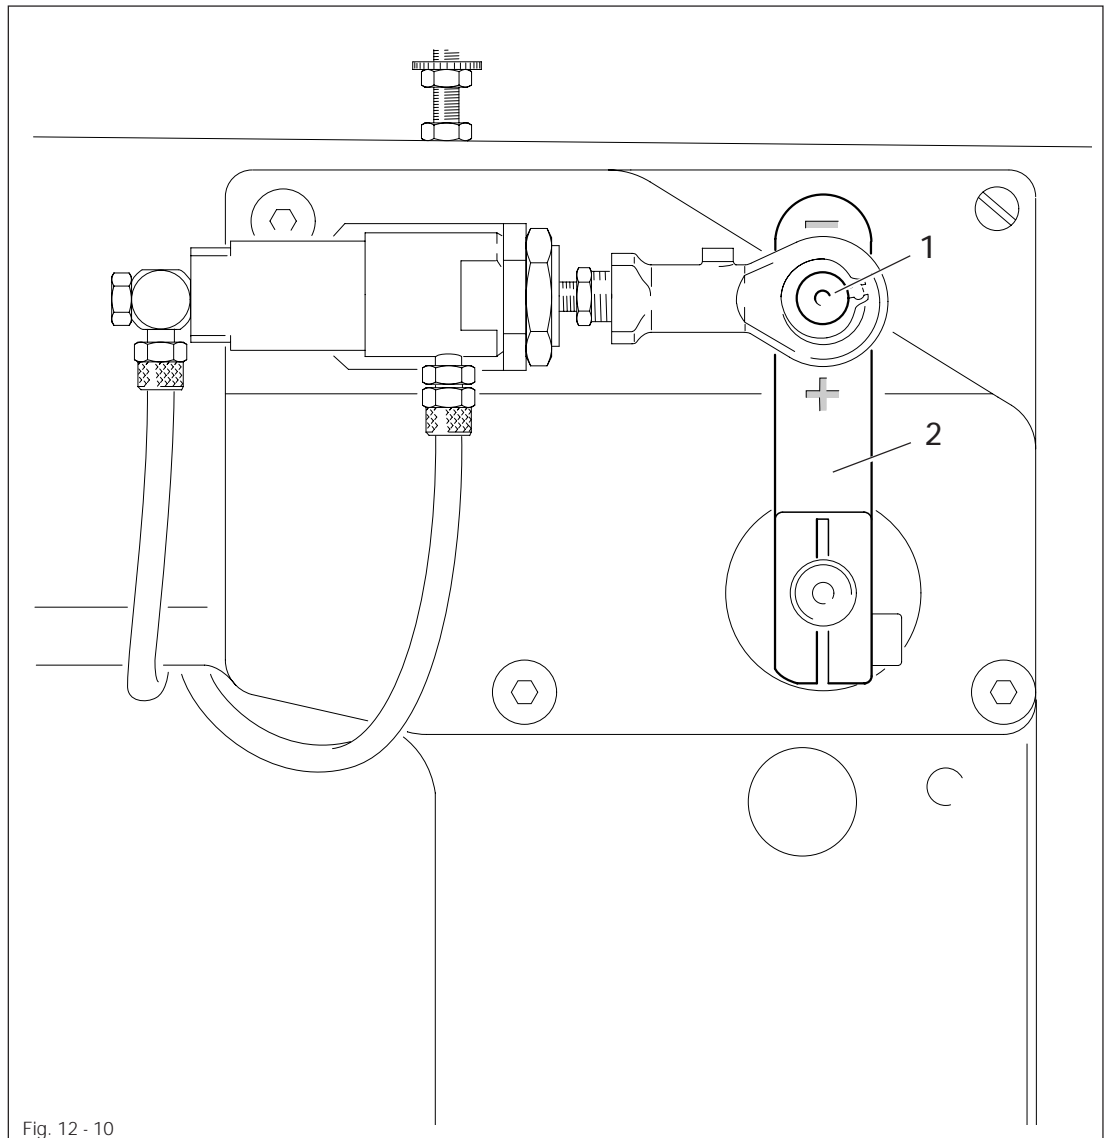At the maximum zigzag stitch width, the needle must not strike against the counter presser.



- Loosen the lock nut of pin 1.
- Slide pin 1 according to the **requirement** into the elongated hole of the lever 2.



By moving the pin 1 down (+), the zigzag stitch width is increased; by moving it up (-), it is decreased.

Adjustment

12.06.09 Hook bearing

Requirement

The hook shaft must rest against the hook bearing adjustment gauge 4 at the top and from the side.


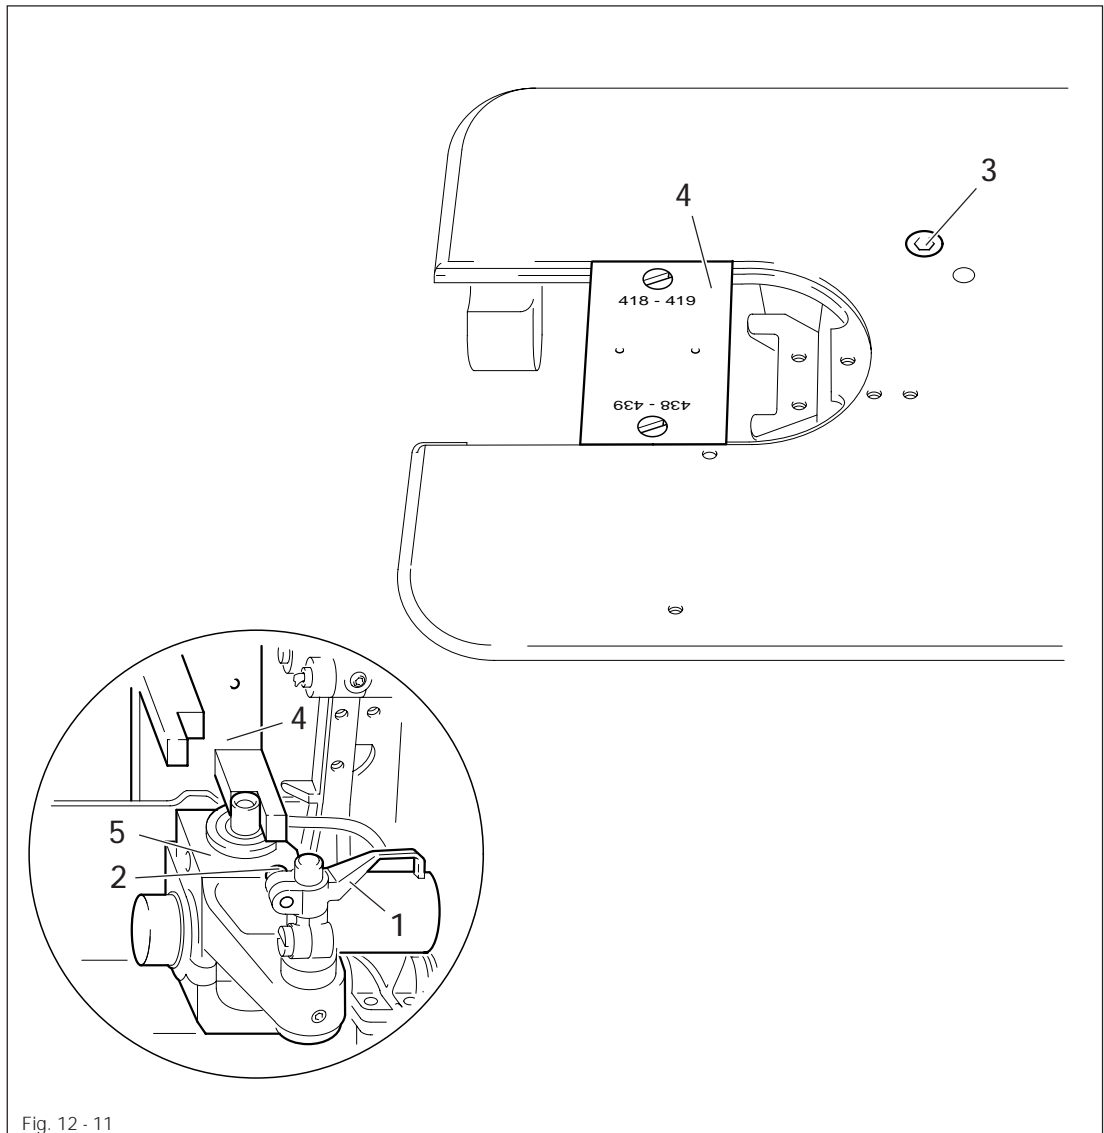


Fig. 12 - 11

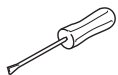


- Loosen screw 3 and loosen the draw key under the screw head by tapping the screw head lightly.
- Move and/or turn the hook bearing 5 according to the requirement.
- Tighten screw 3.
- Unscrew hook bearing adjustment gauge 4.


12.06.10 Hook lubrication

Requirement

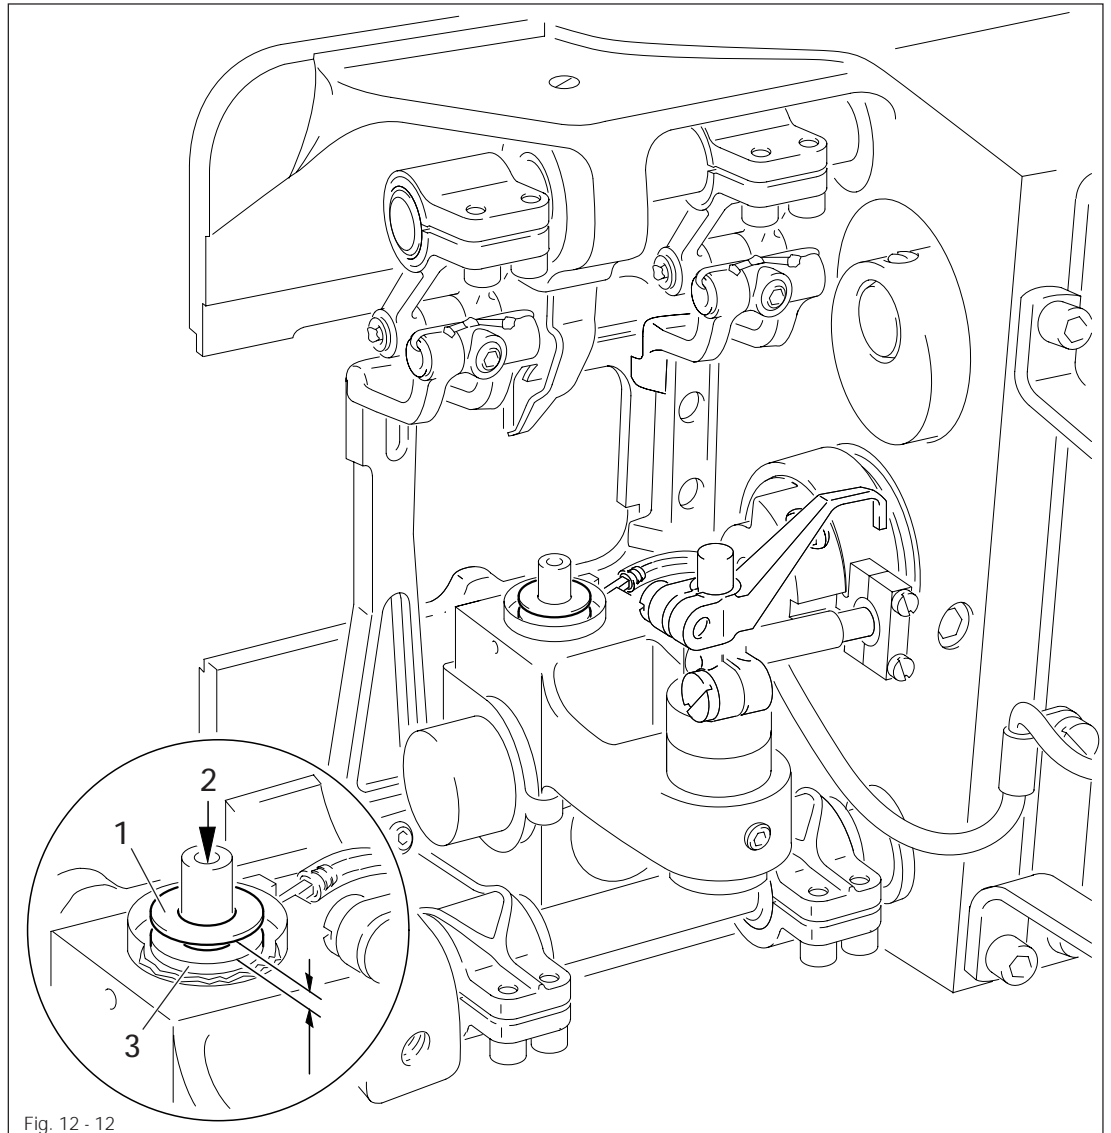1. The centrifugal washer 1 must be 1.5 mm above the oil ring 3.
2. When the machine is running at full speed, there should be a fine line of oil after approx. 10 seconds on a paper strip held over the needle plate cutout.



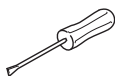The adjustment is only required when the wick is replaced. After replacing the wick, make sure that the new one is impregnated with oil.





- Move centrifugal washer 1 (screw 2) according to requirement 1.
- Check requirement 2; if necessary, move centrifugal washer 1.

Adjustment

12.06.11 Gear box drive belt

Requirement

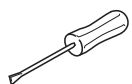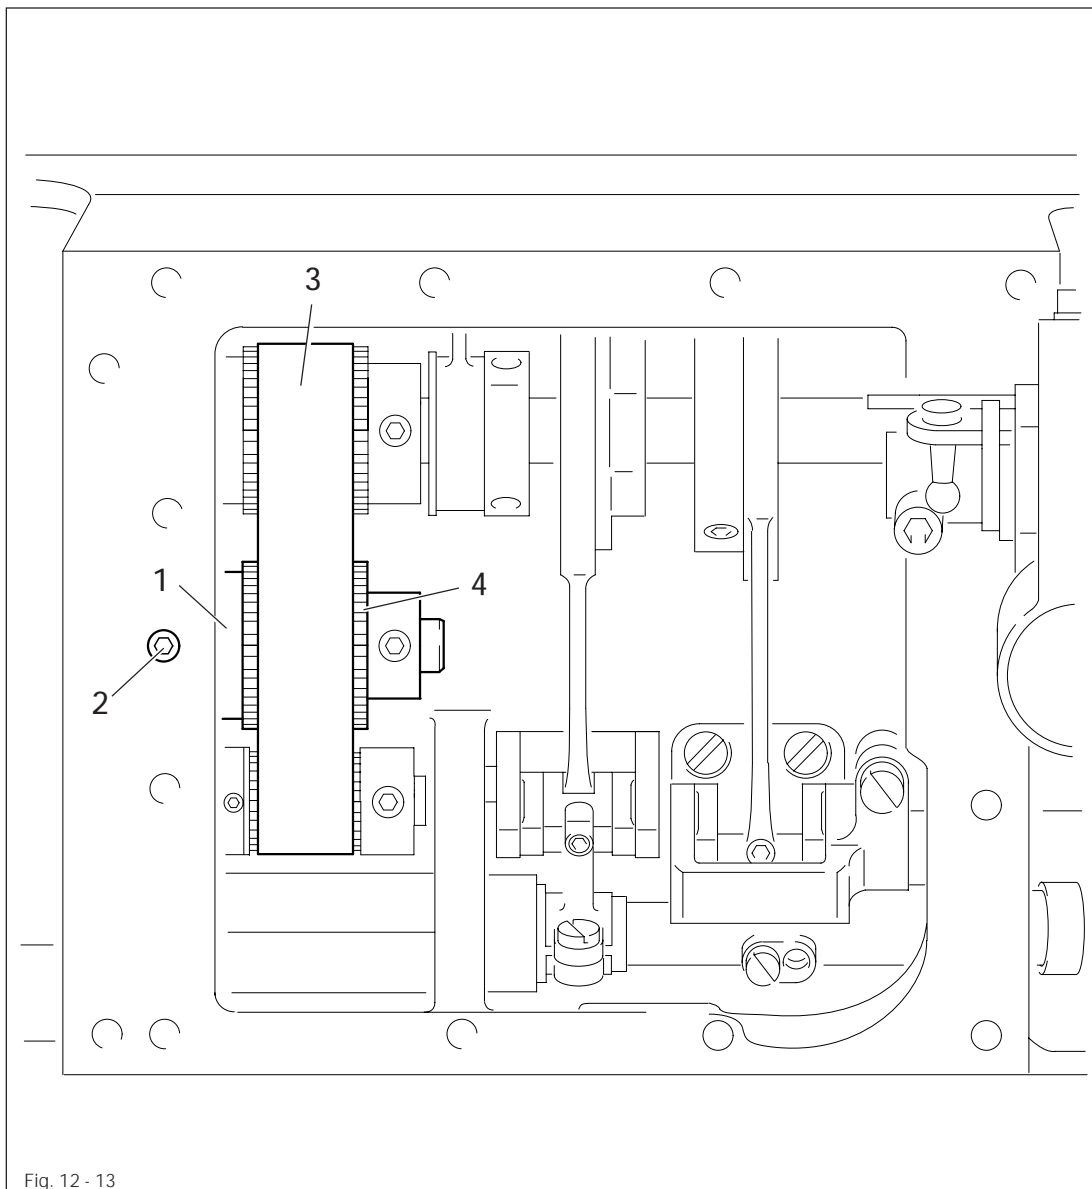The drive belt **3** must be tensioned so that the machine does not bind and the gears do not have any play.





- Move eccentric bearing bush **1** (screw **2**) so that the drive belt **3** is positioned in the middle of the bobbin case opener's drive wheel **4** and turn out of position according to the requirement.

12.06.12 Preadjusting the needle height

Requirement

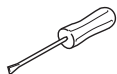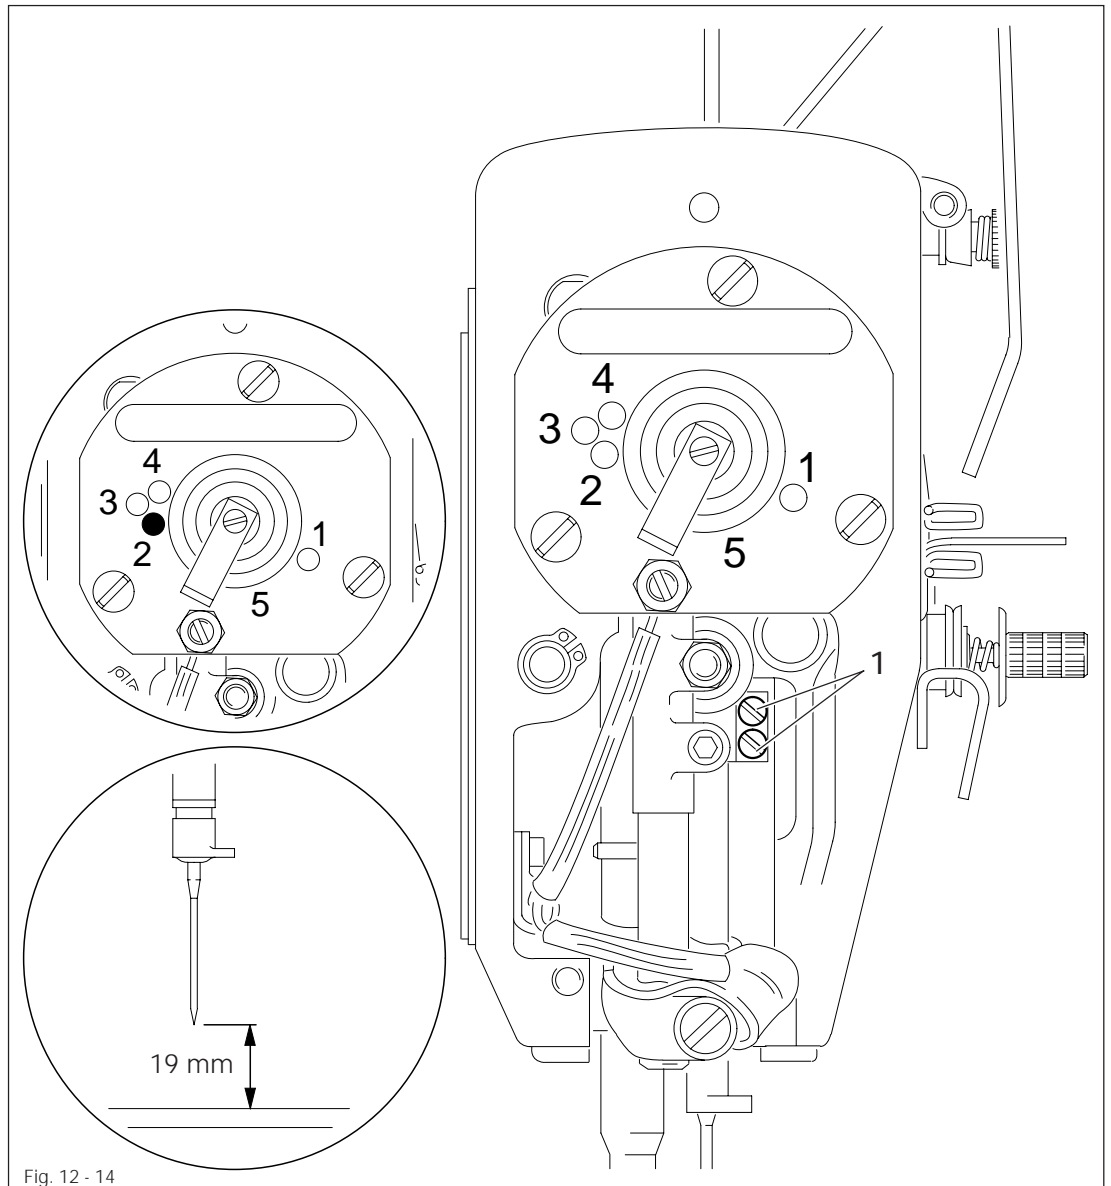At needle bar position TDC (hole 2), the distance between the needle point and the needle plate must be approx. 19 mm.



- Move needle bar (screws 1) without twisting it according to the requirement.

12.06.13 Needle bar rise, hook-to-needle clearance and bobbin case position stop

Requirement

1. With the needle bar 2.4 past BDC (hole 1), the hook point must be at the middle of the needle; the distance between the needle and the hook point must be from **0.05 to 0.1 mm**.
2. The bobbin case position stop is to be mounted so that between the bobbin case base and the front edge of the bobbin case position stop there is a distance of **1.0 mm** (see arrow).


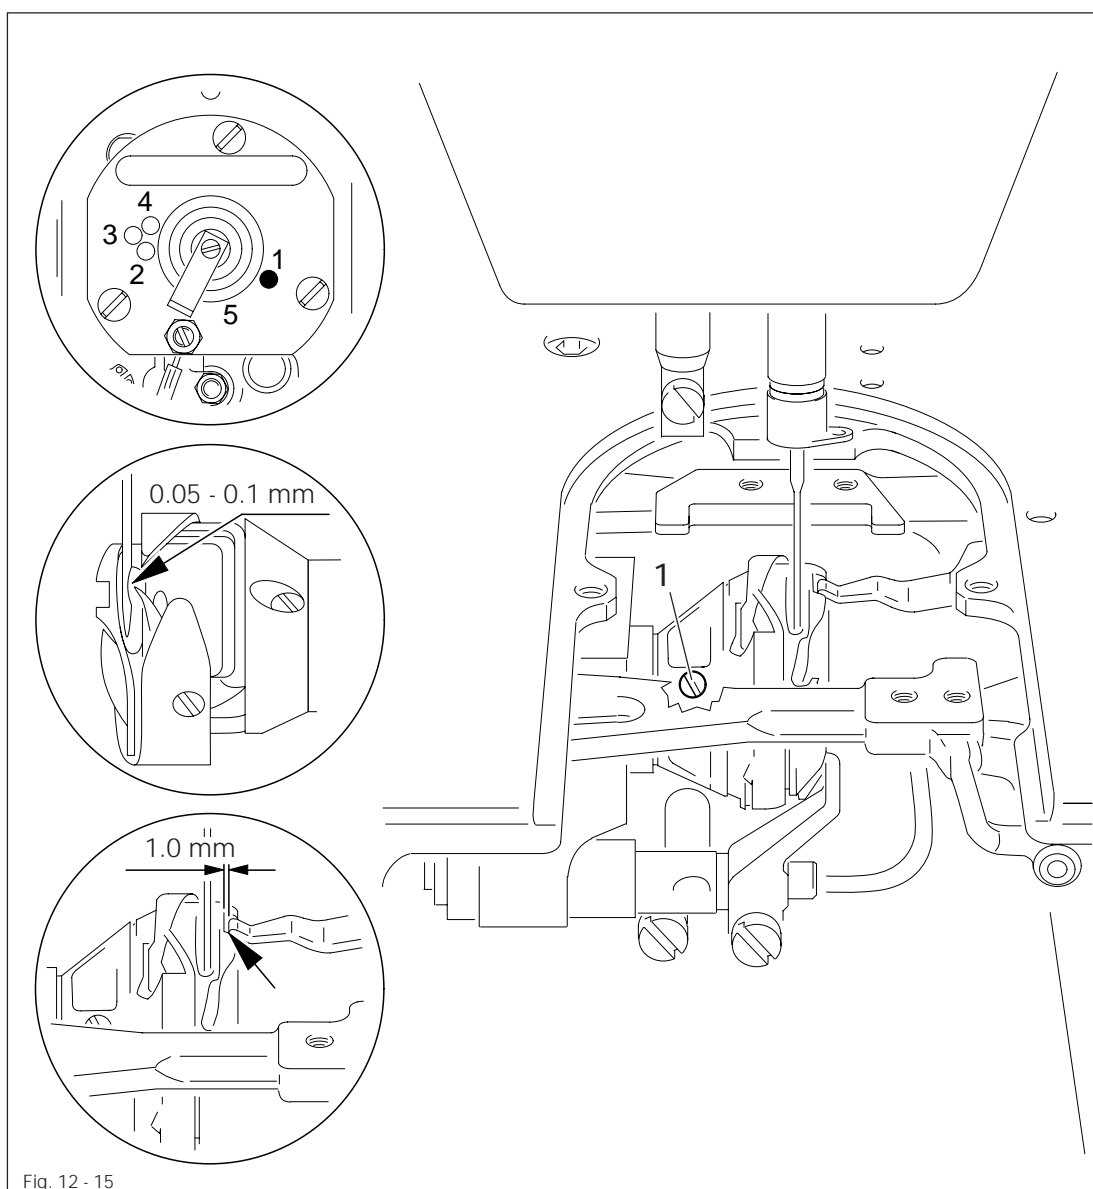


Fig. 12 - 15


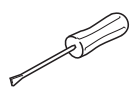


- Adjust the hook (screw 1) according to **requirement 1**.
- Mount bobbin case position stop according to **requirement 2**.

12.06.14 Final adjustment of needle height

Requirement

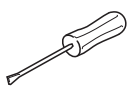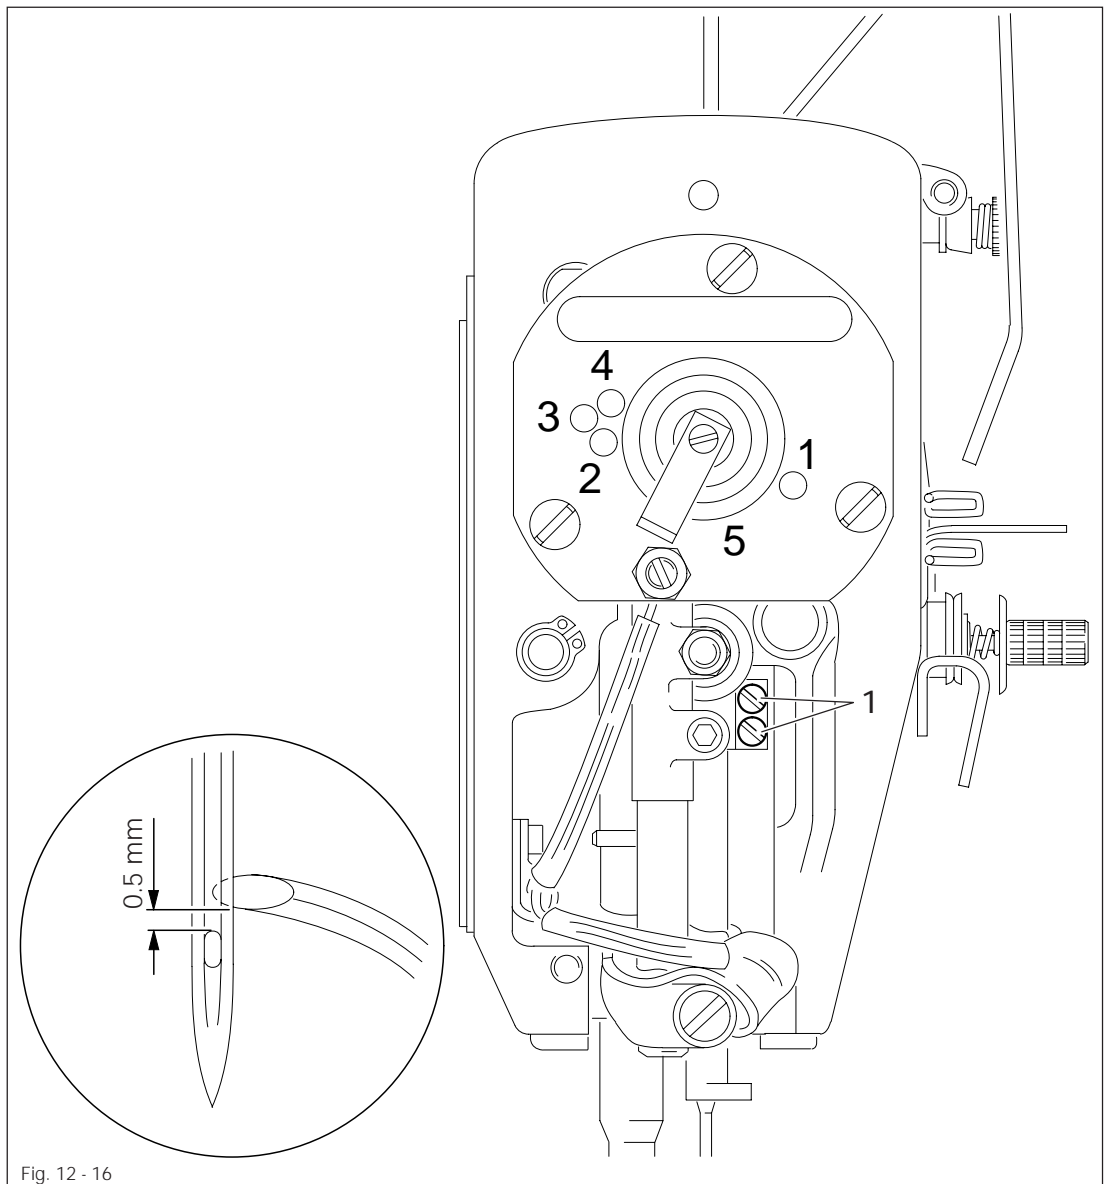When, in the left-hand zigzag position, the hook point is at the center of the needle, the upper edge of the needle eye must be **0.5 mm** below the hook point.





- Move needle bar (screws 1) without twisting it according to the requirement.

12.06.15 Bobbin case opener position

Requirement

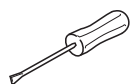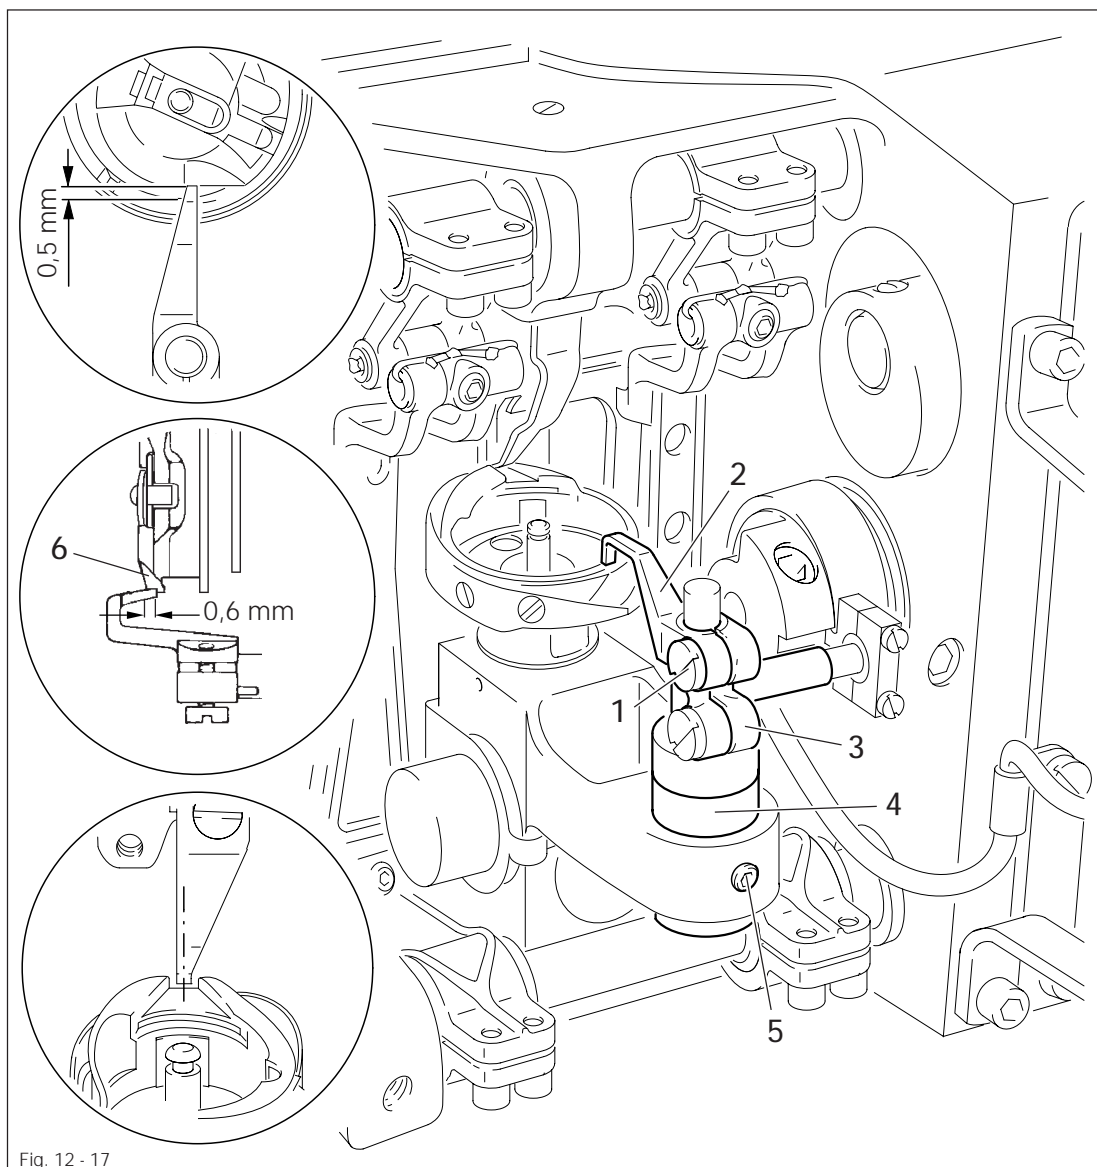1. The top edge of the bobbin opener should extend **0.5 mm** over the bobbin case.
2. When the bobbin opener **2** is in its point of reversal, the front edge of its finger must be approx. **0.6 mm** behind the front edge of the bobbin case trip **6**.
3. At the left point of reversal of the bobbin case opener, the bobbin case position stop must be positioned **at the center** of the slot in the bobbin case base.





- Loosen screw **1**.
- Place the bobbin case opener **2** against the right side of the bobbin case base, press against the clamp crank **3** underneath it and tighten screw **1** slightly.
- Adjust bearing bush **4** (screw **5**) according to **requirements 1** and **2**.
- Turn bobbin case opener **2** according to **requirement 3** and tighten screw **1**, making sure that the bobbin case opener **2** is resting against clamp crank **3**.

12.06.16 Bobbin case opener movement

Requirement

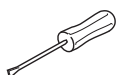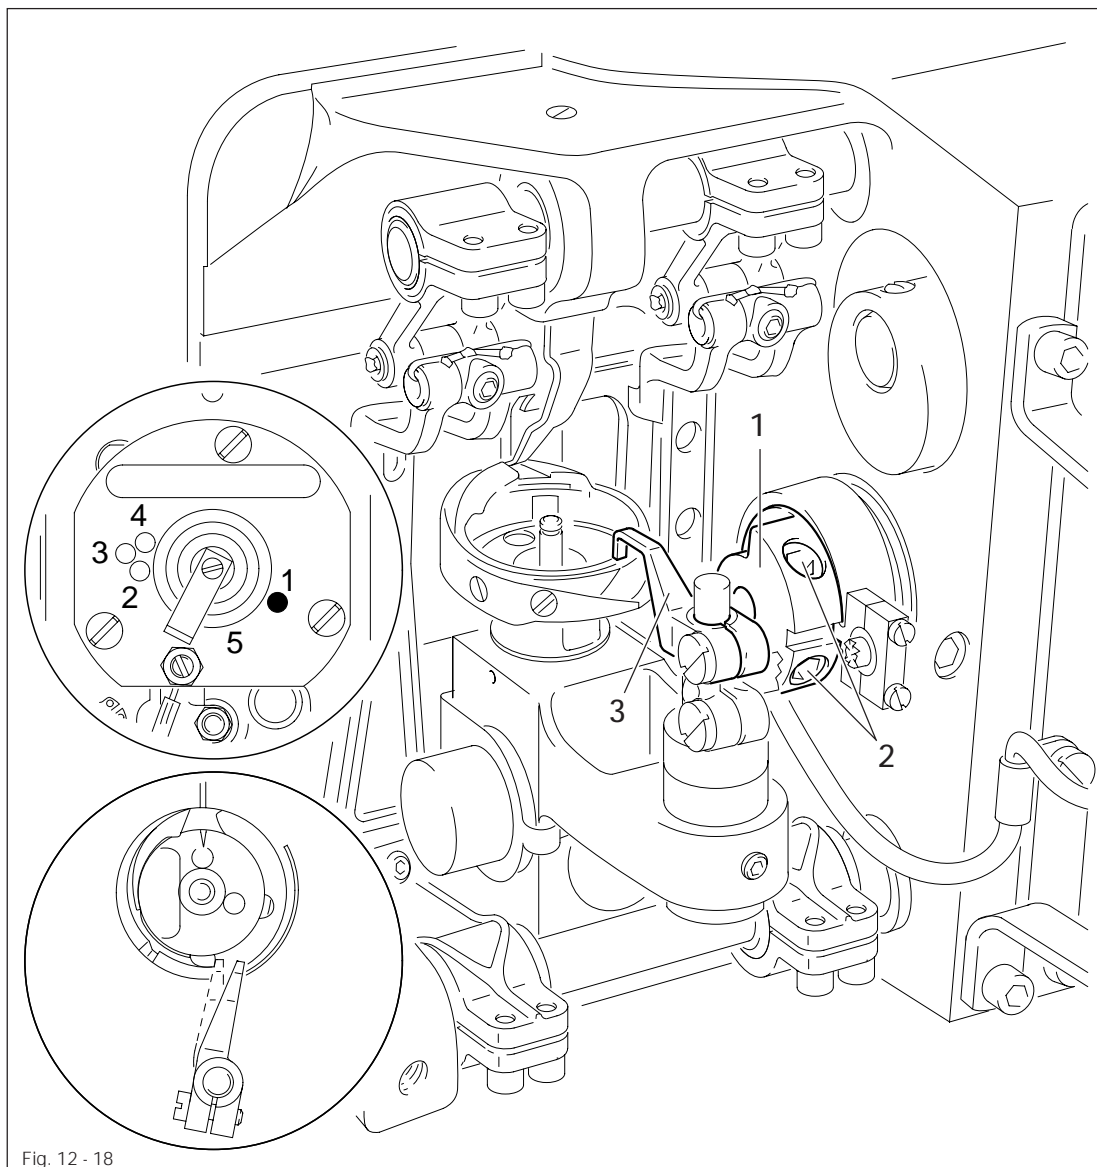With the needle bar 2.4 mm past BDC (hole 1), bobbin case opener 3 must be at its right point of reversal.





- Adjust bobbin case opener eccentric 1 (screws 2) in accordance with the requirement.

12.06.17 Counter presser lifting stroke

Requirement

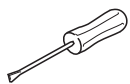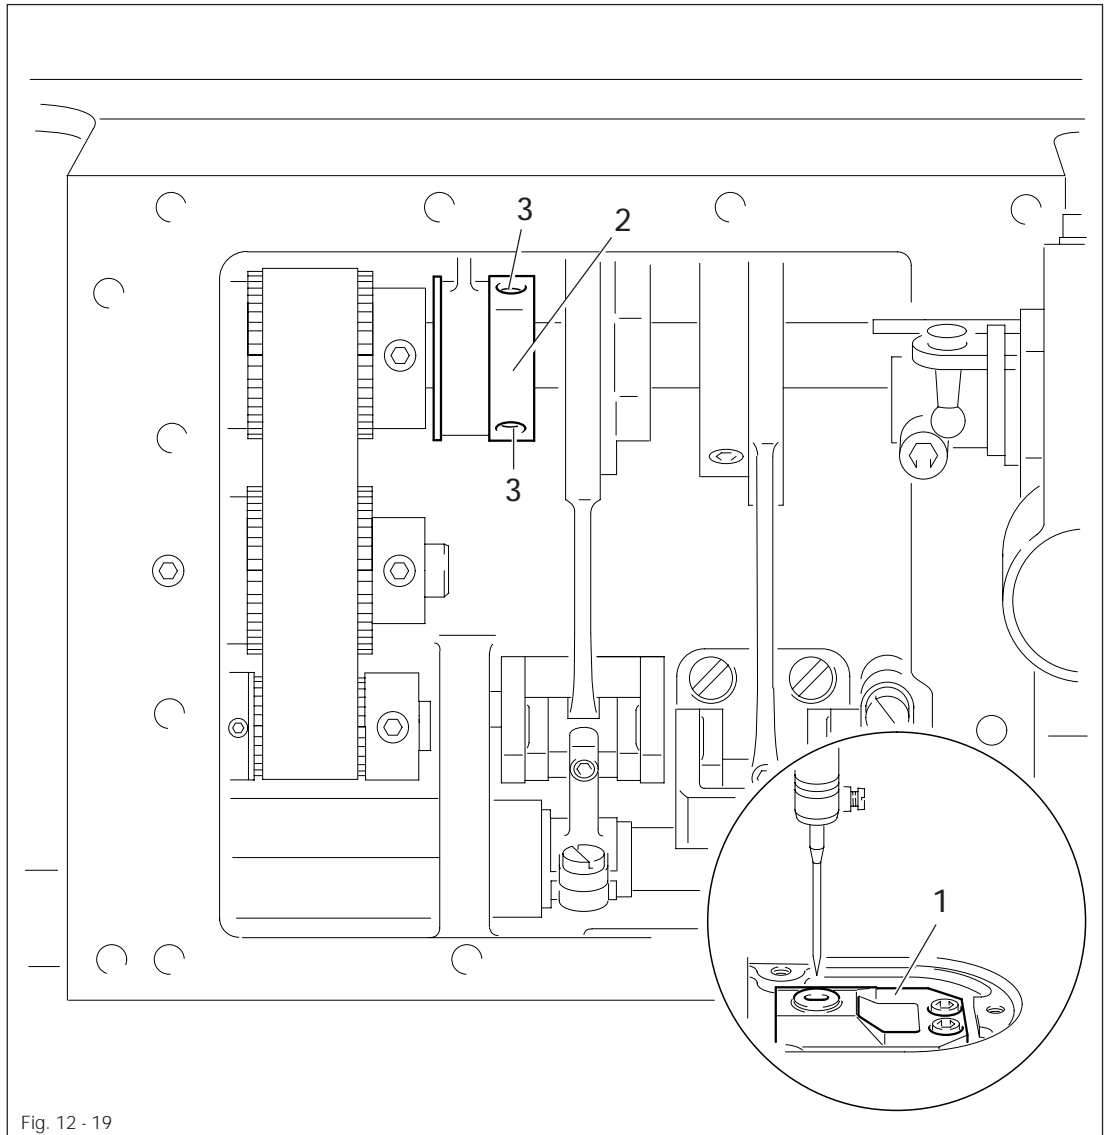At needle bar position BDC, the counter presser is to have just reached the top of its stroke.





- Unscrew counter presser 1.
- Move needle bar to BDC.
- Turn eccentric 2 (screws 3) according to the requirement.

12.06.18 Needle guard movement

Requirement

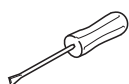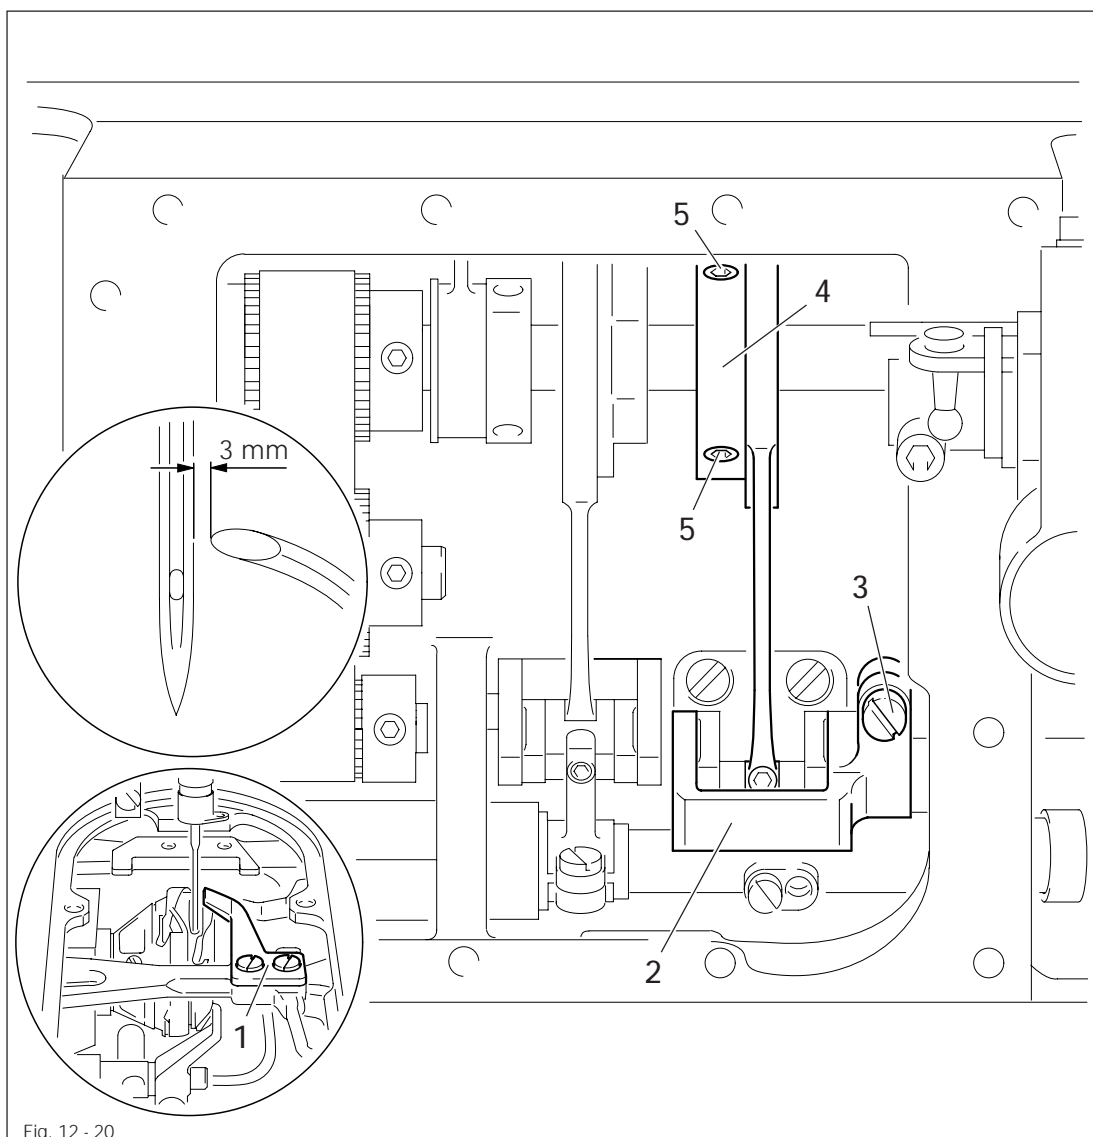1. The travel of needle guard finger 1 must be approx. 5 mm.
2. When the distance between the hook point and the needle is 3 mm, the needle guard finger 1 must be at its back point of reversal.



- Unscrew needle guard 1.
- Turn crank 2 (screw 3) according to **requirement 1**.
- Turn the handwheel in rotating direction until the hook point is 3 mm in front of the needle.
- Hold handwheel firmly and turn eccentric 4 (screws 5) according to **requirement 2**.

12.06.19 Needle guard position

Requirement

The needle guard finger 1 must

1. not strike against the thread guard nor the bobbin case base.
2. when at its back point of reversal, be at a distance of **0.5 mm** to the needle.


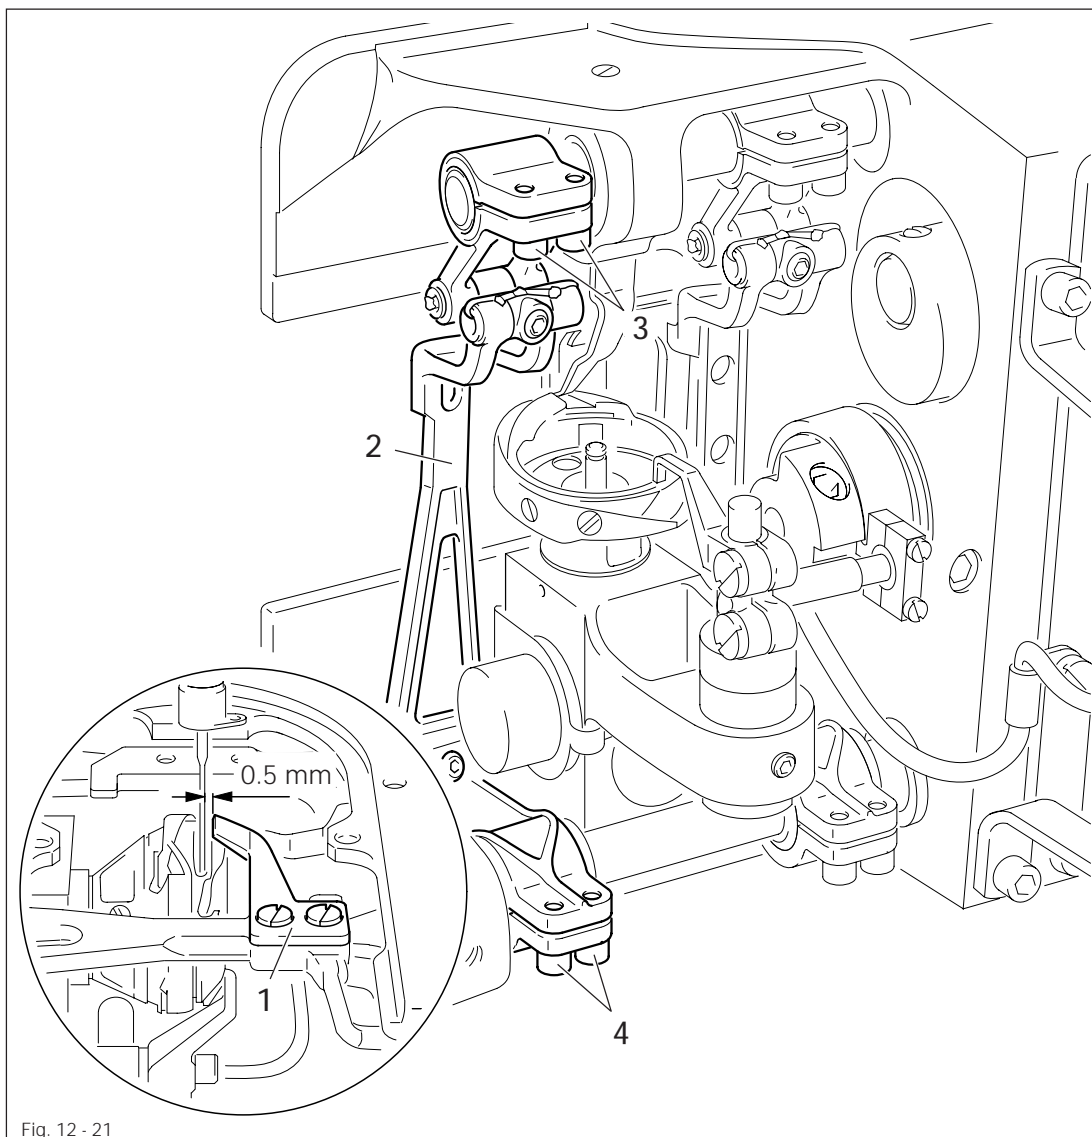


Fig. 12 - 21


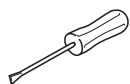


- Adjust the height of the needle guard 1 by adjusting the needle guard bracket 2 (screws 3) according to **requirement 1**.
- By turning the handwheel, position needle guard 1 at its front point of reversal.
- Adjust the needle guard bracket 2 (screws 4) according to **requirement 2**.

12.06.20 Counter presser height

Requirement

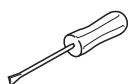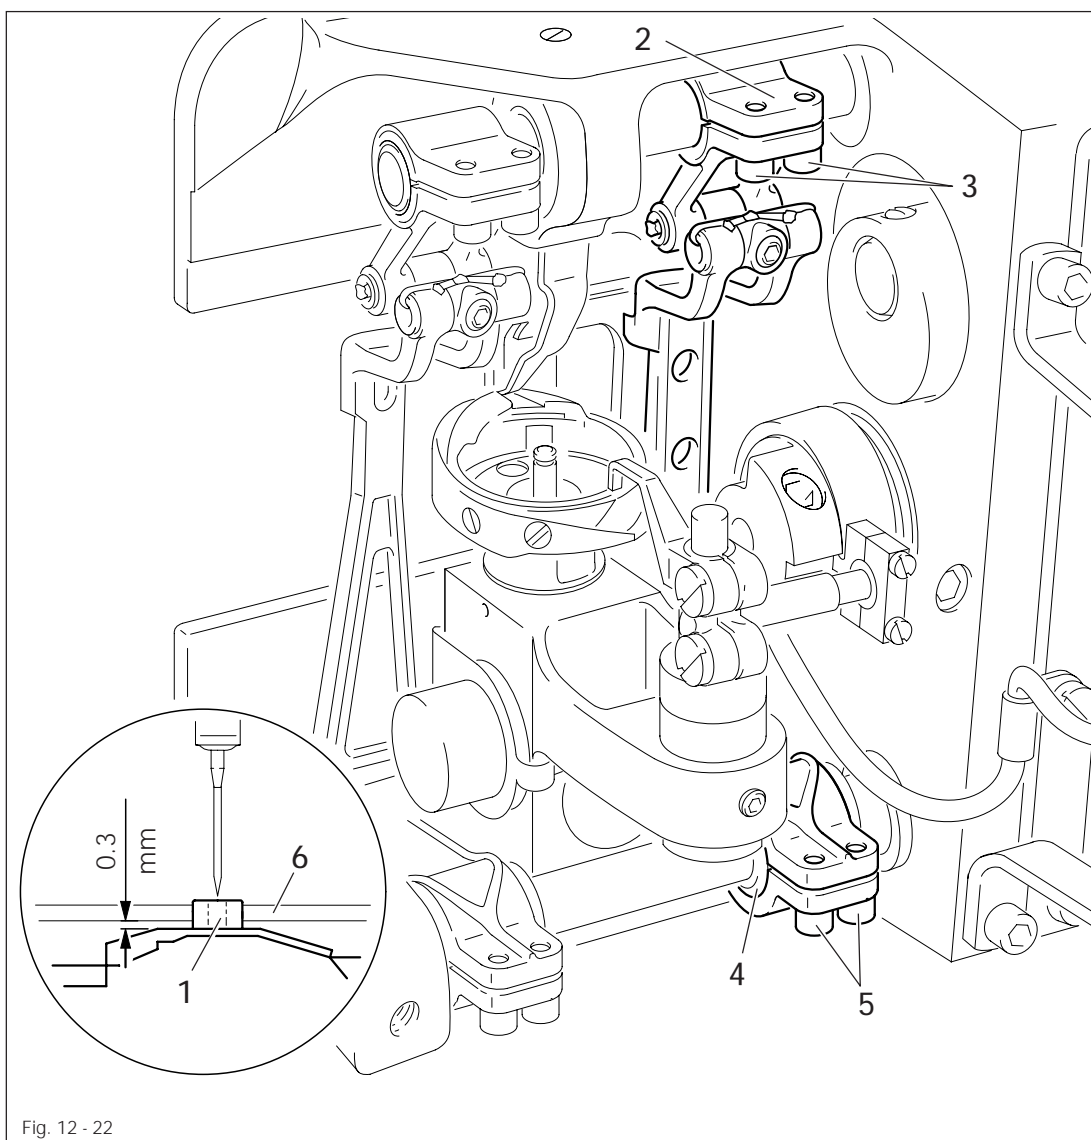At the top point of reversal of the counter presser 1 its surface must be parallel to and 0.3 mm under the cover plate 6.





- Bring counter presser 1 to its top point of reversal.
- Turn lifting crank 2 (screws 3) and eccentric clamp bush 4 (screws 5) according to the requirement.

12.06.21 Counter presser position

Requirement

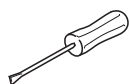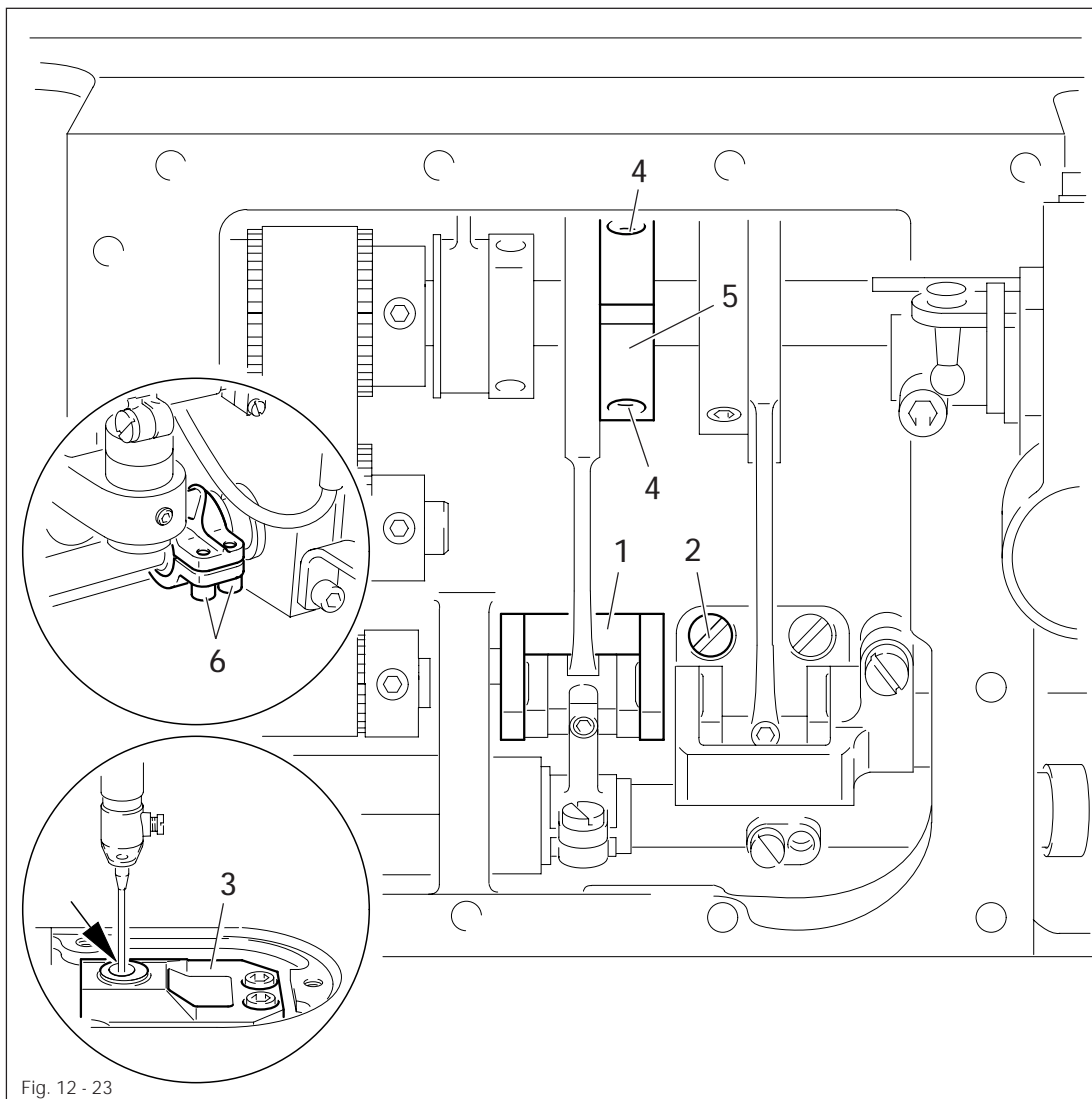1. When the needle penetrates, it must be centered in the needle hole in the counter presser **5**.
2. When the needle bar is at BDC, the counter presser **5** must be at its front point of reversal and with the back edge of the needle hole resting against the needle.



- Turn crank **1** (screw **2**) so that the counter presser **3** travels **0.6 - 1 mm**, and the needle, when it penetrates, is centered in the needle hole in the counter presser **3**.
- Loosen screws **4** just enough so that the eccentric **5** is difficult to turn on the shaft.
- Bring needle bar to BDC.
- Turn eccentric **5** until the counter presser **3** is in its back point of reversal and tighten screws **4**.
- Move counter presser **3** carrier (screws **6**) until the the back edge of the needle hole of the counter presser **3** is resting against the needle (see arrow).

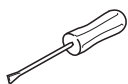
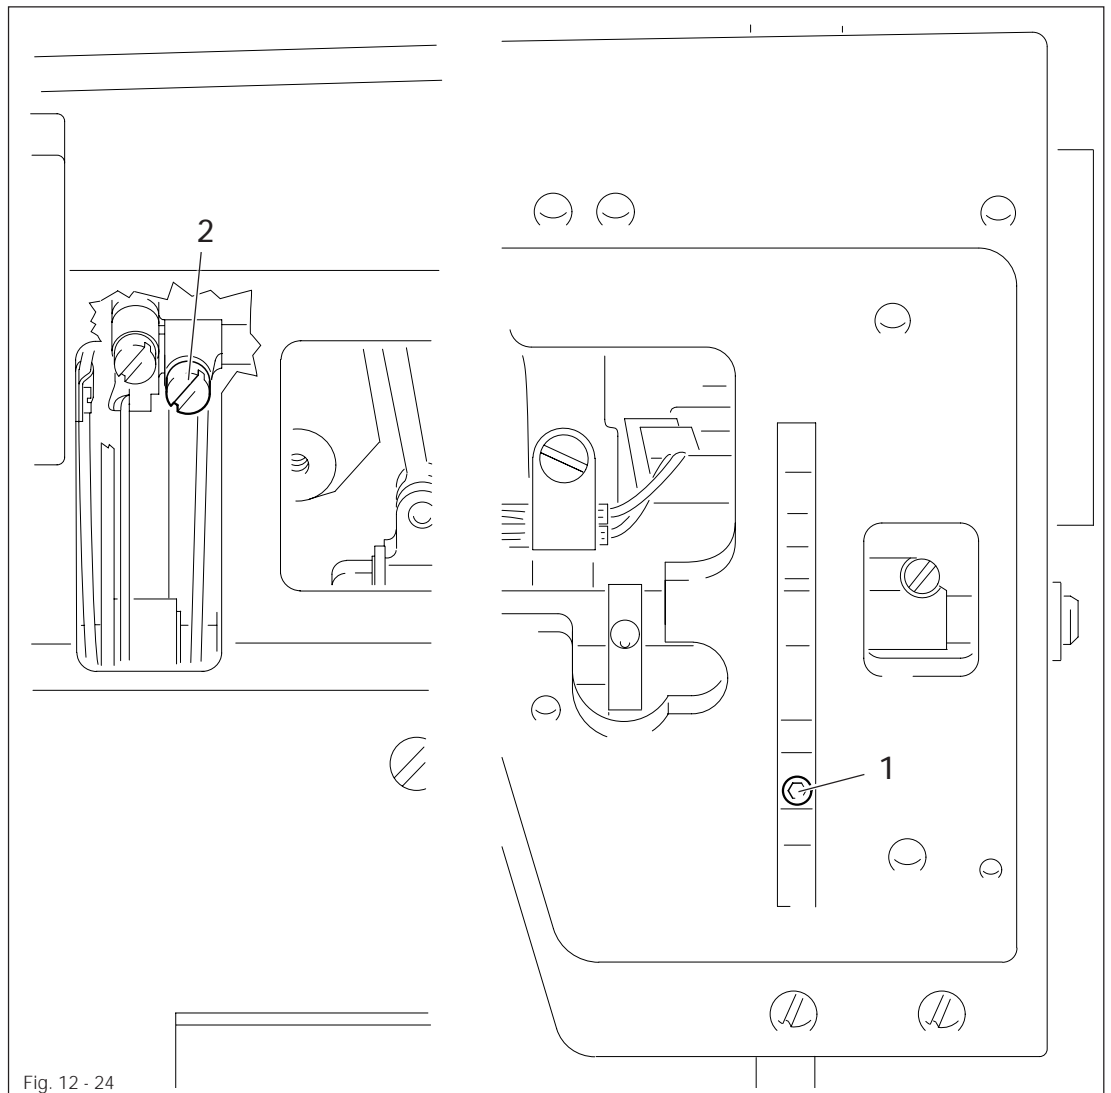


Move counter presser **3** carrier (screws **6**) until the the back edge of the needle hole of the counter presser **3** is resting against the needle (see arrow).

12.06.22 Presser

Requirement

1. When the presser is lowered, the distance to the bedplate must be **6 mm**.
2. When the presser is raised, the distance to the bedplate must be **17 mm**.



- Lower presser.
- Move presser (screw **1**) according to **requirement 1**.
- Allow the presser to be raised.
- Loosen screw **2**.
- Place spacer with a height of **17 mm** underneath the presser.
- Adjust the distance between the presser and the bedplate according to **requirement 2**.
- Turn screw **2** slightly.

12.06.23 Needle thread tension release

Requirement

1. When the presser is raised, the distance between the tension disks must be at least **0.5 mm**.
2. When the thread trimmer is in its resting position, there must be a distance of **0.5 mm** between the trips **8** and the release olive **5**.
3. When the trips **8** are at the highest point of the release olive **5**, the distance between the tension disks must be at least **0.5 mm**.


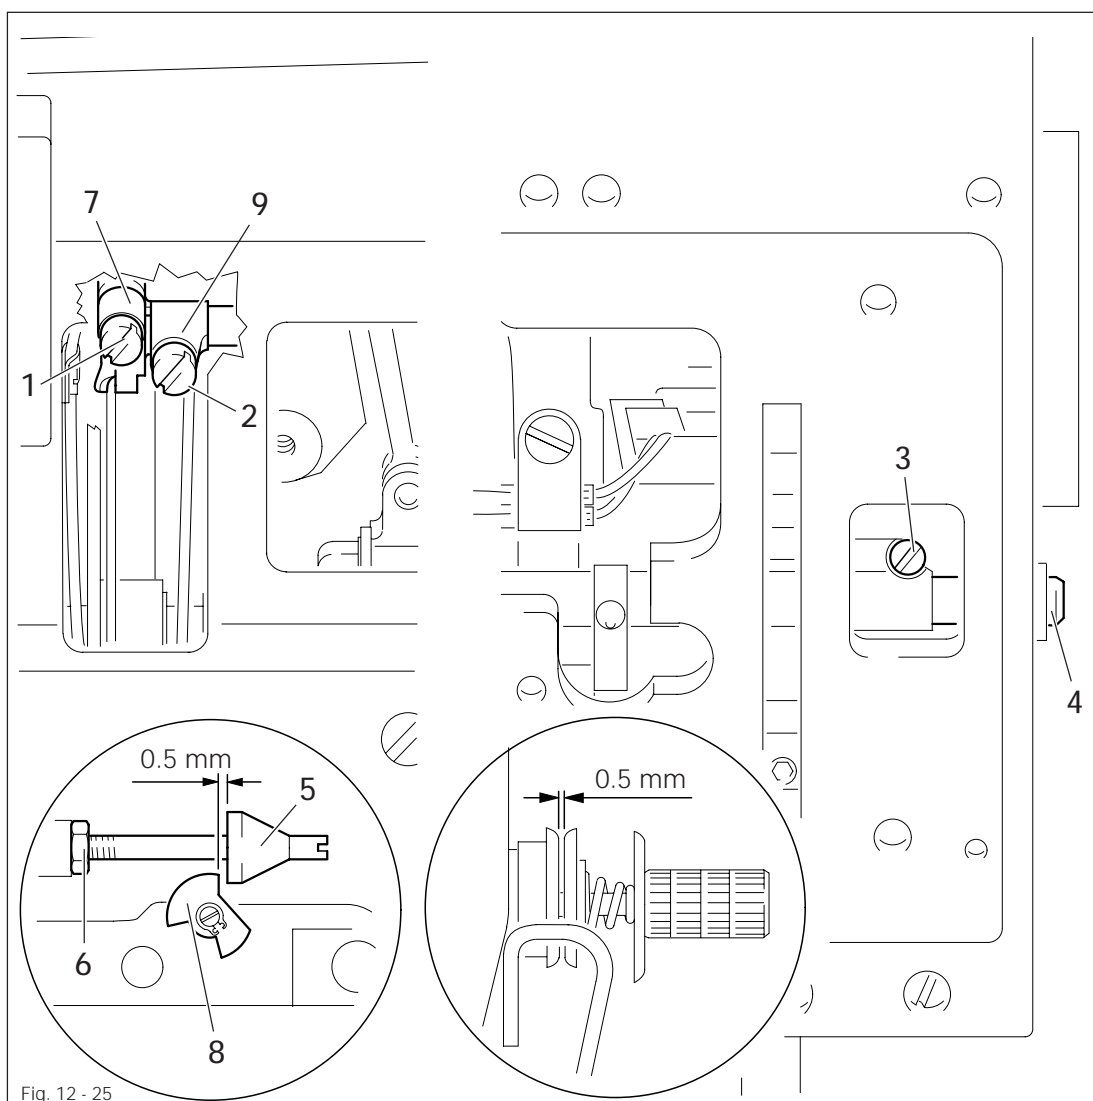


Fig. 12 - 25

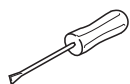

- Loosen screws **1**, **2** and **3**.
- Lift the presser and place spacer with a height of **17 mm** underneath it.
- Adjust the distance between the tension disks according to **requirement 1** by turning the hollow shaft **4**. To turn the hollow shaft **4**, jam the front end of a screwdriver in the hollow shaft **4**.
- Tighten screw **3**.
- Bring thread trimmer to its resting position.
- Move release olive **5** (nut **6**) according to **requirement 2**.
- Remove spacer.

- Press clamp **9** up to the top.
- Tighten screw **2**, ensuring that the hollow shaft **4** does not have any lateral play.
- Turn on thread trimmer manually.
- Turn the handwheel until the trips **8** are positioned at the highest point of the release olive **5**.
- By turning the tension release shaft (accessible via screwdriver through hollow shaft **4**), adjust the distance between the tension disks according to **requirement 3**.
- Press crank **7** up to the top and tighten screw **1**.
- Grease release olive **5** lightly.



The clearance between the tension discs can be fine-tuned at eccentric pin **10** after nut **11** has been loosened.

Adjustment

12.06.24 Thread check spring

Requirement

The stroke of thread check spring 3 must be approx. 5 mm.


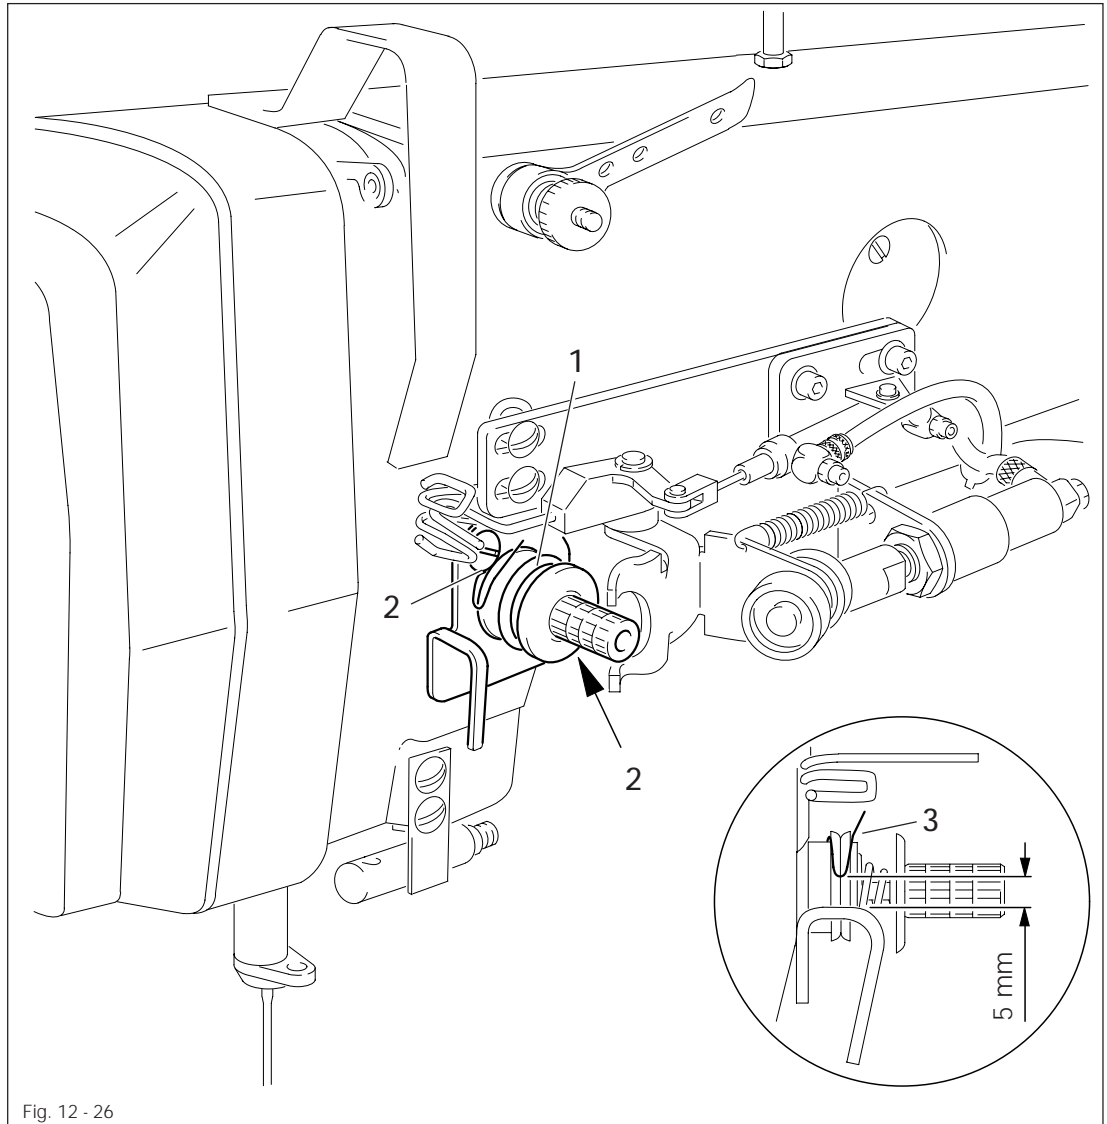


Fig. 12 - 26

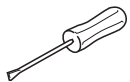

- Tilt sewing machine head upright and insert.
- Turn tension block 1 (screws 2) according to the requirement.

12.06.25 Thread puller

Requirement

The thread puller **3** must pull enough thread after the sewing operation is finished so that a reliable seam start is ensured.


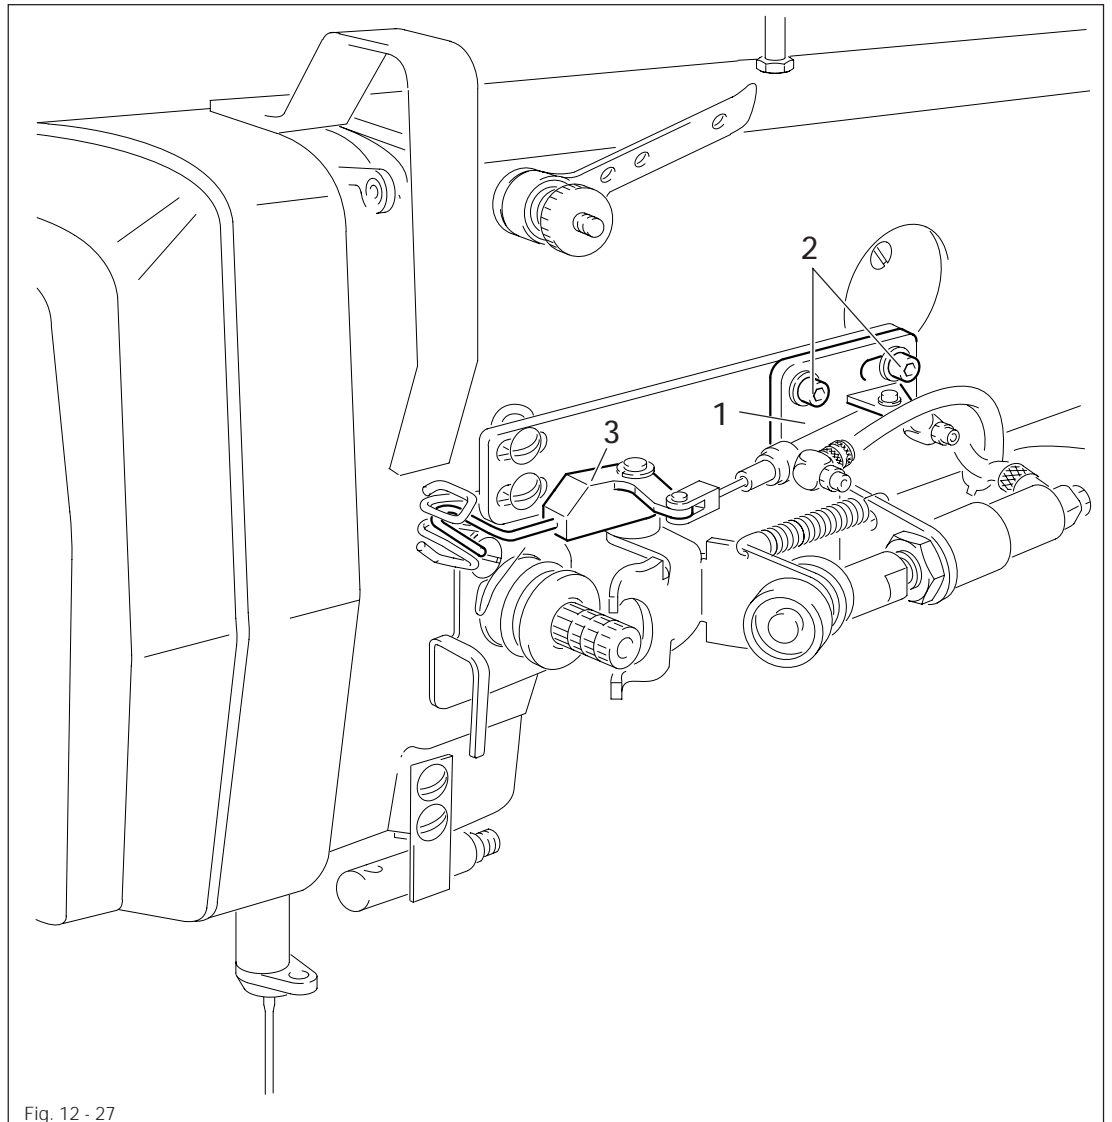


Fig. 12 - 27

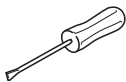

- Move cylinder carrier **1** (screws **2**) according to the requirement.



The timing of the thread puller must be set so that the cylinder of the thread puller can carry out its full stroke (see chapter 11.01.03 Summary of the functions in the 2nd menu level and chapter 11.04.02 Functions in the 2nd menu level).

Adjustment

12.06.26 Bobbin winder

Requirement

The bobbin winder must disengage when the thread level is approx. 1 mm from the edge of the bobbin.


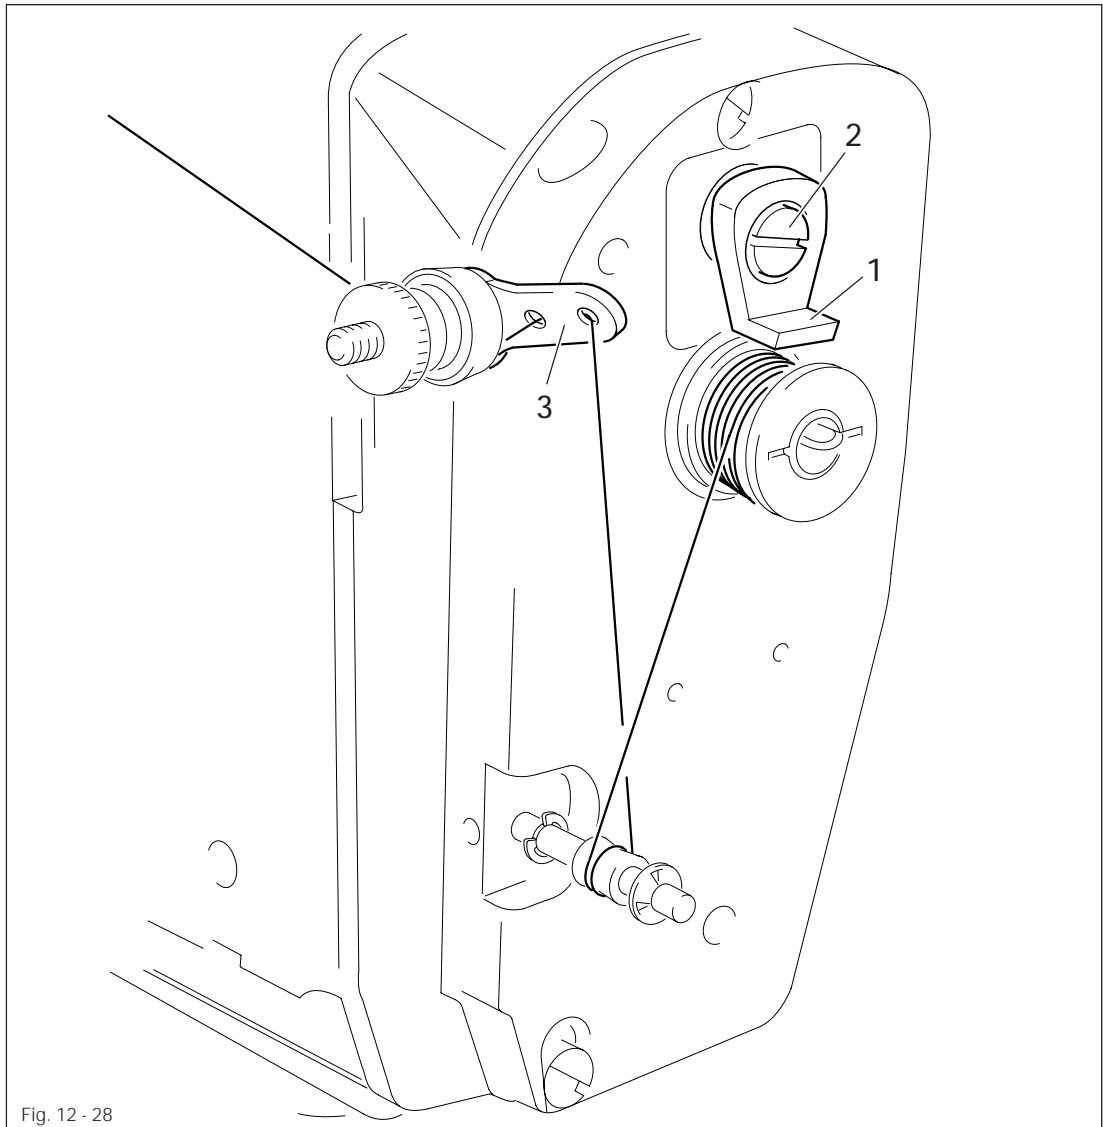


Fig. 12 - 28


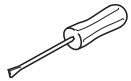


- Move trip 1 (screw 2) according to the **requirement**.
- If the bobbin is wound unevenly, adjust the thread guide 3 accordingly.

12.06.27 Synchronizer

Requirement

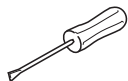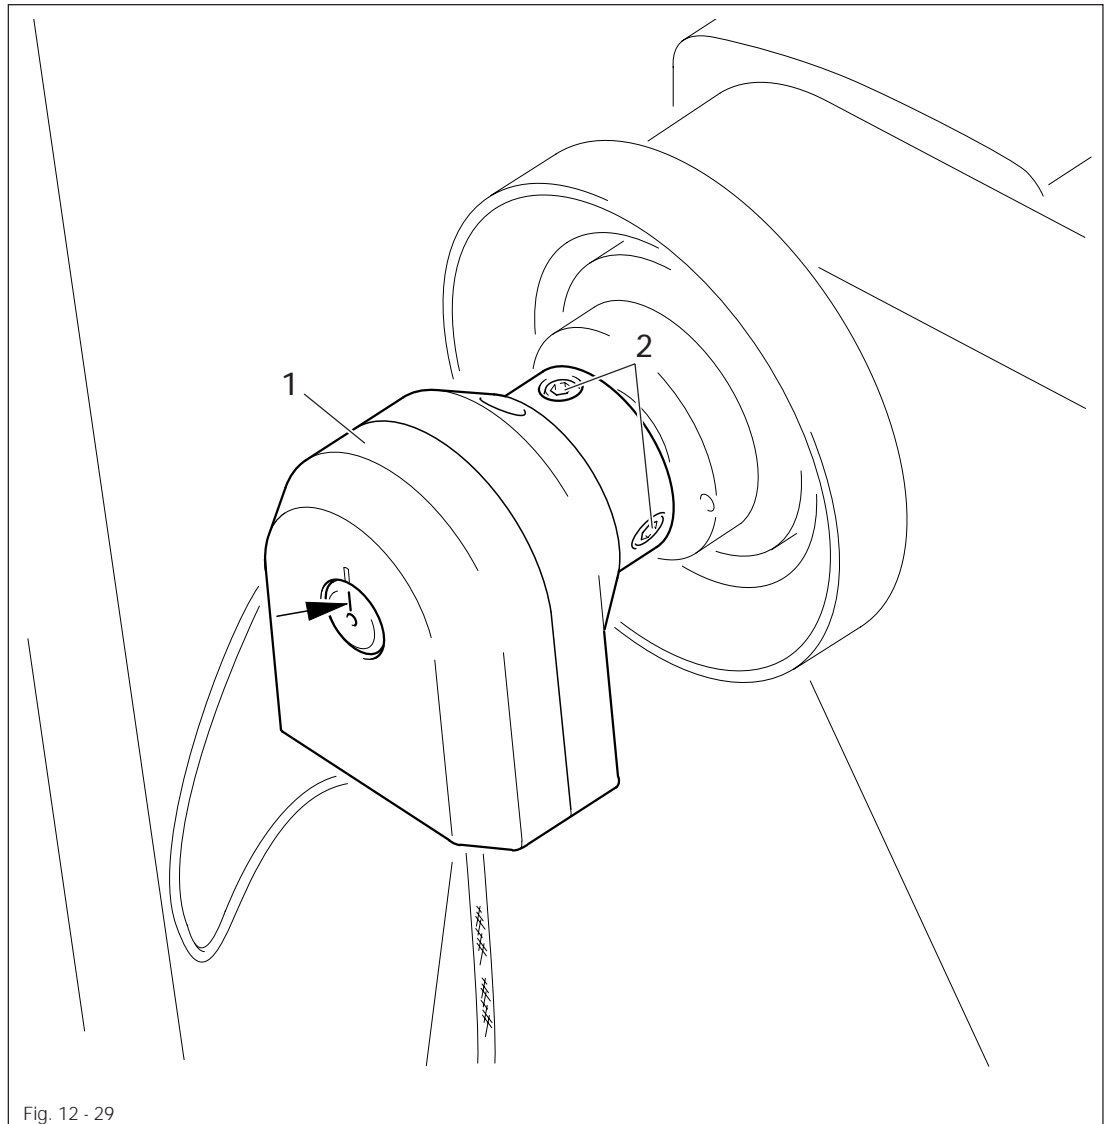After the sewing action has been completed, the machine is to position at TDC of the needle bar (hole 2).





- Allow sewing machine to carry out positioning (switch on/off).
- Mark this position on the shaft (see arrow).
- Bring the needle bar to TDC (hole 2).
- Turn synchronizer 1 (screws 2) until the mark on the shaft and the synchronizer 1 are aligned again.

Adjustment

12.07 Adjusting the thread trimmer

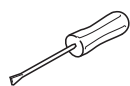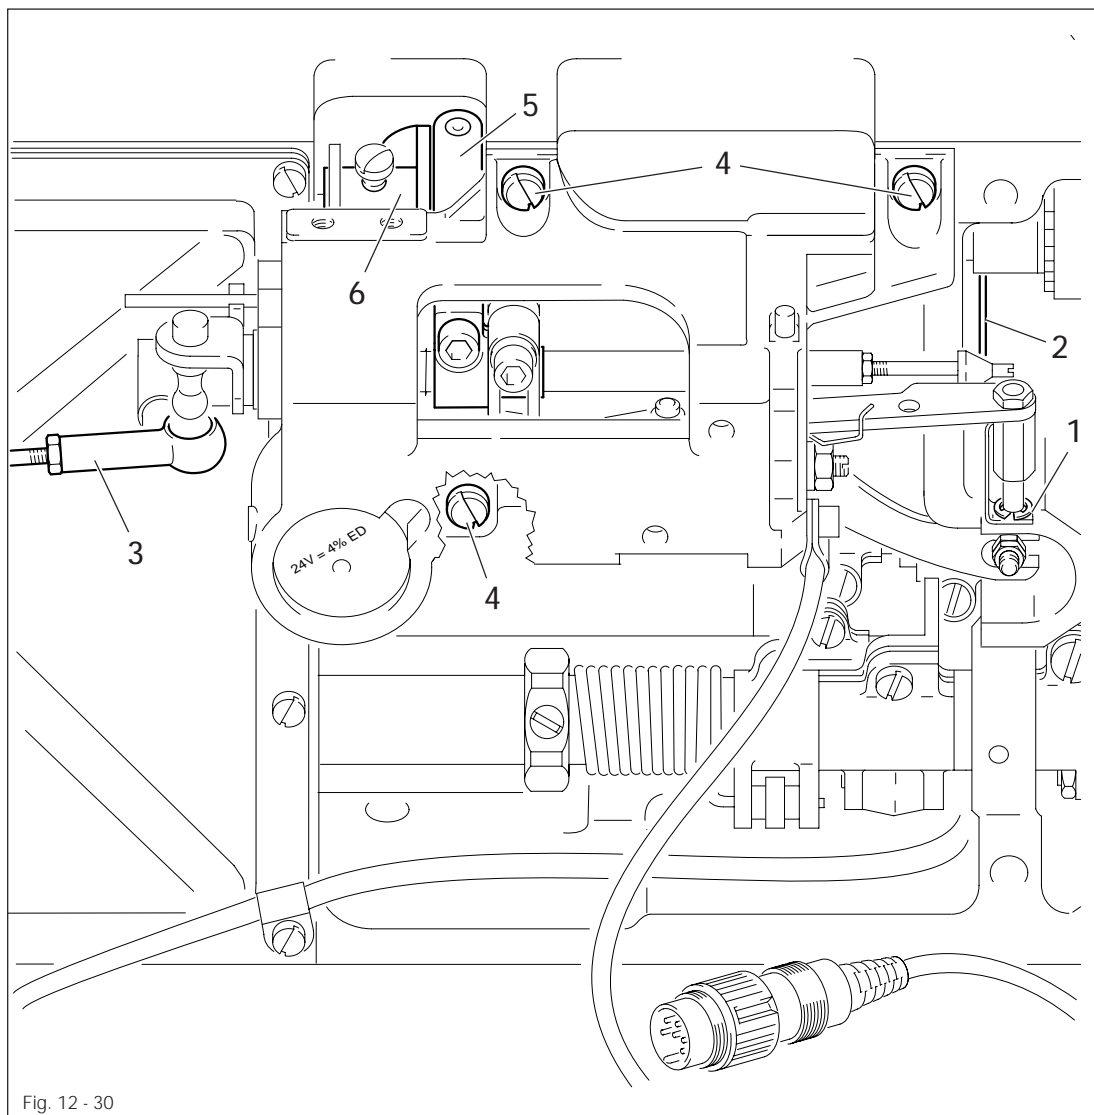12.07.01 Mounting/dismounting the control unit



- Remove sewing machine head and tilt back.
- To **dismount**, remove circlip 1 and detach pull rod 2.
- Detach spherical heads of the connecting rod 3 from the ball pins on the trimmer and control units and remove connecting rod 3.
- Unscrew control unit (screws 4).

- To **mount**, bring needle bar to 2.4 past BDC (hole 1)
- Mount control unit and connect pull rod 2.
- Screw on control unit (screws 4), tightening the screws lightly, and fit circlip 1.
- Bring needle bar to BDC and actuate the engaging lever by hand.
- Align the control unit so that the roller lever 5 is centered at the cam recess of the control cam 6.
- Tighten screws 4 and fit connecting rod 3.

12.07.02 Preadjusting the control cam

Requirement

When the needle bar is at TDC (hole 2)

1. the beginning of the highest boss of the trip 5 must be under the tip of the latch 7, and
2. the right side of the trip must be flush with the right side of the latch 7.


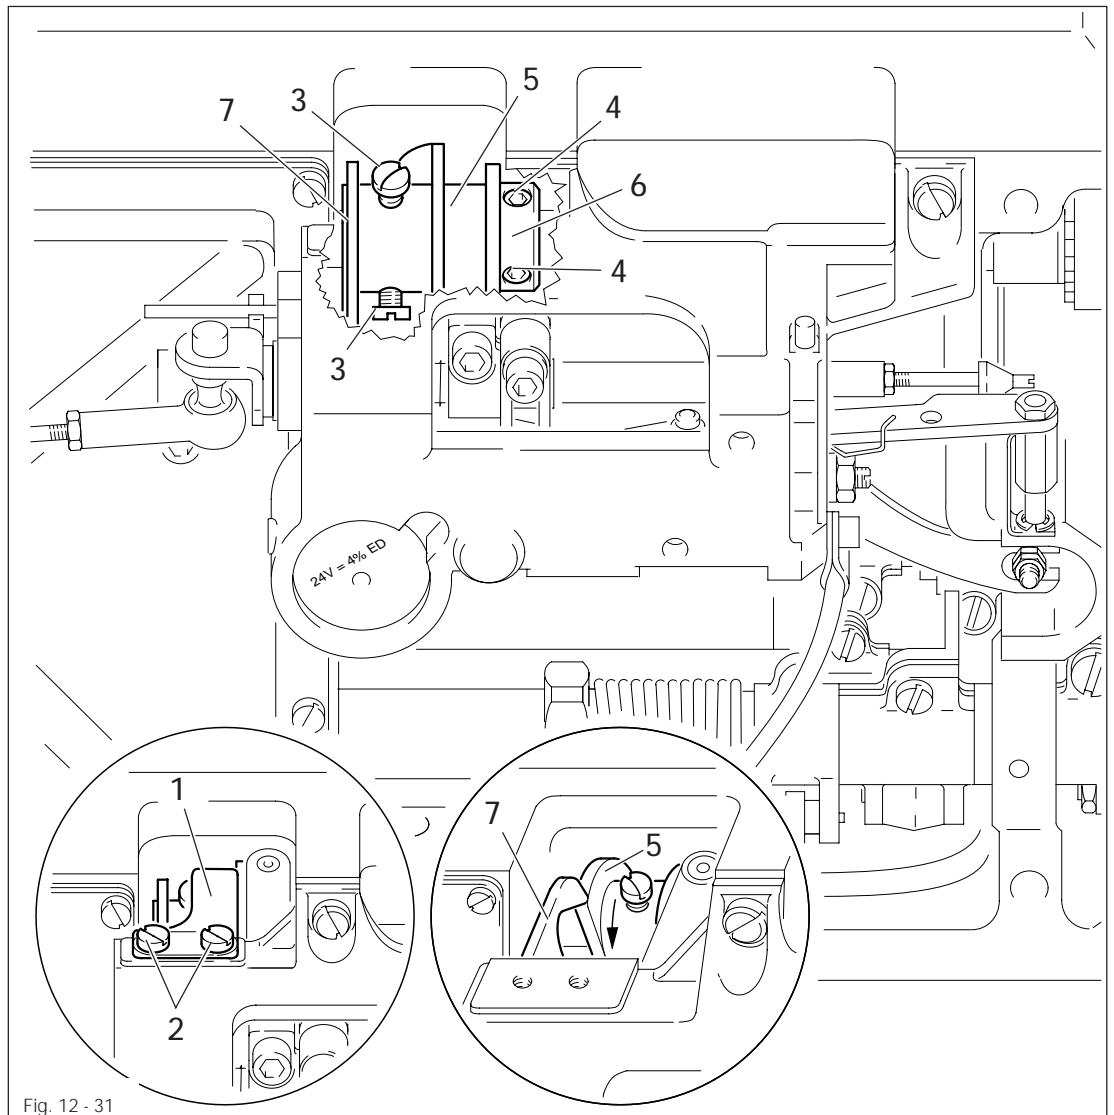


Fig. 12 - 31

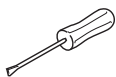

- Remove catch spring 1 (screws 2) together with the cover disk.
- Loosen screws 3 and 4.
- Turn control cam 5 according to **requirement 1** and/or slide according to **requirement 2** and tighten screws 3.
- Slide retaining collar 6 to control cam 5 and tighten screws 4.



Catch spring 1 remains dismounted for further adjustments.

Requirement

With the needle bar at 2.4 past BDC (hole 1),

1. when the roller lever 4 is tapped the roller must engage easily in the control cam 7, and
2. the roller of the roller lever 4 must be centered at the cam recess of the control cam 7.


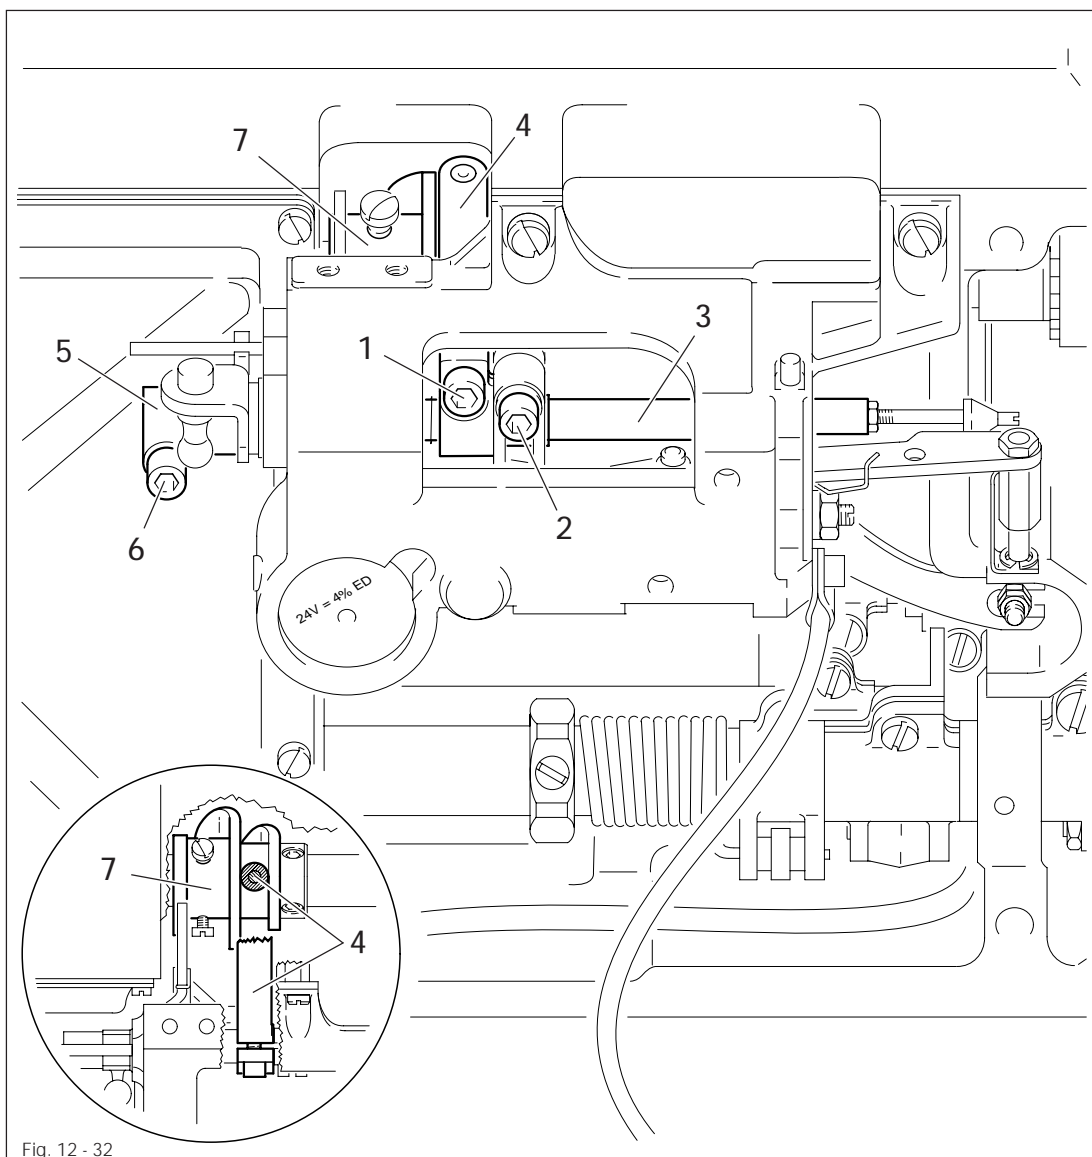


Fig. 12 - 32

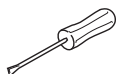

- Loosen screws 1 and 2.
- Press the rock shaft 3 to the right.
- Adjust the roller lever 4 according to requirements 1 and 2.
- Tighten screw 1.
- Position the surface of the retaining collar 5 (screw 6) parallel to the bedplate.



Screw 2 remains loosened for further adjustments.

12.07.04 Latch

Requirement

When the thread trimmer is in its resting position, there must be a distance of **0.3 mm** between the latch **2** and the largest eccentricity of the trip of the control cam **1**.


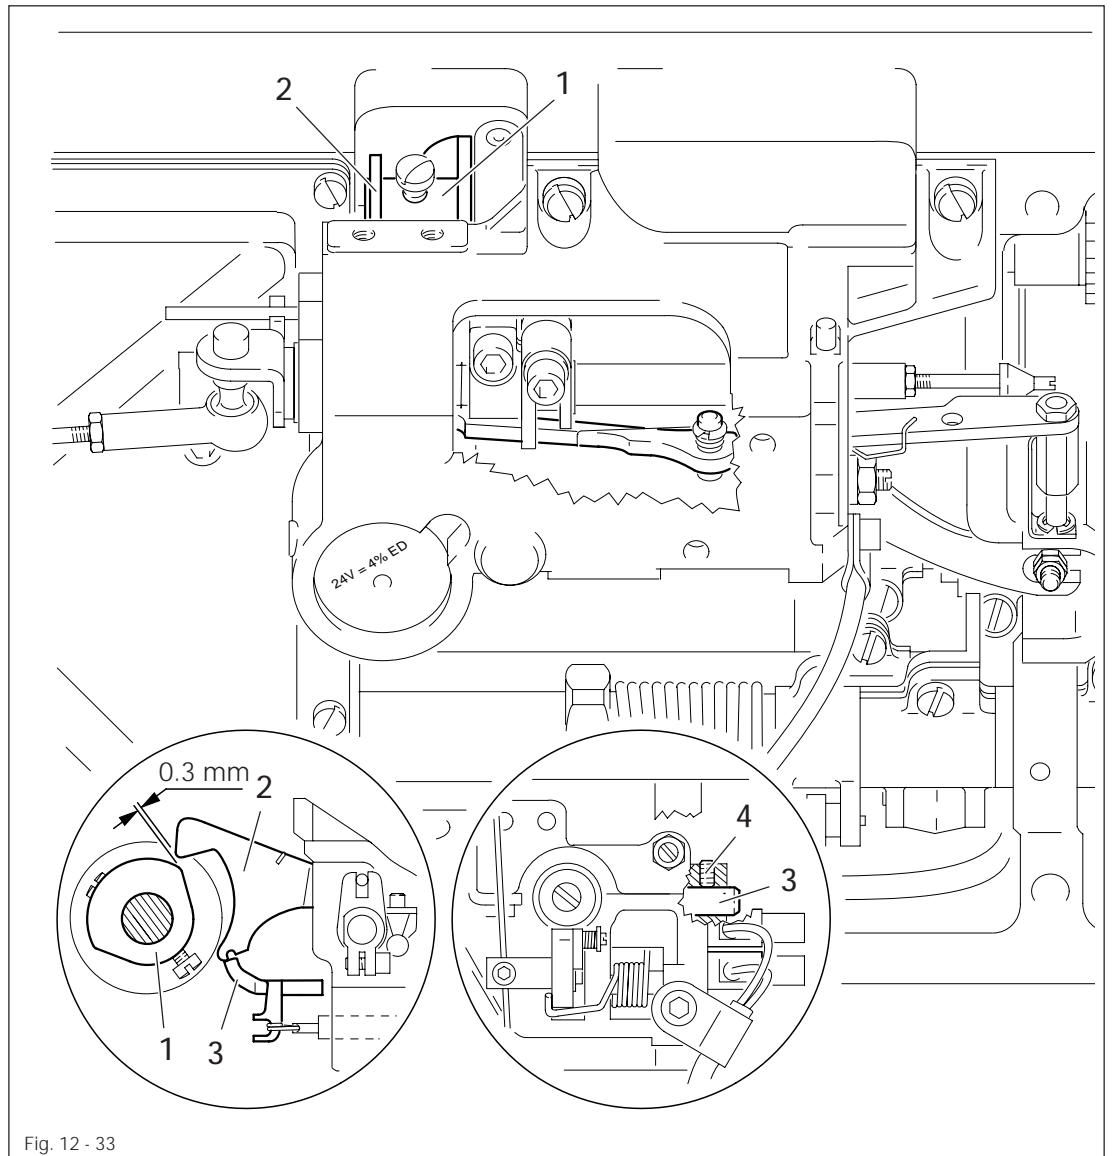


Fig. 12 - 33

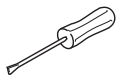

- By turning the handwheel, position the trip of the control cam **1** with its largest eccentricity under the latch **2**.
- Adjust the engaging lever **3** (screw **4**) according to the requirement.

12.07.05 Engaging solenoid

Requirement

With the needle bar at 2.4 past BDC (hole 1), when the engaging solenoid is in operation, there must be a distance of **0.2 to 0.3 mm** between the engaging lever 1 and the latch 2.


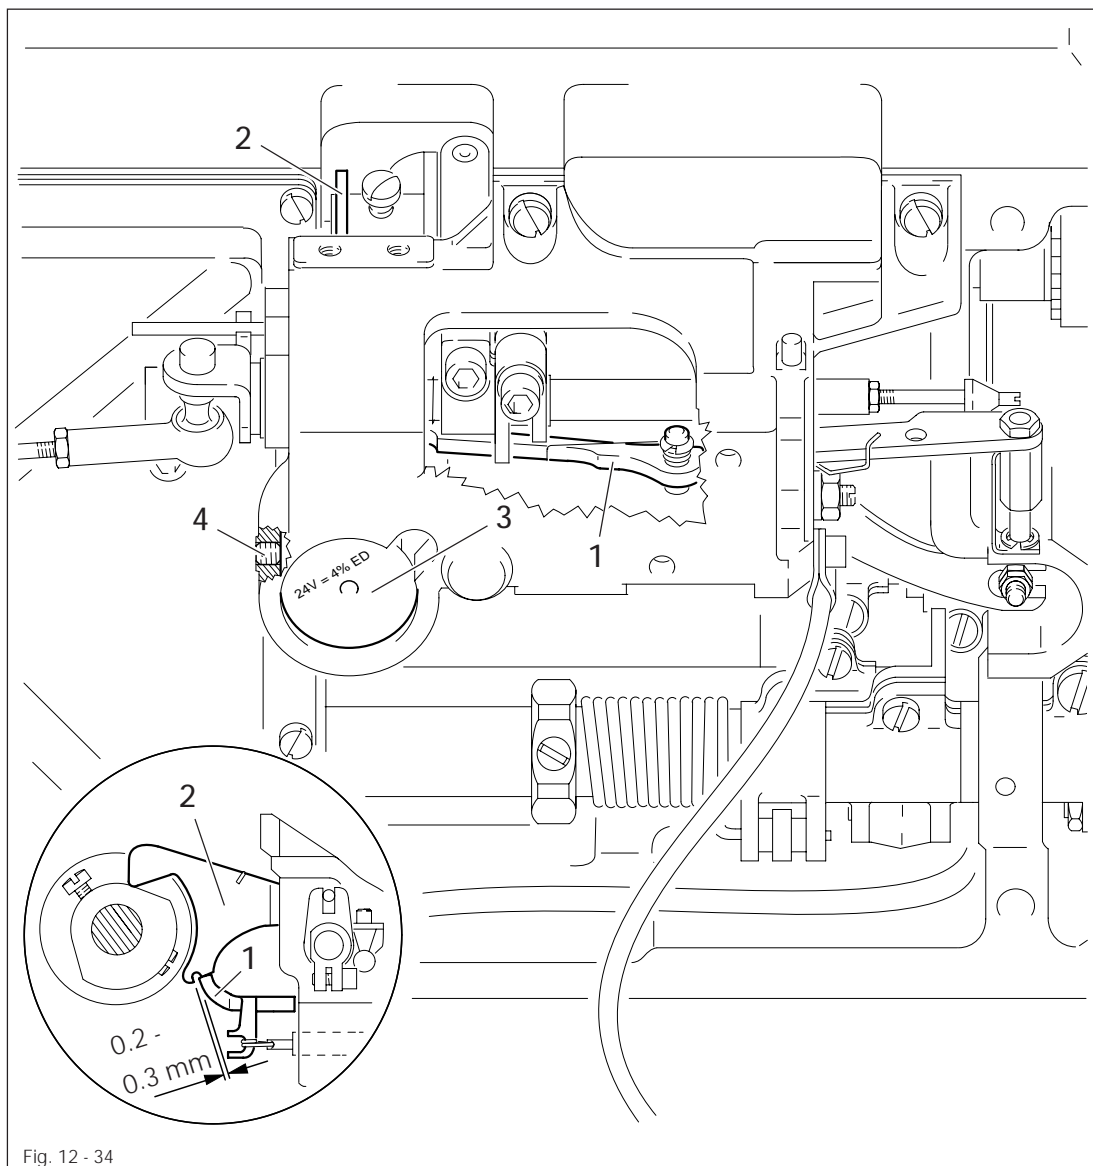


Fig. 12 - 34


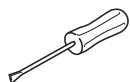


- Bring needle bar to 2.4 past BDC (hole 1).
- Operate engaging lever 1 by hand until the latch 2 engages.
- Press the magneto inductor as far as it will go into the solenoid housing 3. Move solenoid housing 3 (screw 4) together with the magneto inductor according to the requirement.

12.07.06 Actuating lever

Requirement

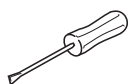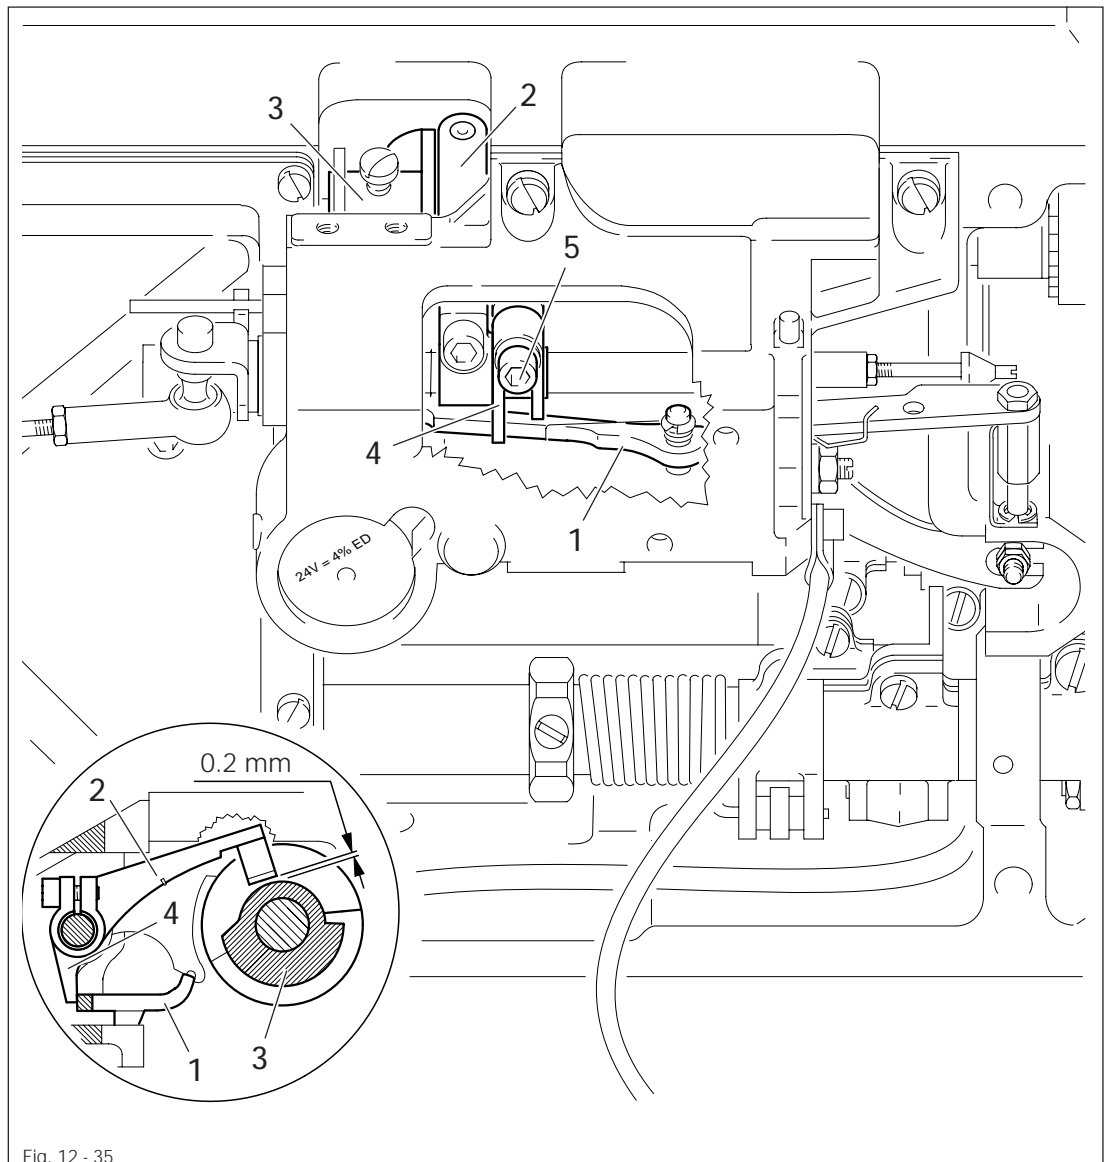With the needle bar at 2.4 past BDC (hole 1), when the actuating lever 1 is actuated, there must be a distance of 0.2 mm between the roller of roller lever 2 and the base of the control cam 3.





- Bring needle bar to 2.4 past BDC (hole 1).
- Operate actuating lever 1 by hand.
- Press roller lever 2 until it is at the base of the control cam 3.
- Position lever 4 at actuating lever 1 so that a distance of 0.2 mm is achieved between the roller lever 2 and the base of the control cam 3. In the process, lever 4 is to rest laterally against roller lever 2.
- Tighten screw 5.

12.07.07 Engaging lever

Requirement

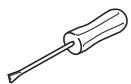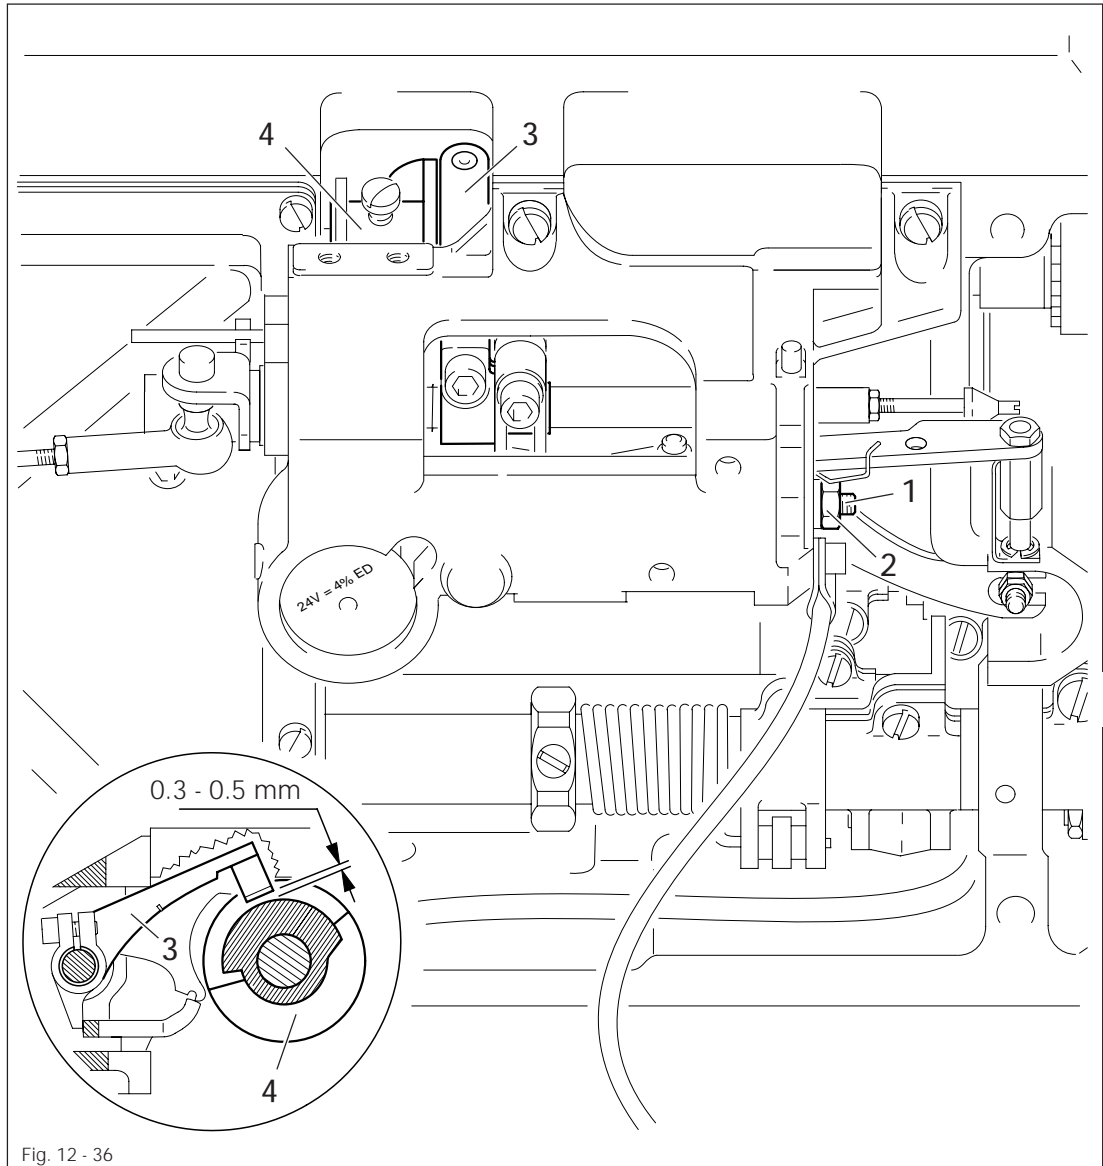With the needle bar at TDC (hole 2) and the thread trimmer in resting position, there must be a distance of 0.3 to 0.5 mm between the roller of the roller lever 3 and the outside diameter of the control cam 4.





- Turn screw 1 (nut 2) according to the requirement.

12.07.08 Cutting test

Requirement

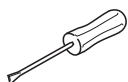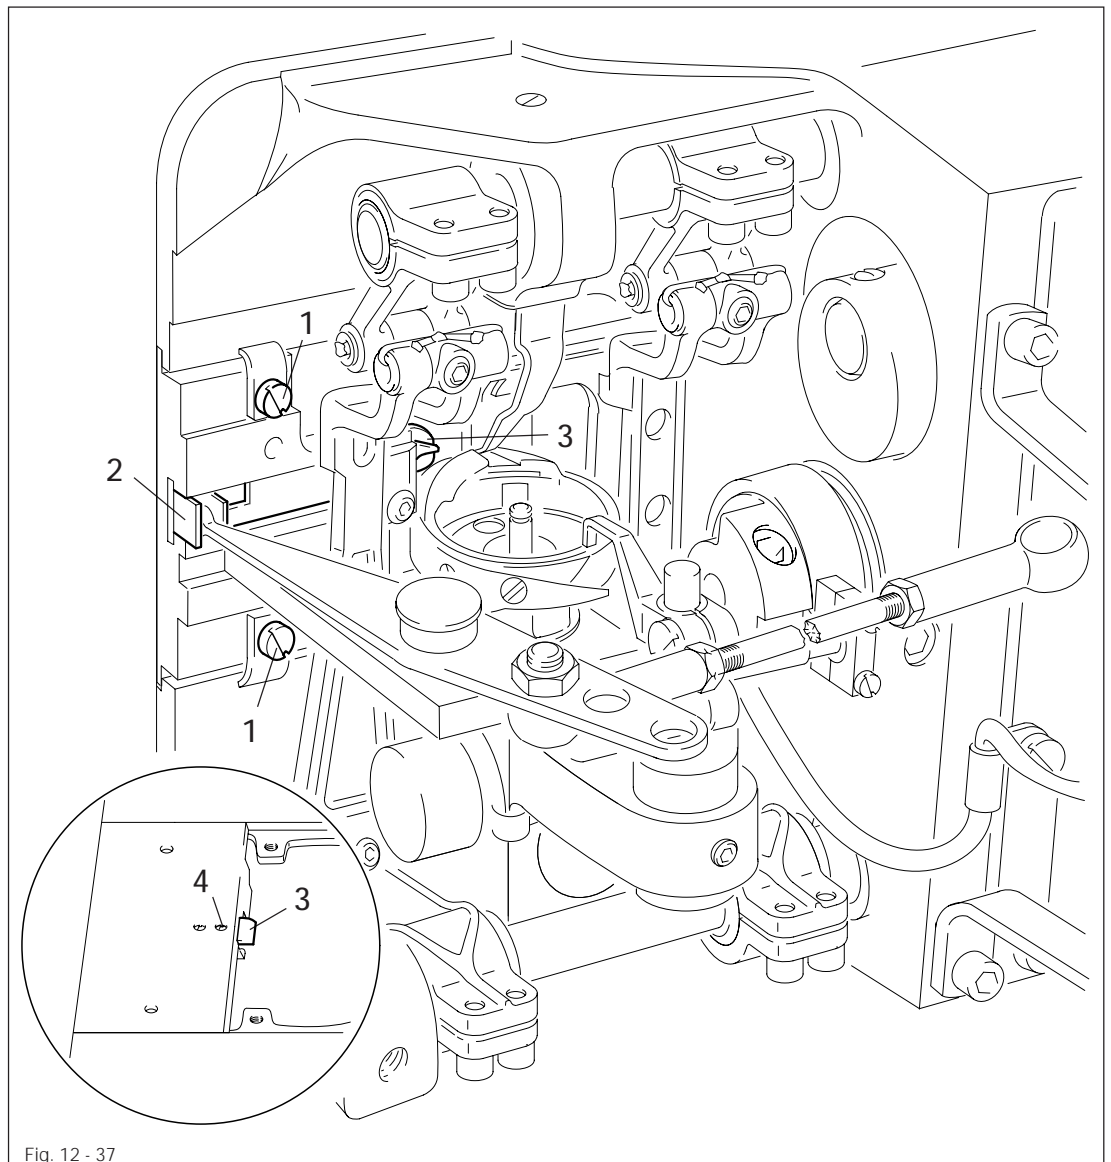A thread which has been inserted twice in the catcher cutout must be cut perfectly when the thread catcher is moved back.



- Remove the entire thread trimmer (screws 1).
- Make sure that the knife blade is in perfect condition.
- Move the thread catcher 2 by hand over the knife 3, until the cutout in the thread catcher 2 can be seen.
- Insert a thread twice in this cutout and move back the thread catcher 2. Both threads must be cut perfectly.
- If the threads are not cut perfectly, increase the knife pressure by screwing in screw 4.

12.07.09 Thread catcher position

Requirement

When the thread trimmer is in resting position, the thread catcher 3 must be flush with the edge of the mounting plate 4.


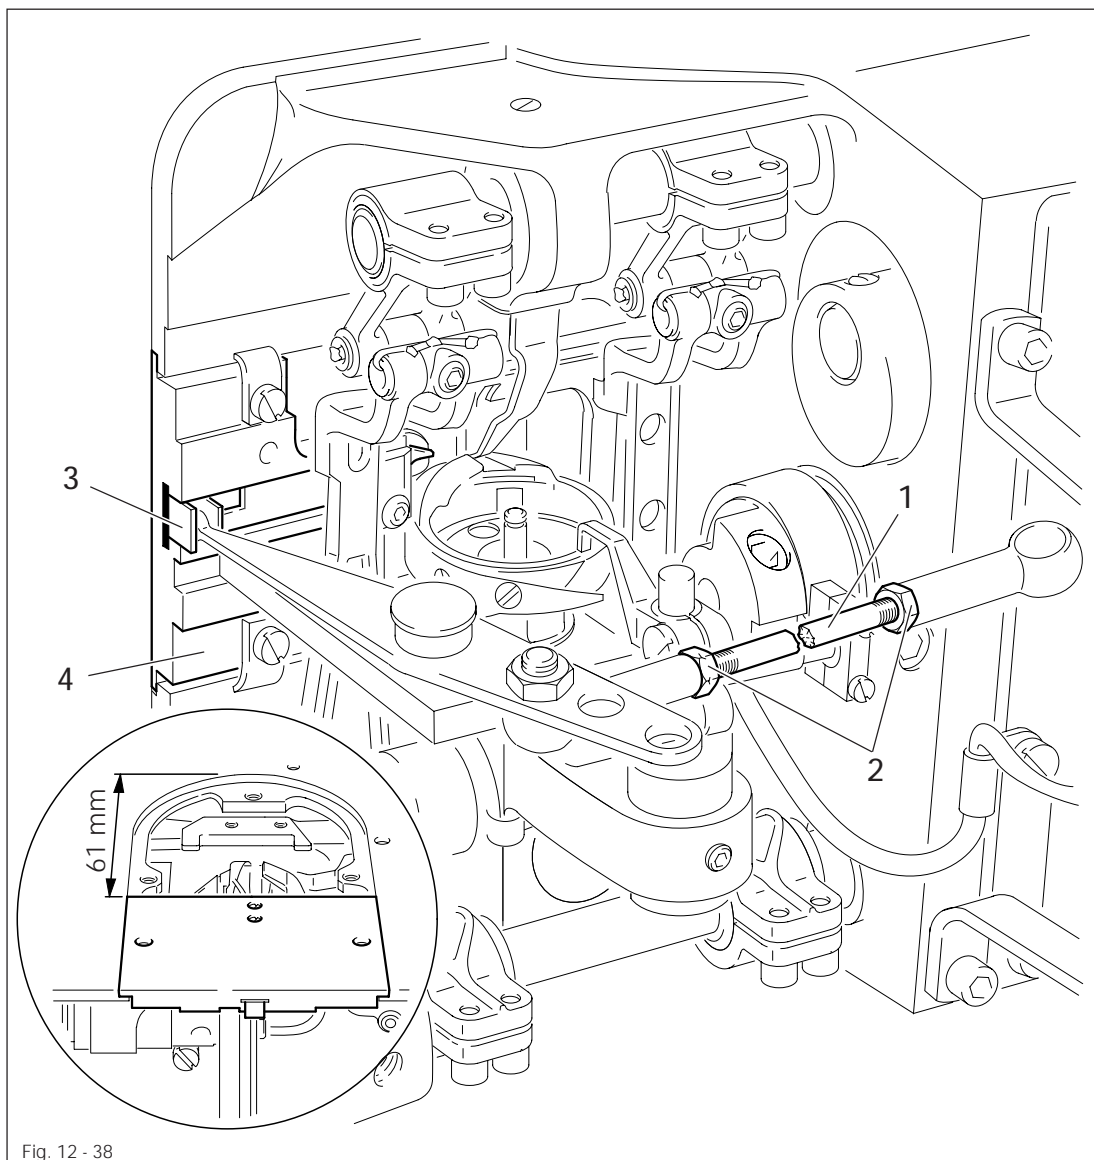


Fig. 12 - 38


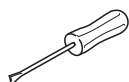


- Mount the thread trimmer in the bedplate and align so that the distance between the front edge of the thread trimmer and the back edge of the needle plate cutout is 61 mm.
- Turn connecting rod 1 (nuts 2, left and right-hand thread) according to the requirement.

12.07.10 Control cam (final adjustment) and catch spring

Requirement

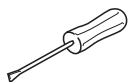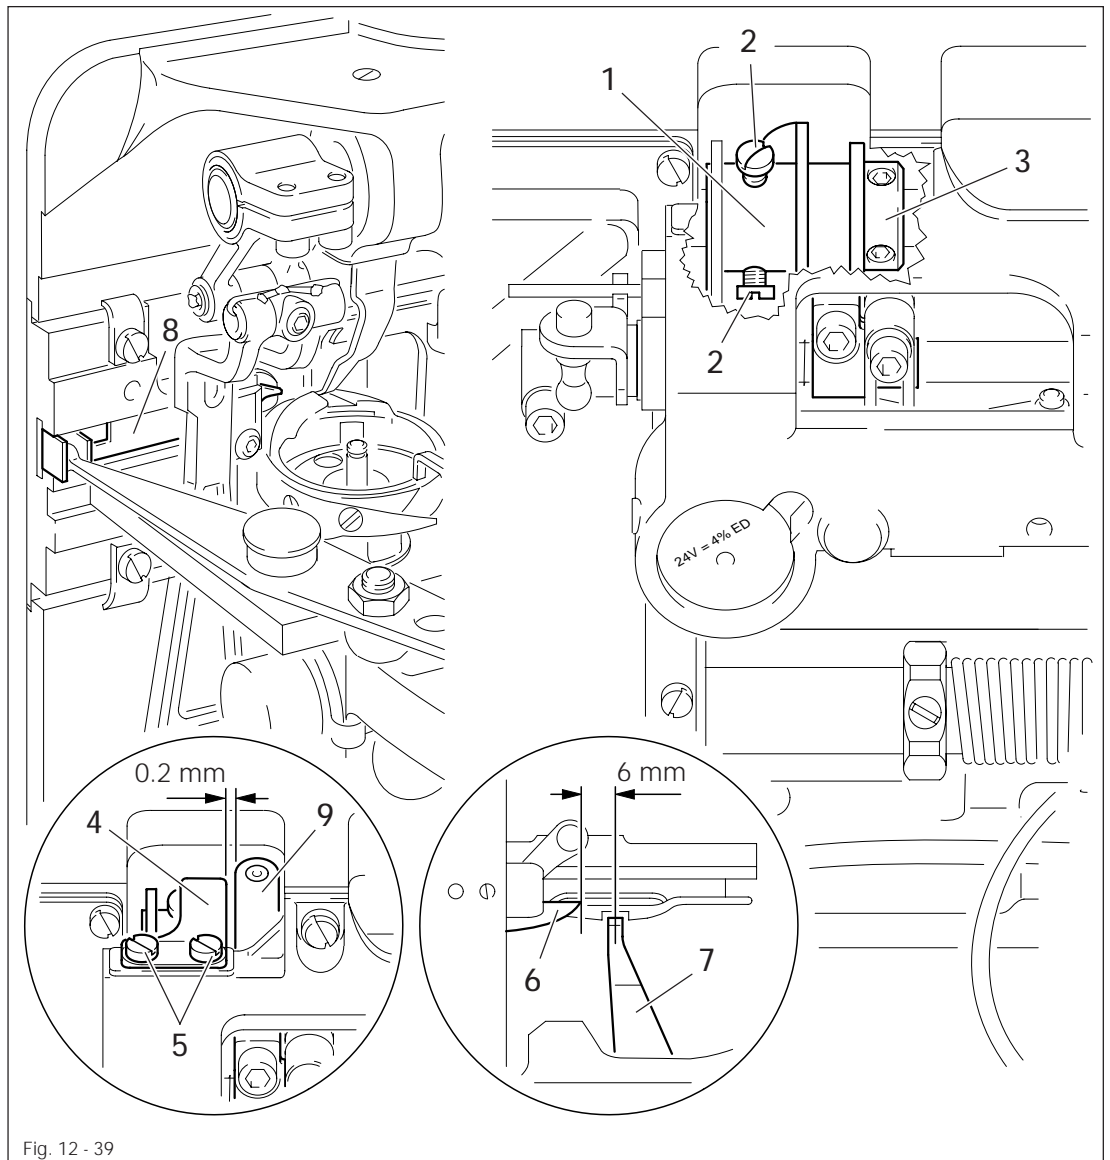1. When the back edge of the thread guard **6** has just moved **6 mm** past the center of the bobbin case position finger **7**, the thread catcher **8** is to begin with its forward motion.
2. When the thread trimmer is in resting position, there must be a distance of **0.2 mm** between the catch spring **4** and the roller lever **9**.



- Bring needle bar to BDC.
- Operate engaging lever.
- Adjust the control cam **1** (screws **2**) according to **requirement 1** and move it against retaining collar **3**.
- Mount catch spring **4** together with the cover disk and screw on screws **5** slightly.
- Slide catch spring **4** up as far as it will go and align according to **requirement 2**.
- Tighten screws **5**.

12.08 Adjusting the folding and feed devices

12.08.01 Adjusting the switch vanes on the X/Y control

Requirement

The overlap of the switch vanes 1 and 3 to the carrier

1. is to be **18 mm** on the carriage for the Y direction.
2. is to be **15 mm** on the carriage for the X direction.


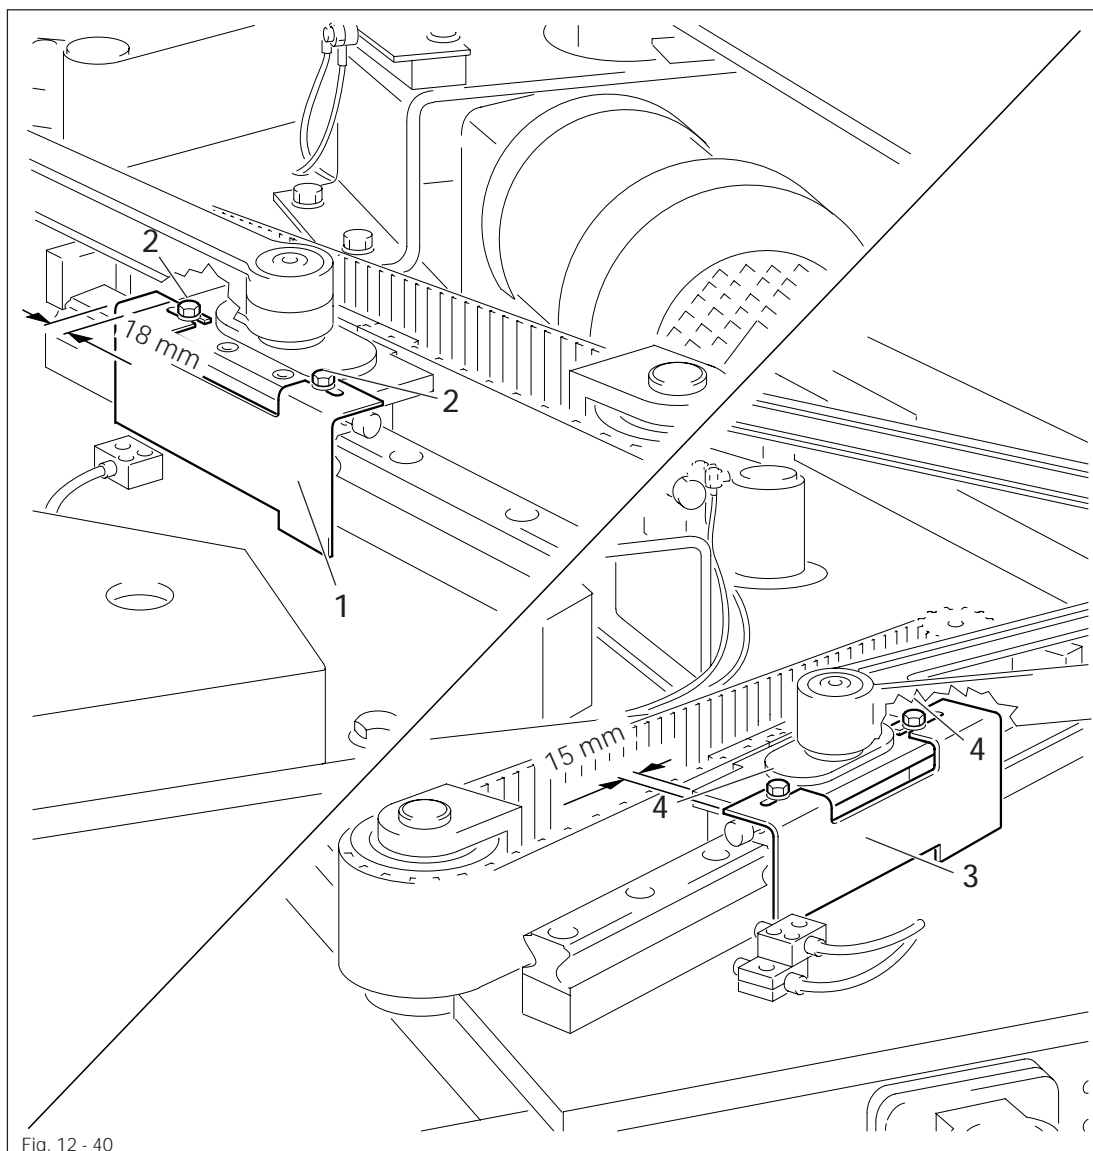


Fig. 12 - 40

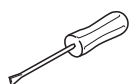

Adjusting the switch vanes 1 and 3 is only necessary when the carriage guides have been replaced or when the zero point setting causes problems.

- Move switch vane 1 (screws 2) according to **requirement 1**.
- Move switch vane 3 (screws 4) according to **requirement 2**.
- Set zero point (see **chapter 9.02.02 Adjusting zero point**).

12.08.02 Home position of the feed arm

Requirement

When lowered, the distance between the upper edge of the feed arm 4 and the machine table at both end positions must be **100 mm**.


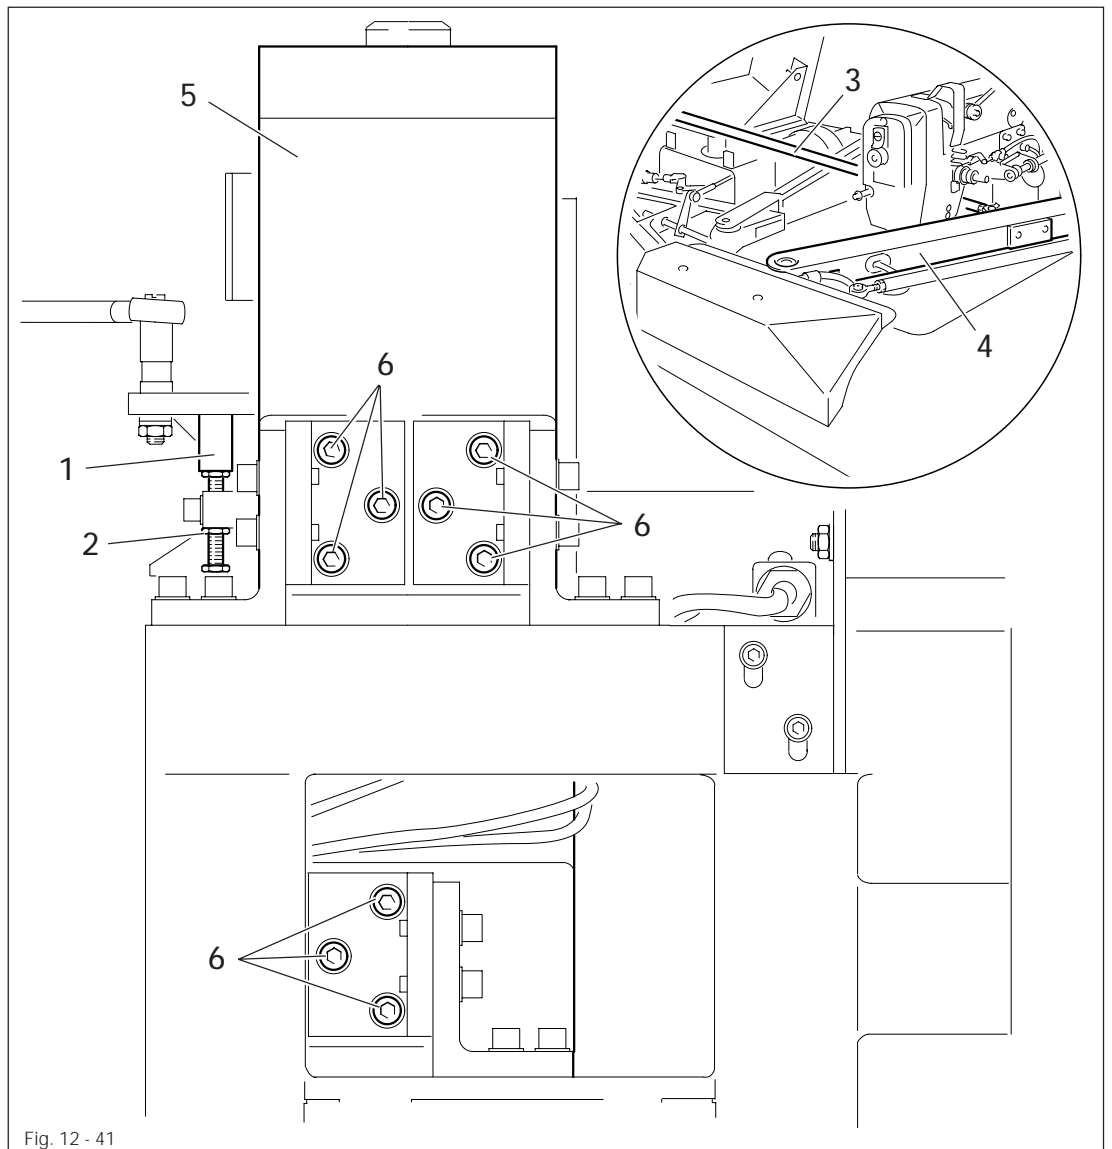




Fig. 12 - 41

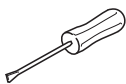

- Turn stop 1 (nut 2) according to the **requirement**.
- Detach pull rod 3.
- Swing feed arm 4 to folding station.
- Align carrier 5 (screws 6) according to the **requirement**.
- Swing feed arm 4 back to the sewing station and recheck the distance to the machine table.
- Repeat this adjustment if necessary.
- Connect pull rod 3.

Requirement

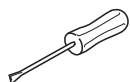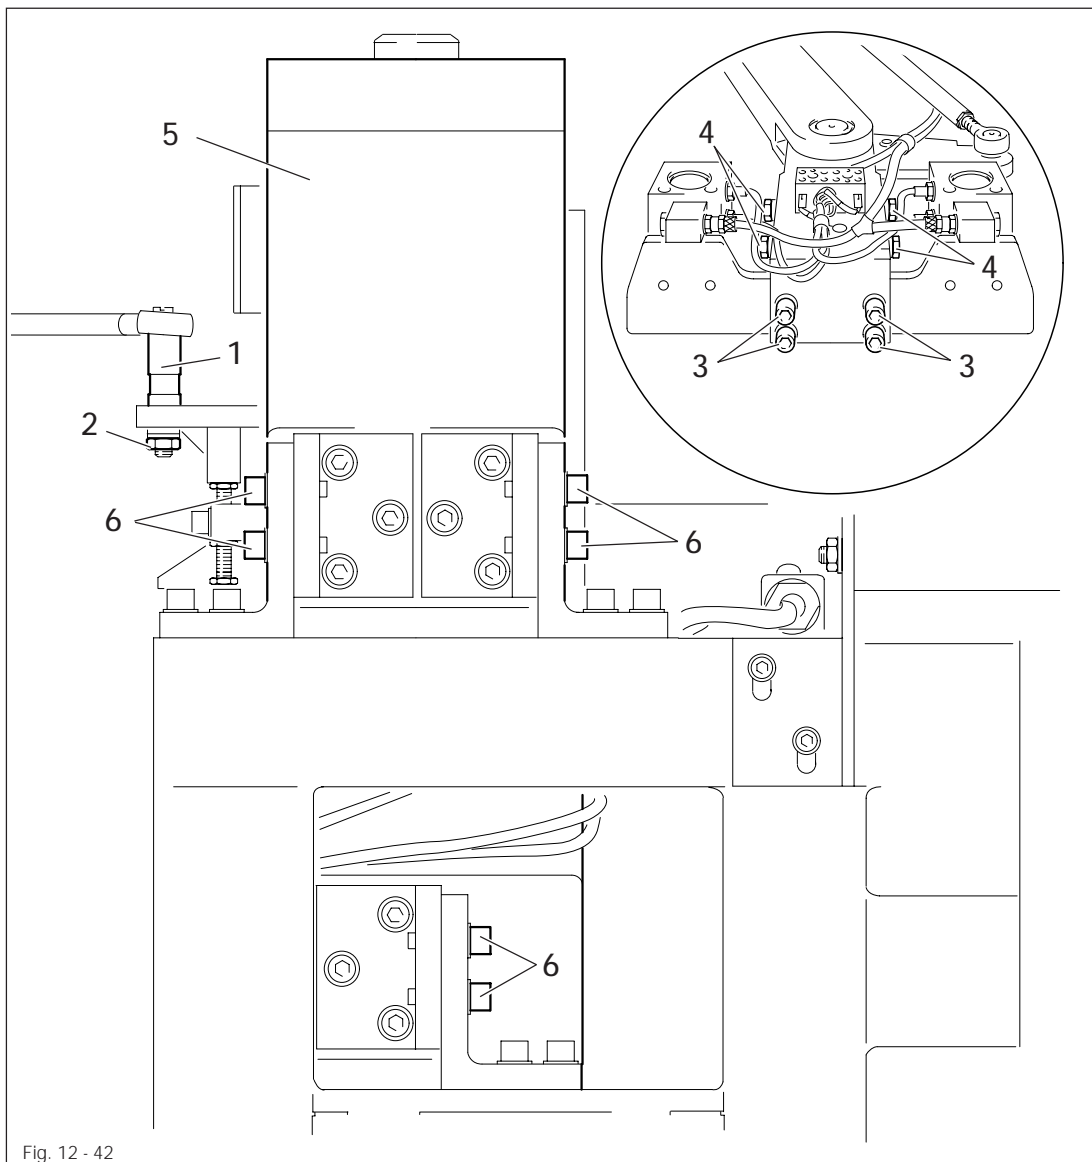1. The jig frame must just touch the sewing changeover and be both parallel and horizontal.
2. On the folding station, the sewing jig must be positioned parallel to the pocket plate and/or to the table.
3. When the jig changes over, the jig frame must not move.



- Move eccentric pin 1 (nut 2) according to the **requirements 1 and 2**.
- Repeat this work step until both adjustments are correct.
- Align jig frames (screws 3 and 4) horizontally.
- Adjust carrier 5 (screws 6) according to **requirement 3**, making sure that the home position of the transport arm does not change (see **chapter 12.08.02 Home position of the transport arm**).

12.08.04 Sewing jig position at the sewing station

Requirement

When the sewing jig is at the sewing station (left end position),

1. rod 3 and crank 6 must be aligned, and
2. the jig frame must be resting against the sewing changeover without pressure.


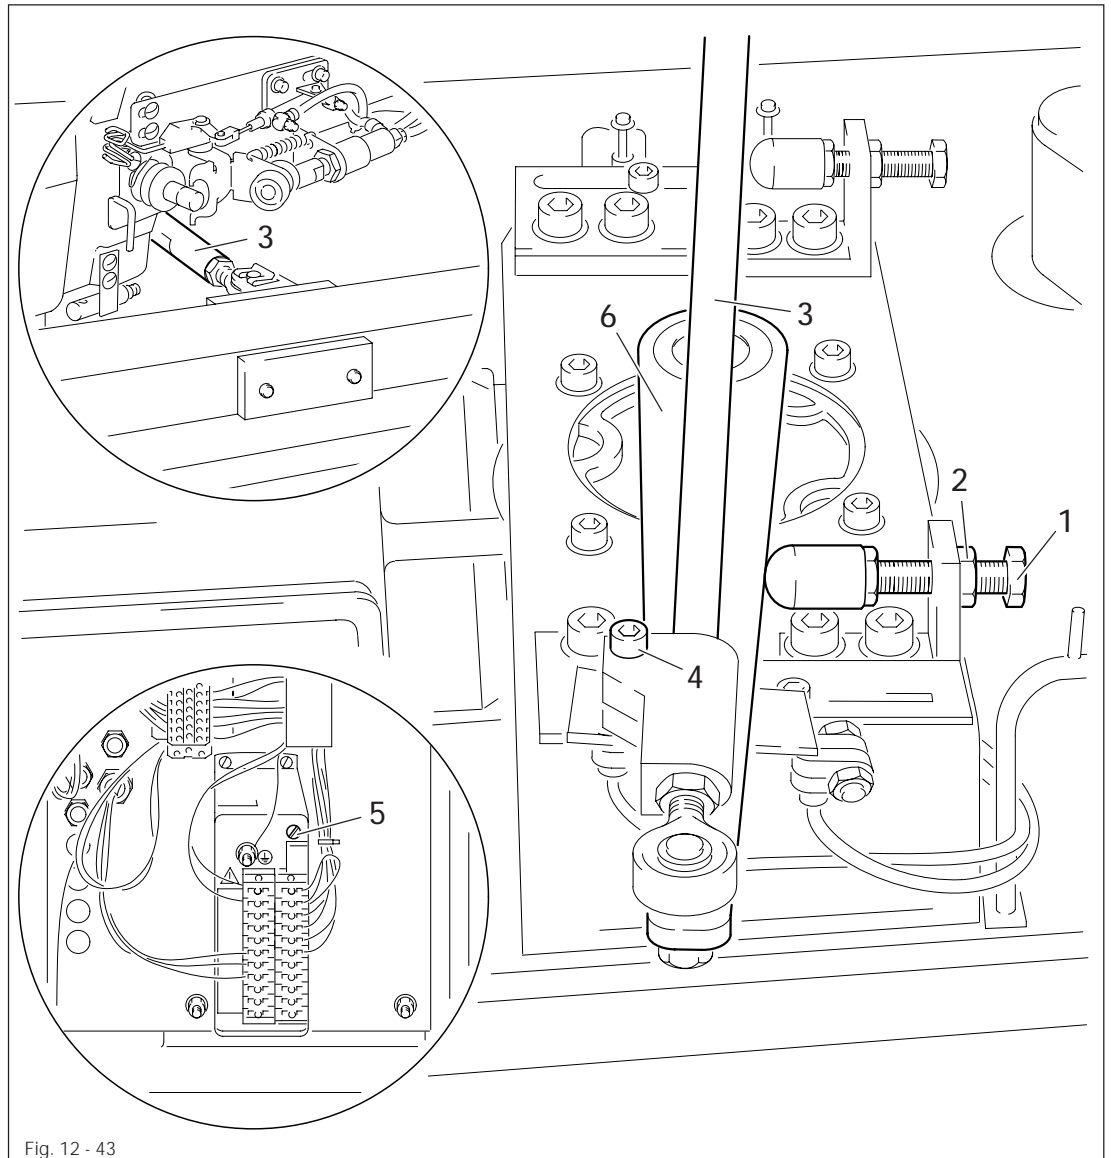


Fig. 12 - 43

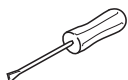

- Turn stop screw 1 (nut 2) according to **requirement 1**.
- Adjust rod 3 (screw 4) according to **requirement 2**.



The feed speed of the sewing jig as it travels to the sewing station can be changed at screw 5 located to the bottom right in the control box. The swinging speed to the folding station cannot be altered.

12.08.05 Aligning the sewing jig

Requirement

The needle must not touch the edges of the sewing jig groove during any phase of the sewing operation.


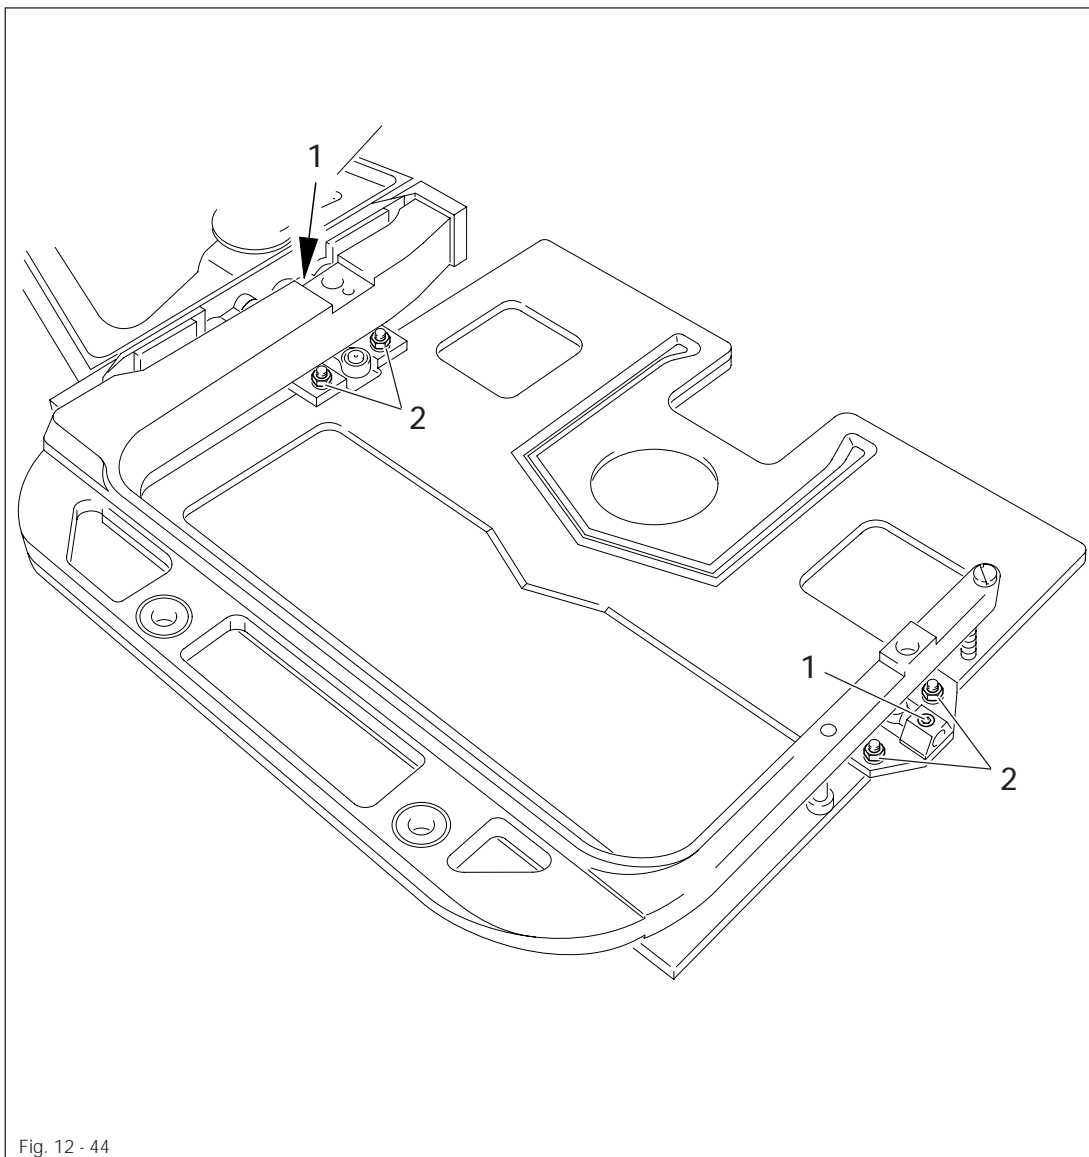


Fig. 12 - 44

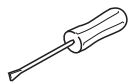

- Bring the needle bar to TDC.

- Press the key **seam pattern forwards** until the sewing jig groove is under the needle.

- Position the needle point in the sewing jig groove by turning the handwheel.



- By repeatedly pressing the keys **seam pattern forwards** and/or **seam pattern backwards**, execute the seam pattern.

- Align the sewing jig (screws 1 and nuts 2) according to the **requirement**.

- Bring the needle bar to TDC.



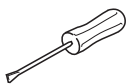
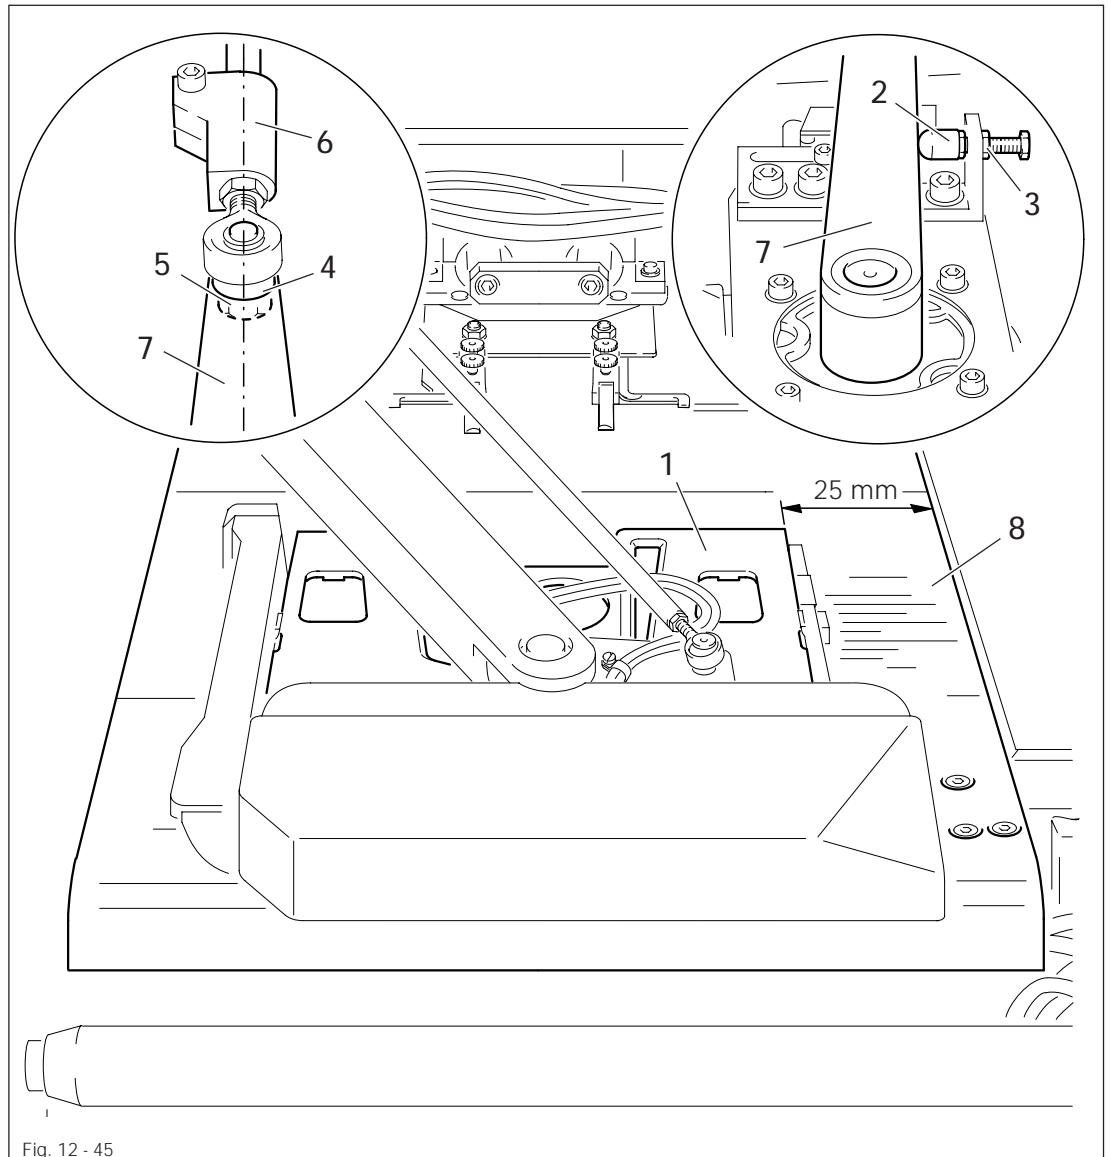
- By pressing the key **home position**, bring the sewing jig to starting position.

12.08.06 Sewing jig position at the folding station (home position)

Requirement

When the sewing jig is positioned at the folding station (right end position),

1. rods **6** and **7** must be aligned with each other, and
2. the distance of the sewing jig **1** to the right side of the table **8** must be parallel **25 mm**.





- Swing sewing jig **1** in front of the folding station.
- Turn stop screw **2** (nut **3**) according to **requirement 1**.
- Turn eccentric pin **4** (nut **5**) according to **requirement 2**.
- Recheck left end position of the sewing jig and adjust, if necessary. (See **chapter 12.08.04 Sewing jig position at the sewing station**.)



The exact adjustment of the right end position of the transport arm is based on the pocket seam as described in **chapter 12.08.21 Centering the pocket seam**.

Requirement

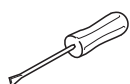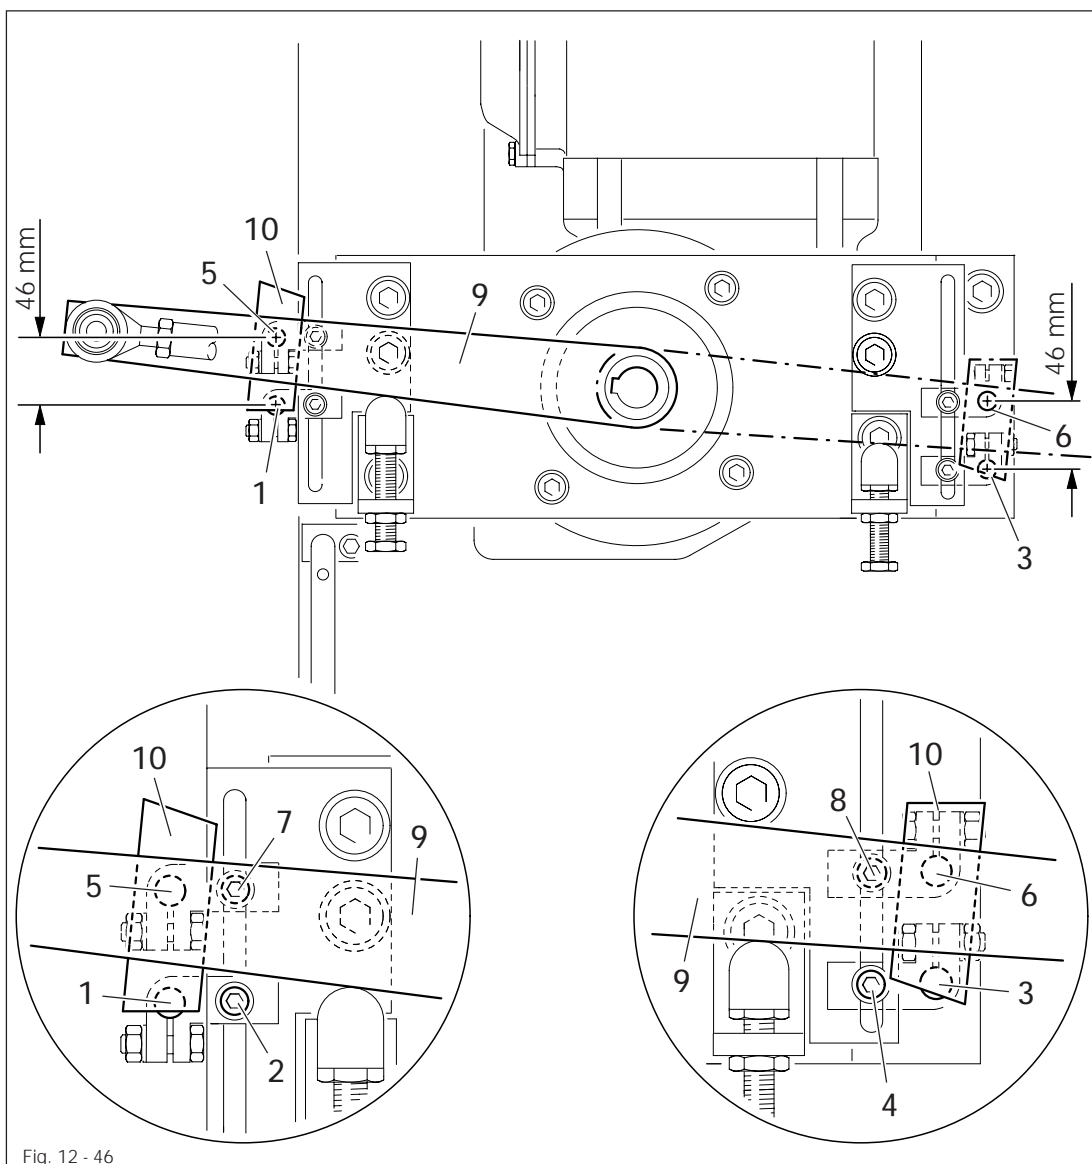1. In both end positions of the transport arm **9** the corresponding proximity switch **1** or **3** must be covered by $\frac{3}{4}$ by the switch vane **10**.
2. The distance of the proximity switches **5** and **6** to the proximity switches **1** and **3** must be **46 mm** in each case.



- Swing the sewing jig in front of the sewing station.
- Move proximity switch **1** (screw **2**) according to **requirement 1**.
- Swing the sewing jig in front of the folding station.
- Move proximity switch **3** (screw **4**) according to **requirement 1**.
- Move proximity switches **5** and **6** (screws **7** and **8**) according to **requirement 2**.

12.08.08 Height of the loading plate

Requirement

The loading plate 4 and the insert plate must be at the same height.


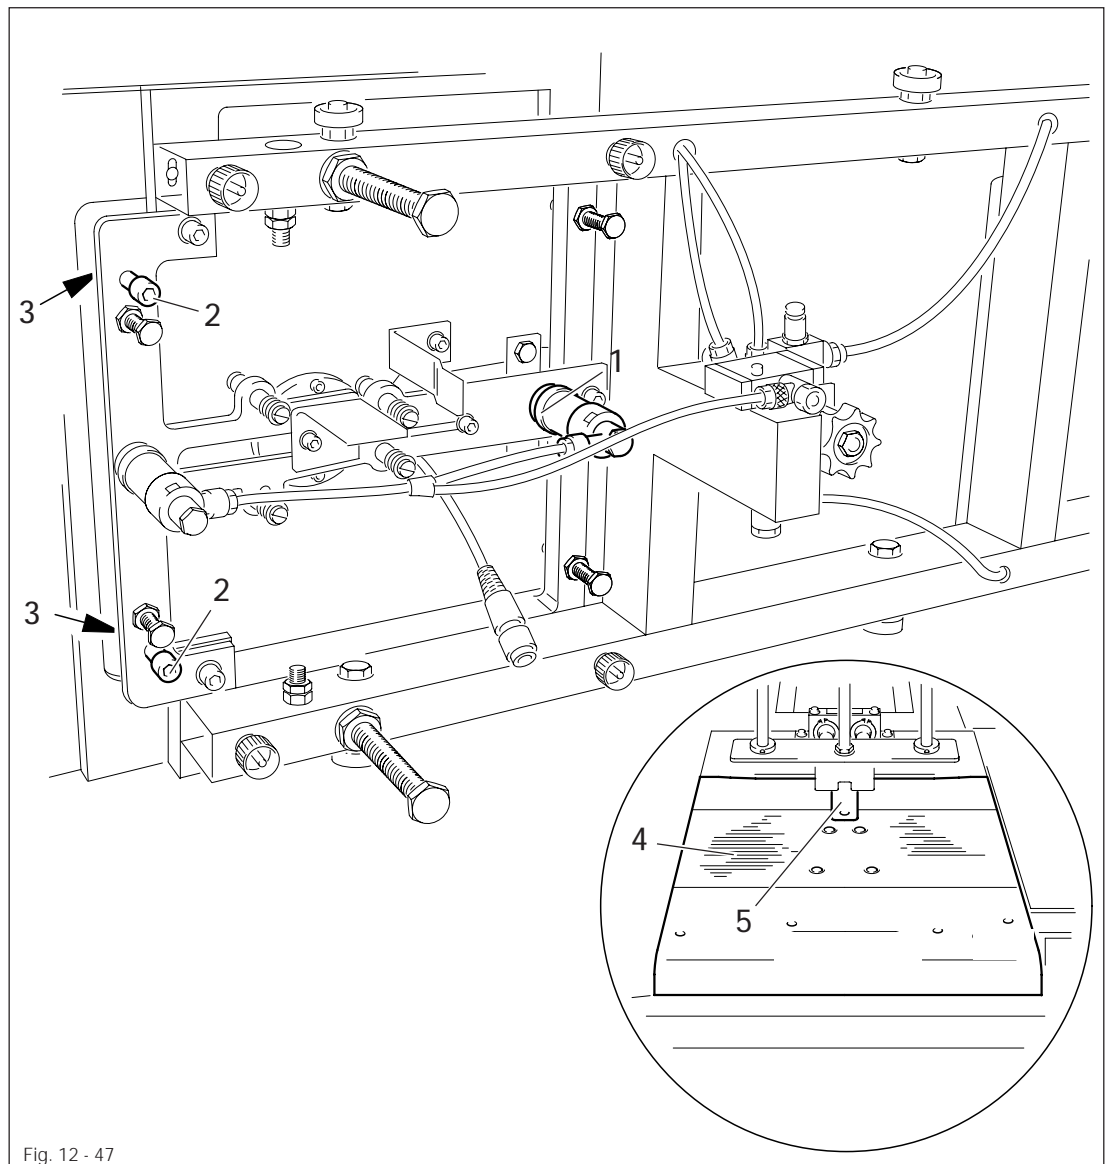


Fig. 12 - 47


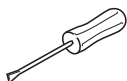


- Turn off compressed air (table is lowered).
- Underneath the table, work loose the lock nut of the plunger from the cylinder 1.
- Open compressed air (table raises).
- By turning screws 2 (lock nut 3) and the plunger of the cylinder 1, adjust the height of the table.
- Turn off compressed air and tighten the lock nut of the plunger.
- Check the free movement of the table 4.

12.08.09 Height of pocket plate support

Requirement

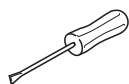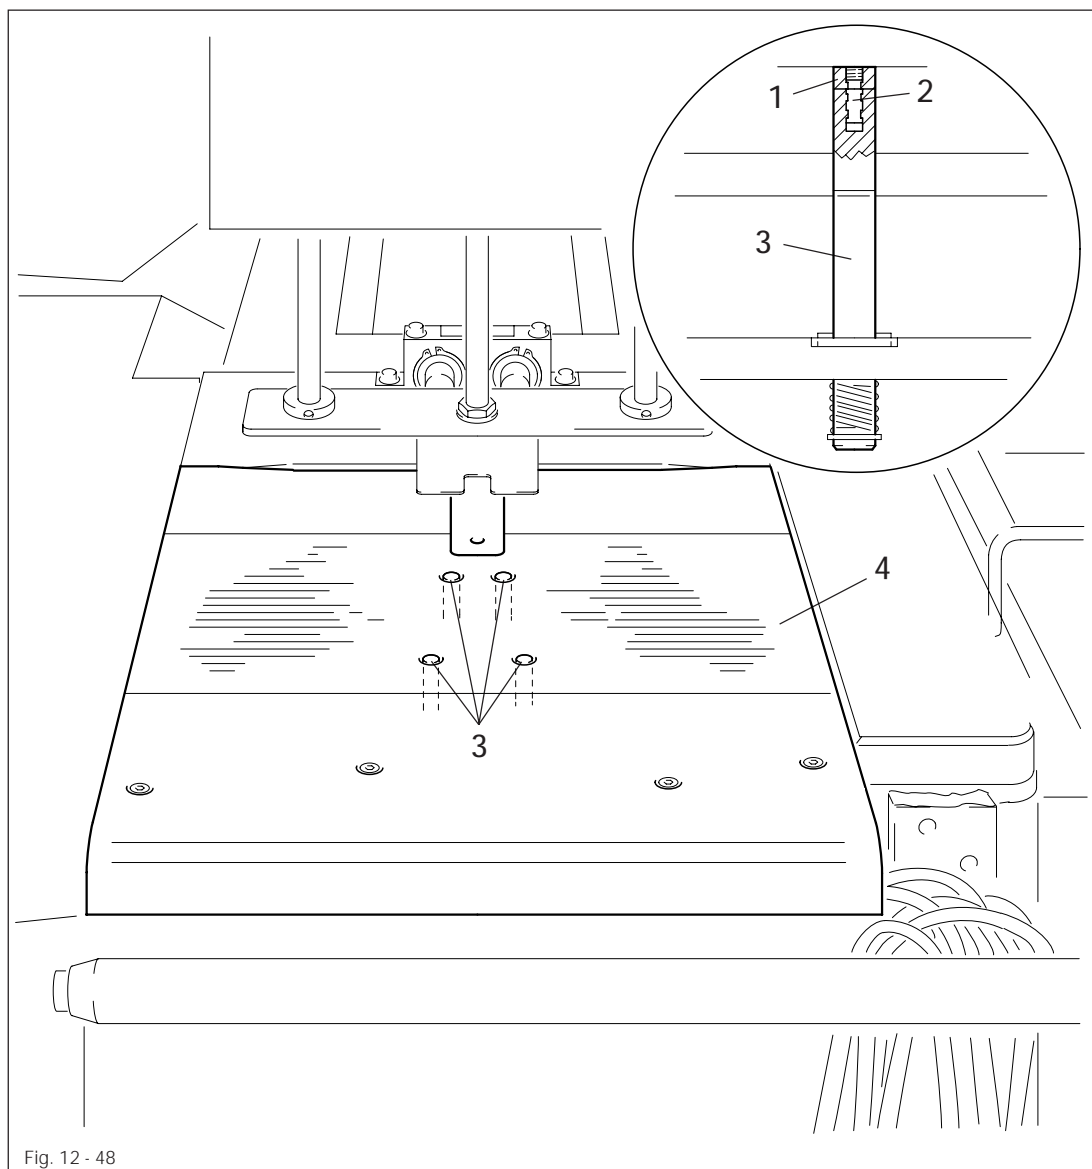The plungers 3 must be flush with the raised table 4.



- Turn screws 1 (grub screws 2) according to the requirement.



Depending on the size of the pocket plate, the plungers which are not in the pocket plate area can be lowered.

To do this, press the plunger up lightly, turn by 90° and lower.

12.08.10 Basic dimensions of the folder



The folders are mounted according to basic dimensions from the factory.
These dimensions may not be changed when adjustments are carried out!
Only make adjustments described in this manual!

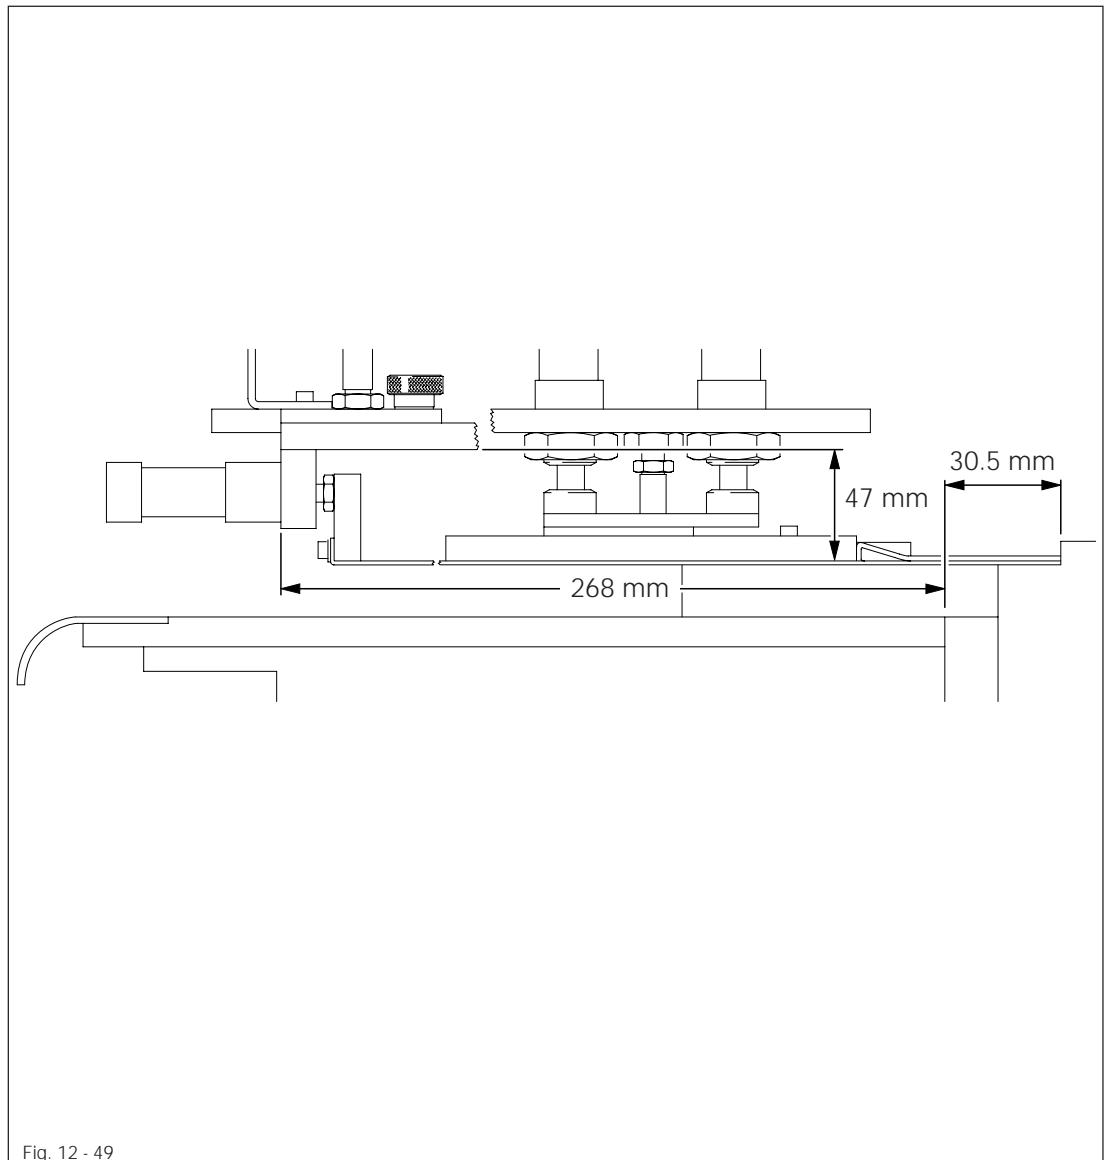


Fig. 12 - 49

Adjustment

12.08.11 Height of the folder device

Requirement

The folder table and the machine table must be at the same height.


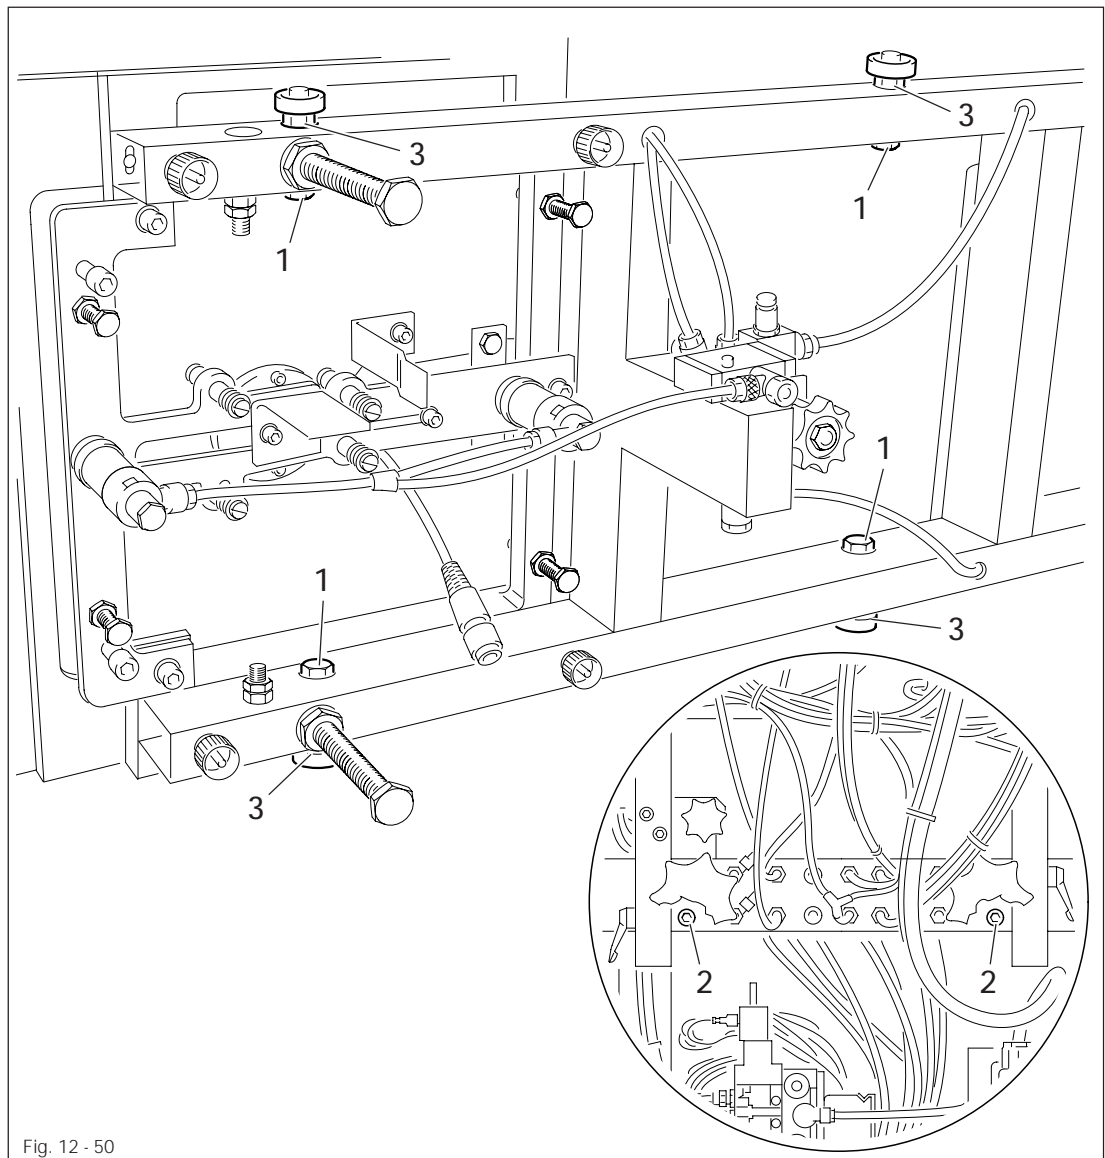


Fig. 12 - 50

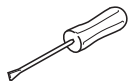

- Loosen nuts 1 and screws 2.
- Align folder device by turning eccentric pins 3 according to the requirement.
- Tighten nuts 1 and screws 2.

12.08.12 Position of pocket plate arm

Requirement

1. When the pocket plate **3** is lowered, it must be parallel to the table.
2. The lengthwise motion of the pocket plate **3** must run parallel to the table.


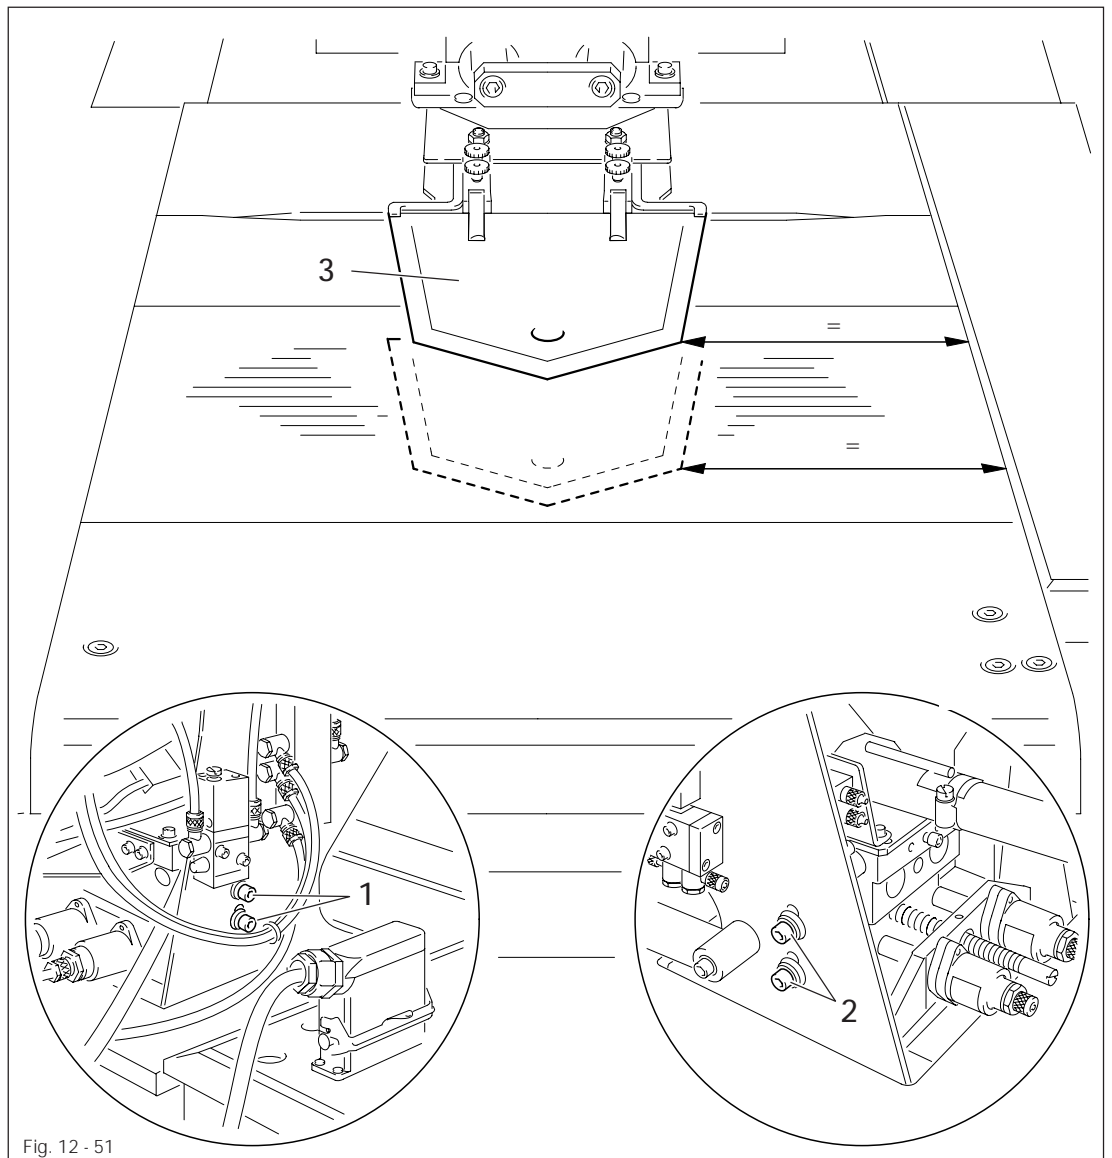


Fig. 12 - 51

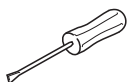



- Loosen screws **1** and **2** just enough so that the bearing housing of the pocket plate arm can only be moved with difficulty.
- Align pocket plate arm by moving the bearing housing according to **requirement 1**.
- Turn off compressed air.
- Remove pocket plate **3** and measure the distance to the edge of the table.
- Move pocket plate **3** back a little and measure the distance to the edge of the table again.
- If both distances are not equal, align the pocket plate arm according to **requirement 2**.
- Check **requirement 1** and realign pocket plate arm if required.
- Tighten screws **1** and **2**; turn on compressed air.

Adjustment

12.08.13 Pocket plate position

Requirement

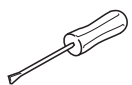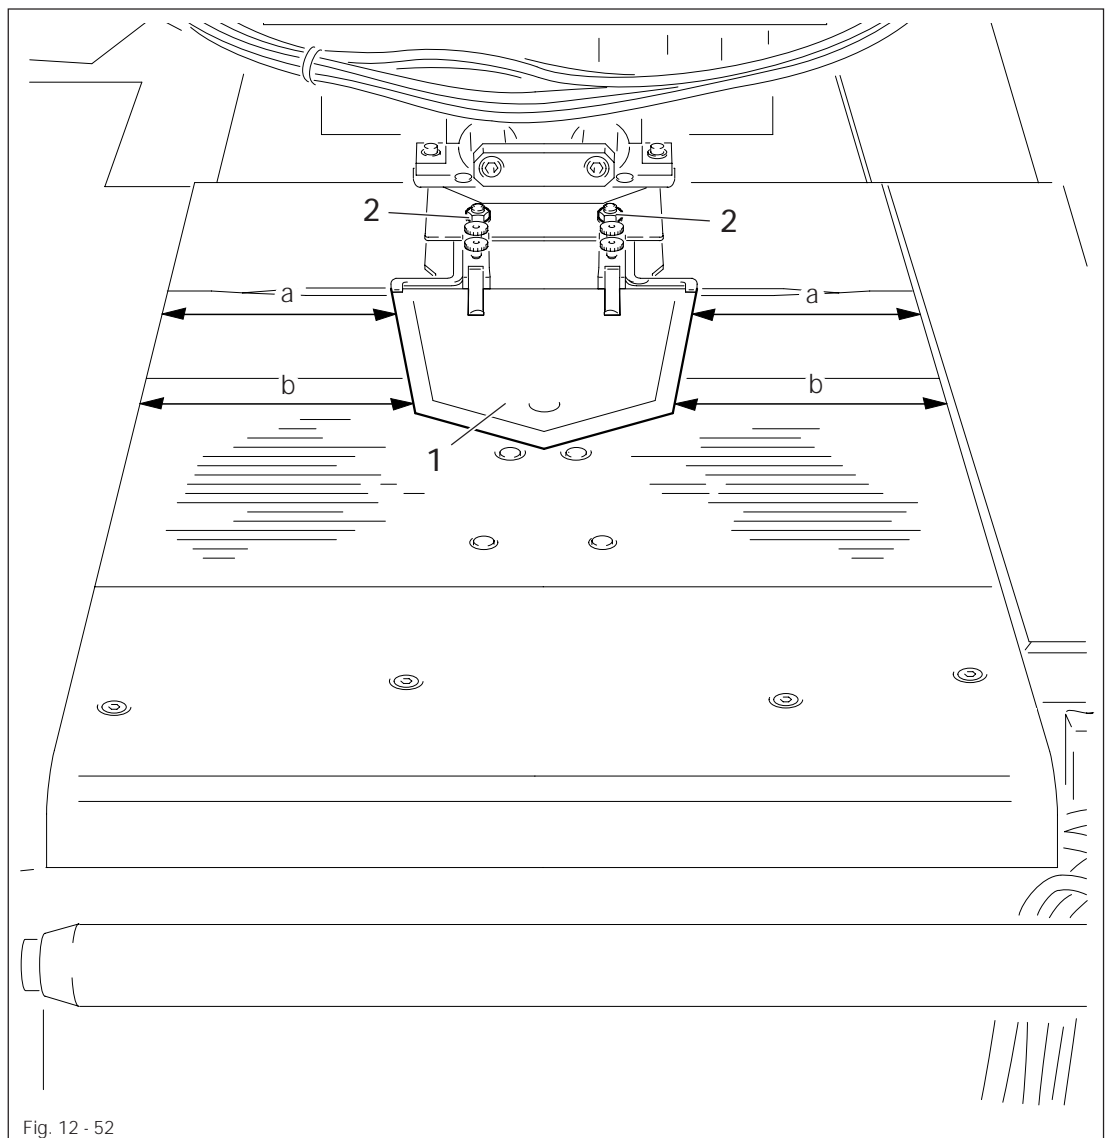The pocket plate 1 must be centered and parallel to the table.



- Align the pocket plate 1 (nuts 2) so that measurements **a** are the same. The same applies to measurements **b** correspondingly.

12.08.14 Trim pocket plate height adjustment

Requirement

1. When the pocket plate is in home position, the distance to the table must be 11 to 12 mm.
2. When the pocket plate is raised, it must be possible to easily move a panel of fabric positioned under the pocket plate.
3. When the pocket plate is lowered, it must just touch the fabric positioned under it; it must not apply pressure to the fabric, however.


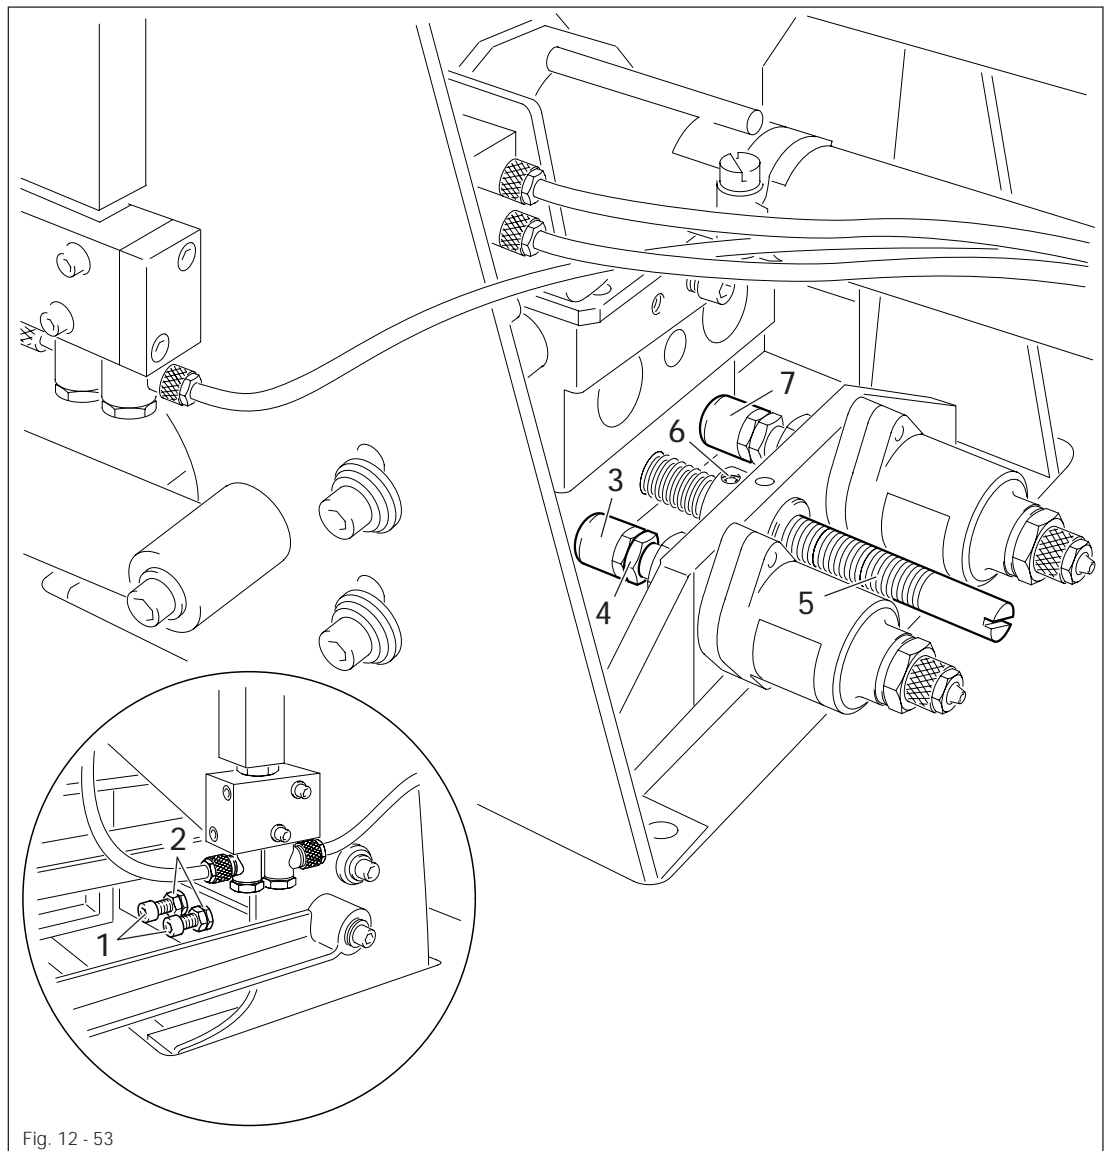


Fig. 12 - 53

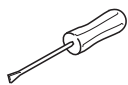



- Turn screws 1 (nuts 2) according to **requirement 1**.
- Turn stop 3 (nut 4) according to **requirement 2**.
- Turn adjusting screw 5 (screw 6) according to **requirement 3**.
- Grease stops 3 and 7.

Adjustment

12.08.15 Watch pocket plate height adjustment

Requirement

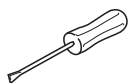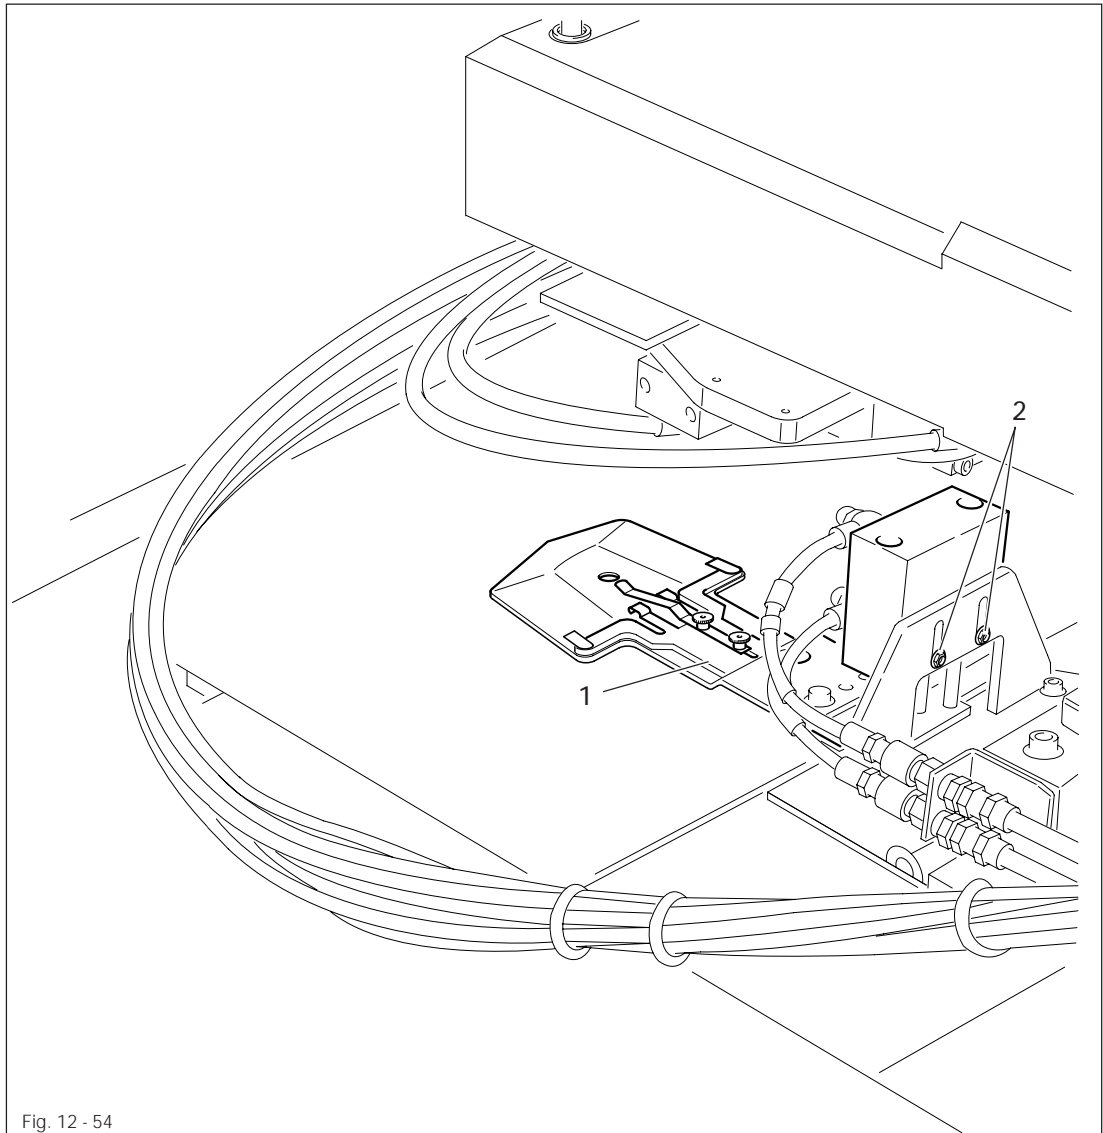When lowered, the watch pocket plate should be just touching the fabric inserted beneath it, but should not be exerting any pressure on the latter.



- Slide pocket plate 1 (nuts 2) in accordance with the requirement.

12.08.16 Die of the trim assembly

Requirement

1. The die 2 together with its angular strip 8 must lie evenly on the table.
2. The bottom edges of the angular strips 8 must be at a distance of approx. the thickness of the fabric under the underside of the pocket plate.
3. The angular strips 8 must be positioned on all sides at the same distance of 0.3 to 1 mm (depending on the fabric) to the pocket plate.


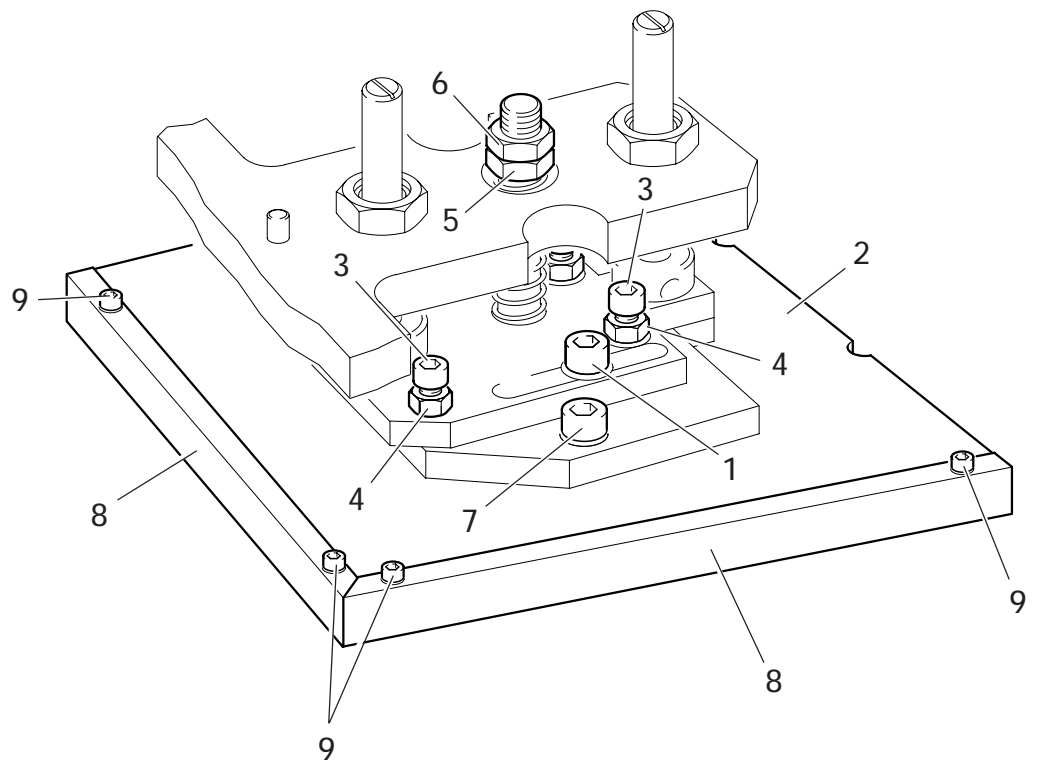
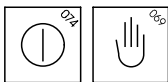


Fig. 12 - 55

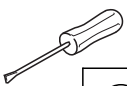

- Unscrew folder plates.
- Turn on machine and select **MANUAL** mode.
- Press start controls simultaneously.
- Press **folder movement** key.


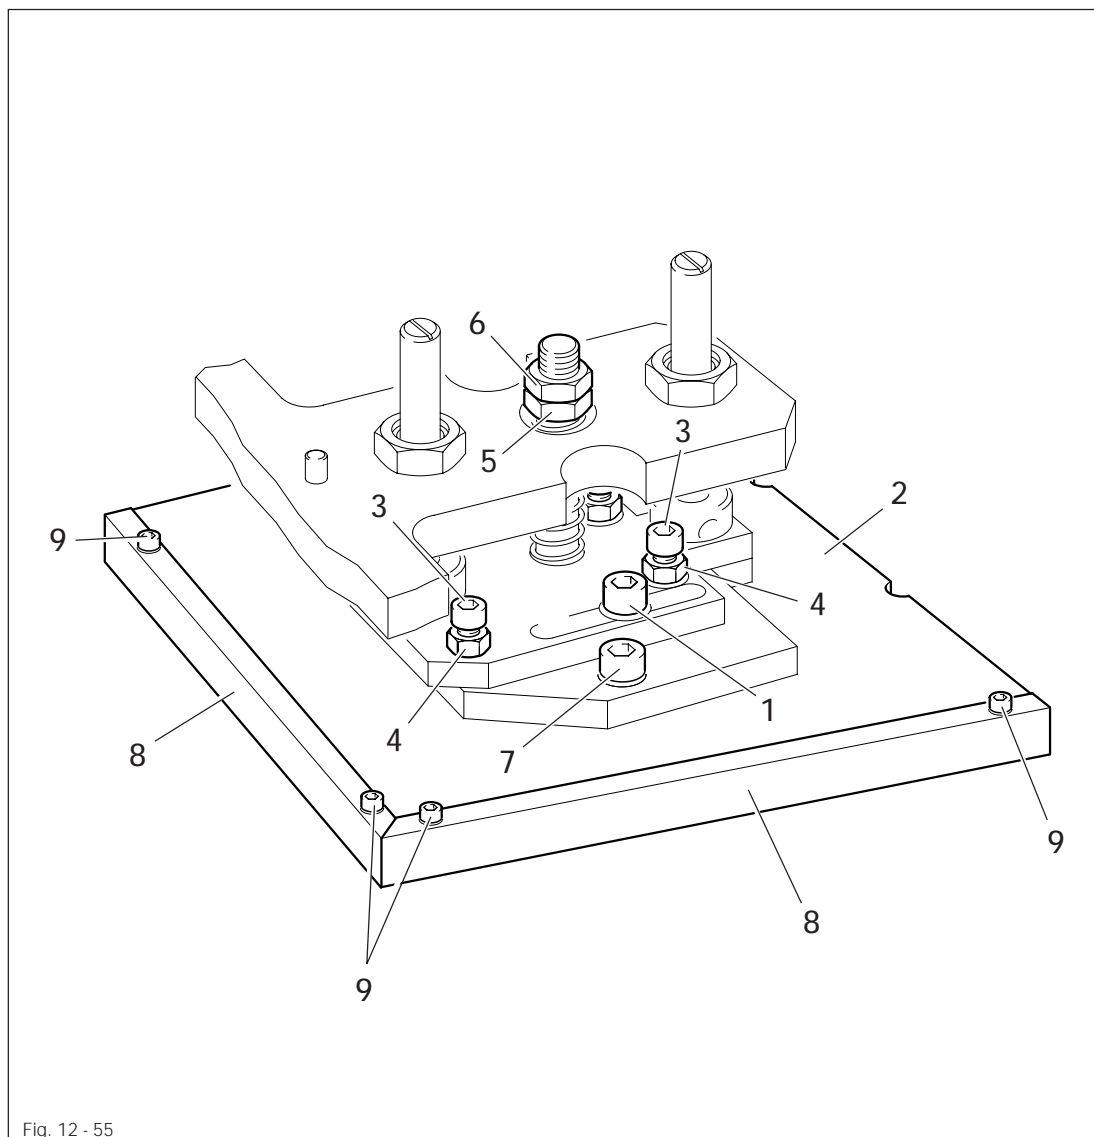


Fig. 12 - 55

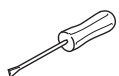

- Loosen screws 1 and align die 2 by turning screws 3 (nuts 4) according to requirement 1.
- Adjust height of die by turning the nut 5 (lock nut 6) according to requirement 2.
- Align die 2 (screws 1 and 7) so that its outer edges are flush with the edges of the pocket plate
- Align angular strips 8 (screws 9) according to requirement 3.



- Bring folder to starting position.
- Screw on folder plates.



To better align die 2 and angular strips 8, place a mirror under the folder unit.

12.08.17 Die of the watch pocket assembly

Requirement

1. The lower edge of the corner strips on the die should be about a workpiece thickness beneath the underside of pocket plate 4.
2. The corner strips should be 0.3 to 1 mm from pocket plate 4 (depending on the workpiece) and the clearance should be the same on all sides.


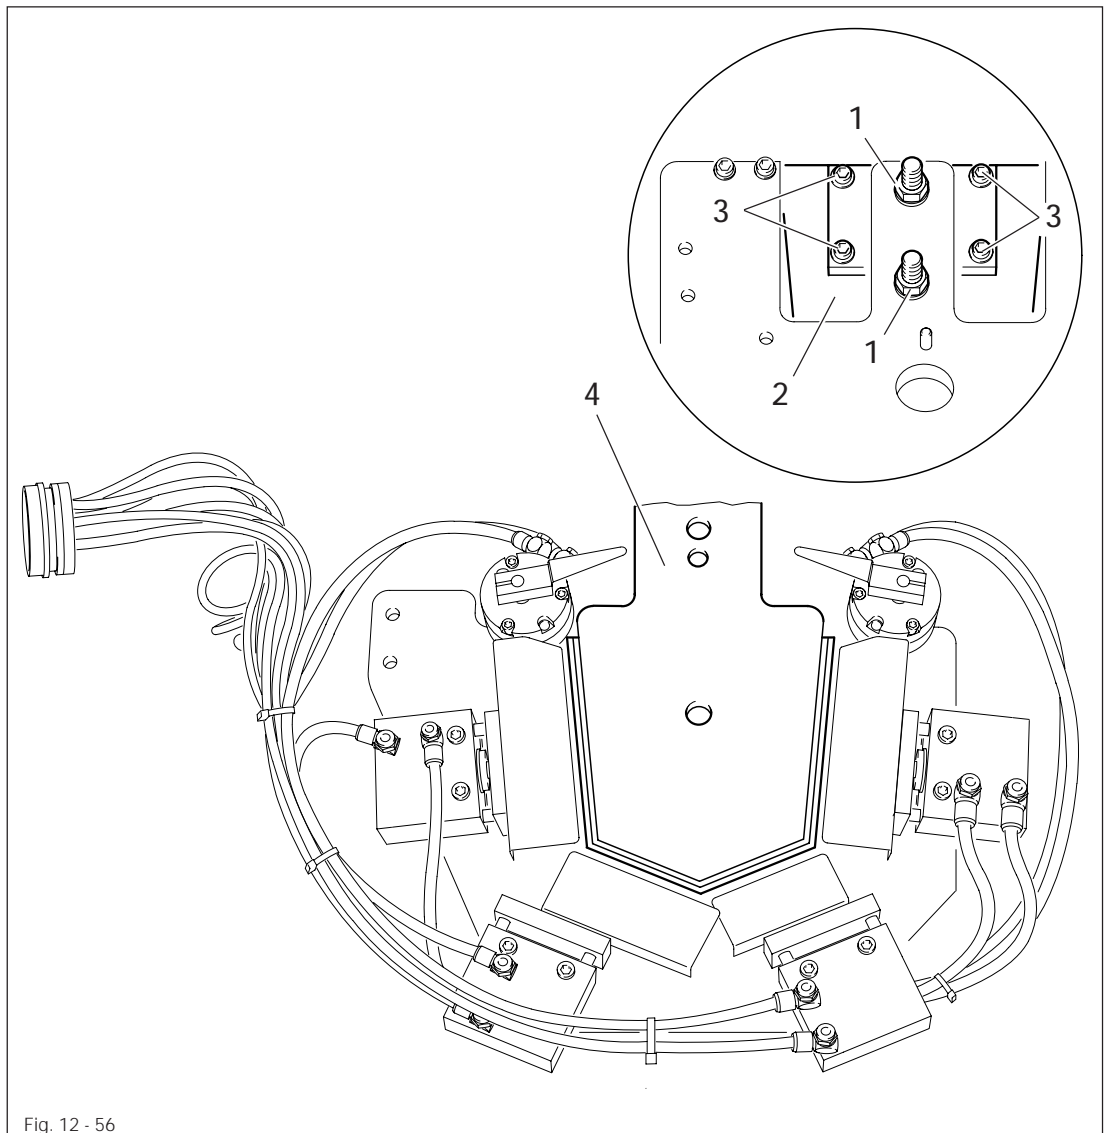


Fig. 12 - 56

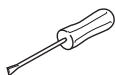

- Turn nuts 1 (lock nuts) according to Requirement 1.
- Adjust die 2 (screws 3) according to Requirement 2.

12.08.18 Position of folder platees

Requirement

1. The front edge of the folder plate 2 must be parallel to the die 4.
2. The exiting folder plates 2 must be positioned on all sides approx. 0.1 mm under the lower edge of the angular strips of the die 4.


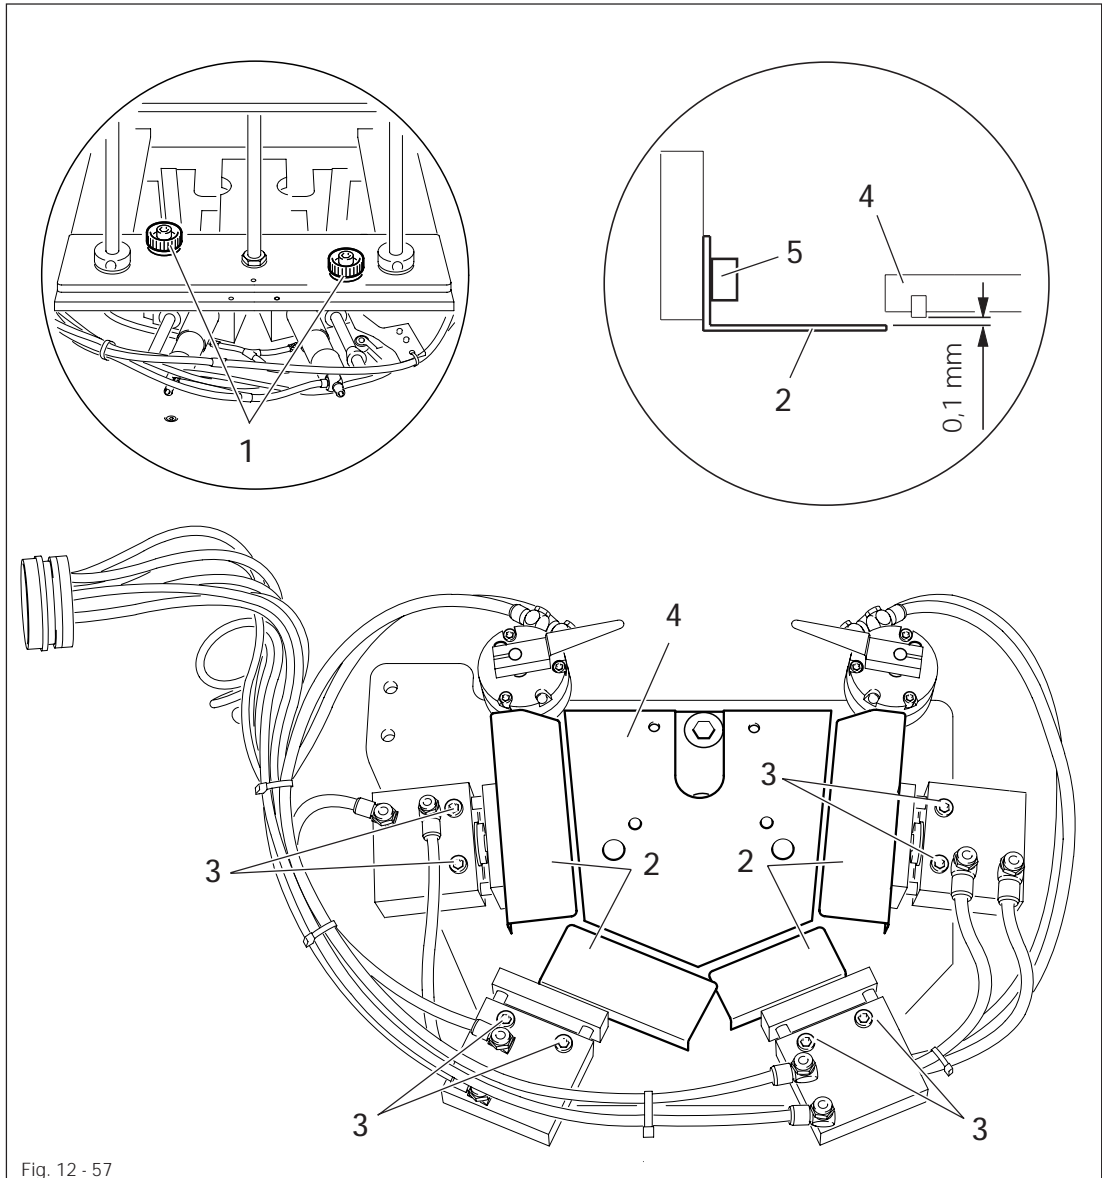




Fig. 12 - 57

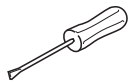

- Turn off compressed air and unscrew compressed air connection of the folder unit.
- Unscrew screw 1 and remove the entire folder unit.
- Align folder plate 2 according to requirement 1 (screws 3).
- Insert folder plate 2 and adjust distance to die 4 according to requirement 2 (screws 5).
- Position the folder plates of the following switching positions correspondingly under the previous folder plate to be entered (see chapter 12.08.19 Actuating sequence of the folder plates).
- Mount the folder unit (observe the aligning pins) and tighten screws 1.
- Screw on compressed air connection and turn on compressed air.

12.08.19 Actuating sequence of the folder plates

| Pocket style | 1 | 2 | 3 | 4 | 5 | 6 |
|----------------------|-------|-----------|-------|-----------|-------|---|
| Switching position 1 | a + b | a + b | a + b | a + b | a + b | a |
| Switching position 2 | c + d | c + d + e | c + d | c + d + e | c + d | b |
| Switching position 3 | e | f | e | f | e | |
| Switching position 4 | f + g | g | f | g | f | |
| Switching position 5 | | h | | | g | |

 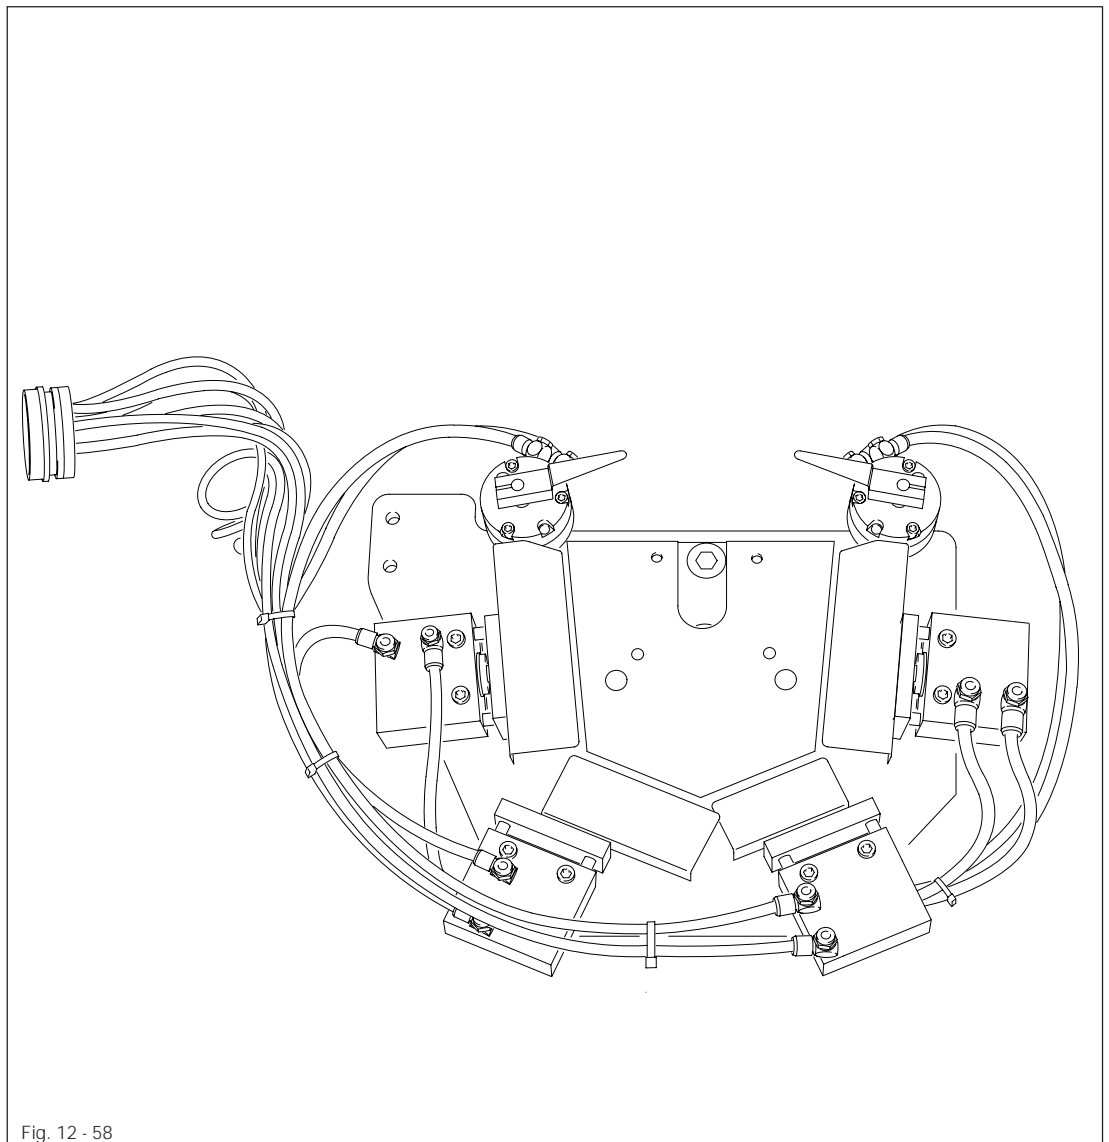

The actuating sequence and the number of folder plates (and the number of switching positions) depends on the pocket style. The folder installation shown in Fig. 12-58 is for the third pocket style. For other pocket styles, refer to the above table for the cylinders corresponding to the relevant switching positions.

12.08.20 Position of corner folders

Requirement

1. In folder position, the corner folder **3** must be parallel under the slanted side of the folder plate and overlap by 1 to 2 mm.
2. The corner folders **3** must be positioned 1 to 2 mm under the folder plates depending on the fabric thickness.


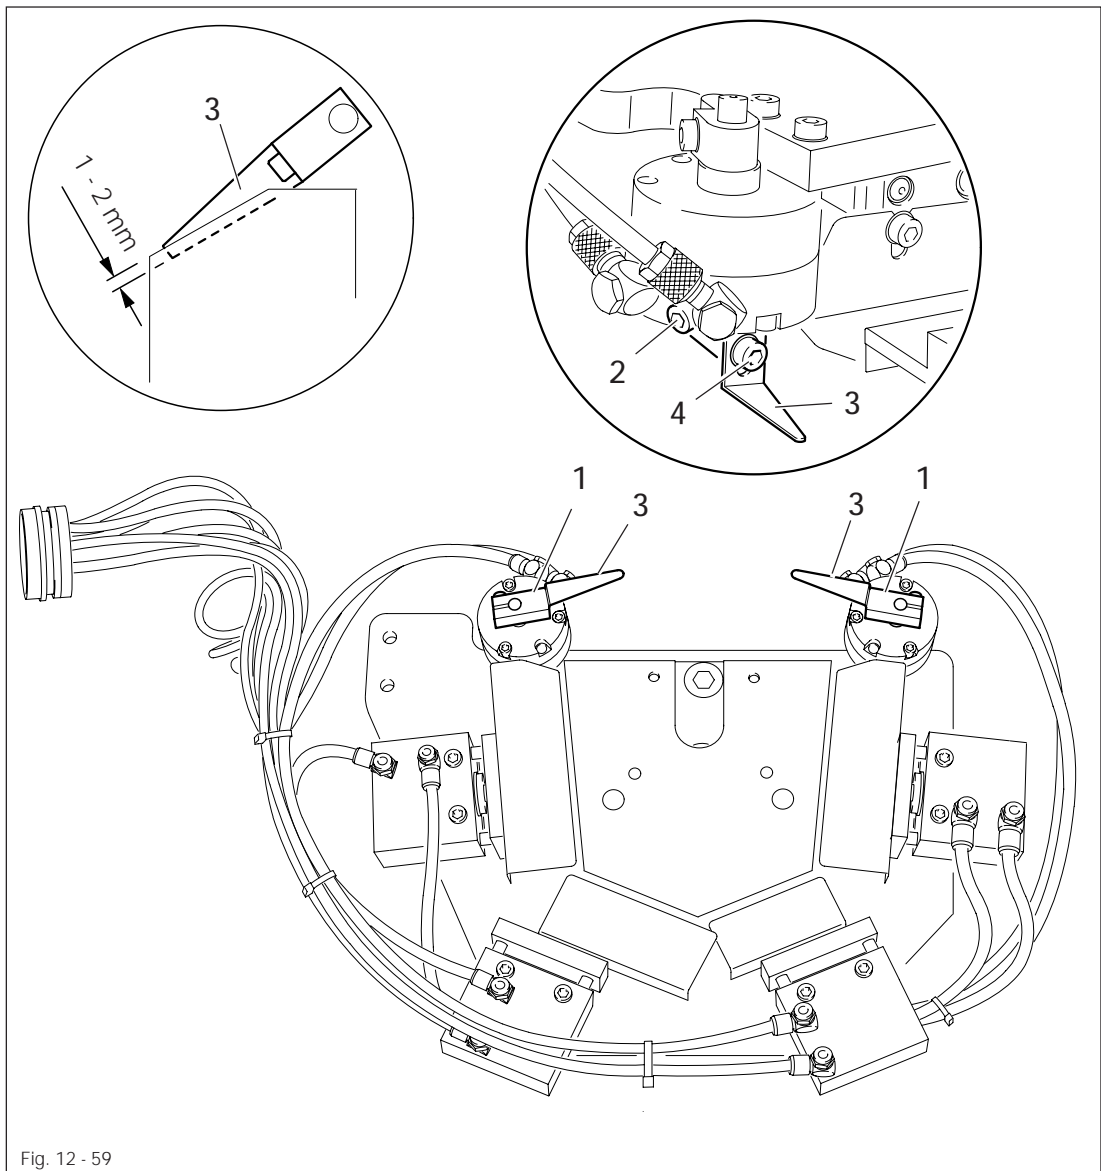


Fig. 12 - 59


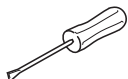


- Preadjust clamps **1** (screws **2**) according to Requirement 1.
- Adjust corner folders **3** (screws **4**) according to Requirement 2.

12.08.21 Parallelism of seam to pocket

Requirement

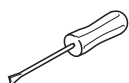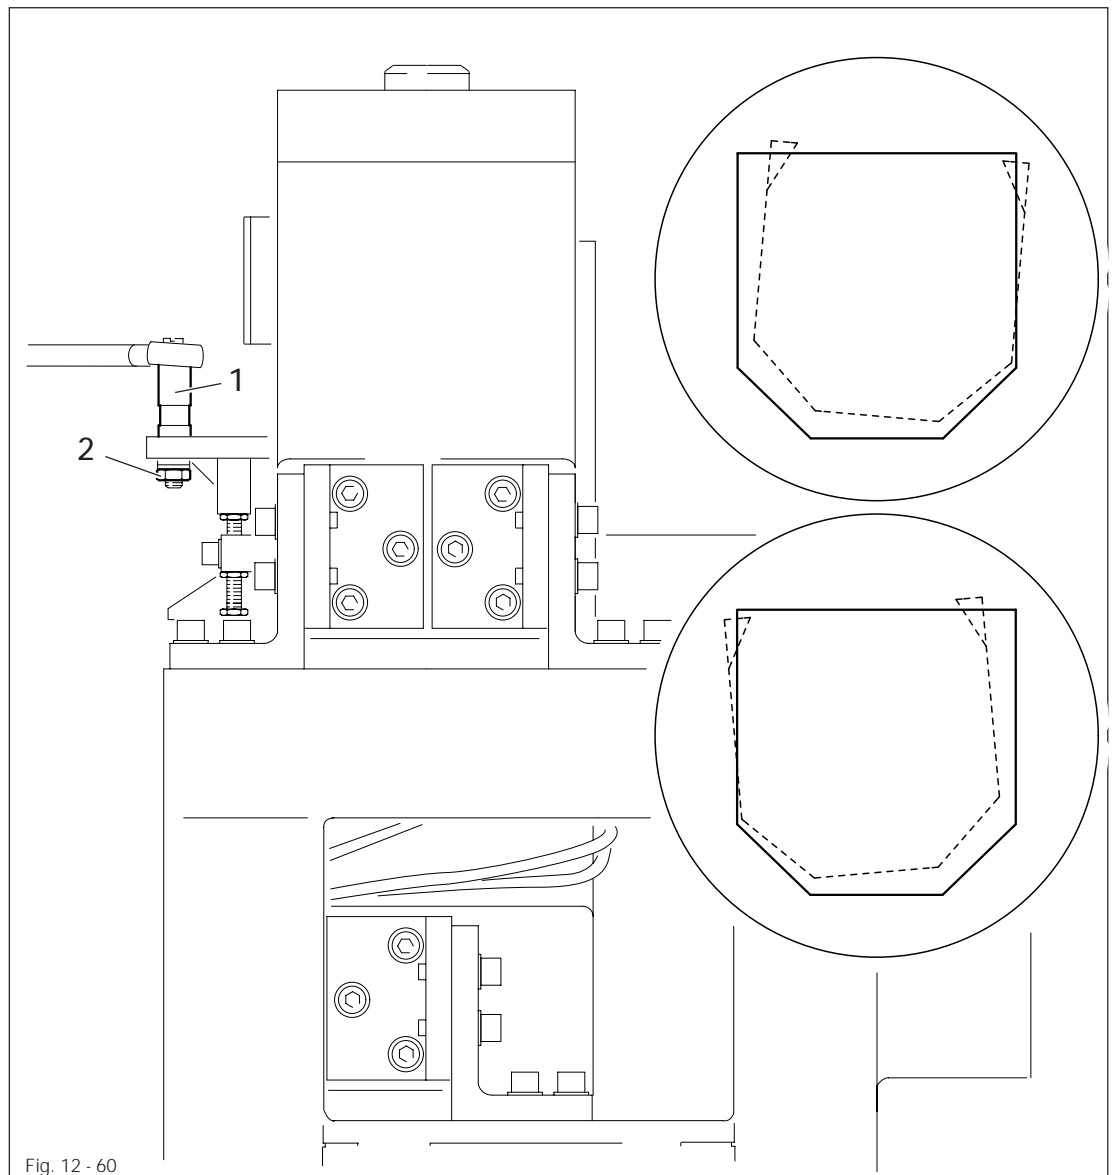The seam must run parallel to the pocket edge.





- Turn eccentric pin 1 (nut 2) according to the requirement.

Adjustment

12.08.22 Centering the pocket seam

Requirement

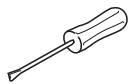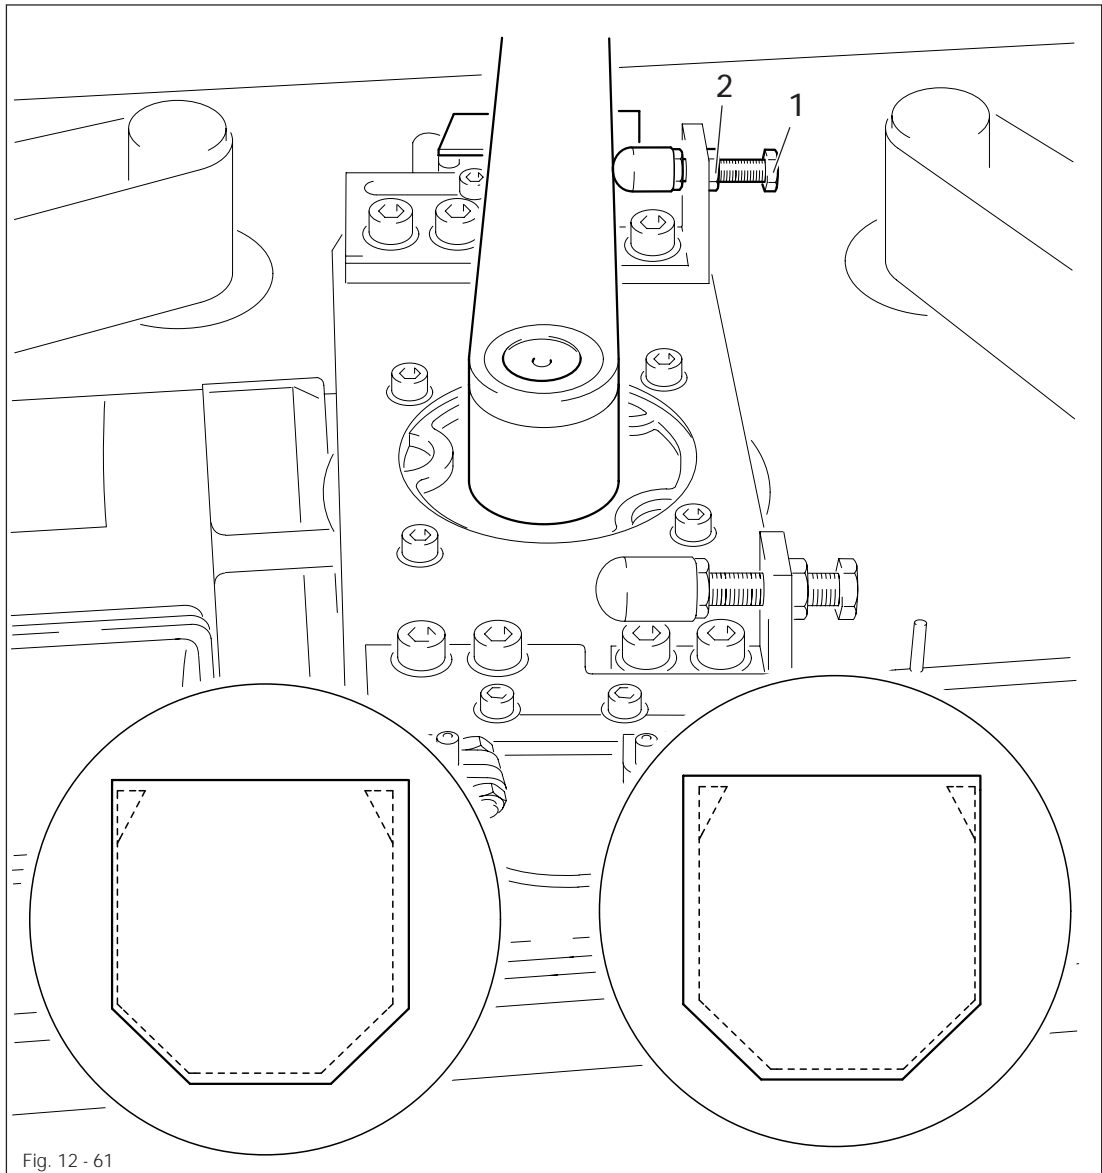The seam must be the same distance at the right and left to the pocket edge.





- Turn screw 1 (nut 2) according to the requirement.

12.08.23 Distance of seam to pocket

Requirement

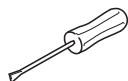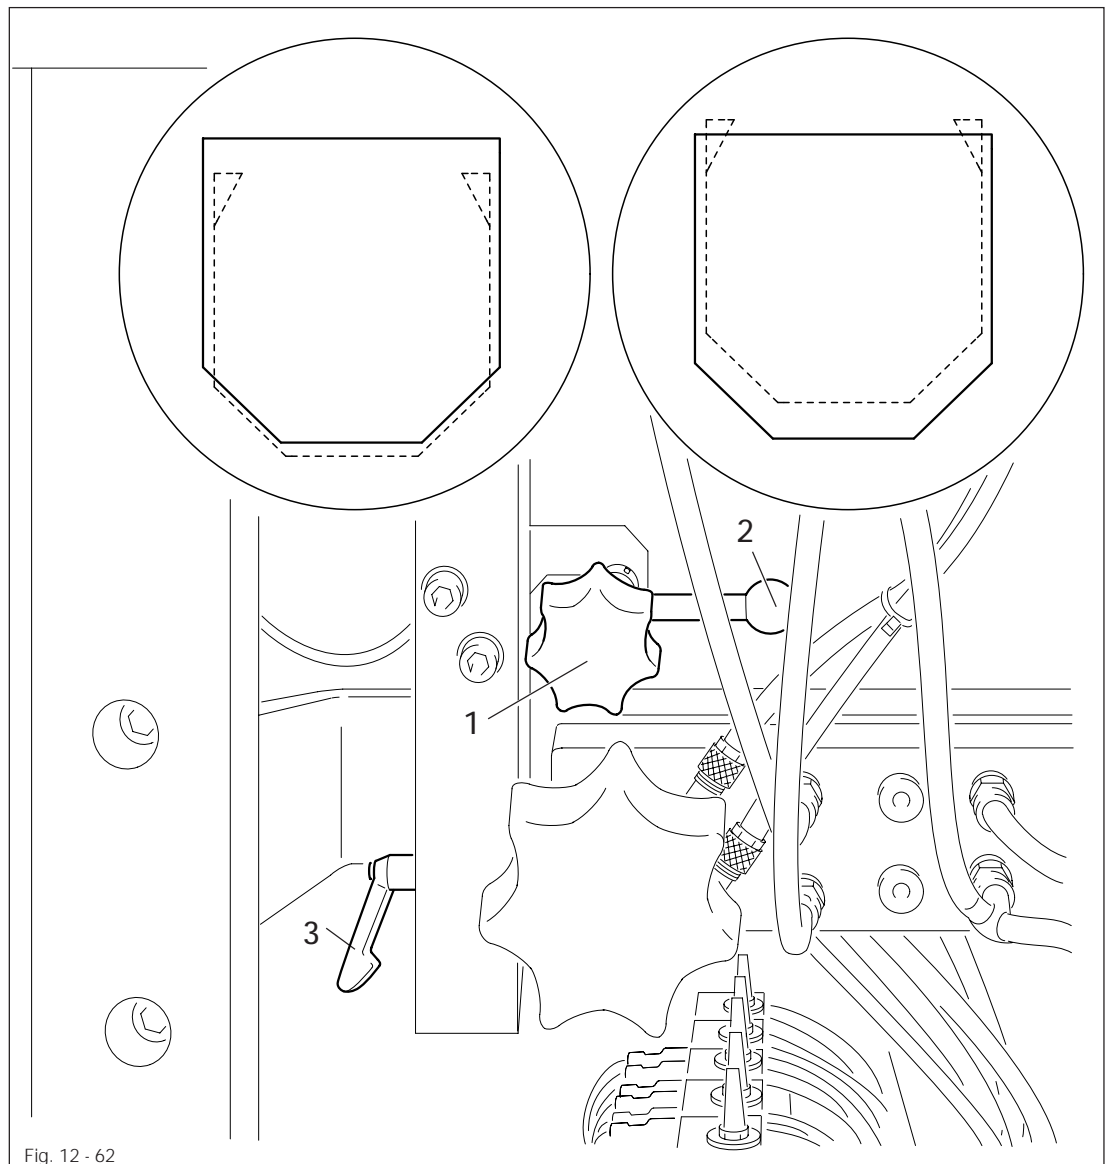The seam is to be at the same distance on all sides to the pocket edge.





- Turn adjusting screw 1 (toggle switch 2 and clamp lever 3) according to the requirement.

Adjustment

12.08.24 Seam backtack distance

Requirement

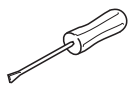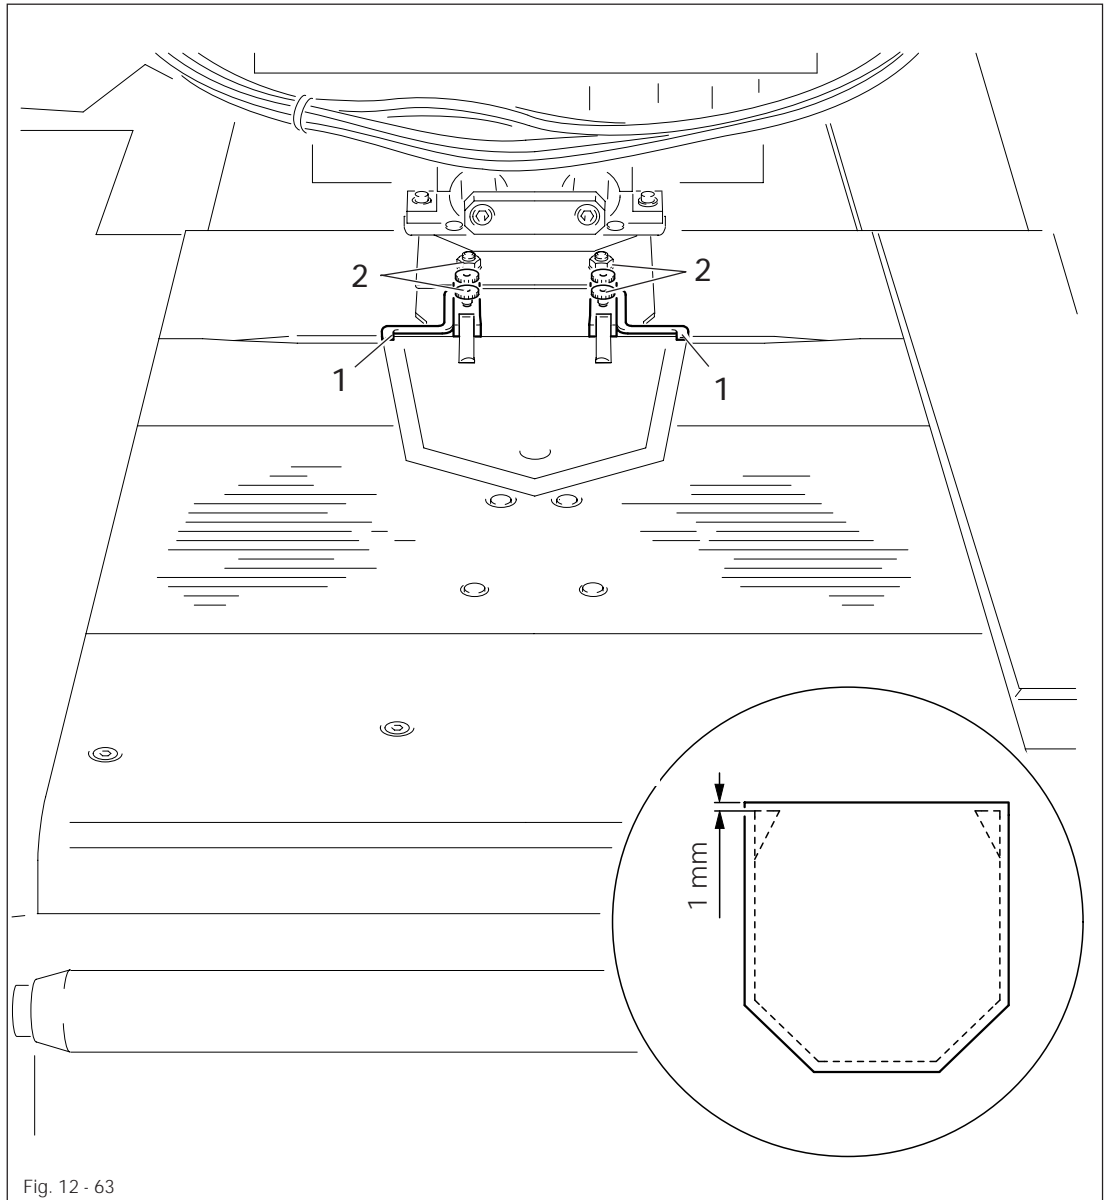The distance between the seam backtack and the pocket opening is to be approx. **1 mm**.



- Adjust stops 1 (screws 2) on the pocket plate according to the requirement.

12.08.25 Stacker

Requirements

1. In its home position, the upper edge of stacker arm 1 should be 385 mm above the work surface.
2. The stacker pins should pass through the centre of the apertures in the work surface.
3. When the stacker is at its lowest position, separators 5 should clear the work surface by 3 mm.


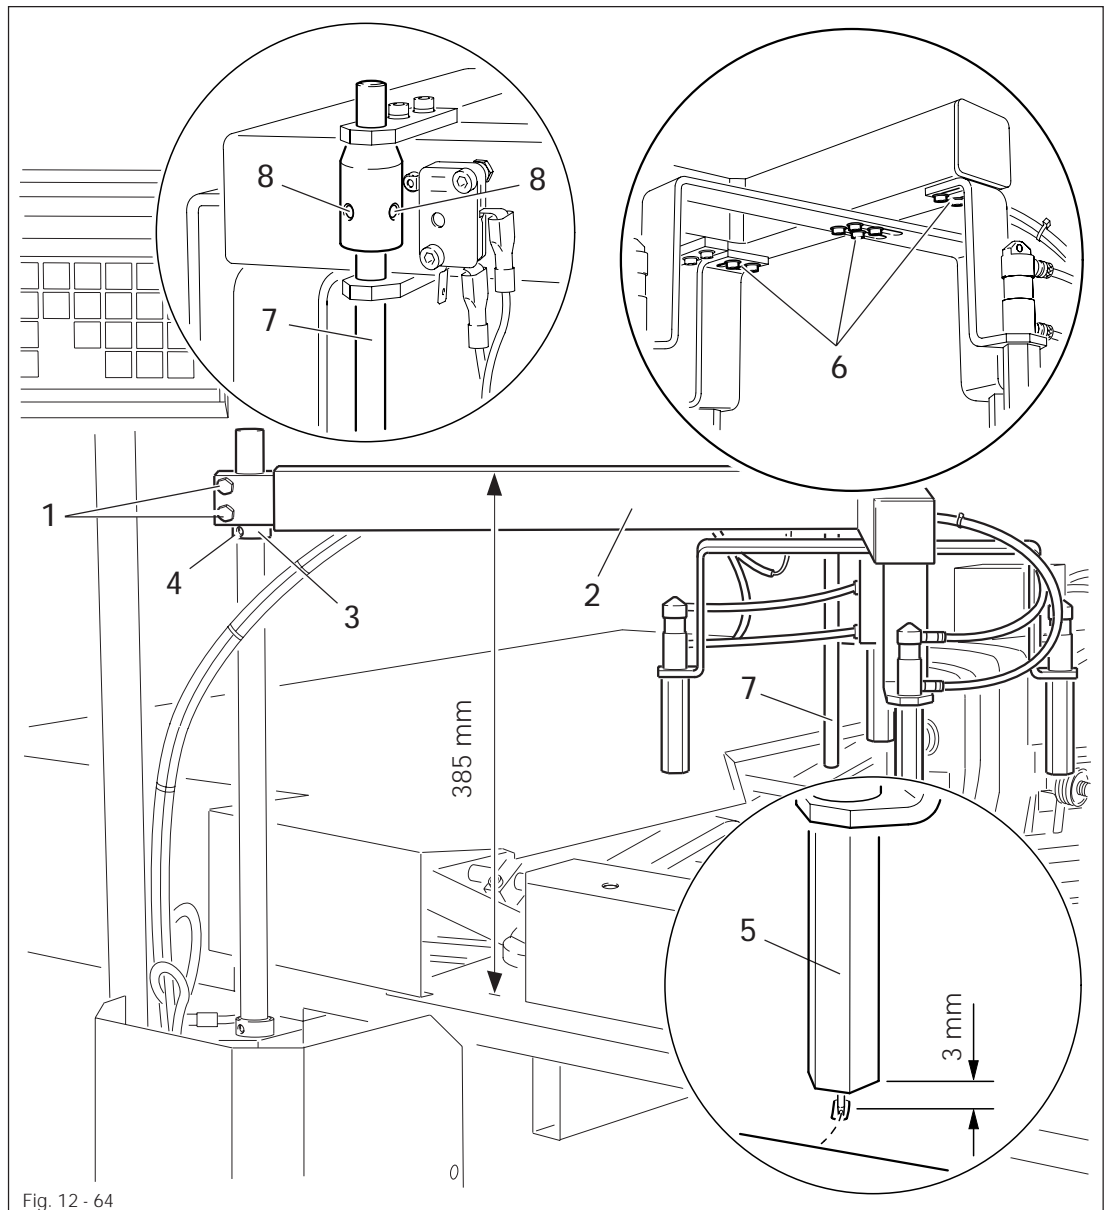


Fig. 12 - 64

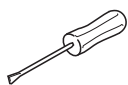

- Loosen screws 1.
- Slide stacker arm 2 together with adjusting ring 3 (screws 4) according to Requirement 1.
- Turn or slide stacker arm 2 and separators 5 (screws 6) according to Requirement 2.
- Tighten screw 1.
- Adjust limit stop 7 (screws 8) according to Requirement 3.

12.08.26 Variable trim assembly



When the variable trim assembly is used, the angle of a seam can be modified, e.g. for size adjustment.

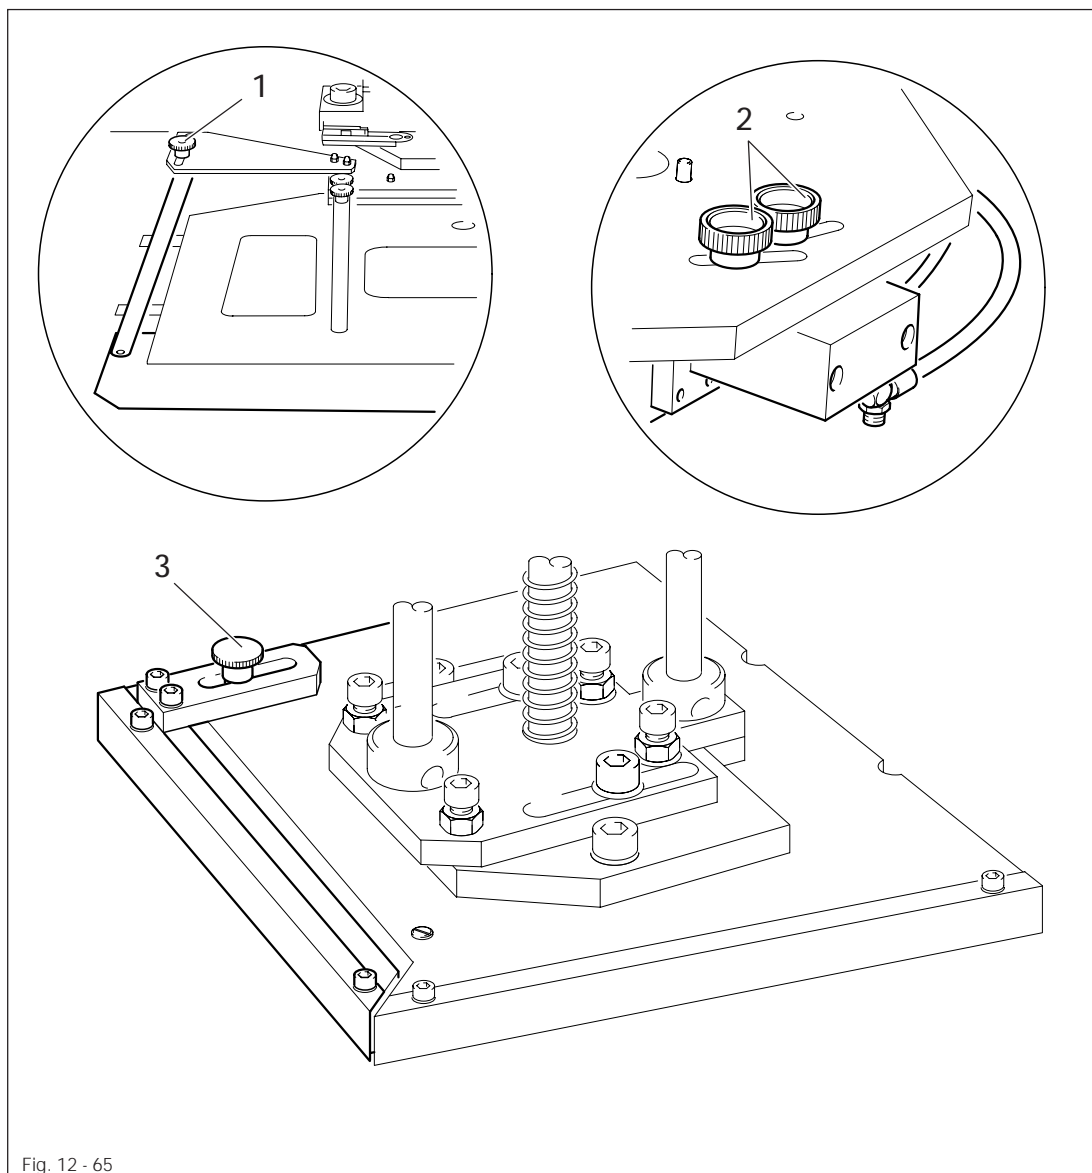


Fig. 12 - 65



The angles on the pocket plate (screw **1**), on the folder plate (screws **2**) and on the die (screw **3**) must have the same setting!

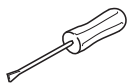
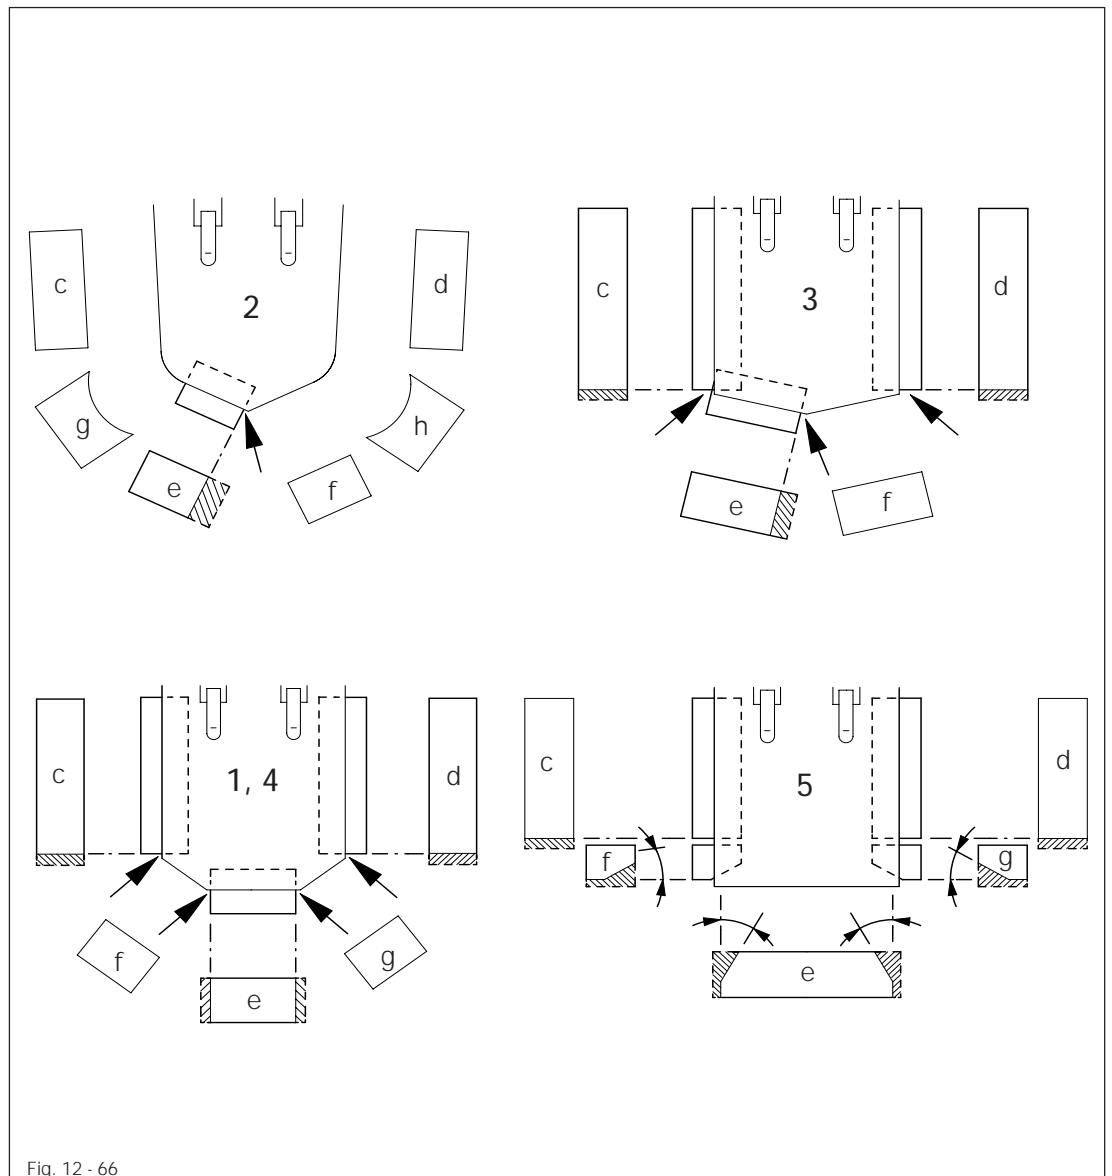
Furthermore, the sewing jig and the seam program must conform with the modified angle!



Serious damage may be caused to the machine if one of the angles on the above-described parts of the assembly is set incorrectly, if an unsuitable sewing jig is used or if the incorrect seam program is entered.

12.09 Shaping folder plates

12.09.01 New installation / self-manufacture of folder plates



- Make and/or install the folder plates according to Fig. 12-66.



When newly installing or making the folder plates, make sure that they lie behind the corners of the pocket plate by at least the amount of the fabric thickness on the marked spots.

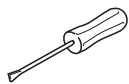
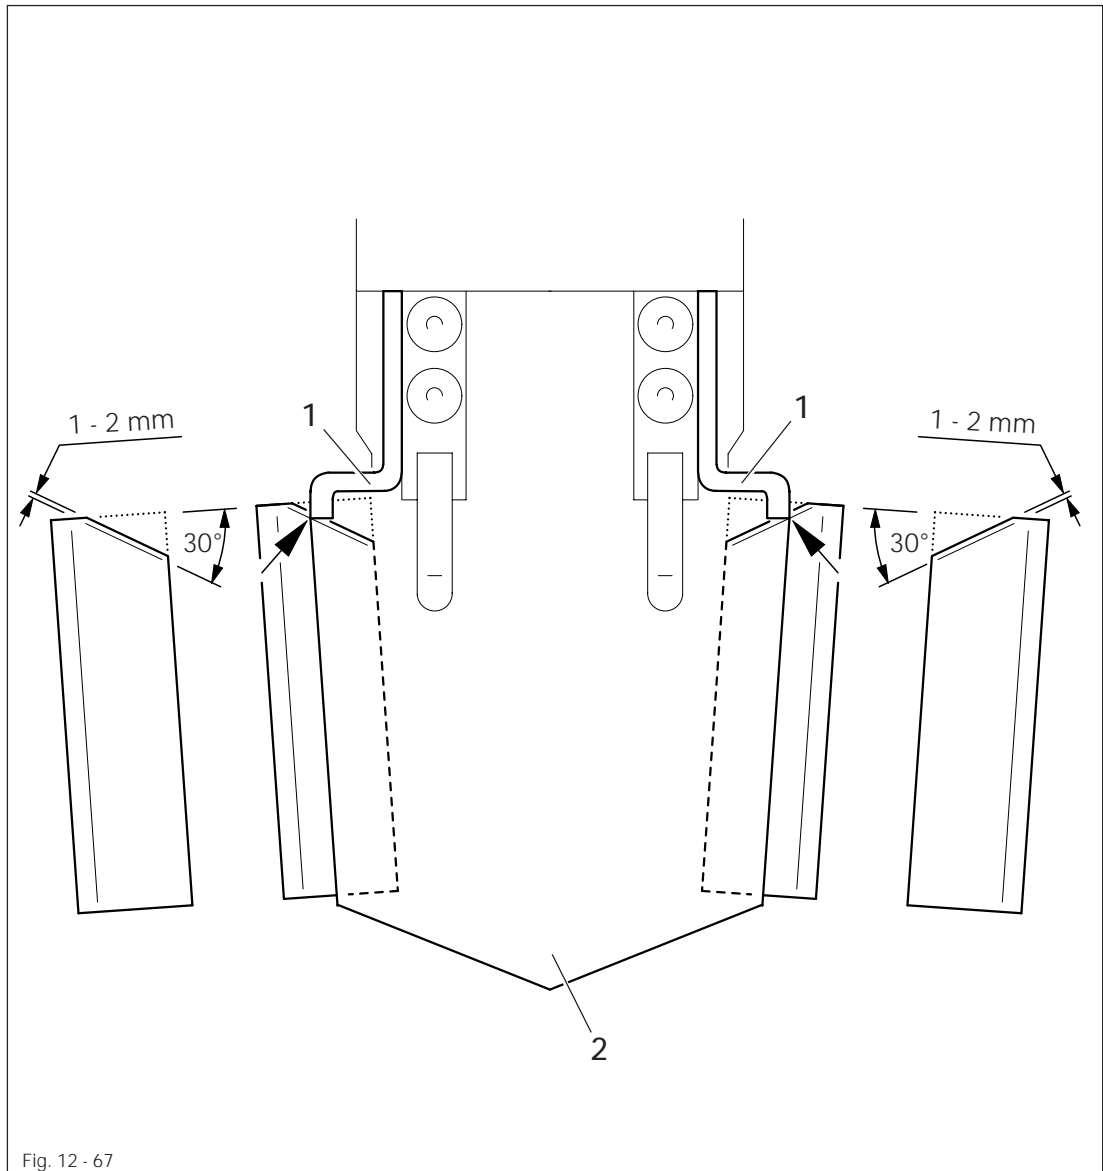


In the case of the fifth pocket style, the folder plates e, f and g must be additionally slanted by 30° .

12.09.02 Slanting the lateral folder plates



Do not begin with this work process until the adjustments in **chapters 12.08.21 through 12.08.24** have been carried out.



- With the folder plates fully extended, transfer the front edges of the pocket stops 1 and the outer edge of the pocket plate 2 to the lateral folder plate.
- Trace slanted edge of 30° .
- Work the folder plate up to 1 - 2 mm before the trace.
- Round off the edges of the folder plate and polish.

13 Control system

13.01 SERVICE Function

The SERVICE function is available on the second menu level (also refer to **chapter 10.01.03 Summary of functions on the 2nd menu level**). After the SERVICE function has been selected, the functions are available as described below. For selecting the SERVICE function see **chapter 10.03.03 Selecting a subfunction from the 2nd menu level**.

1-SEWING MOTOR FUNCTIONS

Several other subfunctions are also available within this subfunction for testing the sewing motor.



When performing these functions, ensure that the needle passes without hindrance through the needle hole.

Locks are not taken into account!

1-OPERATE SEWING MOTOR

This function is used for starting and stopping the sewing motor. Its speed may be preset or adjusted during operation.

2-PRESELECT CUTTING SPEED

This function is used for starting and stopping the sewing motor. Its speed may be preset or adjusted during operation.

3-THREAD TRIMMING SEQUENCE

This function is used for activating the thread trimming cycle.

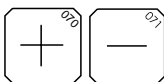
2-STEPPING MOTORS

Several other subfunctions are also available within this function for testing the stepping motors. For this purpose, the stepping motors are operated at a lower, constant frequency.




Before proceeding with these functions, ensure that the carriage is not impeded in its movement.

Locks are not taken into account!



1-STEPPING MOTOR ON X-AXIS

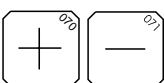The stepping motor on the X-axis can be started. When the **plus button** is depressed, the motor turns in a clockwise direction (observed from the direction of the motor flange).



2-STEPPING MOTOR ON Y-AXIS

The stepping motor on the Y-axis can be started. When the **plus button** is depressed, the motor turns in a clockwise direction (observed from the direction of the motor flange).

Control system

3-INPUT DISPLAY

The status of the inputs of the individual circuit boards is shown from left to right. The order corresponds to the arrangement of the light diodes on the terminal blocks on the rear walls.

In the display: 1 = LED lit (low signal)
0 = LED dark (high signal)

| Terminal | Input card | Input | Input signal |
|----------|------------|-------|----------------------------------|
| 1 | A26 | E1 | presser foot up |
| 2 | | E64 | stacker engaged |
| 3 | | E28.5 | changeover feed off (right) |
| 4 | | E20.2 | pocket plate at front |
| 5 | | E20.1 | pocket plate at rear |
| 6 | | E114 | button program A |
| 7 | | E23.2 | folder down |
| 8 | | E23.1 | folder up |
| 9 | | KIPP | tilt-back sewing head mounted |
| 10 | | E32 | pocket plate 2 up |
| 11 | | E26.2 | jig up |
| 12 | | E26.1 | jig down |
| 13 | | E27.2 | feed at rear (folder station) |
| 14 | | E27.1 | feed at front (sewing station) |
| 15 | | E28.1 | changeover sewing on |
| 16 | | E28.4 | changeover feed on |
| 17 | | E28.2 | changeover sewing off |
| 18 | | E37 | work table up |
| 19 | | E31.2 | feed in front of folder position |
| 20 | | E31.1 | feed in front of sewing position |
| 21 | | E107 | foot switch pocket plate |
| 22 | | E108A | folder start double key |
| 23 | | E108B | folder start double key |
| 24 | | E28.3 | changeover feed off (left) |

| Terminal | Input card | Input | Input signal | |
|----------|----------------|---------|--|----------------------|
| 1 | A27 | E60.2 | stacker down | |
| 2 | | E60.1 | stacker up | |
| 3 | | E23.3 | folder centre | |
| 4 | | E50.1 | sewing head down | |
| 5 | | E51.1 | zero position SM X | |
| 6 | | E50.2 | sewing head up | |
| 7 | | E51.3 | final position SM X | |
| 8 | | E52.1 | zero position SM Y | |
| 9 | | E104 | automatic key | |
| 10 | | E106 | error reset key | |
| 11 | | E111 | single step key | |
| 12 | | E112 | folder home key | |
| 13 | | E98 | safety bar at rear | |
| 14 | | E99 | carriage cover closed | |
| 15 | | E115 | program B key | |
| 16 | | SPGTST | power supply +12V ext. | |
| 17 | | E101 | start key | |
| 18 | | E113 | not sew key | |
| 19 | | E102 | stop key | |
| 20 | | E9 | needle thread monitor | |
| 21 | | E103 | manual key | |
| 22 | | SMOKPR | stepping mot. amplifier a. pressure monitor OK | |
| 23 | | E29.1 | folder at front | |
| 24 | | E29.2 | folder at rear | |
| 1 | A28 (Option) | JIGCODE | JIGCODE BIT 0 0 jig- | |
| 2 | | | JIGCODE BIT 1 monitor | |
| 3 | | | JIGCODE BIT 2 | |
| 4 | | | JIGCODE BIT 3 | |
| 5 | | | JIGCODE BIT 4 | |
| 6 | | | JIGCODE BIT 5 | |
| 7 | | | JIGCODE BIT 6 | |
| 8 | | | JIGCODE BIT 7 | |
| 9 | | | - | free |
| 10 | | | - | free |
| 11 | | | - | free |
| 12 | | | - | free |
| 13 | | | - | free |
| 14 | | | - | free |
| 15 | | | - | free |
| 16 | | | - | free |
| 17 | | | BOBERR | bobbin thread error |
| 18 | | | IN 1 | programmable input 1 |
| 19 | | | - | free |
| 20 | | | - | free |
| 21 | | | - | free |
| 22 | | | - | free |
| 23 | | | JIGCTR | jig monitor mounted |
| 24 | | | - | free |

Control system

4-OUTPUT SWITCHING

After selecting the code number, the corresponding output can be set or reset with the digits „1“ and „0“ respectively.

If an output cannot be set, a corresponding error message will be sent out.

If the code is accompanied by the letter „S“ in the table, the output can only/also be switched via a special function (refer to end of table).

| Terminal | Output card | Output | Output signal | Code No. |
|----------|-------------|--------|--------------------------------------|----------|
| 1 | A22 | Y1 | presser foot down, thread trapper up | 8 |
| 2 | | K2 | thread trimmer on | 9 |
| 3 | | Y3 | needle cooling air on | 10 |
| 4 | | Y20.2 | pocket plate to front | 11 |
| 5 | | Y20.1 | pocket plate to rear | 12 |
| 6 | | Y30 | folder in centre position | 13 |
| 7 | | Y33 | edge folder 1 to front | 14 |
| 8 | | Y34 | edge folder 2 to front | 15 |
| 9 | | Y23.2 | folder down | 16 |
| 10 | | Y23.1 | folder up | 17 |
| 11 | | Y35 | edge folder 3 to front | 18 |
| 12 | | Y36 | edge folder 4 to front | 19 |
| 13 | | Y37 | work table down | 20 |
| 14 | | Y26.2 | jig up | 21 |
| 15 | | Y26.1 | jig down | 22 |
| 16 | | H115 | lamp program B | 23 |
| 17 | | H114 | lamp program A | 0 |
| 18 | | Y28.1 | changeover sew | 1 |
| 19 | | Y28.2 | changeover feed | 2 |
| 20 | | Y29.1 | folder to front | 3 |
| 21 | | Y5 | thread puller on | 4 (S) |
| 22 | | Y31 | pocket plate 1 up | 5 |
| 23 | | Y32 | pocket plate 2 up | 6 |
| 24 | | Y29.2 | folder to rear | 7 |

| Terminal | Output card | Output | Output signal | Code No. |
|----------|-------------|--------|------------------------------------|----------|
| 1 | A23 | Y60 | stacker down | 32 |
| 2 | | Y61 | extend stacker pins | 33 |
| 3 | | K62 | stacker motor on | 34 (S) |
| 4 | | K63 | stacker motor swivel-out direction | 35 (S) |
| 5 | | Y38 | edge folder 5 to front | 36 |
| 6 | | Y50.1 | sewing head down | 37 |
| 7 | | Y50.2 | sewing head up | 38 |
| 8 | | SPWOUT | bobbin change | 39 |
| 9 | | OUT1 | programmable output 1 | 40 |
| 10 | | OUT2 | programmable output 2 | 41 |
| 11 | | Y10 | zigzag on (prog. outp. 3) | 42 |
| 12 | | Y11 | auxiliary thread tension | 43 |
| 13 | | REF | reference output for NIS | 44 |
| 14 | | BOBRES | reset for bobbin thread monitor | 45 |
| 15 | | Y39 | edge folder 6 to front | 46 |
| 16 | | K64 | stacker motor fast run | 47 (S) |
| 17 | A23 | H103 | manual lamp on | 24 |
| 18 | | H104 | automatic lamp on | 25 |
| 19 | | Y6 | lubrication on | 26 |
| 20 | | H106 | reset lamp on | 27 |
| 21 | | STR | feed motor start clockwise | 28 (S) |
| 22 | | STL | feed motor start anti-clockwise | 29 (S) |
| 23 | | S1 | feed motor frequency 1 | 30 (S) |
| 24 | | S2 | feed motor frequency 2 | 31 (S) |

Special functions

| Terminal | Output card | Output | Output signal | Code No. |
|----------|-------------|---------|------------------------------------|----------|
| 21 | A22 | Y5 | thread puller function | 48 |
| | | Y27.1 | feed to front (in sewing position) | 49 |
| | | Y27.2 | feed to rear (in folding position) | 50 |
| | | K62/K63 | engage stacker | 51 |
| | | K62/K63 | disengage stacker position A | 52 |
| | | K62/K63 | disengage stacker position B | 53 |
| | | K62/K63 | swivel stacker out completely | 54 |

5-SET ZERO POSITION

Refer to **Section 8.02.02 Set zero point.**

6-SOFTWARE DATE

The control software manufacture date (CPU) can be displayed.

7-COLD BOOTING

A cold boot up can be performed by selecting this function. All settings and values will be returned to the factory default. All programs will be deleted.

13.02 Error messages

The machine incorporates modules with their own control units. Some of these control units have their own error messages, which are displayed on the machine's control panel (sewing machine side).

13.02.01 Sewing motor

Should an error occur in the course of an operation with the sewing motor, the operation is interrupted and an error message issued. The error message is generated by the motor control unit M-MR-3. The display shows the message „Error sewing motor ()“. The code (number or letter) in brackets assists in error elimination.

| Number | Comments |
|--------|---|
| 1 | time out command sequence |
| 2 | communication error |
| 3 | excess motor temperature |
| 4 | false command |
| 5 | excess amplifier temperature (LD17) |
| 6 | overload current |
| 7 | overvoltage intermediate circuit |
| 8 | error 15V |
| 9 | motor not running - no synchronizer pulses - no power supply LD17 - no rotor position pulses |
| A | synchronizer pulses transposed |

13.02.02 Disk errors

If an error occurs with a disk station during an operation, the operation is interrupted and an error message issued. The error message is generated by the disk station. Some messages are displayed in full, others as numbers. In the latter case, the control panel displays the message „Disk error (No.)“. The number in brackets assists in error elimination.

| Number | Comments |
|--------|--------------------------------------|
| 1 | transmission error serial interface |
| 2 | false command |
| 3 | syntax error |
| 4 | illegal character in data field |
| 5 | |
| 6 | unnamed disk |
| 7 | sector not found |
| 8 | error in file linkage table |
| 9 | sector with incorrect check sum |
| 10 | file not found |
| 11 | write error |
| 12 | disk or file write protected |
| 13 | disk full |
| 14 | disk directory full |
| 15 | overwriting existing file (warning) |
| 16 | drive not ready or no drive selected |
| 17 | disk read error |
| 18 | wrong disk format |
| 19 | formatting error |

13.02.03 Feed motor

In certain cases during an operation with the feed motor a malfunction may occur which is not recognized by the control system. The feed mechanism will not react to the commands of the control system. In this event, the frequency regulator may display an error message in the form of a blinking LED.

The possible blinking signals are listed below:

| H1 (yellow) blinking | Status/ cause | Remedy/ remarks |
|-------------------------------------|--|---|
| once _____ _____ | error in computer system | turn mains supply off, then on again (reset) |
| twice _____ _____ | mains supply off, undervoltage | blinks until undervoltage interm. circuit <65V, automatic reset |
| 3 times _____ _____ | overcurrent cut-out $I > 180\% I_N$ short circuit | check drive/ motor cable |
| 4 times _____ _____ | overvoltage or motor generator side | check mains supply, check drive |
| 5 times _____ _____ | I*t motor switch off | motor overload, check drive |
| 6 times _____ _____ | I*t frequency converter switch off | frequency converter overload, check drive |
| 7 times _____ _____ | excess motor temperature | check bridge X5/10-11, motor overload |
| 8 times _____ _____ | excess frequency converter temperature | frequency converter overload, check installation |
| 9 times _____ _____ | error in EEPROM | turn mains supply off, then on again (reset) |



For further details concerning the frequency converter refer to the operating manual of the same.

13.03 List of locks

The list of locks enables localization of errors caused by incorrectly set or defective transmitters or actuators. It basically distinguishes between two types of error:

Acknowledgement errors

Acknowledgement errors occur when a function is activated by the control system and the anticipated acknowledgement is not received from the transmitter.

Locking errors

Locking errors occur when a function should be activated, but cannot be activated because of the current status of the machine (risk of destruction).

On the basis of the error message in the display, the signals in the list of locks must be checked against the respective functions in the respective columns. To facilitate the tracking of functions and columns, the text numbers in the list of locks are repeated in the lock or acknowledgement columns.

The given status of the LEDs is the desired status.

Examples:

Display: " Y20.1-POCKET PLATE BACK WHEN READY #103 "

In this case, first check whether the function was performed.

- if **yes**: check acknowledgment
- if **no**: check output

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|----------------------------------|---------------------------|----------------------------|-----|--------|-----|-------------|-----|
| Y20.1 ON Pocket plate back | " ...#104 " | | | | | " ...#103 " | |
| | folder up E23.1 | A26/8 | on | A22/5 | on | E20.1 A26/5 | on |
| | pocket plate 2 down Y32 | A22/23 | off | | | E20.2 A26/4 | off |
| | pocket plate 2 not up E32 | A26/10 | on | | | | |
| | switch-over Y20.2 | A22/4 | off | | | | |

Display: „Y20.1-POCKET PLATE BACK LOCK #104“

In this case, check lock.

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|----------------------------------|---------------------------|----------------------------|-----|--------|-----|-------------|-----|
| Y20.1 ON Pocket plate back | " ...#104 " | | | | | " ...#103 " | |
| | folder up E23.1 | A26/8 | on | A22/5 | on | E20.1 A26/5 | on |
| | pocket plate 2 down Y32 | A22/23 | off | | | E20.2 A26/4 | off |
| | pocket plate 2 not up E32 | A26/10 | on | | | | |
| | switch-over Y20.2 | A22/4 | off | | | | |

Control system

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|---------------------------|-------------|---|--|--------|-----|----------|-----|
| Feed | " ...#057 " | Needle upper dead centre sew changeover on E28.1 feed changeover off (left) E28.3 feed changeover off (right) E28.5 jig down E26.1 sewing head down E50.1 presser foot up E1 if stacker is swiveled in E64 or stacker position unknown stacker also up E60.1 | A26/15 on A26/24 off A26/3 off A26/12 on A27/4 on A26/1 on A26/2 on A27/2 on | | | | |
| Sew | " ...#058 " | sew changeover on E28.1 feed changeover off (left) E28.3 feed changeover off (right) E28.5 jig down E26.1 sewing head down E50.1 presser foot down E1 if stacker is engaged E64 or stacker position unknown stacker also up E60.1 | A26/15 on A26/24 off A26/3 off A26/12 on A27/4 on A26/1 off A26/2 on A27/2 on | | | | |
| Run at machine zero point | " ...#060 " | if feed changeover on E28.4 and sew changeover off E28.2 then not locked otherwise needle upper dead centre sew changeover on E28.1 feed changeover off (left) E28.3 feed changeover off (right) E28.5 jig down E26.1 sewing head down E50.1 presser foot up E1 if stacker is engaged E64 or stacker position unknown stacker also up E60.1 | A26/16 off A26/17 on A26/15 on A26/24 off A26/3 off A26/12 on A27/4 on A26/1 on A26/2 on A27/2 on | | | | |
| Step-by-step movement | " ...#064 " | needle outside fabric sew changeover on E28.1 feed changeover off (left) E28.3 feed changeover off (right) E28.5 jig down E26.1 sewing head down E50.1 presser foot down E1 if stacker is engaged E64 or stacker position unknown stacker also up E60.1 | A26/15 on A26/24 off A26/3 off A26/12 on A27/4 on A26/1 off A26/2 on A27/2 on | | | | |

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|--|------|--|------|--------|-----|-------------------------|-----|
| Y1 on presser foot down, thread catcher open | | | | A22/1 | on | " ...#100 " E1 A26/1 | off |
| Y1 off presser foot up, thread catcher closed | | " ...#102 " during seam pattern prog./correction Needle outside fabric | | A22/1 | off | " ...#101 " E1 A26/1 | on |
| K2 on thread trimmer on | | | | A22/2 | on | | |
| K2 off thread trimmer off | | | | A22/2 | off | | |
| Y3 on air blast needle- cooling on | | | | A22/3 | on | | |
| Y3 off air blast needle- cooling off | | | | A22/3 | off | | |
| Y5 on thread puller on | | | | A22/21 | on | | |
| Y5 off thread puller off | | | | A22/21 | off | | |
| Y6 on lubric. on | | | | A23/19 | on | | |
| Y6 off lubric. off | | | | A23/19 | off | | |
| Y10 on zigzag on | | | | A23/11 | on | | |
| Y10 off zigzag off | | | | A23/11 | off | | |
| Y11 on Aux. thread tensioning on | | | | A23/12 | on | | |
| Y11 off Aux. thread tensioning off | | | | A23/12 | off | | |

Control system

| Function | Lock | Plug-in board/terminal No. | LED | Acknowl. LED | Rückmeldung LED |
|---------------------------------------|-------------|---|--|-----------------------|---|
| Y20.1 on pocket plate to rear | " ...#104 " | folder up E23.1 pocket plate 2 down Y32 pocket plate 2 not up E32 switch-over Y20.2 | A26/8 on A22/23 off A26/10 on A22/4 off | A22/5 on | " ...#103 " E20.1 A26/5 on E20.2 A26/4 off |
| Y20.2 on pocket plate to front | " ...#106 " | folder up E23.1 switch-over Y20.1 feed at front E27.1 | A26/8 on A22/5 off A26/14 off | A22/4 on | " ...#105 " E20.1 A26/5 off E20.2 A26/4 on |
| Y23.1/30 folder up | " ...#108 " | switch-over Y23.2 edge folder 1 at rear Y33 edge folder 2 at rear Y34 edge folder 3 at rear Y35 edge folder 4 at rear Y36 edge folder 5 at rear Y38 edge folder 6 at rear Y39 | A22/9 off A22/7 off A22/8 off A22/11 off A22/12 off A23/5 off A23/15 off | A22/10 on A22/6 on | " ...#107 " E23.1 A26/8 on E23.2 A26/7 off E23.3 A27/3 off |
| Y23.2/30 folder down | " ...#110 " | feed at front E27.1 switch-over Y23.1 folder not at rear E29.2 pocket plate 1 down Y31 pocket plate 2 down Y32 pocket plate 2 not up E32 if folder is up E23.1 then also edge folder 1 at rear Y33 edge folder 2 at rear Y34 edge folder 3 at rear Y35 edge folder 4 at rear Y36 edge folder 5 at rear Y38 edge folder 6 at rear Y39 | A26/14 off A22/10 off A27/24 off A22/22 off A22/23 off A26/10 on A26/8 on A22/7 off A22/8 off A22/11 off A22/12 off A23/5 off A23/15 off | A22/9 on A22/6 off | " ...#109 " E23.1 A26/8 off E23.2 A26/7 on E23.3 A27/3 off |
| Y23.2/30 folder in centre position | " ...#112 " | feed at front E27.1 switch-over Y23.1 folder not at rear E29.2 pocket plate 1 down Y31 edge folder 1 at rear Y33 edge folder 2 at rear Y34 edge folder 3 at rear Y35 edge folder 4 at rear Y36 edge folder 5 at rear Y38 edge folder 6 at rear Y39 | A26/14 off A22/10 off A27/24 off A22/22 off A22/7 off A22/8 off A22/11 off A22/12 off A23/5 off A23/15 off | A22/9 on A22/6 on | " ...#111 " E23.1 A26/8 off E23.2 A26/7 off E23.3 A27/3 on |

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|---------------------------|--|---|--|------------------------------|-----|--|--|
| Y26.1 on jig down | "...#115" feed at front E27.1 or feed at rear E27.2 switch-over Y26.2 if feed at front E27.1 sewing head down E50.1 if feed at rear E27.1 and index on feed E28.2 E28.4 and pocket plate at front E20.2 then pocket plate 1 down Y31 pocket plate 2 down Y32 pocket plate 2 not up E32 | A26/14 A26/13 A22/14 A26/14 A27/4 A26/14 A26/17 A26/16 A26/4 A22/22 A22/23 A26/10 | off off off off on on on off on off off on | A22/15 | on | "...#114" E26.1 A26/12 E26.2 A26/11 | on off |
| Y26.2 on jig up | "...#117" index on feed: E28.2 E28.4 E28.4 switch-over Y26.1 carriage in home position if stacker is engaged E64 or stacker position unknown stacker also up E60.1 | A26/17 A26/16 A26/16 A22/15 A26/2 A27/2 | on off off off on on | A22/14 | on | "...#116" E26.1 A26/12 E26.2 A26/11 | off on |
| Y27.1 on feed to front | "...#119" folder up E23.1 sewing head down E50.1 no switch-over Y27.2 if stacker is engaged E64 or stacker position unknown stacker also up E60.1 if index on sew E28.1 E28.3 E28.5 then finished (no further locks) otherwise carriage in home position if jig is not up E26.2 pocket plate not at front E20.2 presser foot up E1 needle upper dead centre | A26/8 A27/4 A23/22 A26/2 A27/2 A26/15 A26/24 A26/3 A26/11 A26/4 A26/1 | on on off on on on off off on off on on off on on off on | motor clockwise A23/21 | on | "...#118" E27.1 A26/14 E27.2 A26/13 if motor ready A23/21 A23/22 A23/23 A23/24 if feed at front sewing position (B31.1) then slow A23/23 A23/24 otherwise fast A23/23 A23/24 | off on off off on off off off off off |

Control system

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|--------------------------------|-------------|--|--|--|-------------|--|-----|
| Y27.2 on feed to rear | " ...#121 " | folder up E23.1 no switch-over Y27.1 if index on sew E28.1 E28.3 E28.5 then pocket plate 1 down Y31 pocket plate 2 down Y32 pocket plate 2 not up E32 or pocket plate at rear E20.1 otherwise jig up E26.2 pocket plate 1 down Y31 pocket plate 2 down Y32 pocket plate 2 not up E32 before feed motor start (motor idle) STL STR then if stacker engaged E64 or stacker position unknown stacker also up E60.1 | A26/8 on A26/25 on A26/24 off A26/3 off A22/22 off A22/23 off A26/10 on A26/5 on A26/11 on A22/22 off A22/23 off A26/10 on A23/22 on A23/21 off A26/2 on A27/2 on | motor anti-clockwise A23/21 off A23/22 on if feed in front of folder position (E31.2) then slow A23/23 off A23/24 on otherwise fast A23/23 on A23/24 on | " ...#120 " | E27.1 A26/14 on E27.2 A26/13 off if motor ready A23/21 off A23/22 off A23/23 on A23/24 off | |
| Y28.1 on changeover sew | " ...#123 " | feed at front E27.1 jig down E26.1 switch-over Y28.2 carriage in home position | A26/14 off A26/12 on A22/19 off | A22/18 on | " ...#122 " | E28.1 A26/15 on E28.2 A26/17 off E28.3 A26/24 off E28.4 A26/16 on E28.5 A26/3 off | |
| Y28.2 on changeover feed | " ...#125 " | feed at front E27.1 jig down E26.1 switch-over Y28.1 carriage in home position | A26/14 off A26/12 on A22/18 off | A22/19 on | " ...#124 " | E28.1 A26/15 off E28.2 A26/17 on E28.3 A26/24 on E28.4 A26/16 off E28.5 A26/3 on | |
| Y29.1 on folder to front | " ...#127 " | folder up E23.1 switch-over Y29.2 | A26/8 on A22/24 off | A22/20 on | " ...#126 " | E29.1 A27/23 on E29.2 A27/24 off | |
| Y29.2 on folder to rear | " ...#129 " | folder up E23.1 switch-over Y29.1 | A26/8 on A22/20 off | A22/24 on | " ...#128 " | E29.1 A27/23 off E29.2 A27/24 on | |
| Y31 on pocket plate up | " ...#130 " | folder up E23.1 if pocket plate not at rear as well as feed at front E27.1 | A26/8 on A26/14 off | A22/22 on | | | |

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|--------------------------------------|-------------|------------------------------------|------------|--------|-----|-------------|---------------|
| Y31 off pocket plate 1 down | | | | A22/22 | off | | |
| Y32 on pocket plate 2 up | " ...#113 " | folder up E23.1 | A26/8 on | A22/23 | on | | |
| | or | folder in centre position E23.3 | A27/3 on | | | | |
| | | pocket plate at front E20.2 | A26/4 on | | | | |
| | | feed at front E27.1 | A26/14 off | | | | |
| Y32 off pocket plate 2 down | | | | A22/23 | off | " ...#149 " | E32 A26/10 on |
| Y33 on edge folder 1 to front | " ...#131 " | if folder up E23.1 | A26/8 on | A22/7 | on | | |
| | or | if folder in centre position E23.3 | A27/3 on | | | | |
| | then | pocket plate 2 to Y32 | A22/23 on | | | | |
| | otherwise | work table not up E37 | A26/18 off | | | | |
| Y33 off edge folder 1 to rear | | | | A22/7 | off | | |
| Y34 on edge folder 2 to front | " ...#132 " | if folder up E23.1 | A26/8 on | A22/8 | on | | |
| | or | if folder in centre position E23.3 | A27/3 on | | | | |
| | then | pocket plate 2 to Y32 | A22/23 on | | | | |
| | otherwise | work table not up E37 | A26/18 off | | | | |
| Y34 off edge folder 2 to rear | | | | A22/8 | off | | |
| Y35 on edge folder 3 to front | " ...#133 " | if folder up E23.1 | A26/8 on | A22/11 | on | | |
| | or | if folder in centre position E23.3 | A27/3 on | | | | |
| | then | pocket plate 2 to Y32 | A22/23 on | | | | |
| | otherwise | work table not up E37 | A26/18 off | | | | |
| Y35 off edge folder 3 top rear | | | | A22/11 | off | | |

Control system

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|-------------------------------------|-------------|--|--|--------|-----|-------------|-----------------------------------|
| Y36 on edge folder 4 to front | " ...#134 " | if folder up E23.1 or folder in centre position E23.3 then pocket plate 2 at Y32 otherwise work table not up E37 | A26/8 on A27/3 on A22/23 on A26/18 off | A22/12 | on | | |
| Y36 off edge folder 4 to rear | | | | A22/12 | off | | |
| Y37 on work table down | | | | A22/13 | on | " ...#141 " | E37 A26/18 off |
| Y37 off work table up | | | | A22/13 | off | " ...#142 " | E37 A26/18 on |
| Y38 on edge folder 5 to front | " ...#135 " | if folder up E23.1 or folder in centre position E23.3 then pocket plate 2 at Y32 otherwise work table not up E37 | A26/8 on A27/3 on A22/23 on A26/18 off | A23/5 | on | | |
| Y38 off edge folder 5 to rear | | | | A23/5 | off | | |
| Y39 on edge folder 6 to front | " ...#140 " | if folder up E23.1 or folder in centre position E23.3 then pocket plate 2 at Y32 otherwise work table not up E37 | A26/8 on A27/3 on A22/23 on A26/18 off | A23/15 | on | | |
| Y39 off edge folder 6 to rear | | | | A23/15 | off | | |
| Y50.1 on sewing head down | " ...#137 " | carriage in home position switch-over Y50.2 | A23/7 off | A23/6 | on | " ...#136 " | E50.1 A27/4 on E50.2 A27/6 off |
| Y50.2 on sewing head up | " ...#139 " | sew in home position feed at rear E27.2 index on feed: E28.2 E28.4 switch-over Y50.1 | A26/13 off A26/17 on A26/16 off A23/6 off | A23/7 | on | " ...#138 " | E50.1 A27/4 off E50.2 A27/6 on |

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|------------------------------------|--|--|--|----------------|-----------|---|-----------|
| Y60 on stacker down | " ...#144 " if stacker engaged E64 then feed not at front E27.1 index on feed E28.2 E28.4 stacker pins drawn in Y61 otherwise stacker position known | A26/2 A26/14 A26/17 A26/16 A23/2 | on on on off off | A23/1 | on | " ...#143 " E60.1 A27/2 E60.2 A27/1 | off on |
| Y60 off stacker up | | | | A23/1 | off | " ...#145 " E60.1 A27/2 E60.2 A27/1 | on off |
| Y61 on extend stacker pins | | | | A23/2 | on | | |
| Y61 Aus draw in stacker pins | | | | A23/2 | off | | |
| K62/63 engage stacker | " ...#146 " stacker arm up E60.1 | A27/2 | on | A23/3 A23/4 | on off | " ...#147 " A26/2 | on |
| K62/63 disengage stacker | " ...#148 " for stacker position A or B stacker engaged E64 stacker not down E60.2 otherwise stacker up E60.1 | A27/2 A26/2 A27/1 A27/2 | on on off on | A23/3 A23/4 | on on | | |
| H103 on manual lamp off | | | | A23/17 | on | | |
| H103 off Manuell Lampe aus | | | | A23/17 | off | | |
| H104 on automatic lamp on | | | | A23/18 | on | | |
| H104 off automatic lamp off | | | | A23/18 | off | | |
| H106 on reset lamp on | | | | A23/20 | on | | |
| H106 off reset lamp off | | | | A23/20 | off | | |
| H114 on lamp off prog. A on | | | | A22/17 | on | | |

Control system

| Function | Lock | Plug-in board/terminal No. | LED | Output | LED | Acknowl. | LED |
|---|------|----------------------------|-----|--------|-----|----------|-----|
| H114 off lamp prog. A off | | | | A22/17 | off | | |
| H115 on lamp prog. B on | | | | A22/16 | on | | |
| H115 off lamp prog. B off | | | | A22/16 | off | | |
| REF on reference output for NIS on | | | | A23/13 | on | | |
| REF off reference output for NIS off | | | | A23/13 | off | | |
| BOBRES on Reset for bobbin thread monitor on | | | | A23/14 | on | | |
| BOBRES off reset for bobbin thread monitor off | | | | A23/14 | off | | |
| BSPWOUT on bobbin change on monitor on | | | | A23/8 | on | | |
| SPWOUT off bobbin change off | | | | A23/8 | off | | |
| OUT1 on prog. output 1 on | | | | A23/9 | on | | |
| OUT1 off prog. output 1 off | | | | A23/9 | off | | |
| OUT2 on prog. output 2 on | | | | A23/10 | on | | |
| OUT2 off prog. output 2 off | | | | A23/10 | off | | |

| | |
|--------|---|
| A1 | mains supply circuit M-NG-5 |
| A3 | CPU M-ZE-9 |
| A4 | motor governor M-MR-3 |
| A5 | pulse generation stepping motors M-SM-3 |
| A6 | input/output card M-EA-2 |
| A7 | input/output card M-EA-2 |
| A8 | input/output card M-EA-2 |
| A20 | mains supply circuit M-NG-2 |
| A22 | photocoupler output M-OA-1 |
| A23 | photocoupler output M-OA-1 |
| A26 | photocoupler input M-OE-1 |
| A27 | photocoupler input M-OE-1 |
| A28 | photocoupler input M-OE-1 |
| A40 | stepping motor amplifiers |
| A60 | frequency converter |
| A70 | label feeder |
| A80 | motor amplifier 10 A |
| M4 | blower |
| M50 | sewing motor |
| M51 | stepping motor X-axis |
| M52 | stepping motor Y-axis |
| M60 | feed motor |
| Z1 | interference filter |
| T2 | transformer marking lamp |
| T3 | transformer marking lamp |
| BOBERR | bobbin thread error |
| BOBRES | reset for bobbin thread monitor |
| E1 | presser foot up |
| E9 | needle thread monitor |
| E20.1 | pocket plate at rear |
| A20.2 | pocket plate at front |
| E23.1 | folder up |
| E23.2 | folder down |


Reference list

| | |
|-------|-----------------------------|
| E23.3 | Folder centre |
| E26.1 | jig down |
| E26.2 | jig up |
| E27.1 | feed at front (sewing pos.) |
| E27.2 | feed at rear (folding pos.) |
| E28.1 | changeover sew on |
| E28.2 | changeover sew off |
| E28.3 | changeover feed off (left) |
| E28.4 | changeover feed on |
| E28.5 | changeover feed on (right) |
| E29.1 | folder at front |
| E29.2 | folder at rear |
| E31.1 | feed in front sewing pos. |
| E31.2 | feed at rear folding pos. |
| E32 | pocket plate 2 up |
| E37 | work table up |
| E50.1 | sewing head down |
| E50.2 | sewing head up |
| E51.1 | zero position SM X |
| E51.3 | final position SM X |
| E52.1 | zero position SM Y |
| E60.1 | stacker up |
| E60.2 | stacker down |
| E64 | stacker engaged |
| E98 | safety bar at rear |
| E99 | carriage cover closed |
| E101 | start button |
| E102 | stop button |
| E103 | manual button |
| E104 | automatic button |
| E106 | error reset button |
| E107 | foot switch pocket plate |
| E108A | double key folder start |
| E108B | double key folder start |
| E111 | single step key |
| E112 | folder home key |
| E113 | not sew key |

| | |
|---------------|--|
| E114 | program A key |
| E115 | program B key |
| H2 | marking lamp |
| H3 | marking lamp |
| H4 | marking lamp |
| H103 | manual lamp on |
| H104 | automatic lamp on |
| H106 | reset lamp on |
| H114 | lamp program A |
| H115 | lamp program B |
| IN 1 | programmable input 1 |
| JIGCODE BIT 0 | jig monitor |
| JIGCODE BIT 1 | jig monitor |
| JIGCODE BIT 2 | jig monitor |
| JIGCODE BIT 3 | jig monitor |
| JIGCODE BIT 4 | jig monitor |
| JIGCODE BIT 5 | jig monitor |
| JIGCODE BIT 6 | jig monitor |
| JIGCODE BIT 7 | jig monitor |
| JIGCTR | jig monitor mounted |
| K2 | thread trimmer on |
| K22 | retaining magnet folder |
| K44 | fabric feed roller |
| K60 | main protection |
| K62 | stacker motor on |
| K63 | stacker motor swivel-out direction |
| K64 | stacker motor fast |
| KIPP | tilt-back sewing head mounted |
| OUT1 | programmable output 1 |
| OUT2 | programmable output 2 |
| REF | reference output for NIS |
| S1 | feed motor frequency 1 |
| S2 | feed motor frequency 2 |
| SMOKPR | Stepping motor amplifier and pressure monitor OK |
| SPGTST | power supply +12V ext. |
| SPWOUT | bobbin change |

Reference list

| | |
|-------|--------------------------------------|
| STL | feed motor start, anti-clockwise |
| STR | feed motor start, clockwise |
| Y1 | presser foot down, thread trapper up |
| Y3 | air blast needle cooling |
| Y5 | thread puller on |
| Y6 | lubrication on |
| Y10 | zigzag on (prog. off 3) |
| Y11 | aux. thread tension |
| Y20.1 | pocket plate to rear |
| Y20.2 | pocket plate to front |
| Y23.1 | folder up |
| Y23.2 | folder down |
| Y26.1 | jig down |
| Y26.2 | jig up |
| Y28.1 | changeover sew |
| Y28.2 | changeover feed |
| Y29.1 | folder to front |
| Y29.2 | folder to rear |
| Y30 | folder centre position |
| Y31 | pocket plate 1 up |
| Y32 | pocket plate 2 up |
| Y33 | edge folder 1 to front |
| Y34 | edge folder 2 to front |
| Y35 | edge folder 3 to front |
| Y36 | edge folder 4 to front |
| Y37 | work table down |
| Y38 | edge folder 5 to front |
| Y39 | edge folder 6 to front |
| Y50.1 | sewing head down |
| Y50.2 | sewing head up |
| Y60 | stacker down |
| Y61 | extend stacker pins |

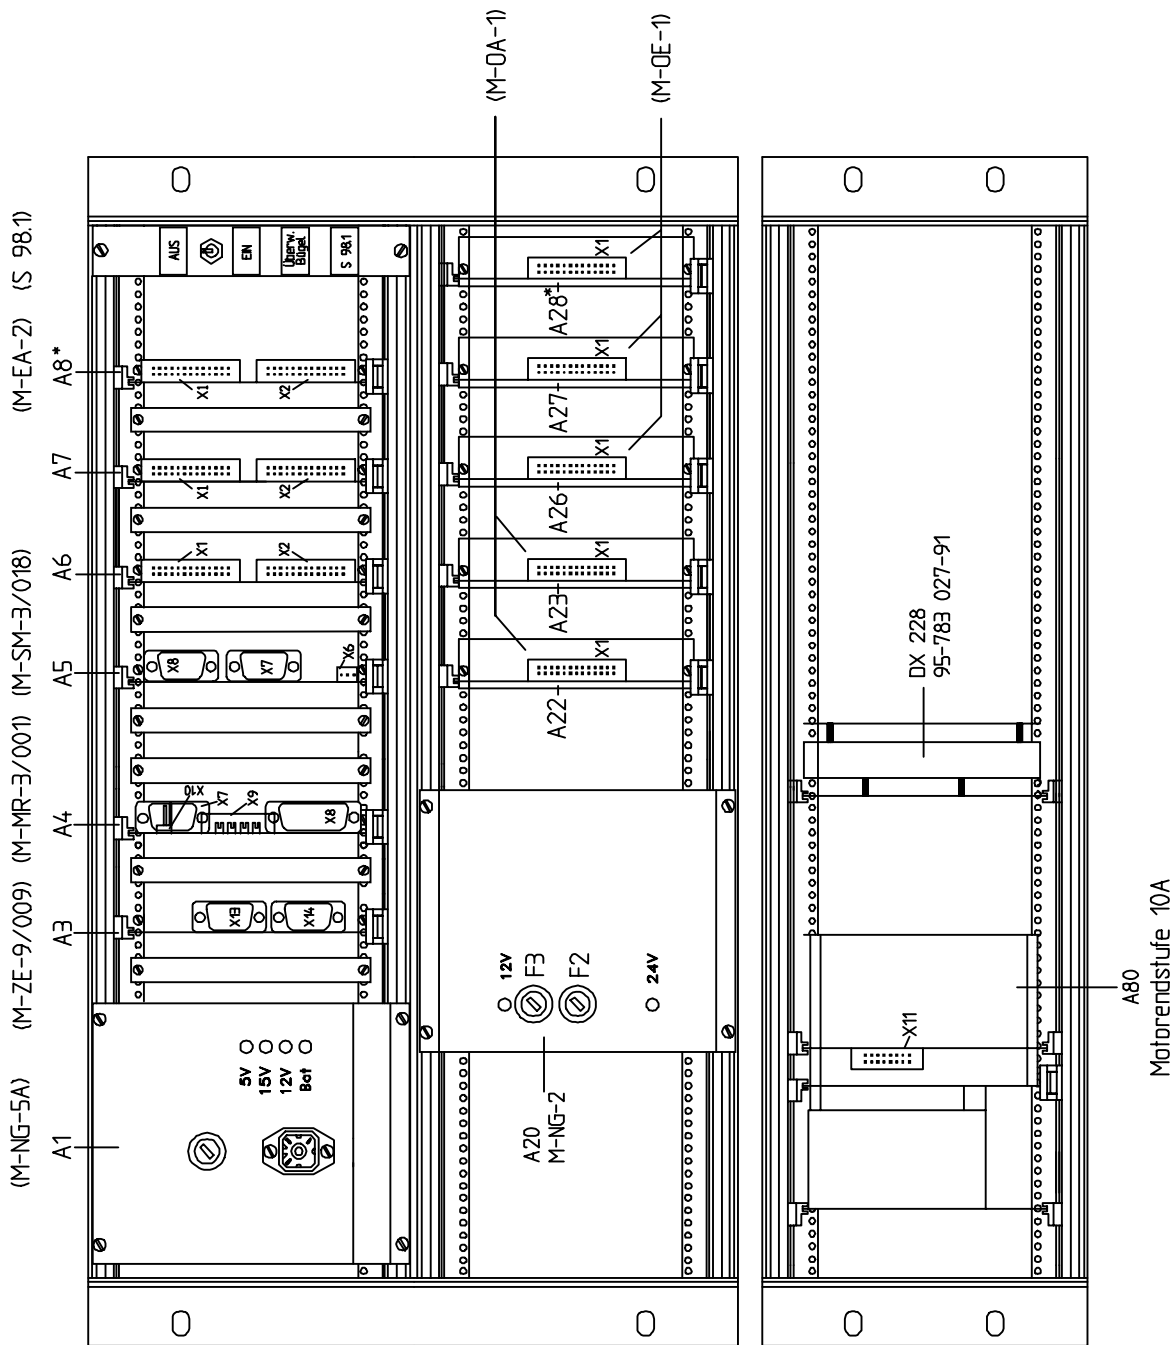



Verkabelung
wiring


| von: from: | nach: to: |
|---------------|-----------------|
| A3/X13 | Programmierfeld |
| A3/X14 | Bedienfeld |
| A4/X8 A/B | Rotorlagegeber |
| | Synchronisator |
| A4/X9 | A80/X11 |
| A4/X10 | A5/X6 |
| A5/X7 | SM Endstufe X |
| A5/X8 | SM Endstufe Y |
| A6/X1 | A23/X1 |
| A6/X2 | A22/X1 |
| A7/X1 | A27/X1 |
| A7/X2 | A26/X1 |
| A8/X1 | A28/X1 |


* A8 M-EA-2 und
A28 M-OA-1 optional
bei Schabloneerkennung


| STECKPL. PIN BOARD | A28 | STECKPL. PIN BOARD | A27 | STECKPL. PIN BOARD | A26 | STECKPL. PIN BOARD | A25 | STECKPL. PIN BOARD | A24 | STECKPL. PIN BOARD | A23 | STECKPL. PIN BOARD | A22 | STECKPL. PIN BOARD | A21 |
|-----------------------|--------|-----------------------|--------|-----------------------|-------|-----------------------|-----|-----------------------|-----|-----------------------|--------|-----------------------|-------|-----------------------|-----|
| 24 | JIGCTR | 24 | E29.2 | 24 | E28.3 | 24 | | 24 | | 24 | S2 | 24 | Y29.2 | 24 | |
| 23 | | 23 | E29.1 | 23 | E108B | 23 | | 23 | | 23 | S1 | 23 | Y32 | 23 | |
| 22 | | 22 | SMOKPR | 22 | E108A | 22 | | 22 | | 22 | STL | 22 | Y31 | 22 | |
| 21 | | 21 | E103 | 21 | E107 | 21 | | 21 | | 21 | STR | 21 | Y5 | 21 | |
| 20 | | 20 | E9 | 20 | E31.1 | 20 | | 20 | | 20 | H106 | 20 | Y29.1 | 20 | |
| 19 | | 19 | E102 | 19 | E31.2 | 19 | | 19 | | 19 | Y6 | 19 | Y28.2 | 19 | |
| 18 | | 18 | E113 | 18 | E37 | 18 | | 18 | | 18 | H104 | 18 | Y28.1 | 18 | |
| 17 | | 17 | E101 | 17 | E28.2 | 17 | | 17 | | 17 | H103 | 17 | H114 | 17 | |
| 16 | | 16 | SPGTST | 16 | E28.4 | 16 | | 16 | | 16 | K64 | 16 | H115 | 16 | |
| 15 | | 15 | E115 | 15 | E28.1 | 15 | | 15 | | 15 | Y39 | 15 | Y26.1 | 15 | |
| 14 | | 14 | E99 | 14 | E27.1 | 14 | | 14 | | 14 | BOBRES | 14 | Y26.2 | 14 | |
| 13 | | 13 | E98 | 13 | E27.2 | 13 | | 13 | | 13 | REF | 13 | Y37 | 13 | |
| 12 | | 12 | E112 | 12 | E26.1 | 12 | | 12 | | 12 | Y11 | 12 | Y36 | 12 | |
| 11 | | 11 | E111 | 11 | E26.2 | 11 | | 11 | | 11 | Y10 | 11 | Y35 | 11 | |
| 10 | | 10 | E106 | 10 | E32 | 10 | | 10 | | 10 | OUT2 | 10 | Y23.1 | 10 | |
| 9 | | 9 | E104 | 9 | K1PP | 9 | | 9 | | 9 | OUT1 | 9 | Y23.2 | 9 | |
| 8 | | 8 | E52.1 | 8 | E23.1 | 8 | | 8 | | 8 | SPWOUT | 8 | Y34 | 8 | |
| 7 | | 7 | E51.3 | 7 | E23.2 | 7 | | 7 | | 7 | Y50.2 | 7 | Y33 | 7 | |
| 6 | | 6 | E50.2 | 6 | E114 | 6 | | 6 | | 6 | Y50.1 | 6 | Y30 | 6 | |
| 5 | | 5 | E51.1 | 5 | E20.1 | 5 | | 5 | | 5 | Y38 | 5 | Y20.1 | 5 | |
| 4 | | 4 | E50.1 | 4 | E20.2 | 4 | | 4 | | 4 | K63 | 4 | Y20.2 | 4 | |
| 3 | | 3 | E23.3 | 3 | E28.5 | 3 | | 3 | | 3 | K62 | 3 | Y3 | 3 | |
| 2 | | 2 | E60.1 | 2 | E64 | 2 | | 2 | | 2 | Y61 | 2 | K2 | 2 | |
| 1 | | 1 | E60.2 | 1 | E1 | 1 | | 1 | | 1 | Y60 | 1 | Y1 | 1 | |

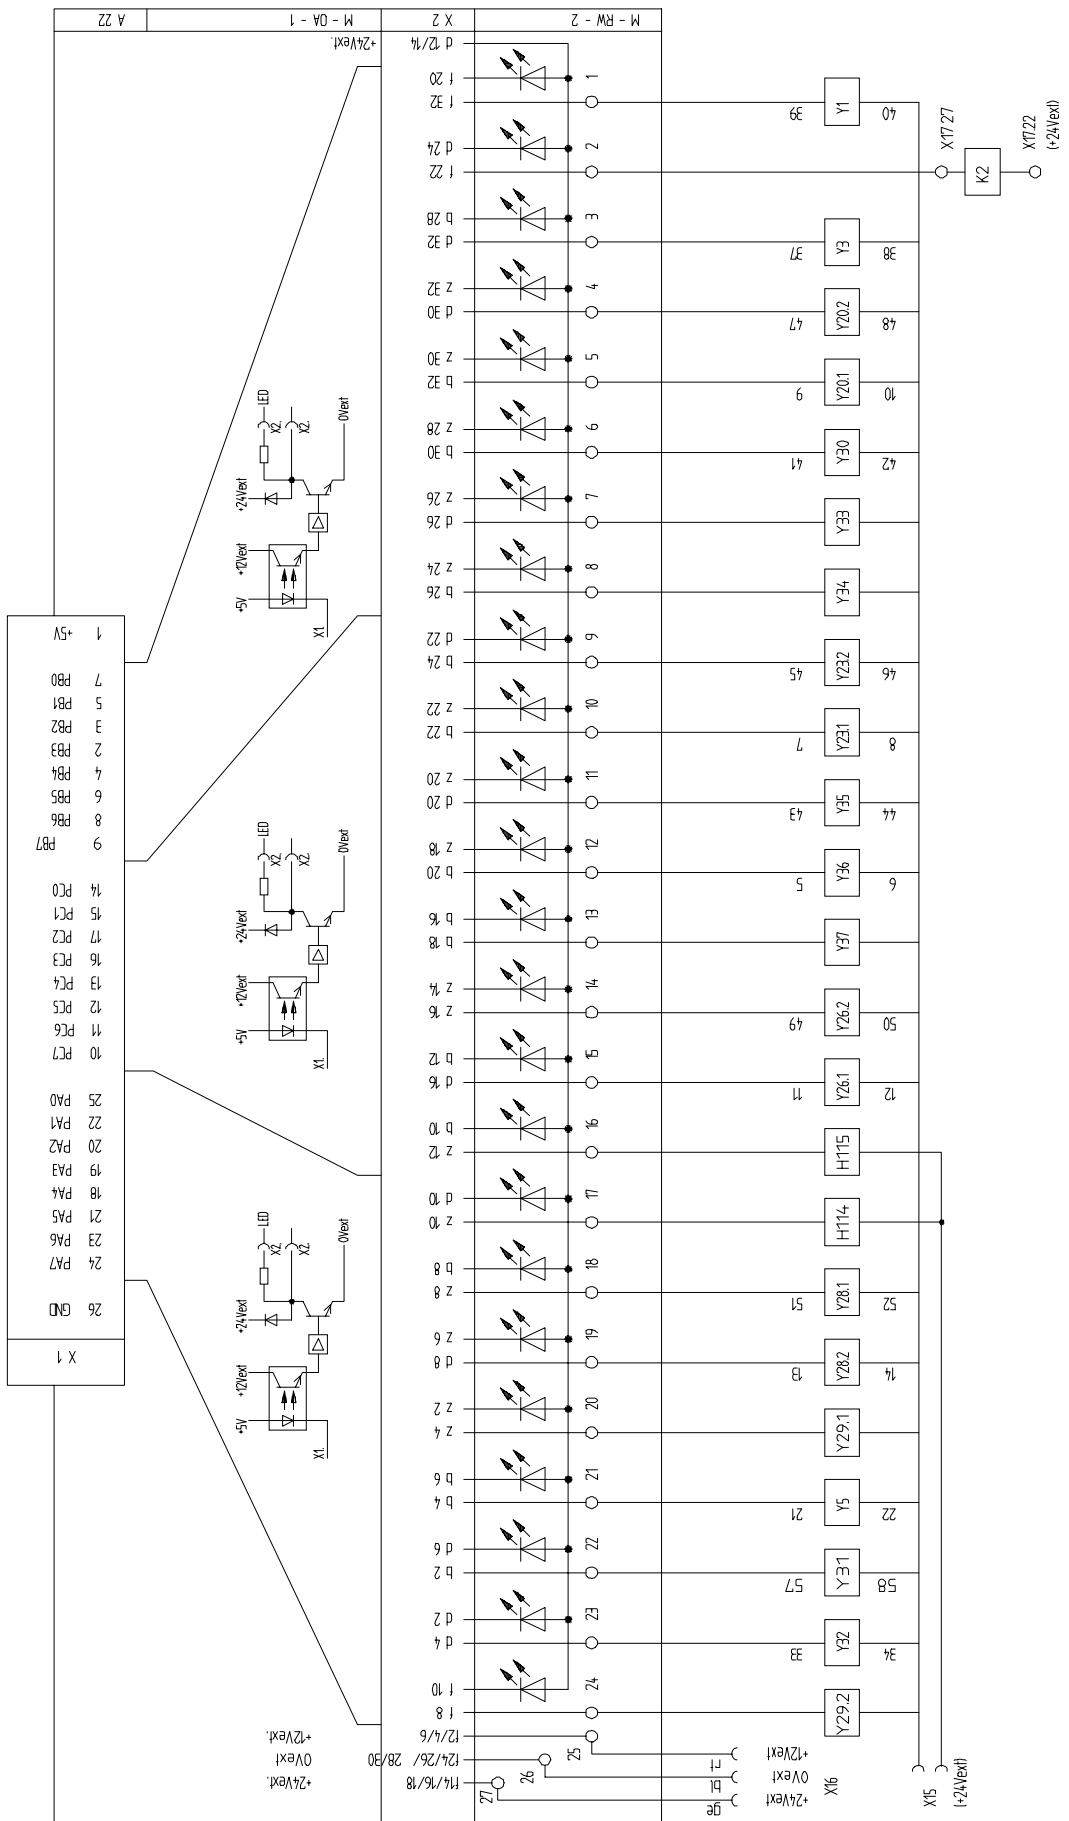


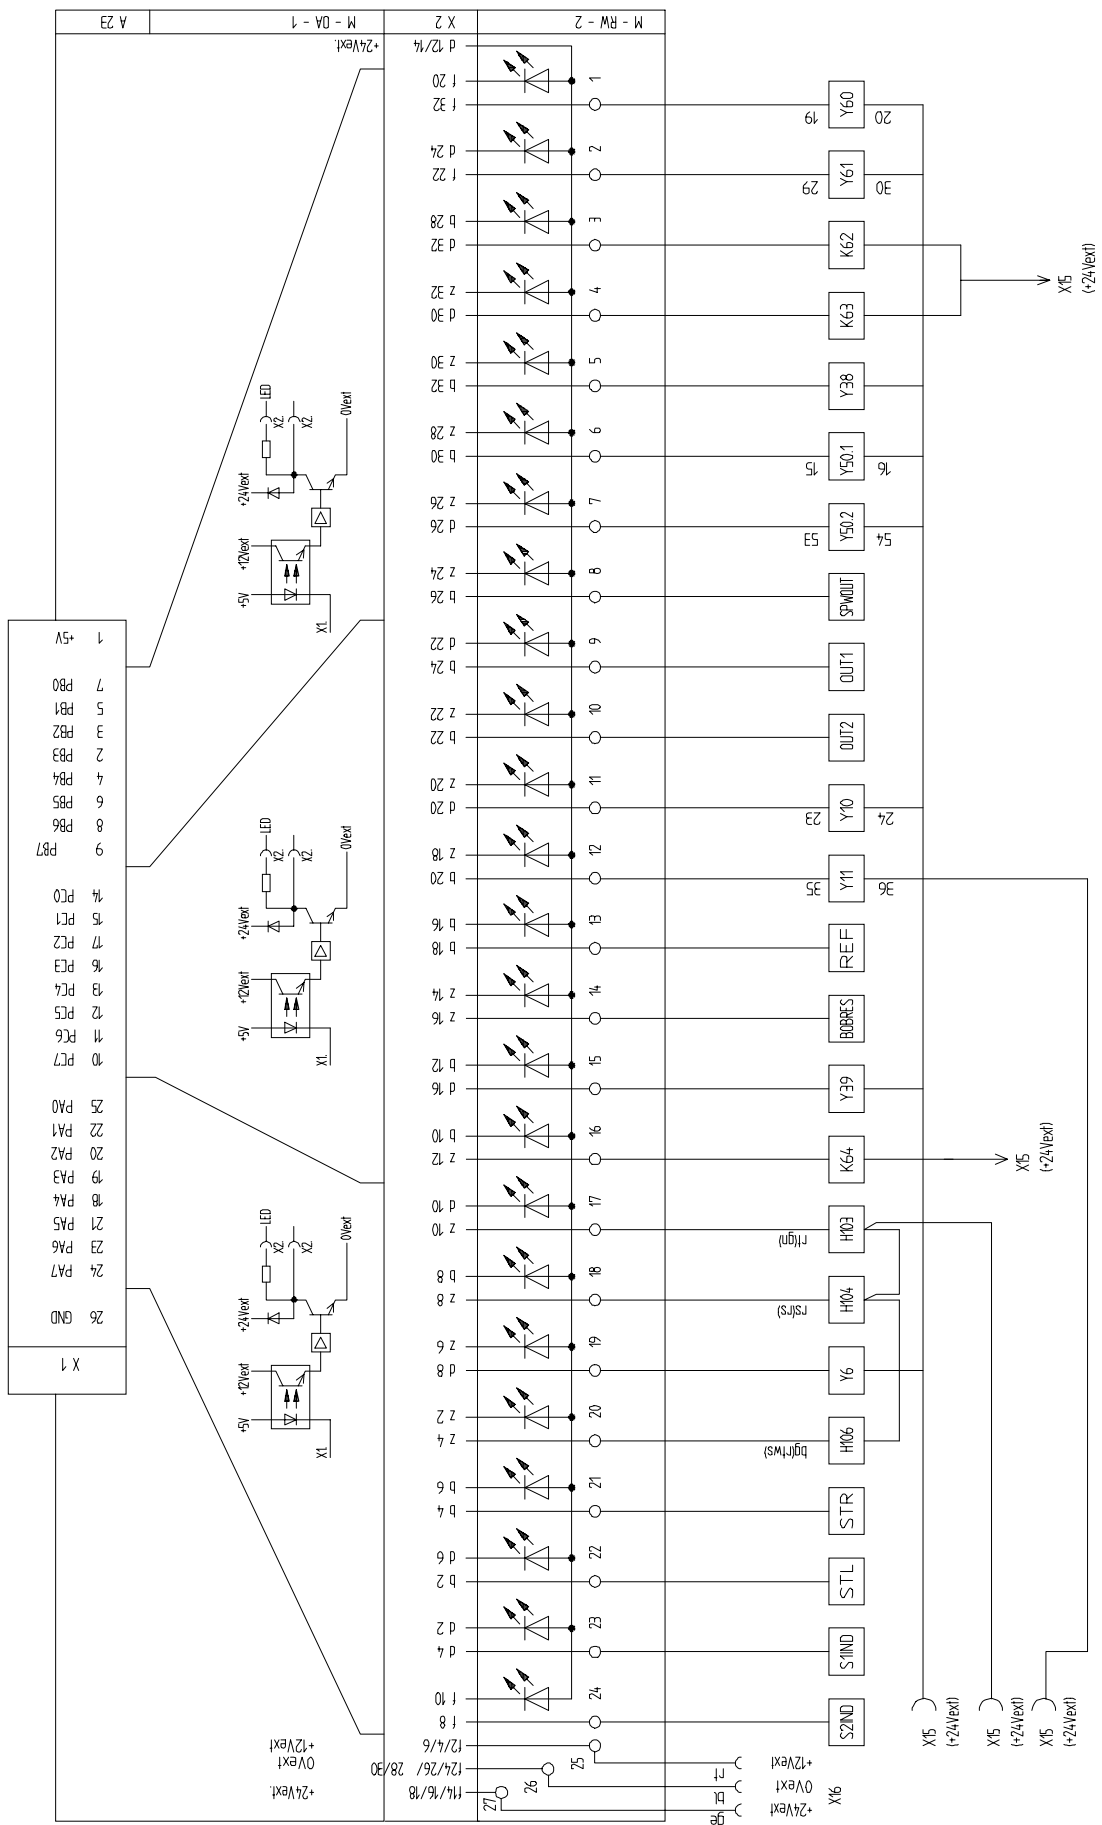


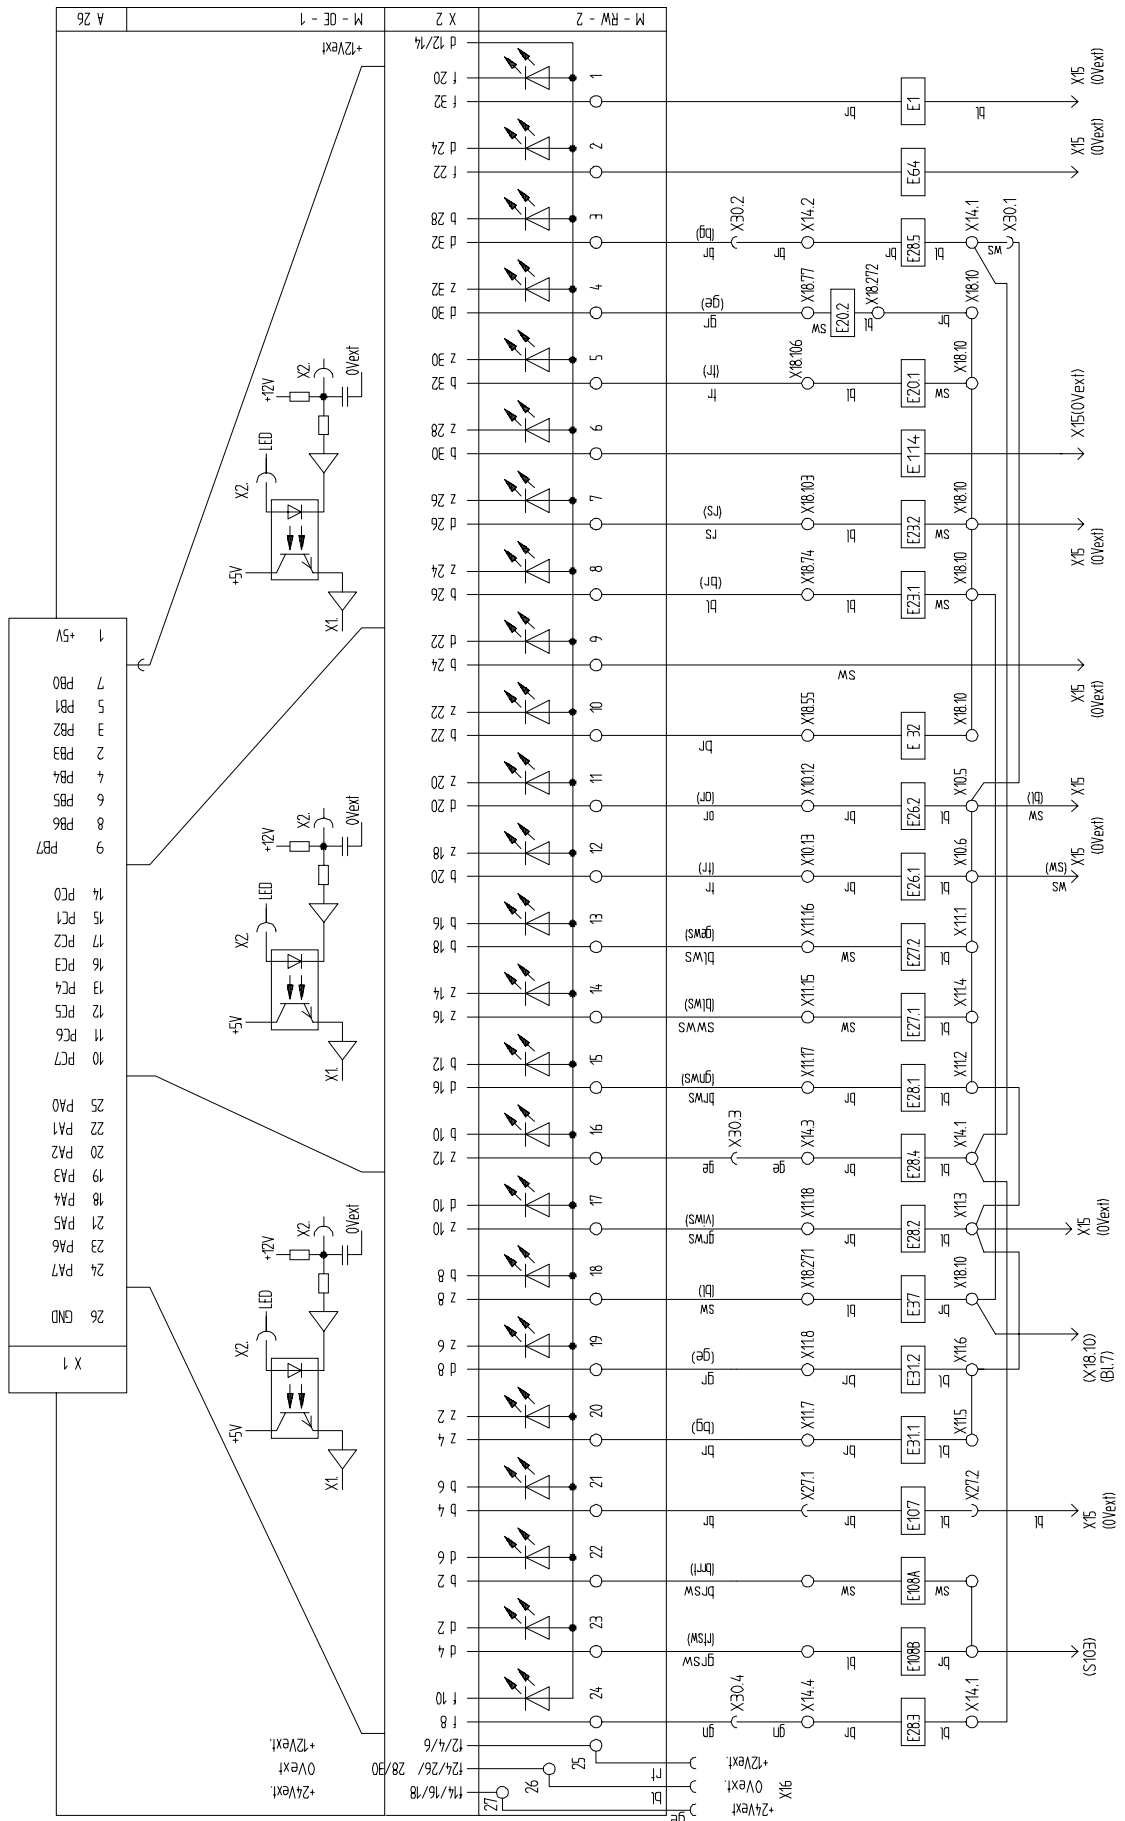


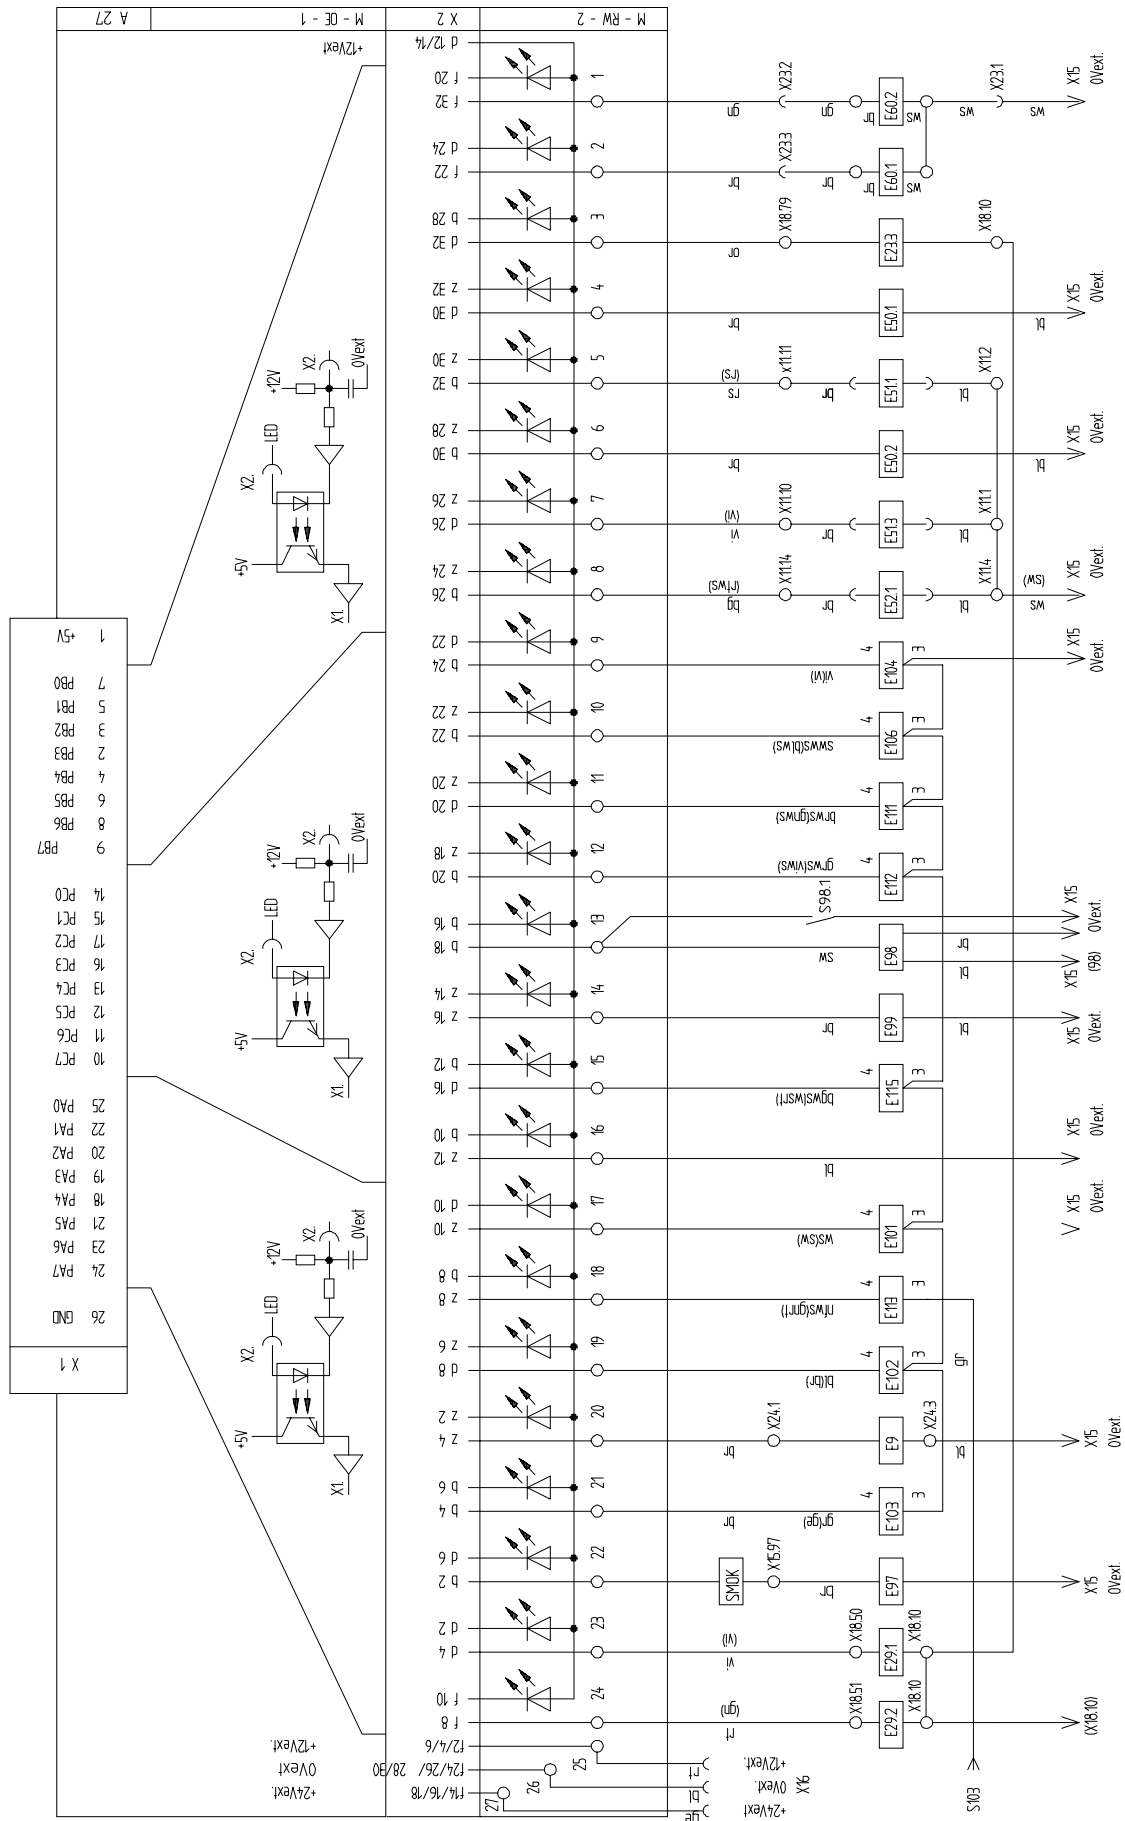


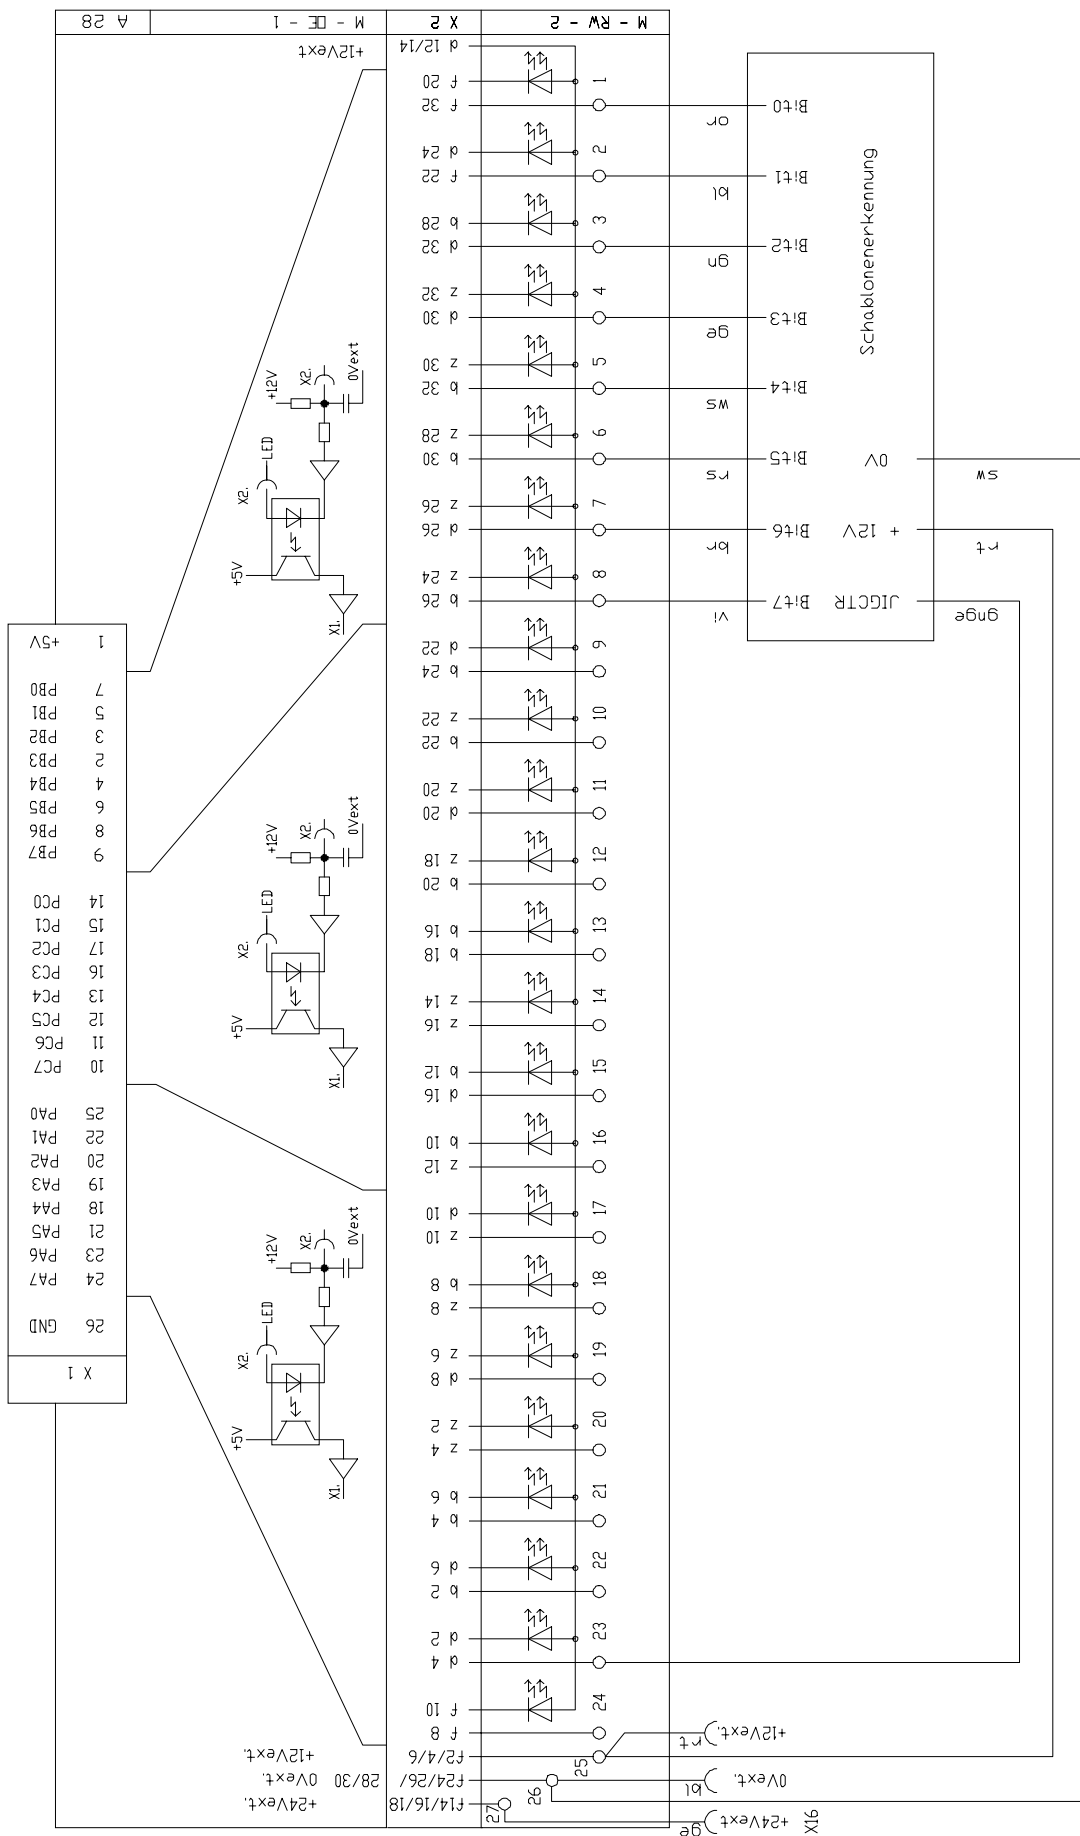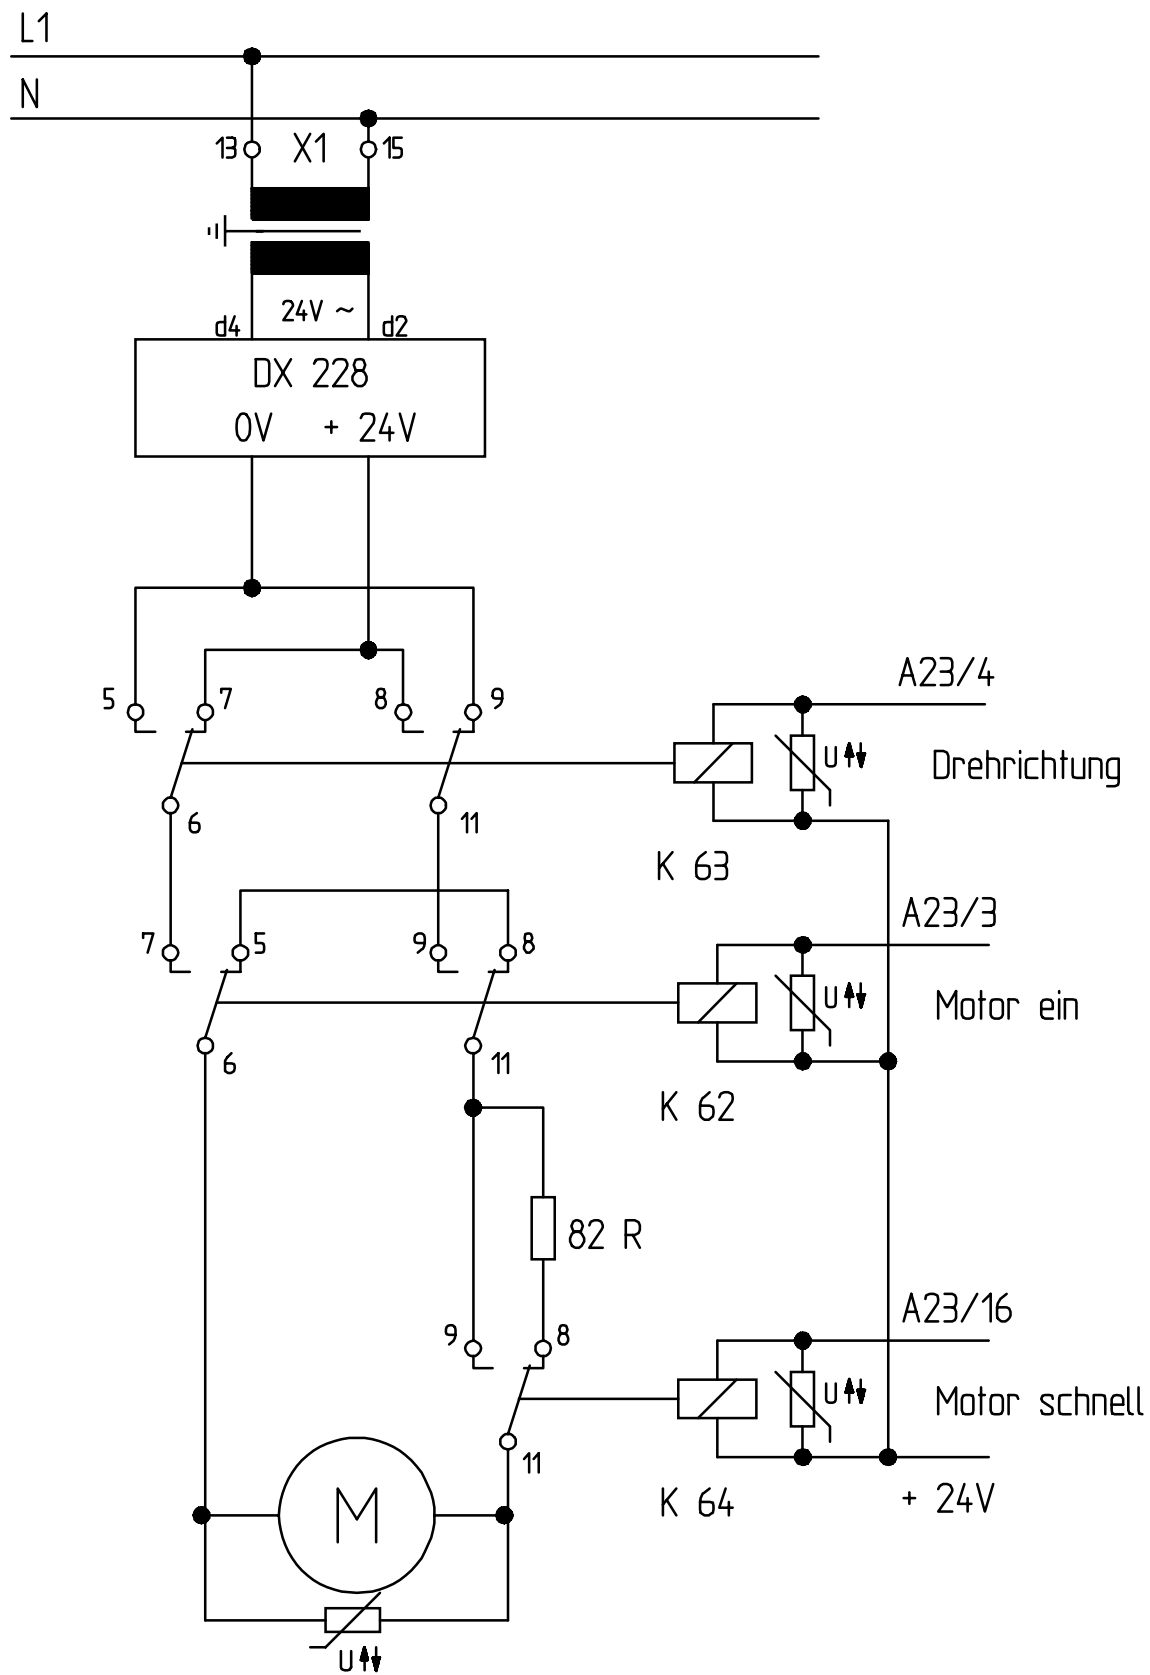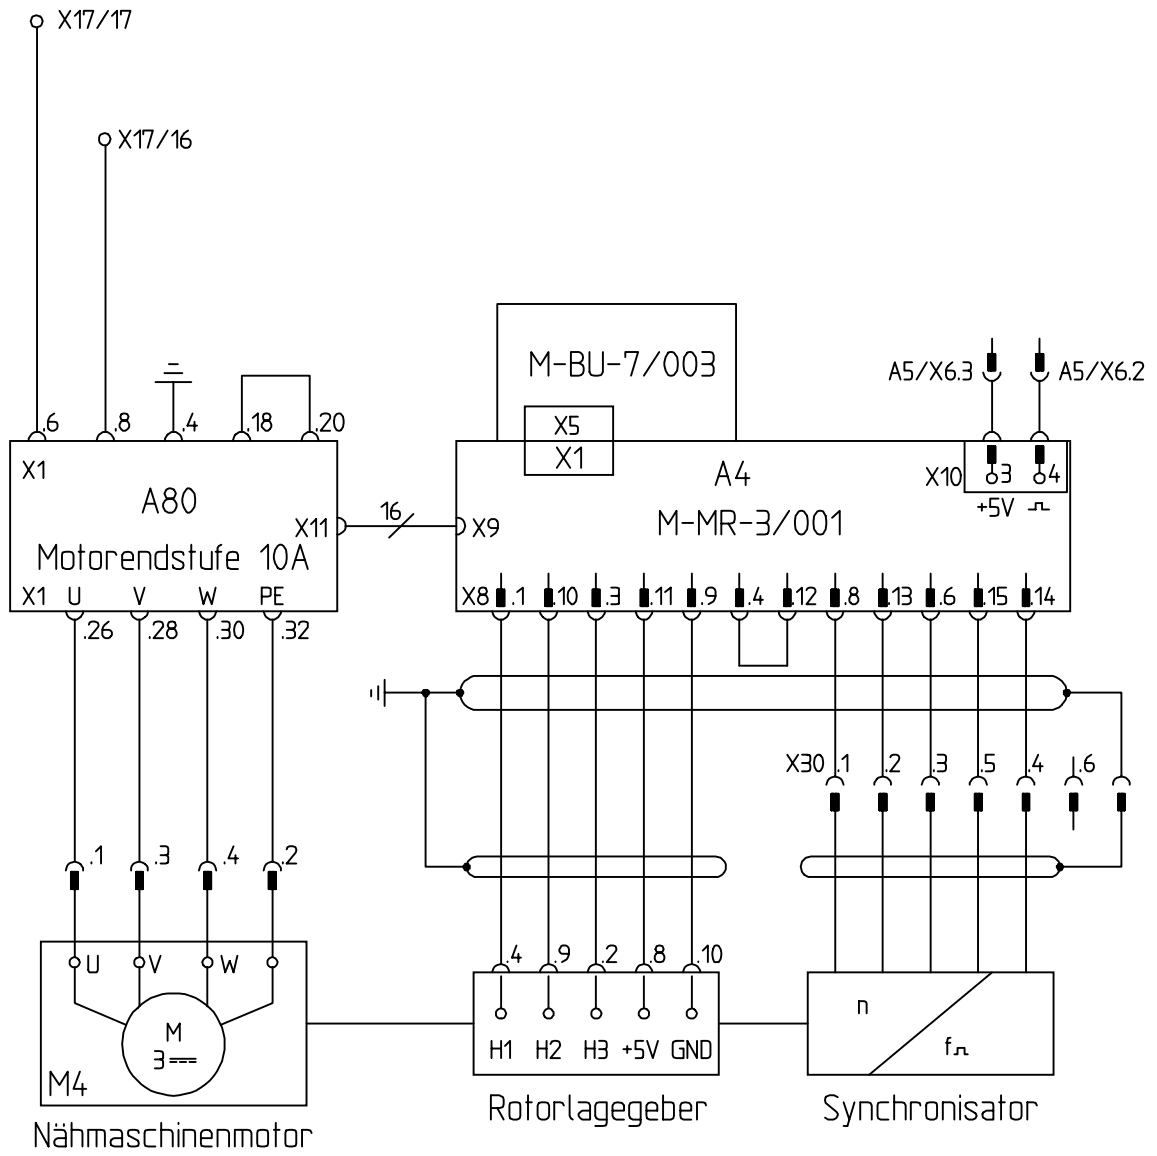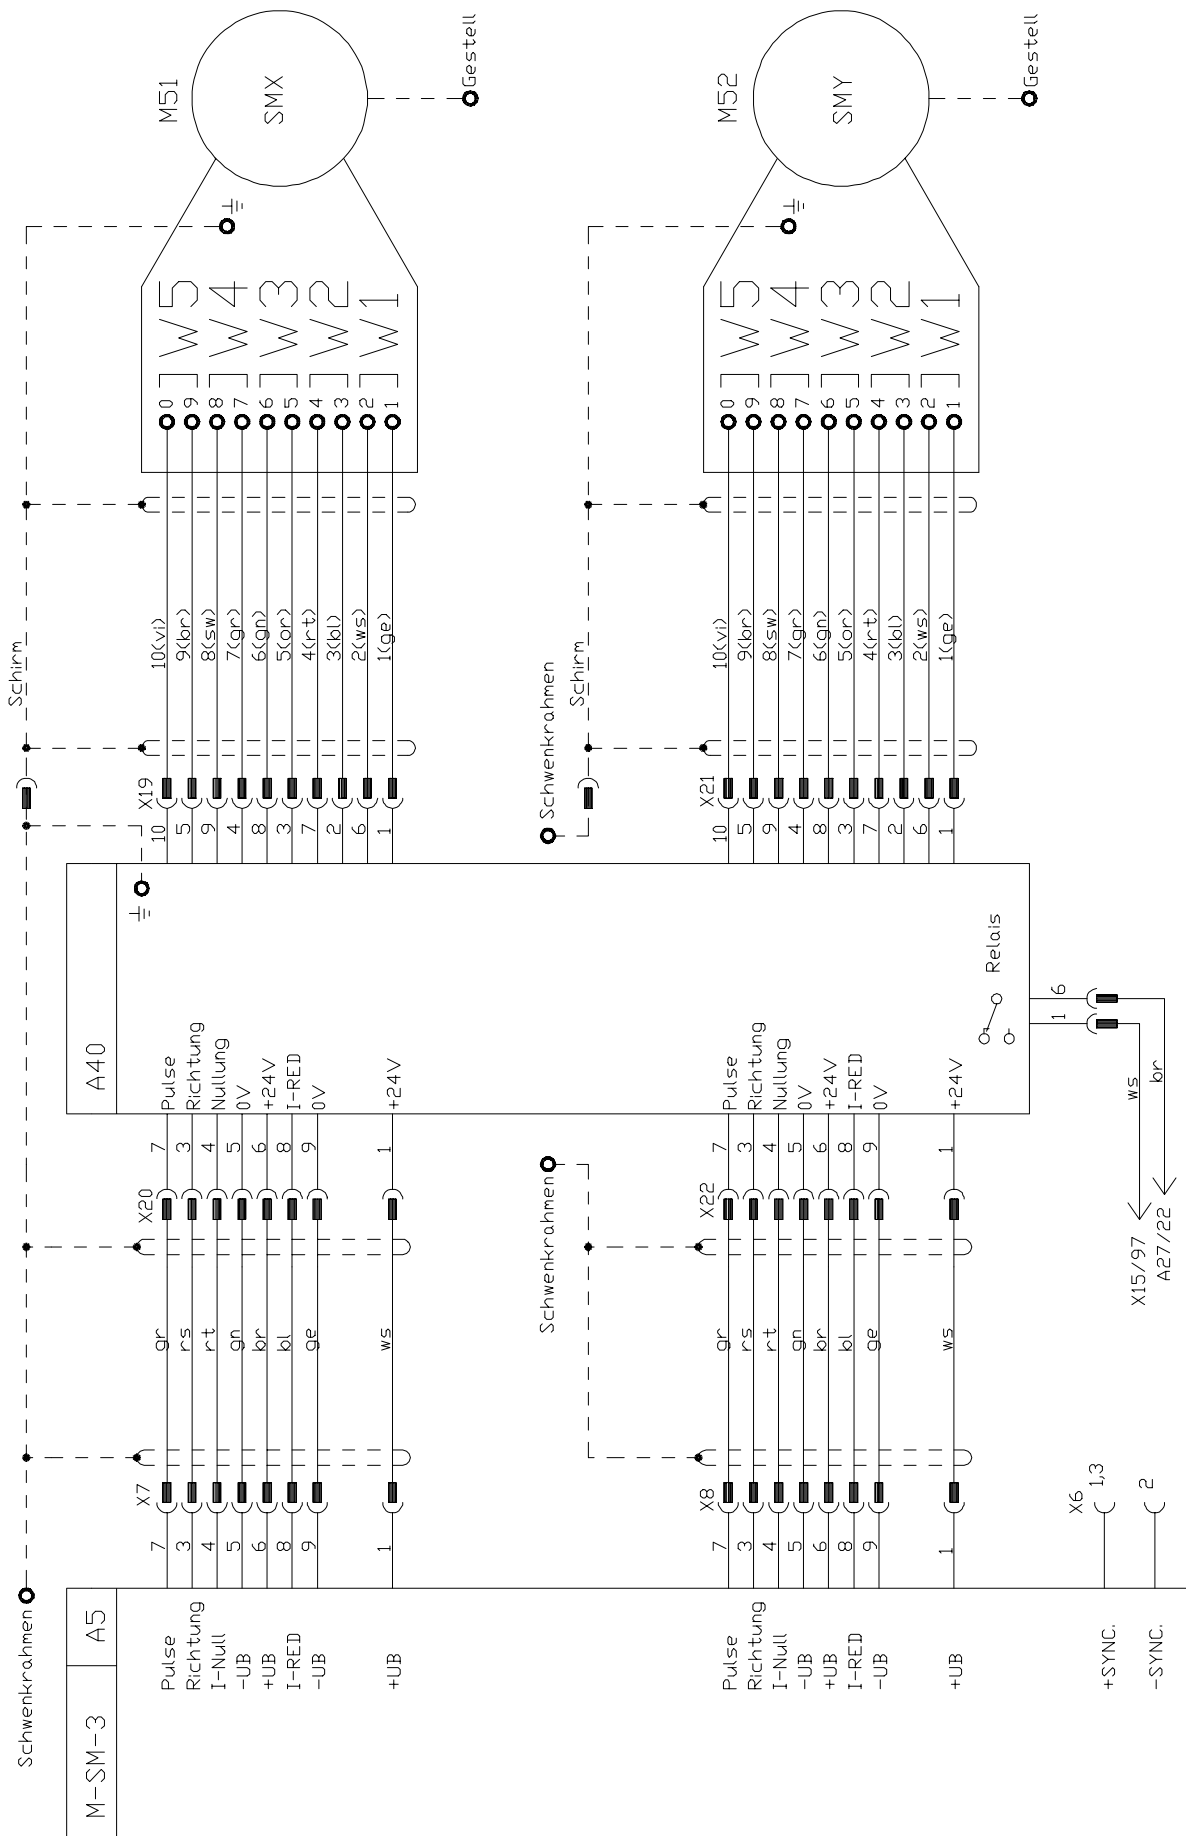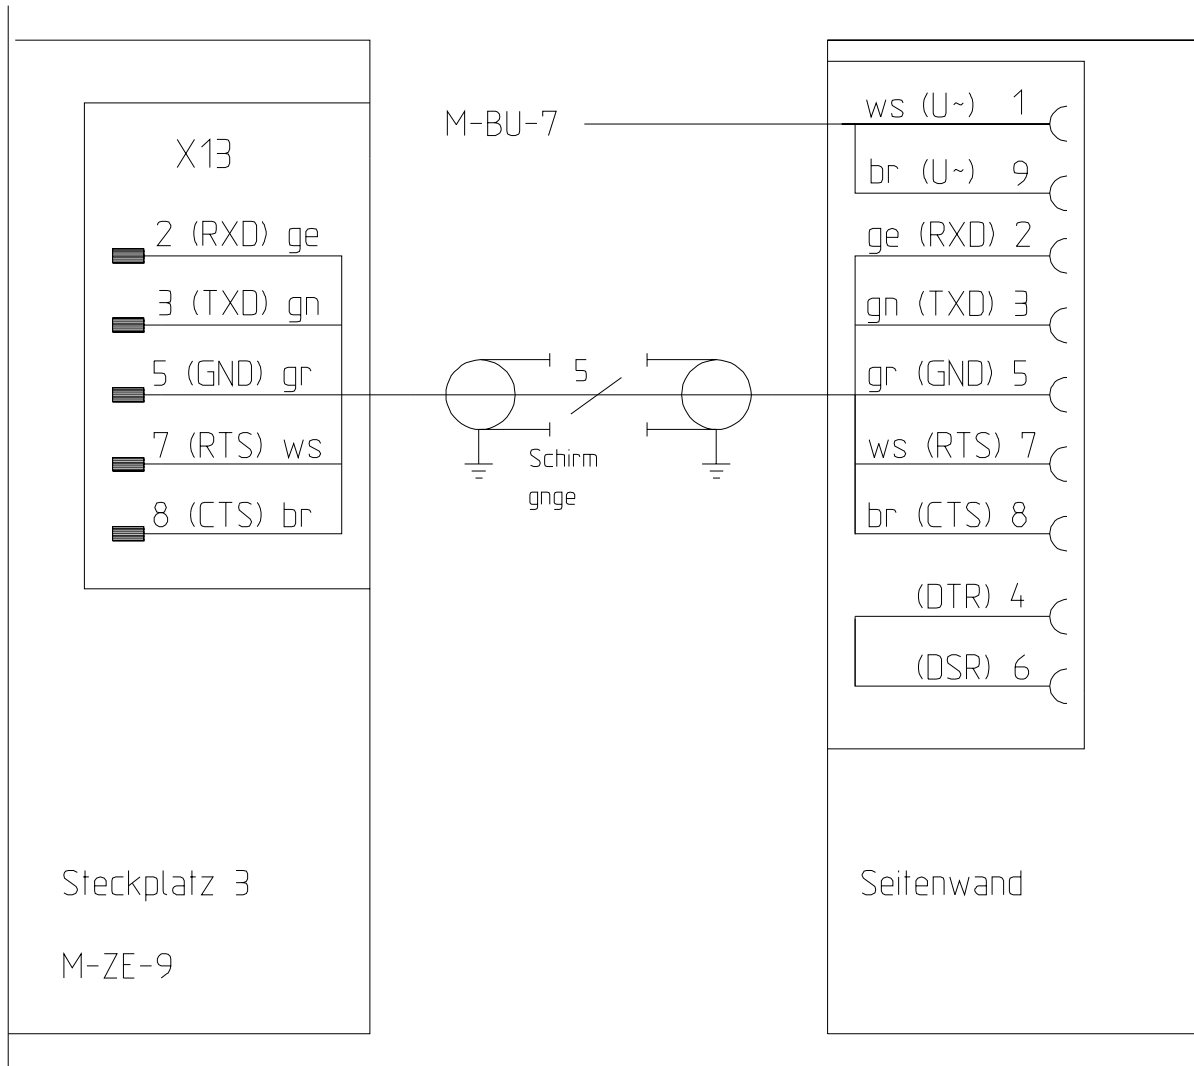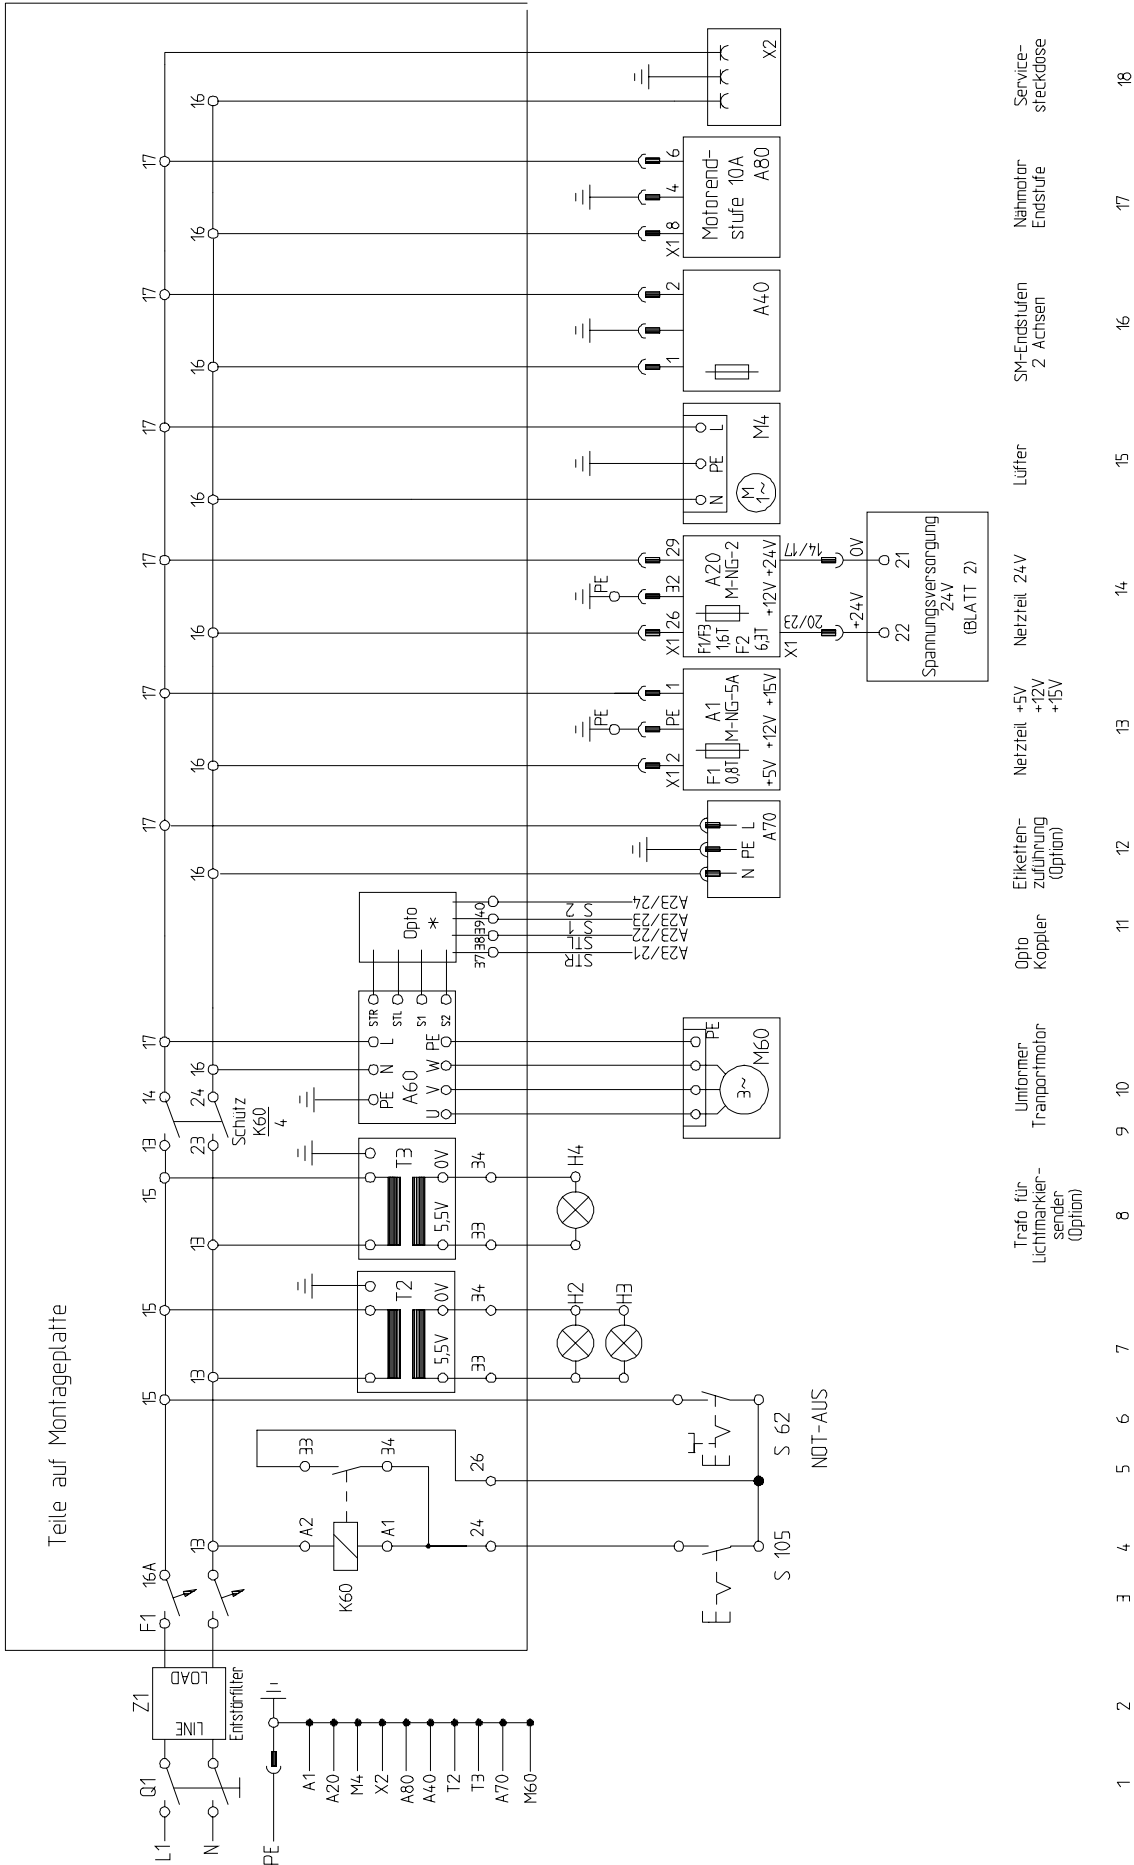














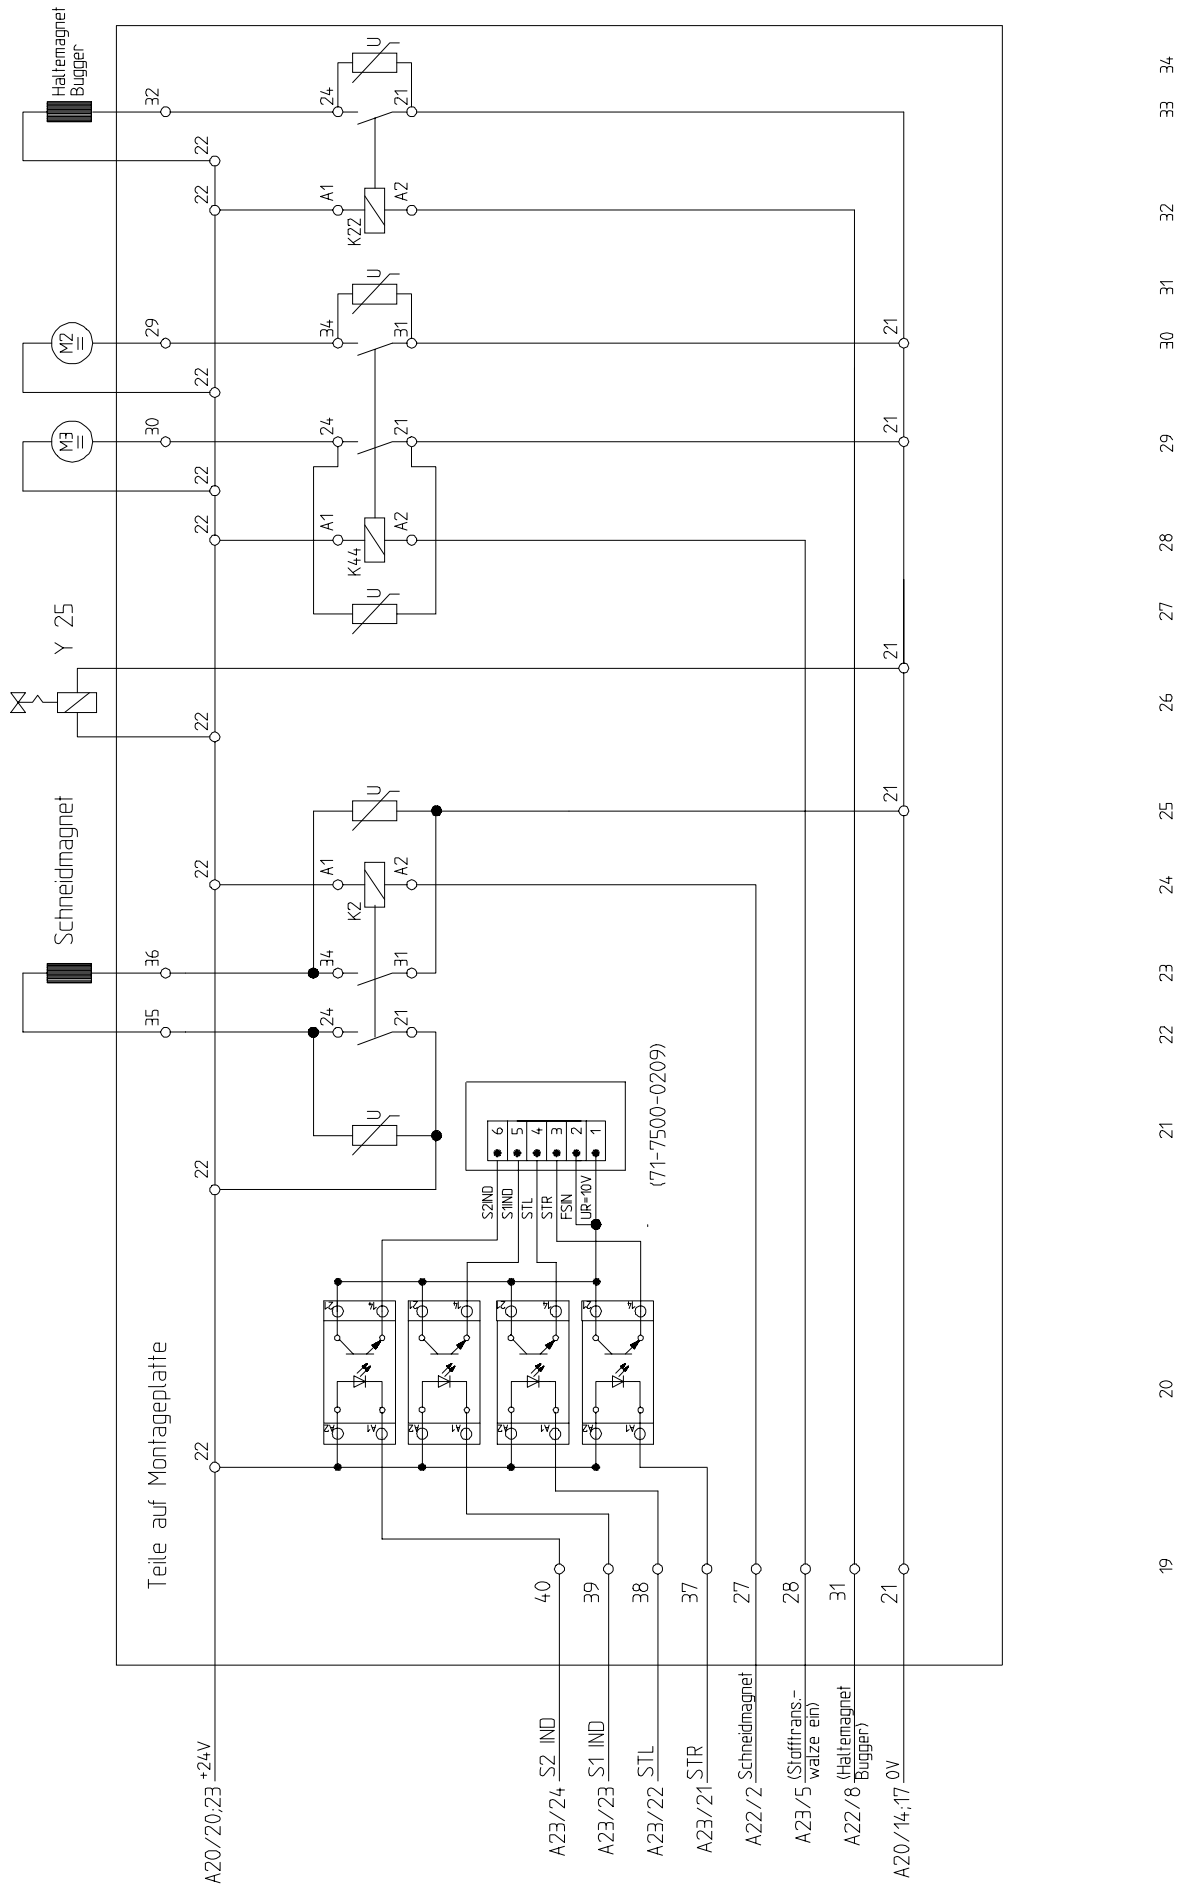
* 4x Optokoppler
siehe Blatt 2
oder 91-191 326-95




19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34

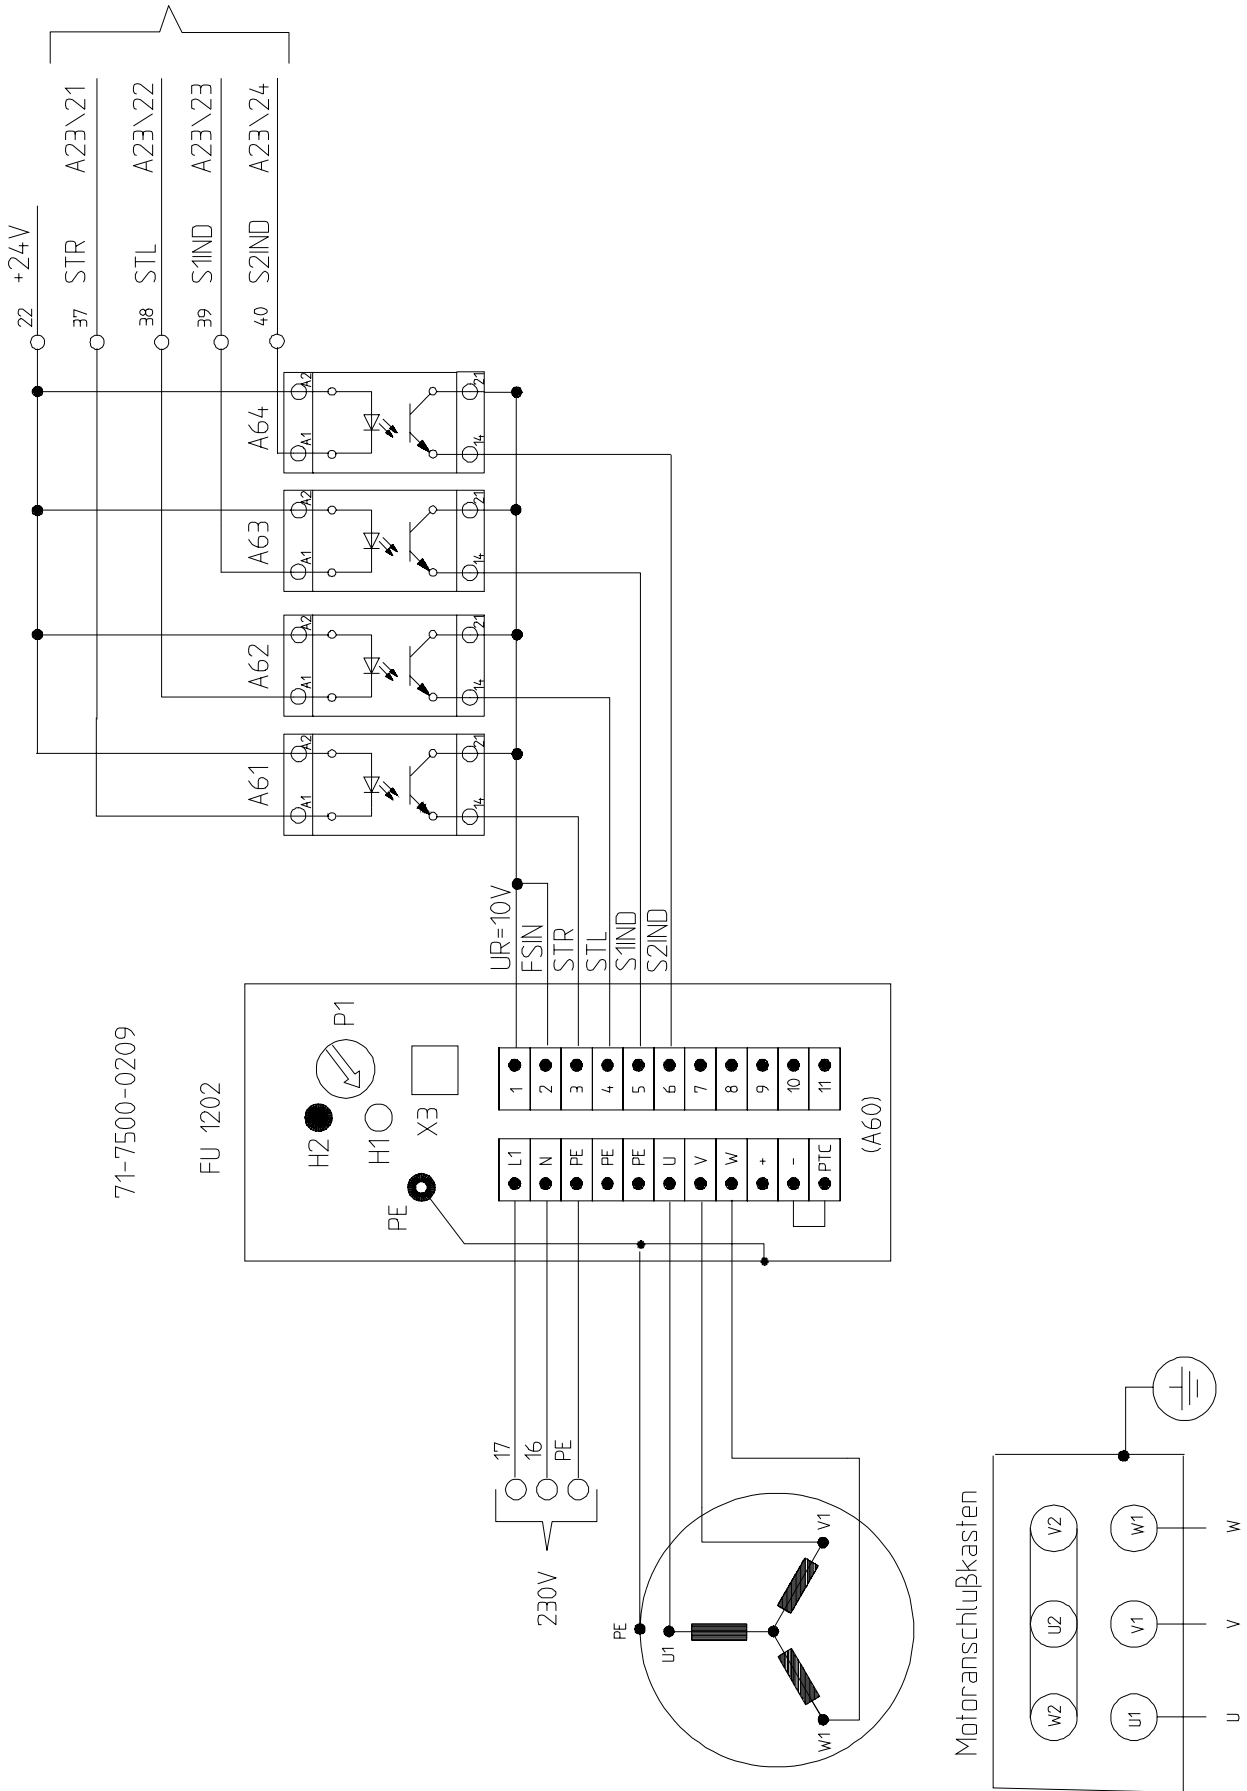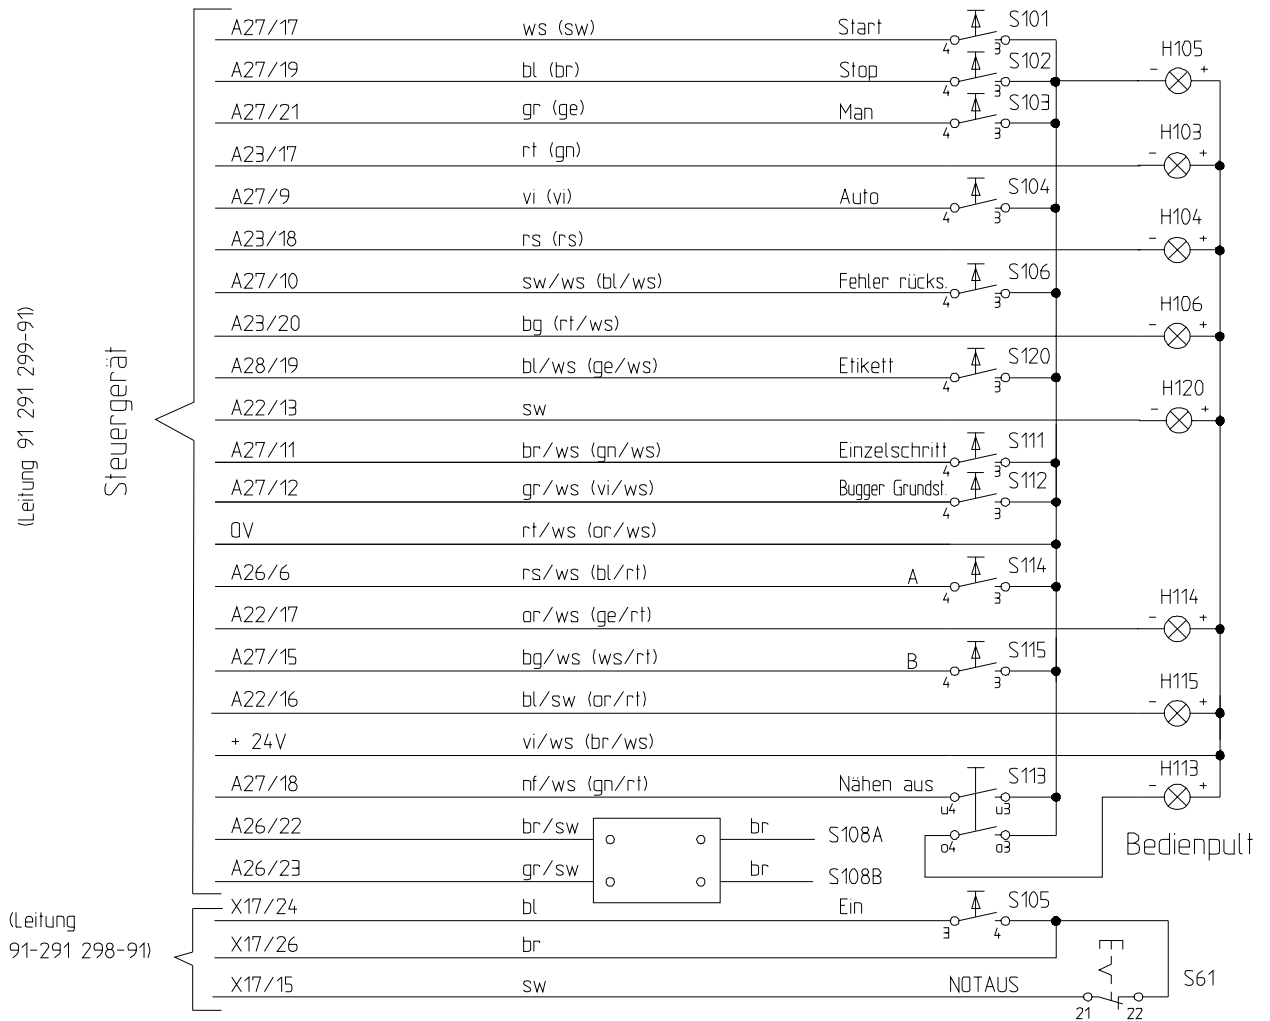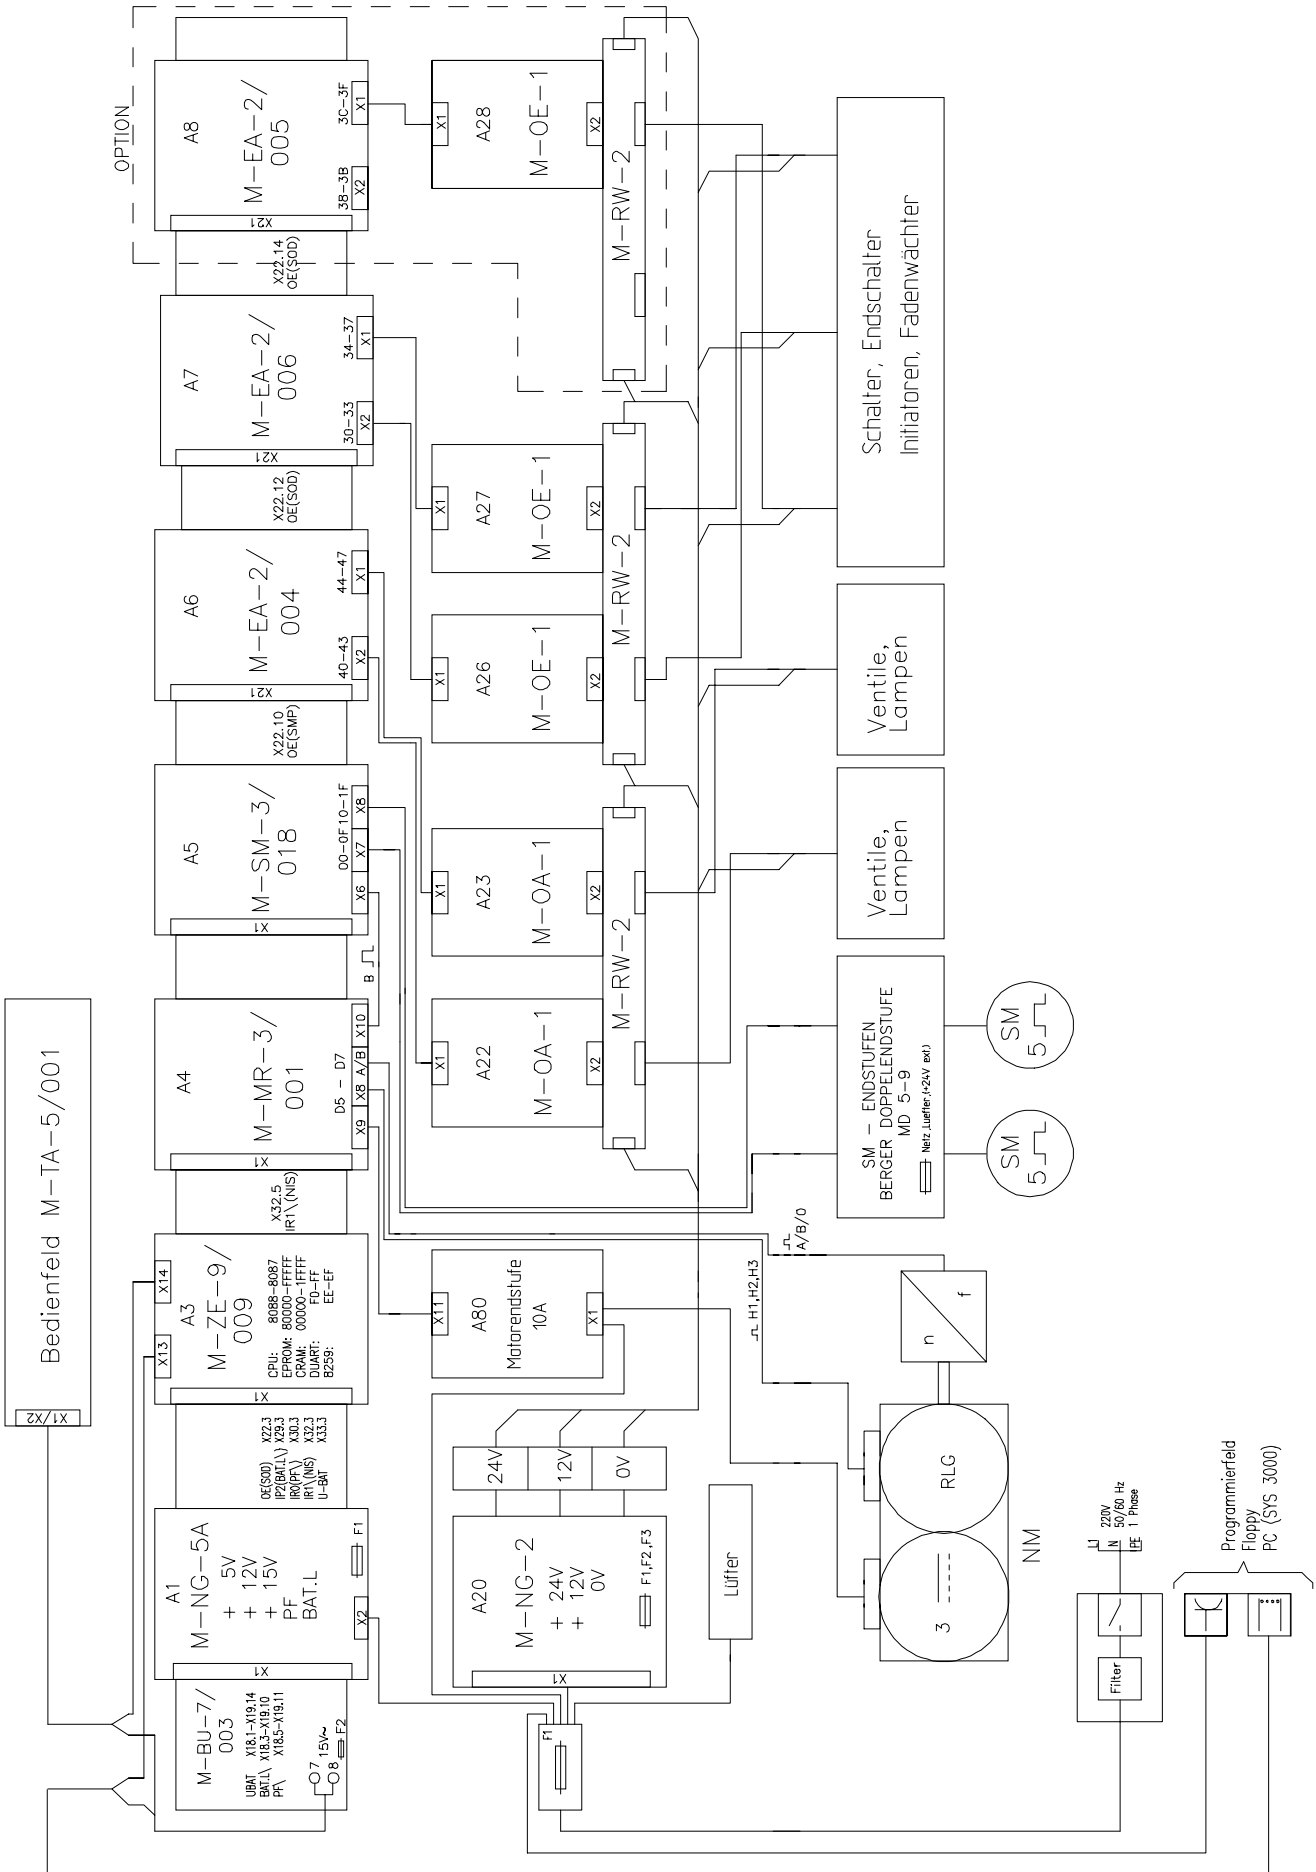91-291 300-91








1.4.2 Steuerkarte D 650.0X

1.4.2.1 Betriebsdaten

| | |
|---|-----------------------------------|
| Betriebsspannung | 70 - 130 VDC ± 10% |
| Phasenströme einstellbar | 2,0 - 5,0 A |
| Boost einstellbar | 1,0 - 1,9xI _N (max.6A) |
| Anzeige für Bereitschafts- und Störungsanzeigen | LEDs |
| Drehschalter zur Einstellung des Boost | |
| Drehschalter zur Einstellung des Phasenstroms | |

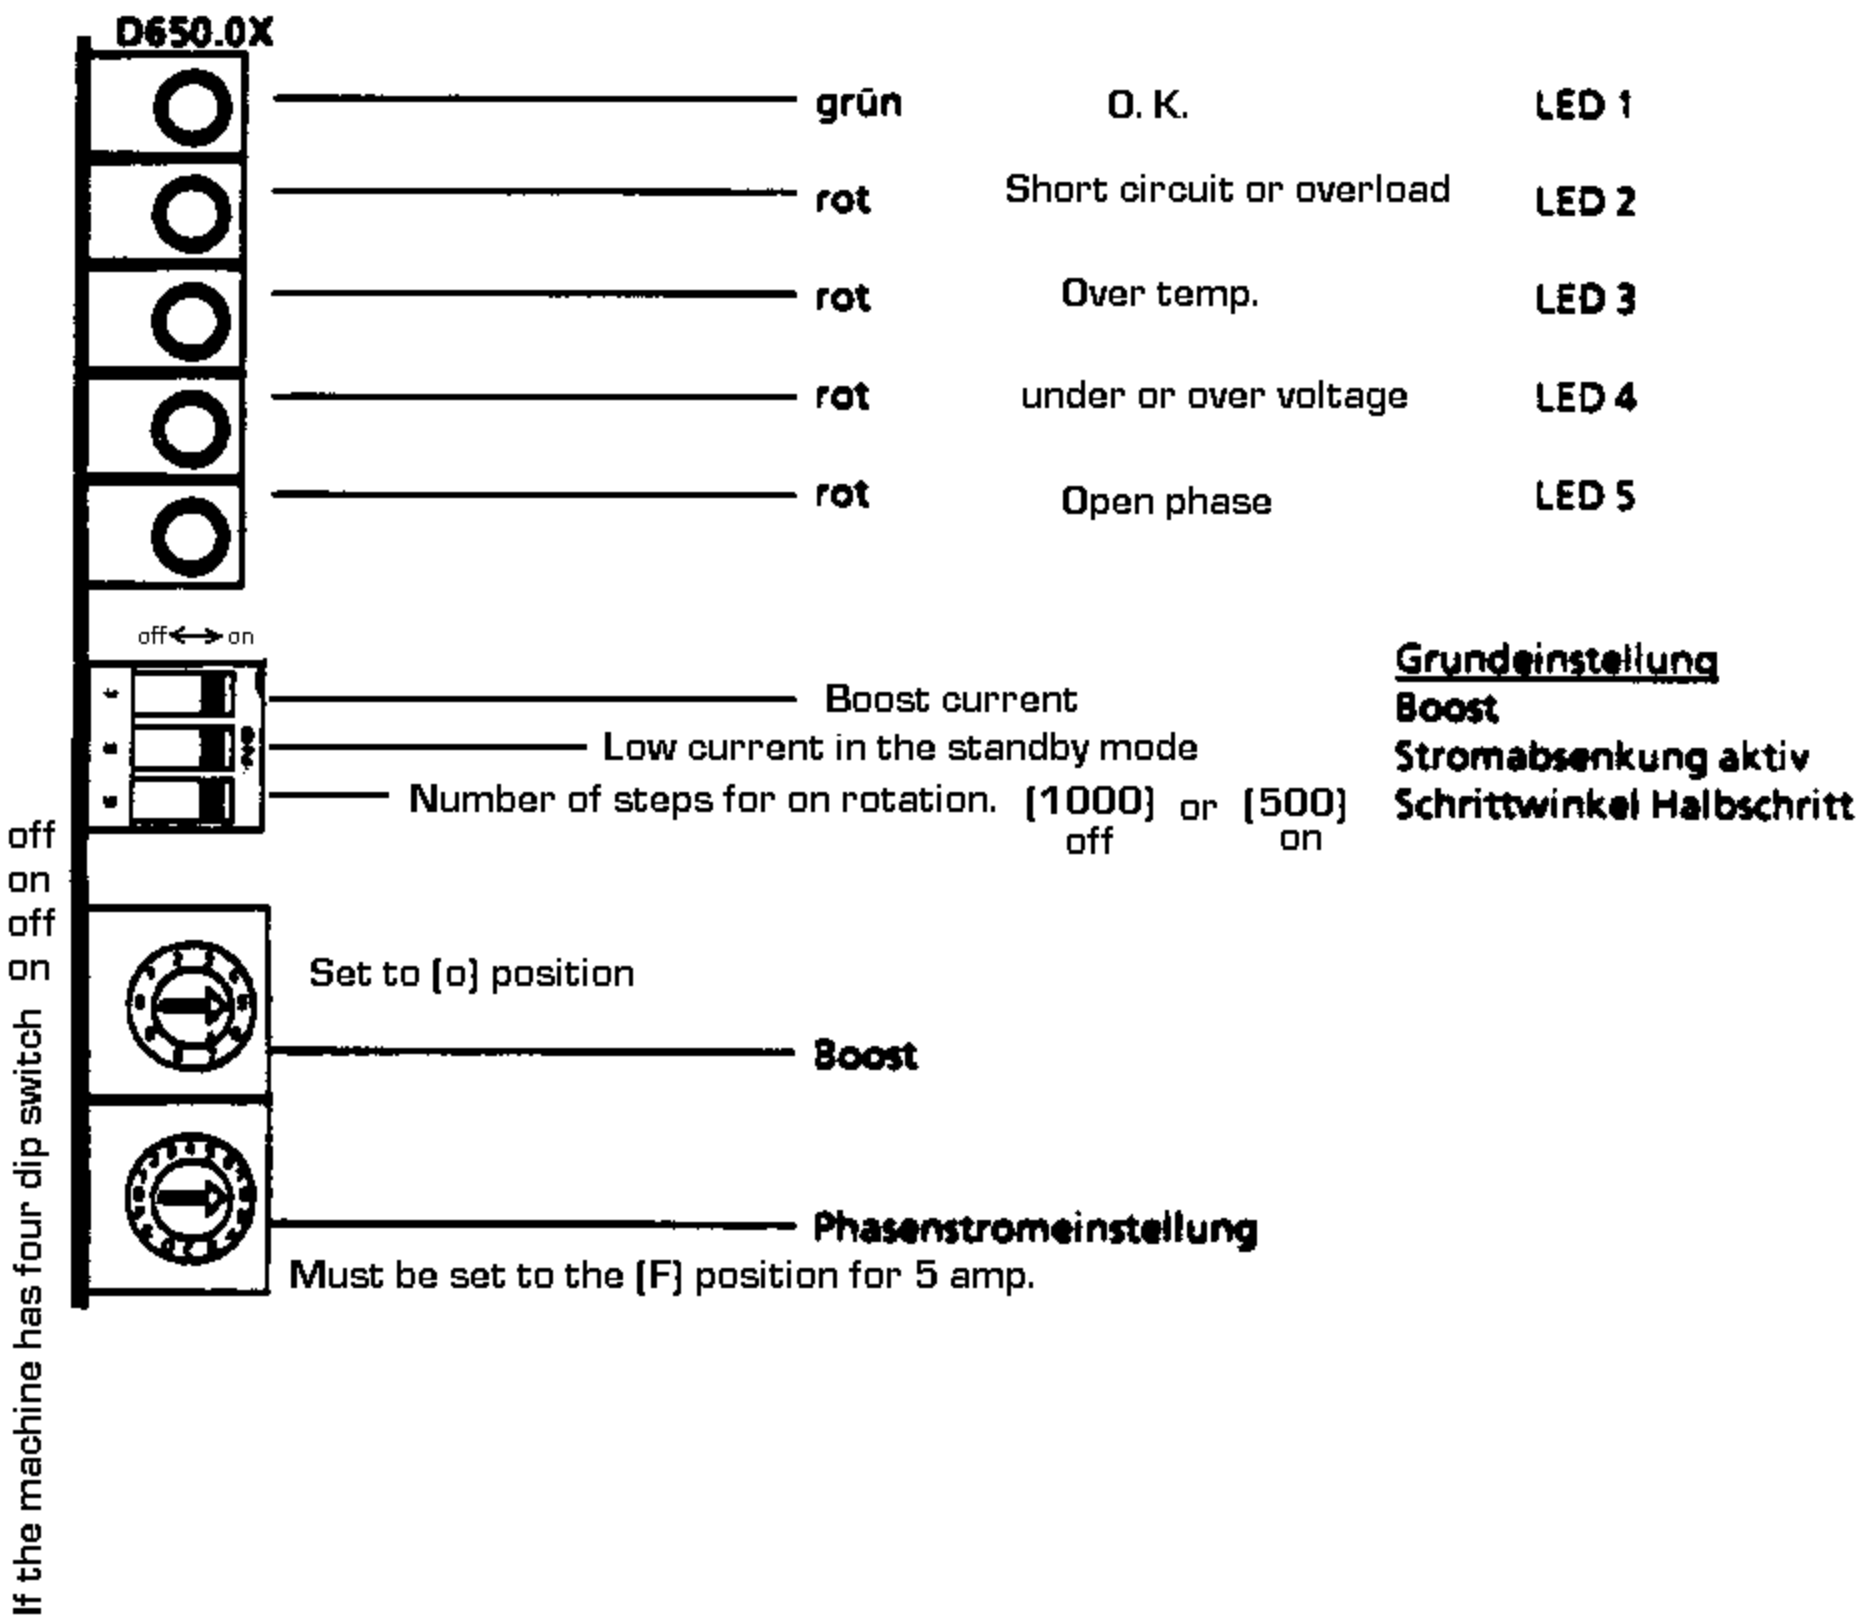1.4.2.2 Anzeige und Programmierschalter



1.4.2.3 Boost (Grenzwert $I_{\text{Boost}} = 6 \text{ A max.}$)

| | | | | | | | | | | |
|--------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|------------------|
| I_{Boost} | $1,0 \times I_N$ | $1,1 \times I_N$ | $1,2 \times I_N$ | $1,3 \times I_N$ | $1,4 \times I_N$ | $1,5 \times I_N$ | $1,6 \times I_N$ | $1,7 \times I_N$ | $1,8 \times I_N$ | $1,9 \times I_N$ |
| Stellung | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |

top rotary dial switch must point to the 0 position

1.4.3.3 Phasenstrom (Angabe in A)

| | | | | | | | | | | |
|-----------------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|
| $I \text{ (A)}$ | 2,0 | 2,2 | 2,4 | 2,6 | 2,8 | 3,0 | 3,2 | 3,4 | 3,6 | 3,8 |
| Stellung | 0 | 1 | 2 | 3 | 4 | 5 | 6 | 7 | 8 | 9 |

| | | | | | | | | | | |
|-----------------|-----|-----|-----|-----|-----|-----|--|--|--|--|
| $I \text{ (A)}$ | 4,0 | 4,2 | 4,4 | 4,6 | 4,8 | 5,0 | | | | |
| Stellung | A | B | C | D | E | F | | | | |

bottom rotary dial switch must point to the F position

1.4.3.4 Stromabsenkung

| | | | | |
|------------------|------------------------------|-------------------|-------------------|-------------------|
| Schalterstellung | OFF | | ON | |
| Pulsfrequenz | < 10 Hz | > 10 Hz | < 10 Hz | > 10 Hz |
| Motorstrom I | $I_{\text{Nenn}} \times 0,6$ | I_{Nenn} | I_{Nenn} | I_{Nenn} |

1.4.3.5 Schrittwinkel

| | | |
|------------------|---|--|
| Schalterstellung | OFF | ON |
| Schrittwinkel | Halbschritt 1000 Schritte pro Umdrehung | Vollschritt 500 Schritte pro Umdrehung |

switch # 3

Half step

Full step

PFAFF

**G.M. PFAFF
Aktiengesellschaft**

Postfach 3020
D-67653 Kaiserslautern

Königstr. 154
D-67655 Kaiserslautern

Telefon: (0631) 200-0
Telefax: (0631) 172 02
Telex: 45753 PFAFF D

Gedruckt in der BRD
Printed in Germany
Imprimé en R.F.A.
Impreso en la R.F.A.
Stampato in R.F.G.
отпечатано ФРГ