

Form 8012
July, 1912

PRICE LIST

OF

PARTS



MACHINES

Nos. 5-1 to 5-5, 5-7,
5-10 and 5-11

THE SINGER MANUFACTURING COMPANY

INDEX

	PAGE
ACCESSORIES	42
BOBBIN WINDERS	42
MACHINE No. 5-1	7
" " 5-2	14
" " 5-3	20
" " 5-4	21
" " 5-5	22
" " 5-7	31
" " 5-10	40
" " 5-11	41
NUMERICAL LIST OF PARTS	59
OBSOLETE PARTS	45

INSTRUCTIONS FOR ORDERING

In ordering from this list, use ONLY the PART number in the FIRST column.

The number stamped on a Sewing Machine part is in every case the number of the single part only.

Every combination of parts sent out as such has its specific number, which, although not stamped on the parts, must be used when ordering the combination.

Each number always indicates the SAME PART in whatever list it appears, or for whatever machine.

The letters after some of the numbers indicate the style of finish only, as follows:

- A. Hardened, Polished and Plated.
- B. Polished and Plated.
- C. Hardened only.
- D. Polished only.
- E. Soft, not Polished.
- F. Hardened and Polished.
- H. Blued.

These letters MUST BE USED when they appear in the list, and AFTER the number as in the list.

In this series

1 to 1500 and 50001 to 51500 are Screw Numbers.

1501 to 1800 are Nut Numbers.

1801 to 2000 are Roller Numbers.

2001 to 50000 are numbers of Machine Parts.

The figures in the second column refer only to the plates, illustrating the parts, and are NOT TO BE USED in ordering.

Parts marked with an asterisk (*) are furnished only when repairs are made at factory.

LIST OF PARTS COMPLETE FOR MACHINE NO. 5-1

RATCHET FEED, SLIDING GUIDE WITH SET SCREW

NO.	PLATE	NAME	EACH
*16961	—	Arm.....	\$40 00
8702	6007	" Dowel Pin.....	15
573E	6008	" Screw (long).....	18
496E	6008	" " (short).....	15
16962	5987	" Shaft.....	10 00
8704	5990	" " Bushing.....	1 00
434C	6009	" " " Set Screw.....	04
11913	5996	" Side Cover.....	25
65D	6010	" " " Hinge Screw.....	12
16963	5985	Balance Wheel and Pulley (tight) with two 344C.....	7 00
16964	5994	Balance Wheel and Pulley (tight) Key.....	25
344C	6008	" " " " " Set Screw.....	08
*16965	—	Bed.....	50 00
16951	5985	Belt Shifter Fork.....	75
432C	6009	" " " Set Screw.....	04
16952	5985	" " Frame with 8804 and two 432C.....	1 75
8804	5985	Belt Shifter Frame Handle.....	30
11451	5985	" " Guide Rod.....	75
11453	5994	" " " " Collar with two 448C.....	15
448C	6009	Belt Shifter Guide Rod Collar Set Screw.....	03
3012	6007	" " " " Pin.....	01
16966	5985	" " Sliding Rod.....	75
8808	5994	" " " " Collar with two 448C.....	25
448C	6009	Belt Shifter Sliding Rod Collar Set Screw.....	03
8873	6007	" " " " Pin.....	05
16967	5989	Crank Connecting Rod with 16968, 16969 and two 129E.....	3 00
*16968	—	Crank Connecting Rod Cap.....	75
129E	5994	" " " " Screw.....	04
1151C	6010	" " " " Hinge Screw.....	20
1646E	5991	" " " " Nut.....	08
16969	5994	" " " " Oil Cup.....	25

PARTS FOR MACHINE NO. 5-1

NO.	PLATE	NAME	EACH
16970	5989	Feed Connecting Rod with 16969.....	\$5 00
16969	5994	" " " Oil Cup.....	25
8712	5990	" Eccentric with two 432C.....	1 50
432C	6009	" " Set Screw.....	04
16933	5989	" Regulator with 8735.....	3 00
484E	6011	" " Adjusting Stud.....	40
1531E	6012	" " " " Thumb Nut.....	15
8715	5991	Feed Regulator Adjusting Stud Thumb Nut Washer.....	25
1503E	6012	Feed Regulator Nut.....	10
16928	5990	" " " Washer.....	50
16931	5990	" " Pawl with 8735.....	2 50
16932	5991	" " " Hinge Stud.....	50
1646C	5991	" " " " " Nut	08
8715	5991	" " " " " " Washer.....	25
2117	5991	Feed Regulator Pawl Pin.....	01
40060	5991	" " " Spring.....	10
8735	5991	" " " Hook.....	15
16935	5991	" " " Washer.....	25
16918	5985	" Roll (lower) with two 437C.....	20 00
8714	6007	" " " Pin.....	15
437C	5994	" " " Set Screw.....	04
16920	5985	" " (upper).....	20 00
16921	5985	" " " Arm with 344C and two 445C.....	7 00
16922	6007	Feed Roll (upper) Arm Pin.....	10
344C	6008	" " " " Set Screw.....	08
16971	5985	" " " " Shaft.....	2 50
8722	5990	" " " " " Collar with two 434C.....	75
434C	6009	Feed Roll (upper) Arm Shaft Collar Set Screw.....	04
16972	5985	Feed Roll (upper) Lifting Arm with 344C.....	4 00
16924	6007	Feed Roll (upper) Lifting Arm Pin.....	10
344C	6008	" " " " " Set Screw.....	08
16973	5985	Feed Roll (upper) Lifting Lever with 483E, 11466 and 16975.....	2 50
16974	5990	Feed Roll (upper) Lifting Lever Bracket	1 25
3012	6007	" " " " " " Dowel Pin.....	01
16975	5986	Feed Roll (upper) Lifting Lever Handle (wood).....	50
11466	6006	Feed Roll (upper) Lifting Lever Handle Washer.....	10

PARTS FOR MACHINE NO. 5-1

NO.	PLATE	NAME	EACH
2117	5991	Feed Roll (upper) Lifting Lever Pin ..	\$ 01
483E	5991	" " " " " Screw	
		Stud.....	40
16925	5991	Feed Roll (upper) Lifting Lever Screw Stud Roller.....	15
1585D	6012	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut.....	1 50
16976	5991	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut Washer.....	25
16976	5991	Feed Roll (upper) Lifting Lever Screw Stud Washer.....	25
8715	5991	Feed Roll (upper) Lifting Lever Washer.....	25
16926	5985	" " " Shaft.....	2 25
445C	6009	" " " " Set Screw.....	03
16927	5987	" Shaft.....	4 00
8718	5989	" " Bracket (intermediate).....	2 00
8582	6007	" " " " Dowel Pin.....	02
338E	6008	Feed Shaft Bracket (intermediate) Screw.....	10
16919	5989	Feed Shaft Bracket (left).....	2 50
8582	6007	" " " " Dowel Pin.....	02
338E	6008	" " " " Screw.....	10
16919	5989	" " " (right).....	2 50
8582	6007	" " " " Dowel Pin.....	02
338E	6008	" " " " Screw.....	10
16929	5989	" Wheel.....	12 00
8731	5989	" " Hub with 344C.....	2 50
16930	6007	" " " Pin.....	10
344C	6008	" " " Set Screw.....	08
16977	5990	" " Retaining Pawl (long).....	1 00
16978	5990	" " " " (short).....	1 00
16979	5990	" " " " Bracket	1 50
2117	5991	" " " " " Dowel Pin.....	01
2117	5991	Feed Wheel Retaining Pawl Pin.....	01
16980	5997	" " " " Separating Washer.....	10
16981	5997	Feed Wheel Retaining Pawl Washer.....	15
123D	6010	" " Screw.....	06
16982	5992	Guide (left) with 692D, for 16999.....	2 50
43230	5992	" " " " " 43233.....	2 00
692D	6008	" " Clamping Screw.....	10
16983	5992	" (right) with 692D, for 16999.....	2 50
43231	5992	" " " " " 43233.....	2 00
692D	6008	" " Clamping Screw.....	10
16984	5988	" Rod.....	3 00

NO.	PLATE	NAME	EACH
16985	5992	Guide Rod Bracket (left) with 692D....	\$2 50
692D	6008	" " " " Clamping Screw.....	10
3012	6007	Guide Rod Bracket (left) Dowel Pin...	01
123D	6010	" " " " Screw.....	06
16985	5992	" " " (right) with 692D....	2 50
692D	6008	" " " " Clamping Screw.....	10
3012	6007	Guide Rod Bracket (right) Dowel Pin...	01
123D	6010	" " " " Screw.....	06
8915	6055	Leg (left).....	3 50
779E	6008	" " Screw.....	10
8916	6055	" (right).....	3 50
779E	6008	" " Screw.....	10
16986	5993	Needle Bar.....	1 50
8746	5993	" " Connecting Link.....	1 25
370c	6010	" " " " Hinge Screw.....	18
1509E	6012	Needle Bar Connecting Link Hinge Screw Nut.....	06
16987	5994	Needle Bar Connecting Stud with two 129D.....	2 00
129D	5994	Needle Bar Connecting Stud Clamping Screw.....	04
16988	5994	Needle Clamp with 149F and 8749.....	1 25
8749	5994	" " Gib.....	25
149F	5994	" " Screw.....	06
8795	5995	" Plate.....	1 00
381D	6009	" " Screw.....	06
16989	5996	Oil Cup.....	80
11917	5996	" " Cover.....	25
9084	5997	" " " Hinge Pin.....	02
2205	5997	" " " Latch Spring.....	04
207F	6010	" " " " " Screw.....	02
11919	5997	" " Thread Eyelet.....	05
8953	5997	" or Wax Stripper (felt).....	03
8482	5997	" " " Washer (steel) for 16989.....	01
11918	5997	Oil or Wax Stripper Washer (steel) for 11917.....	03
207F	6010	Oil or Wax Stripper Washer Screw.....	02
16990	5996	Oil Cup complete, Nos. 2205, 8482, 9084, 11917 to 11919, 16989, two 8953 and three 207F.....	1 25
134D	6051	Oil Cup Screw.....	05
16911	5996	Oscillating Rock Shaft.....	8 00
16912	—	Oscillating Rock Shaft complete, Nos. 654c, 8752, 16911 and two 1503E....	10 00

NO.	PLATE	NAME	EACH
8752	5996	Oscillating Rock Shaft Hinge Pin.....	\$1 25
1503E	6012	" " " " " Nut	10
654c	6009	" " " " " Screw	25
1503E	6012	Bearing.....	25
1503E	6012	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut.....	10
16954	5996	Oscillating Shaft.....	2 00
16991	—	" " Crank.....	4 00
16992	5993	Oscillating Shaft Crank complete, Nos. 445c, 1513E, 16991 and 16993.....	4 65
8873	6007	Oscillating Shaft Crank Pin.....	05
445c	6009	" " " Set Screw.....	03
8917	5997	" " " Slide Block.....	35
16993	5997	" " " " " 8917 with 50038c.....	55
50038c	5997	Oscillating Shaft Crank Slide Block Screw Stud.....	20
1513E	5997	Oscillating Shaft Crank Slide Block Screw Stud Nut.....	05
16994	5996	Presser Bar for 16999.....	1 25
43201	5996	" " " 43233.....	1 25
16995	5993	" " Guide Bracket with 145D and 965D.....	2 00
145D	6010	Presser Bar Guide Bracket Adjusting Screw.....	04
965D	6010	Presser Bar Guide Bracket Clamping Screw.....	04
8767	5993	Presser Bar Guide Bracket Guide.....	50
135D	6009	" " " " " Screw	05
16996	5993	" " Lifter with 8761 and 8763..	1 25
8760	5997	" " " Friction Washer.....	03
16c	6010	" " " Hinge Screw.....	20
8761	5997	" " " Stop Pin.....	05
16997	5993	" " Lifting Link.....	50
166D	6010	" " " " Cap Screw.....	07
8763	5997	" " " " Hinge Stud	25
8973	5997	" " " " " "	05
8765	5997	Presser Bar Lifting Link Hinge Stud Washer.....	04
11031	5996	Presser Bar Spring (flat).....	1 50
16998	5993	" " " " Bracket.....	25
381D	6009	" " " " " Screw	06
4389	6007	" " " " Guide Pin.....	02
9021	5993	" " " (spiral).....	25
20251	5991	" " " " Collar with 456c.....	20

NO.	PLATE	NAME	EACH
456C	5991	Presser Bar Spring (spiral) Collar Set Screw.....	\$ 02
16999	5998	Presser Foot with two 346D.....	5 00
346D	6001	" " Clamping Screw.....	08
609D	6011	Pressure Regulating Thumb Screw.....	45
1606C	6012	" " " " Lock Nut.....	05
16914	5985	Pulley (loose).....	1 50
8706	5999	" " Flanged Bushing with two 434C.....	1 00
434C	6009	Pulley (loose) Flanged Bushing Set Screw.....	04
16915	5999	Pulley (loose) Collar.....	50
1992	6001	Roller, 2 $\frac{5}{8}$ in. diam., with 370F and 1509E.....	3 00
8771	6001	Roller Arm.....	3 00
423F	6001	" " Adjusting Screw.....	05
1520E	6001	" " " " Nut.....	03
43232	6001	" " Bracket with two 346D.....	3 50
346D	6001	" " " Clamping Screw....	08
8773	6001	" " Lock Spring.....	10
327D	6001	" " " " Screw.....	05
307F	6001	" " Screw Centre.....	06
1513E	6001	" " " " Nut.....	05
43233	6000	Roller Presser complete, 2 $\frac{5}{8}$ in. roller, Nos. 327D, 423F, 1520E, 1992, 8771, 8773, 43232 and two each 307F and 1513E.....	10 00
370F	6001	Roller Screw.....	18
1509E	6001	" " Nut.....	06
16901	6003	Shuttle Bobbin.....	50
8776	6003	" Cylinder.....	5 50
8777	6003	" " Hinge Pin.....	10
8778	6003	" " Latch Spring.....	25
330D	6003	" " " " Screw....	02
8779	6003	" Frame.....	7 25
1323F	6003	" Tension Regulating Screw.....	05
8780	6003	" " Spring.....	50
8774	6002	Shuttle (cylinder) complete, Nos. 330D, 1323F, 8776 to 8780 and 16901.....	13 50
8781	5999	Shuttle Driver with two 445C.....	5 00
8873	6007	" " Pin.....	05
445C	6009	" " Set Screw.....	03
8919	—	" Race Body.....	4 50
116E	6010	" " " Clamping Screw....	08
17000	5996	" " Ring.....	1 50
660D	6010	" " " Screw.....	12
16957	5994	" " " Spring.....	03

NO.	PLATE	NAME	EACH
43151	5996	Shuttle Race (flexible ring) complete, Nos. 8919, 17000 and three each 660D and 16957.....	\$6 50
43152	6004	Shuttle Race Cover (left).....	50
180F	6010	" " " " Screw.....	03
43153	6004	" " " (right).....	40
180F	6010	" " " " Screw.....	03
8786	6005	Tension Disc.....	15
1535E	6005	" Regulating Thumb Nut.....	10
8787	6005	" " " " Washer	01
406D	6005	" Screw Stud.....	25
8788	6005	" Spring.....	25
8785	—	Tension complete, Nos. 406D, 1535E, 8787, 8788 and two 8786.....	90
43155	6006	Thread Eyelet (side of arm).....	05
43156	6006	" " (top of arm).....	25
134D	6006	" " " " " Screw.....	05
11466	6006	" " " " " Washer	10
43154	6006	" Guard (front of arm).....	05
164D	6006	" " " " " Screw.....	04
8790	6005	" Retaining Disc.....	10
1560C	6005	" " Regulating Thumb Nut	04
8905	6005	" " " " " Washer.....	01
1224D	6005	Thread Retaining Screw Stud.....	25
8791	6005	" " Spring.....	10
16945	—	Thread Retainer complete, Nos. 1224D, 1560C, 8791, 8905 and two 8790.....	60
8796	5989	Thread Take-up Cam with two 432C....	8 00
8714	6007	" " " Pin.....	15
432C	6009	" " " Set Screw.....	04
8797	5999	" " Lever with 1513E and 1865.....	2 00
10D	6010	Thread Take-up Lever Hinge Screw....	25
1865	6012	" " " Roller and Screw Stud.....	45
1513E	6001	Thread Take-up Lever Roller and Screw Stud Nut.....	05
16947	6006	Thread Take-up Spring.....	10
8077	6006	" " " Hook.....	01
43157	6006	" " " Lever with 8077.....	1 75
9046	6006	Thread Take-up Spring Lever Stop Pin	05
11066	6006	" " " Regulator with 8077 and 9046.....	1 50
164D	6006	Thread Take-up Spring Regulator Screw	04
16906	6006	" " Staple.....	20
164D	6006	" " " Screw.....	04
41544	6006	" " " " Washer...	05

LIST OF PARTS COMPLETE FOR MACHINE NO. 5-2 CLUTCH FEED, SLIDING GUIDE WITH SET SCREW

(OBSOLETE)

NO.	PLATE	NAME	EACH
*8701	—	Arm.....	\$35 00
8702	6007	" Dowel Pin.....	15
573E	6008	" Screw (long).....	18
496E	6008	" " (short).....	15
8703	5987	" Shaft.....	9 00
8704	5990	" " Bushing.....	1 00
437C	5994	" " " Set Screw.....	04
11913	5996	" Side Cover.....	25
65D	6010	" " " Hinge Screw.....	12
8708	6034	" Spool Pin.....	05
8709	5986	Balance Wheel and Pulley (tight) with two 344c.....	5 00
344C	6008	Balance Wheel and Pulley (tight) Set Screw.....	08
*8710	—	Bed.....	35 00
8805	5986	Belt Shifter Fork.....	75
432C	6009	" " " Set Screw.....	04
8803	5986	" " Frame with 8804 and two 432c.....	1 75
8804	5985	Belt Shifter Frame Handle.....	30
8806	5986	" " Guide Rod.....	30
3012	6007	" " " " Pin.....	01
8807	5986	" " Sliding Rod.....	75
8808	5994	" " " " Collar with two 448c.....	25
448C	6009	Belt Shifter Sliding Rod Collar Set Screw.....	03
3012	6007	Belt Shifter Sliding Rod Pin.....	01
8802	—	Belt Shifter complete, Nos. 8803, 8805 to 8807 and two each 3012 and 8808....	5 00
8711	6033	Crank Connecting Rod with 16917 and two 129E.....	1 75
*16917	—	Crank Connecting Rod Cap.....	—
129E	5994	" " " " Screw.....	04
369C	6010	" " " Hinge Screw.....	20
1509E	6012	" " " " " Nut.....	06

NO.	PLATE	NAME	EACH
8713	6033	Feed Connecting Rod.....	\$3 00
8712	5990	" Eccentric with two 432c.....	1 50
8714	6007	" " Pin.....	15
432C	6009	" " Set Screw.....	04
8825	6033	" Regulator.....	3 00
484E	6011	" " Adjusting Stud.....	40
1531E	6012	" " " " Thumb Nut.....	15
8715	5991	Feed Regulator Adjusting Stud Thumb Nut Washer.....	25
1503E	6012	Feed Regulator Nut.....	10
16928	5990	" " " Washer.....	50
8716	5986	" Roll (lower) with two 437c.....	15 00
8714	6007	" " " Pin.....	15
437C	5994	" " " Set Screw.....	04
8719	5986	" " (upper).....	15 00
8720	5986	" " " Arm with 344c and two 445c.....	6 00
8714	6007	Feed Roll (upper) Arm Pin.....	15
344C	6008	" " " " Set Screw.....	08
8721	5986	" " " " Shaft.....	1 75
8722	5990	" " " " Collar with two 434c.....	75
434C	6009	Feed Roll (upper) Arm Shaft Collar Set Screw.....	04
8723	5986	Feed Roll (upper) Lifting Arm with 344c.....	2 50
8714	6007	Feed Roll (upper) Lifting Arm Pin.....	15
344C	6008	" " " " Set Screw.....	08
8724	5986	" " " " Lever with 483E, 11466 and 16975.....	2 50
8725	6035	Feed Roll (upper) Lifting Lever Bracket.....	1 00
3012	6007	" " " " " " Dowel Pin.....	01
16975	5986	Feed Roll (upper) Lifting Lever Handle (wood).....	50
11466	6006	Feed Roll (upper) Lifting Lever Handle Washer.....	10
2117	5991	Feed Roll (upper) Lifting Lever Pin....	01
483E	5991	" " " " " Screw Stud.....	40
16925	5991	Feed Roll (upper) Lifting Lever Screw Stud Roller.....	15
1585D	6012	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut.....	1 50
16976	5991	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut Washer.....	25

NO.	PLATE	NAME	EACH
16976	5991	Feed Roll (upper) Lifting Lever Screw	
		Stud Washer.....	\$ 25
8715	5991	Feed Roll (upper) Lifting Lever Washer	25
8728	5986	" " " Shaft.....	1 75
445c	6009	" " " " Set Screw.....	03
8729	5987	" Shaft.....	3 50
8718	5989	" " Bracket (intermediate).....	2 00
3012	6007	" " " " Dowel	
		Pin.....	01
338E	6008	Feed Shaft Bracket (intermediate)	
		Screw.....	10
8717	6040	Feed Shaft Bracket (left).....	2 50
3012	6007	" " " " Dowel Pin.....	01
338E	6008	" " " " Screw.....	10
8718	5989	" " " (right).....	2 00
3012	6007	" " " " Dowel Pin.....	01
338E	6008	" " " " Screw.....	10
8913	6033	" Wheel.....	10 00
8823	—	" " 8913 with 8731 and three	
		123D.....	12 00
8824	6035	Feed Wheel Clutch.....	3 00
8826	6035	" " " Spring.....	75
129D	5994	" " " " Screw.....	04
8827	6034	" " Friction Brake with 8077..	35
1D	6034	" " " " Screw Stud.....	25
8828	6034	" " " " Spring.....	05
8077	6034	" " " " Hook.....	01
70D	6034	" " " " Screw.....	06
8731	5989	" " Hub with 344c.....	2 50
16930	6007	" " " Pin.....	10
344c	6008	" " " Set Screw.....	08
123D	6010	" " Screw.....	06
8740	5992	Guide (left) with 354c.....	50
8741	5992	" (right) with 354c.....	50
354c	6045	" Set Screw.....	06
8742	5988	" Rod.....	1 25
8743	5992	" " Bracket (left).....	1 50
123D	6010	" " " " Screw.....	06
8744	5992	" " " (right) with 708F.....	1 00
123D	6010	" " " " Screw.....	06
708F	6011	" " Set Screw.....	25
8739	—	Guide complete, Nos. 8740 to 8744 and	
		four 123D.....	5 00
8915	6055	Leg (left).....	3 50
779E	6008	" " Screw.....	10
8916	6055	" (right).....	3 50
779E	6008	" " Screw.....	10

NO.	PLATE	NAME	EACH
8745	6035	Needle Bar.....	\$1 50
8746	5993	" " Connecting Link.....	1 25
370c	6010	" " " " Hinge	
		Screw.....	18
1509E	6012	Needle Bar Connecting Link Hinge	
		Screw Nut.....	06
8747	5994	Needle Bar Connecting Stud with 129D	
		and 437c.....	2 00
129D	5994	Needle Bar Connecting Stud Clamping	
		Screw.....	04
437c	5994	Needle Bar Connecting Stud Set Screw.....	04
257E	6009	" " Screw Bushing.....	20
8748	5994	" Clamp with 149F, 8749 and 8750	1 00
8749	5994	" " Gib.....	25
149F	5994	" " Screw.....	06
8750	5994	" " Thread Eyelet.....	08
8795	5995	" Plate.....	1 00
381D	6009	" " Screw.....	06
11387	6033	Oil Cup.....	80
11917	6033	" " Cover.....	25
9084	5997	" " " Hinge Pin.....	02
2205	5997	" " " Latch Spring.....	04
207F	6010	" " " " " Screw.....	02
11919	5997	" " Thread Eyelet.....	05
8953	5997	" or Wax Stripper (felt).....	03
8482	5997	" " " Washer (steel) for	
		11387.....	01
11918	5997	Oil or Wax Stripper Washer (steel) for	
		11917.....	03
207F	6010	Oil or Wax Stripper Washer Screw.....	02
11920	6033	Oil Cup complete, Nos. 2205, 8482, 9084,	
		11387, 11917 to 11919, two 8953 and	
		three 207F.....	1 25
135D	6009	Oil Cup Screw.....	05
8751	6033	Oscillating Rock Shaft.....	8 00
8752	5996	" " " Hinge Pin.....	1 25
1503E	6012	" " " " " Nut.....	10
654c	6009	" " " " " Screw	
		Bearing.....	25
1503E	6012	Oscillating Rock Shaft Hinge Pin Screw	
		Bearing Nut.....	10
8830	6034	Oscillating Rock Shaft Washer.....	05
8754	6033	" Shaft.....	2 00
8755	6035	" " Crank with 445c and	
		8756.....	1 50
8756	6034	Oscillating Shaft Crank Slide Block with	
		8918.....	50

NO.	PLATE	NAME	EACH
8918	6034	Oscillating Shaft Crank Slide Block Stud.	\$ 15
8873	6007	" " " Pin.....	05
445C	6009	" " " Set Screw.....	03
8758	6035	Presser Bar.....	1 25
8766	6035	" " Guide Bracket with 159D....	75
159D	6010	" " " " Adjusting Screw.....	03
8767	5993	Presser Bar Guide Bracket Guide.....	50
135D	6009	" " " " " Screw	05
166D	6010	" " " " " Set Screw....	07
8759	6035	" " Lifter with 8761.....	1 25
8760	5997	" " " Friction Washer.....	03
16C	6010	" " " Hinge Screw.....	20
8761	5997	" " " Stop Pin.....	05
8762	6036	" " Lifting Link.....	50
65D	6010	" " " Hinge Screw....	12
257E	6009	" " Screw Bushing.....	20
8792	6036	" " Spring.....	15
8768	5998	" Foot with 362D.....	1 00
362D	6008	" " Set Screw.....	05
572E	6009	Pressure Regulating Thumb Screw....	50
8705	5986	Pulley (loose).....	1 50
8706	5999	" " Flanged Bushing with two 434C.....	1 00
434C	6009	Pulley (loose) Flanged Bushing Set Screw.....	04
1992	6001	Roller, 2 $\frac{5}{8}$ in. diam., with 370F and 1509E.....	3 00
8771	6001	Roller Arm.....	3 00
423F	6001	" " Adjusting Screw.....	05
1520E	6001	" " " " Nut.....	03
8772	6037	" " Bracket with 362D.....	3 50
362D	6008	" " " Set Screw.....	05
8773	6001	" " Lock Spring.....	10
327D	6001	" " " Screw.....	05
307F	6001	" " Screw Centre.....	06
1513E	6001	" " " " Nut.....	05
8769	6037	Roller Presser complete, 2 $\frac{5}{8}$ in. roller, Nos. 327D, 423F, 1520E, 1992, 8771 to 8773 and two each 307F and 1513E....	10 00
370F	6001	Roller Screw.....	18
1509E	6001	" " Nut.....	06
16901	6003	Shuttle Bobbin.....	50
8776	6003	" Cylinder.....	5 50
8777	6003	" " Hinge Pin.....	10
8778	6003	" " Latch Spring.....	25
330D	6003	" " " " Screw....	02

NO.	PLATE	NAME	EACH
8779	6003	Shuttle Frame.....	\$7 25
1323F	6003	" Tension Regulating Screw.....	05
8780	6003	" " Spring.....	50
8774	6002	Shuttle (cylinder) complete, Nos. 330D, 1323F, 8776 to 8780 and 16901.....	13 50
8781	5999	Shuttle Driver with two 445C.....	5 00
8873	6007	" " Pin.....	05
445C	6009	" " Set Screw.....	03
8782	6038	" Race Ring.....	1 00
135D	6009	" " " Screw.....	05
8783	5999	" " Slide (left).....	50
8784	5999	" " " (right).....	50
8786	6005	Tension Disc.....	15
1535E	6005	" Regulating Thumb Nut.....	10
8787	6005	" " " " Washer.....	01
406D	6005	" Screw Stud.....	25
8788	6005	" Spring.....	25
8785	—	Tension complete, Nos. 406D, 1535E, 8787, 8788 and two 8786.....	90
8793	6039	Thread Eyelet (front of arm).....	05
11425	6039	" " (side of arm).....	05
8790	6005	" Retaining Disc.....	10
1560C	6005	" " Regulating Thumb Nut.....	04
8905	6005	Thread Retaining Regulating Thumb Nut Washer.....	01
632D	6011	Thread Retaining Screw Stud.....	30
8791	6005	" " Spring.....	10
8789	—	Thread Retainer complete, Nos. 632D, 1560C, 8791, 8905 and two 8790.....	65
8796	5989	Thread Take-up Cam with two 432C....	8 00
8714	6007	" " " Pin.....	15
432C	6009	" " " Set Screw.....	04
8797	5999	" " Lever with 1513E and 1865.....	2 00
10D	6010	Thread Take-up Lever Hinge Screw....	25
1865	6012	" " " Roller and Screw Stud.....	45
1513E	6001	Thread Take-up Lever Roller and Screw Stud Nut.....	05
8798	6039	Thread Take-up Spring.....	08
8799	6039	" " " Regulator.....	15
164D	6006	" " " " " Screw	04
41544	6006	" " " " " " "	05
8801	6039	Thread Take-up Staple.....	20
164D	6006	" " " " " Screw.....	04
41544	6006	" " " " " Washer....	05
8908	6048	Wrench for 1520.....	08
8909	6048	" " 1513 and 1518.....	10
8910	6048	" " 611, 1508 and 1509.....	25
8911	6048	" " 344 and 1503.....	15

MACHINE NO. 5-3

RATCHET FEED, SCREW GUIDE

This Machine is the same as No. 5-1 with the following exceptions:

NO.	PLATE	NAME	EACH
43158	5992	Guide (left) with 344c, in place of 16982.	\$4 00
	344c 6008	" " Set Screw.....	08
43159	5992	" (right) with 344c, in place of 16983.....	4 50
	344c 6008	Guide (right) Set Screw.....	08
43160	5988	" Adjusting Rod (screw) in place of 16984.....	12 00
8841	5992	Guide Adjusting Rod (screw) Bracket	1 00
3012	6007	" " " " " "	
		Dowel Pin.....	01
123D	6010	Guide Adjusting Rod (screw) Bracket Screw.....	06
8842	6025	Guide Adjusting Rod (screw) Collar with two 446c.....	50
446c	6051	Guide Adjusting Rod (screw) Collar Set Screw.....	03
8843	5985	Guide Adjusting Rod (screw) Hand Wheel with 8844.....	3 00
8844	5985	Guide Adjusting Rod (screw) Hand Wheel Handle.....	50
3012	6007	Guide Adjusting Rod (screw) Hand Wheel Pin.....	01
43161	5988	Guide Connecting Rod.....	75
43162	5988	" Rod (lower, left).....	1 00
445c	6009	" " " " Set Screw.....	03
43163	5988	" " (lower, right).....	75
445c	6009	" " " " Set Screw.....	03
43164	5988	" " (upper).....	1 50
445c	6009	" " " " Set Screw.....	03
43165	5992	" " Bracket (intermediate) with three 445c.....	2 50
3012	6007	Guide Rod Bracket (intermediate) Dowel Pin.....	01
123D	6010	Guide Rod Bracket (intermediate) Screw.....	06
43166	5992	Guide Rod Bracket (left) with two 445c, in place of 16985.....	2 25
8838	5992	Guide Rod Bracket (right) with 445c, in place of 16985.....	2 00

MACHINE NO. 5-4

CLUTCH FEED, SCREW GUIDE

(OBSOLETE)

This Machine is the same as No. 5-2 with the following exceptions:

NO.	PLATE	NAME	EACH
*8831	—	Bed, in place of 8710.....	\$35 00
*8832	—	" Extension.....	5 00
338E	6008	" " Screw.....	10
8834	6040	Guide (left) with 708F, in place of 8740.	2 00
8835	6040	" (right) with 708F, in place of 8741	1 50
8840	5988	" Adjusting Rod (screw) in place of 8742.....	10 00
8841	5992	Guide Adjusting Rod (screw) Bracket	1 00
3012	6007	" " " " " "	
		Dowel Pin.....	01
123D	6010	Guide Adjusting Rod (screw) Bracket Screw.....	06
8842	6025	Guide Adjusting Rod (screw) Collar with two 446c.....	50
446c	6051	Guide Adjusting Rod (screw) Collar Set Screw.....	03
8843	5985	Guide Adjusting Rod (screw) Hand Wheel with 8844.....	3 00
8844	5985	Guide Adjusting Rod (screw) Hand Wheel Handle.....	50
3012	6007	Guide Adjusting Rod (screw) Hand Wheel Pin.....	01
8836	6040	Guide Connecting Rod.....	35
708F	6011	" " " " Set Screw.....	25
8837	5988	" Rod.....	75
8838	5992	" " Bracket (left) with 445c, in place of 8743.....	2 00
3012	6007	Guide Rod Bracket (left) Dowel Pin...	01
8839	6040	" " " (right) with 445c, in place of 8744.....	2 00
3012	6007	Guide Rod Bracket (right) Dowel Pin...	01
445c	6009	" " Set Screw.....	03
8833	—	Guide complete, Nos. 8834 to 8843, six 123D and seven 3012, in place of 8739	24 00

**LIST OF PARTS COMPLETE
FOR
MACHINE NO. 5-5**

TWO BOX SHUTTLES, 1/2 INCH TO 1 5/16 INCH. GAUGE, RATCHET FEED,
SCREW GUIDE

NO.	PLATE	NAME	EACH
*43185	—	Arm.....	\$40 00
19785	6007	" Dowel Pin.....	20
573E	6008	" Screw.....	18
16962	5987	" Shaft.....	10 00
8704	5990	" " Bushing.....	1 00
434C	6009	" " " Set Screw.....	04
11913	5996	" Side Cover.....	25
65D	6010	" " " Hinge Screw.....	12
16963	5985	Balance Wheel and Pulley (tight) with two 344C.....	7 00
16964	5994	Balance Wheel and Pulley (tight) Key..	25
344C	6008	" " " " " S e t Screw.....	08
*43186	—	Bed.....	50 00
16951	5985	Belt Shifter Fork.....	75
432C	6009	" " " Set Screw.....	04
16952	5985	" " Frame with 8804 and two 432C.....	1 75
8804	5985	Belt Shifter Frame Handle.....	30
11451	5985	" " Guide Rod.....	75
11453	5994	" " " Collar with two 448c.....	15
448c	6009	Belt Shifter Guide Rod Collar Set Screw.	03
3012	6007	" " " " Pin.....	01
16966	5985	" " Sliding Rod.....	75
8808	5994	" " " Collar with two 448c.....	25
448c	6009	Belt Shifter Sliding Rod Collar Set Screw.....	03
8873	6007	Belt Shifter Sliding Rod Pin.....	05
43187	5989	Crank Connecting Rod with 16968, 16969 and two 129E.....	3 00
*16968	—	Crank Connecting Rod Cap.....	75
129E	5994	" " " " Screw.....	04
1151c	6010	" " " Hinge Screw.....	20
1646E	5991	" " " " Nut	08
16969	5994	" " " Oil Cup.....	25

NO.	PLATE	NAME	EACH
16970	5989	Feed Connecting Rod with 16969.....	\$5 00
16969	5994	" " " Oil Cup.....	25
8712	5990	" Eccentric with two 432C.....	1 50
432C	6009	" " Set Screw.....	04
16933	5989	" Regulator with 8735.....	3 00
484E	6011	" " Adjusting Stud.....	40
1531E	6012	" " " " Thumb Nut.....	15
8715	5991	Feed Regulator Adjusting Stud Thumb Nut Washer.....	25
1503E	6012	Feed Regulator Nut.....	10
16928	5990	" " " Washer.....	50
16931	5990	" " Pawl with 8735.....	2 50
16932	5991	" " " Hinge Stud.....	50
1646C	5991	" " " " " N u t	08
8715	5991	" " " " " " Washer.....	25
2117	5991	Feed Regulator Pawl Pin.....	01
40060	5991	" " " Spring.....	10
8735	5991	" " " " Hook.....	15
16935	5991	" " " Washer.....	25
16918	5985	" Roll (lower) with two 437C.....	20 00
8714	6007	" " " Pin.....	15
437C	5994	" " " Set Screw.....	04
16920	5985	" " (upper).....	20 00
16921	5985	" " " Arm with 344c and two 445c.....	7 00
16922	6007	Feed Roll (upper) Arm Pin.....	10
344C	6008	" " " " Set Screw.....	08
16971	5985	" " " " Shaft.....	2 50
8722	5990	" " " " " Collar with two 434c.....	75
434c	6009	Feed Roll (upper) Arm Shaft Collar Set Screw.....	04
16972	5985	Feed Roll (upper) Lifting Arm with 344c.....	4 00
16924	6007	Feed Roll (upper) Lifting Arm Pin.....	10
344c	6008	" " " " " Set Screw	08
16973	5985	" " " " Lever with 483E, 11466 and 16975.....	2 50
16974	5990	Feed Roll (upper) Lifting Lever Bracket	1 25
3012	6007	" " " " " " Dowel Pin.....	01
16975	5986	Feed Roll (upper) Lifting Lever Handle (wood).....	50
11466	6006	Feed Roll (upper) Lifting Lever Handle Washer.....	10

NO.	PLATE	NAME	EACH
2117	5991	Feed Roll (upper) Lifting Lever Pin...	\$ 01
483E	5991	" " " " " Screw	
		Stud.....	40
16925	5991	Feed Roll (upper) Lifting Lever Screw	
		Stud Roller.....	15
1585D	6012	Feed Roll (upper) Lifting Lever Screw	
		Stud Thumb Nut.....	1 50
16976	5991	Feed Roll (upper) Lifting Lever Screw	
		Stud Thumb Nut Washer.....	25
16976	5991	Feed Roll (upper) Lifting Lever Screw	
		Stud Washer.....	25
8715	5991	Feed Roll (upper) Lifting Lever Washer.	25
16926	5985	" " " Shaft.....	2 25
445C	6009	" " " " Set Screw.....	03
16927	5987	" Shaft.....	4 00
8718	5989	" " Bracket (intermediate)	2 00
8582	6007	" " " " "	
		Dowel Pin.....	02
338E	6008	Feed Shaft Bracket (intermediate)	
		Screw.....	10
16919	5989	Feed Shaft Bracket (left).....	2 50
8582	6007	" " " " Dowel Pin...	02
338E	6008	" " " " Screw.....	10
16919	5989	" " " (right).....	2 50
8582	6007	" " " " Dowel Pin..	02
338E	6008	" " " " Screw.....	10
16929	5989	" Wheel.....	12 00
8731	5989	" " Hub with 344c.....	2 50
16930	6007	" " " Pin.....	10
344C	6008	" " " Set Screw.....	08
16977	5990	" " Retaining Pawl (long).....	1 00
16978	5990	" " " " (short).....	1 00
16979	5990	" " " " B r a c k e t	1 50
2117	5991	" " " " " "	
		Dowel Pin.....	01
2117	5991	Feed Wheel Retaining Pawl Pin.....	01
16980	5997	" " " " Separating	
		Washer.....	10
16981	5997	Feed Wheel Retaining Pawl Washer...	15
123D	6010	" " Screw.....	06
43158	5992	Guide (left) with 344c.....	4 00
344C	6008	" " Set Screw.....	08
43159	5992	" (right) with 344c.....	4 50
344C	6008	" " Set Screw.....	08
43160	5988	" Adjusting Rod (screw).....	12 00
8841	5992	" " " " Bracket	1 00
3012	6007	" " " " " "	
		Dowel Pin.....	01

NO.	PLATE	NAME	EACH
123D	6010	Guide Adjusting Rod (screw) Bracket	
		Screw.....	\$ 06
8842	6025	Guide Adjusting Rod (screw) Collar with	
		two 446c.....	50
446C	6051	Guide Adjusting Rod (screw) Collar Set	
		Screw.....	03
8843	5985	Guide Adjusting Rod (screw) Hand	
		Wheel with 8844.....	3 00
8844	5985	Guide Adjusting Rod (screw) Hand	
		Wheel Handle.....	50
3012	6007	Guide Adjusting Rod (screw) Hand	
		Wheel Pin.....	01
43161	5988	Guide Connecting Rod.....	75
43162	5988	" Rod (lower, left).....	1 00
445C	6009	" " " " Set Screw.....	03
43163	5988	" " (lower, right).....	75
445C	6009	" " " " Set Screw.....	03
43164	5988	" " (upper).....	1 50
445C	6009	" " " " Set Screw.....	03
43165	5992	" " Bracket (intermediate with	
		three 445c.....	2 50
3012	6007	Guide Rod Bracket (intermediate)	
		Dowel Pin.....	01
123D	6010	Guide Rod Bracket (intermediate)	
		Screw.....	06
43166	5992	Guide Rod Bracket (left) with two	
		445c.....	2 25
3012	6007	Guide Rod Bracket (left) Dowel Pin...	01
123D	6010	" " " " Screw.....	06
8838	5992	" " " (right) with 445c.....	2 00
3012	6007	" " " " Dowel Pin..	01
123D	6010	" " " " Screw.....	06
8915	6055	Leg (left).....	3 50
779E	6008	" " Screw.....	10
8916	6055	" (right).....	3 50
779E	6008	" " Screw.....	10
43188	6013	Needle Bar for 43189.....	5 00
43189	—	Needle Bar complete with adjustable	
		clamps, for 1/2 in. to 5/8 in. gauge, Nos.	
		43188, 43193, 43194 and two 898D...	9 10
43190	6013	Needle Bar for 43191.....	5 00
43191	—	Needle Bar complete with adjustable	
		clamps, for 1 1/16 in. to 1 5/16 in. gauge,	
		Nos. 43190, 43195, 43196 and two	
		898D.....	9 10
8849	6014	Needle Bar Connecting Link.....	1 25
370C	6010	" " " " H i n g e	
		Screw.....	18

NO. PLATE	NAME	EACH
1509E 6012	Needle Bar Connecting Link Hinge Screw Nut.....	\$ 06
43192 6015	Needle Bar Connecting Stud with two 50124D.....	3 50
50124D 6015	Needle Bar Connecting Stud Clamping Screw.....	12
43193 6015	Needle Clamp (left) with 191F, for 43189	2 00
43194 6015	" " (right) " " " "	2 00
43195 6015	" " (left) " " " 43191	2 00
43196 6015	" " (right) " " " "	2 00
898D 6015	" " Screw.....	04
191F 6015	" Set Screw.....	03
8903 6016	" Plate.....	1 25
8904 6014	" " Loop Separator.....	50
381D 6009	" " Screw.....	06
16989 6017	Oil Cup.....	80
43197 6017	" " Cover.....	25
9084 5997	" " " Hinge Pin.....	02
2205 5997	" " " Latch Spring.....	04
207F 6010	" " " " " Screw.....	02
11919 5997	" " Thread Eyelet.....	05
8953 5997	" or Wax Stripper (felt).....	03
8482 5997	" " " Washer (steel) for 16989.....	01
11918 5997	Oil or Wax Stripper Washer (steel) for 43197.....	03
207F 6010	Oil or Wax Stripper Washer Screw.....	02
43198 6017	Oil Cup complete, Nos. 2205, 8482, 9084, 11918, 16989, 43197, two each 8953, 11919 and three 207F.....	1 40
134D 6051	Oil Cup Screw.....	05
16911 5996	Oscillating Rock Shaft.....	8 00
16912 —	Oscillating Rock Shaft complete, Nos. 654C, 8752, 16911 and two 1503E.....	10 00
8752 5996	Oscillating Rock Shaft Hinge Pin.....	1 25
1503E 6012	" " " " " Nut..	10
654C 6009	" " " " " Screw Bearing.....	25
1503E 6012	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut.....	10
8852 6017	Oscillating Shaft.....	2 00
43199 —	" " Crank.....	4 00
43200 6014	Oscillating Shaft Crank complete, Nos. 445C, 1513E, 16993 and 43199.....	4 60
8873 6007	Oscillating Shaft Crank Pin.....	05
445C 6009	" " " Set Screw.....	03
8917 5997	" " " Slide B lock	35
16993 5997	" " " " " "	55

NO. PLATE	NAME	EACH
50038C 5997	Oscillating Shaft Crank Slide Block Screw Stud.....	\$ 20
1513E 5997	Oscillating Shaft Crank Slide Block Screw Stud Nut.....	05
16994 5996	Presser Bar for 43202.....	1 25
43201 5996	" " " 43206.....	1 25
16995 5993	" " Guide Bracket with 145D and 965D.....	2 00
145D 6010	Presser Bar Guide Bracket Adjusting Screw.....	04
965D 6010	Presser Bar Guide Bracket Clamping Screw.....	04
8767 5993	Presser Bar Guide Bracket Guide.....	50
135D 6009	" " " " " Screw	05
16996 5993	" " Lifter with 8761 and 8763..	1 25
8760 5997	" " " Friction Washer.....	03
16C 6010	" " " Hinge Screw.....	20
8761 5997	" " " Stop Pin.....	05
16997 5993	" " Lifting Link.....	50
166D 6010	" " " " Cap Screw.....	07
8763 5997	" " " " " Hinge Stud	25
8973 5997	" " " " " " "	05
8765 5997	Presser Bar Lifting Link Hinge Stud Washer.....	04
11031 5996	Presser Bar Spring (flat).....	1 50
16998 5993	" " " " Bracket.....	25
381D 6009	" " " " " Screw	06
4389 6007	" " " " Guide Pin.....	02
9021 5993	" " " (spiral).....	25
20251 5991	" " " " Collar with 456C.....	20
456C 5991	Presser Bar Spring (spiral) Collar Set Screw.....	02
43202 6018	Presser Foot with two 346D.....	5 00
346D 6001	" " Clamping Screw.....	08
609D 6011	Pressure Regulating Thumb Screw.....	45
1606C 6012	" " " " Lock Nut.....	05
16914 5985	Pulley (loose).....	1 50
8706 5999	" " Flanged Bushing with two 434C.....	1 00
434C 6009	Pulley (loose) Flanged Bushing Set Screw.....	04
16915 5999	Pulley (loose) Collar.....	50
1992 6001	Roller, 2 3/4 in. diam., with 370F and 1509E.....	3 00

NO.	PLATE	NAME	EACH
43203	6019	Roller Arm (left).....	\$3 00
43204	6019	" " (right).....	3 00
430C	6019	" " Adjusting Screw.....	04
1520E	6001	" " " " Nut.....	03
43205	6019	" " Bracket with two 346D.....	12 00
346D	6001	" " " Clamping Screw.....	08
8859	6019	" " Hinge Pin.....	25
8773	6001	" " Lock Spring.....	10
327D	6001	" " " " Screw.....	05
43206	6021	Roller Presser complete, 2 $\frac{1}{2}$ in. roller, Nos. 43203 to 43205 and two each 327D, 430C, 1520E, 1992, 8773 and 8859.....	25 00
370F	6001	Roller Screw.....	18
1509E	6001	" " Nut.....	06
43207	6023	Shuttle (inside) Bobbin.....	50
16909	6022	" " " Retaining Spring.....	15
8818	6022	" " " " " " " " " " Rivet.....	01
*8861	—	Shuttle (inside) Body with 838E, 8864, 16909, 43208 and two 8818.....	5 50
*8862	—	Shuttle (inside) Cover.....	3 00
8816	6022	" " " Hinge Pin.....	10
8863	6022	" " Delivery Eye Thread Guard.....	05
8818	6022	Shuttle (inside) Delivery Eye Thread Guard Rivet.....	01
8864	6022	Shuttle (inside) Main Spring.....	1 00
838E	6022	" " " " " Screw.....	05
43208	6022	" " " " " Steady Pin.....	01
452F	6022	" " Tension Regulating Screw.....	04
8865	6022	Shuttle (inside) Tension Spring.....	25
330D	6022	" " " " " Screw.....	02
14222	6022	" " " " " Steady Pin.....	01
8860	6022	Shuttle (inside) complete, Nos. 330D, 452F, 8816, 8818, 8861 to 8863, 8865, 14222 and 43207.....	10 00
43207	6023	Shuttle (outside) Bobbin.....	50
16910	6023	" " " Retaining Spring.....	15
8818	6022	Shuttle (outside) Bobbin Retaining Spring Rivet.....	01
*8867	—	Shuttle (outside) Body with 838E, 8819, 16910, 43208 and two 8818.....	5 50

NO.	PLATE	NAME	EACH
*8815	—	Shuttle (outside) Cover.....	\$3 00
8816	6022	" " " Hinge Pin.....	10
8817	6023	" " Delivery Eye Thread Guard.....	05
8818	6022	Shuttle (outside) Delivery Eye Thread Guard Rivet.....	01
8819	6023	Shuttle (outside) Main Spring.....	1 00
838E	6022	" " " " " Screw.....	05
43208	6022	" " " " " Steady Pin.....	01
452F	6022	Shuttle (outside) Tension Regulating Screw.....	04
8820	6023	Shuttle (outside) Tension Spring.....	25
330D	6022	" " " " " Screw.....	02
14222	6022	" " " " " Steady Pin.....	01
8866	6023	Shuttle (outside) complete, Nos. 330D, 452F, 8815 to 8818, 8820, 8867, 14222 and 43207.....	10 00 <u>13 50</u>
8868	6017	Shuttle Driver with two 445C.....	1 50
43209	6017	" " Bracket.....	03
20677	6007	" " " Dowel Pin.....	10
338E	6008	" " " Screw.....	05
8873	6007	" " Pin.....	03
445C	6009	" " Set Screw.....	6 00
8870	—	" Race Body.....	1 50
16955	6017	" " Ring (left).....	1 50
16956	6017	" " " (right).....	12
660D	6010	" " " Screw.....	03
16957	5994	" " " Spring.....	03
43210	6017	Shuttle Race (flexible rings) complete, Nos. 8870, 16955, 16956 and six each 660D and 16957.....	10 00
8055	6007	Shuttle Race Dowel Pin.....	03
50125E	6008	" " Screw.....	12
43211	6004	" " Cover (left).....	03
180F	6010	" " " " " Screw.....	50
43212	6004	" " " (right).....	03
180F	6010	" " " " " Screw.....	15
8786	6005	Tension Disc.....	10
1535E	6005	" Regulating Thumb Nut.....	01
8787	6005	" " " " Washer.....	25
406D	6005	" Screw Stud.....	25
8788	6005	" Spring.....	05
11950	6024	" Thread Eyelet.....	90
8785	—	Tension complete, Nos. 406D, 1535E, 8787, 8788 and two 8786.....	

NO.	PLATE	NAME	EACH
43156	6006	Thread Eyelet (top of arm).....	\$ 25
134D	6006	" " " " " Screw	05
11466	6006	" " " " " "	
		Washer.....	10
43154	6006	Thread Guard (front of arm).....	05
164D	6006	" " " " " Screw....	04
43213	6024	" Guiding Roller.....	1 00
406D	6005	" " " " " Screw Stud	25
43214	6024	" " " " " "	
		Washer.....	15
11241	6024	Thread Guiding Roller Separating Washer (cloth).....per 100	25
19686	6024	Thread Guiding Roller Tension Spring..	10
1535E	6005	" " " " " Regu- lating Thumb Nut.....	10
8787	6005	Thread Guiding Roller Tension Regu- lating Thumb Nut Washer.....	01
11241	6024	Thread Guiding Roller Washer (cloth) per 100.....	25
8878	6024	Thread Guiding Roller Washer (steel)..	15
8796	5989	" Take-up Cam with two 432c...	8 00
8714	6007	" " " " Pin.....	15
432C	6009	" " " " Set Screw.....	04
43215	6014	" " " " Lever with 1513E and 1865.....	3 00
10D	6010	Thread Take-up Lever Hinge Screw....	25
1865	6012	" " " " Roller and Screw Stud.....	45
1513E	6001	Thread Take-up Lever Roller and Screw Stud Nut.....	05
8885	6024	Thread Take-up Spring.....	15
8077	6006	" " " " Hook.....	01
43216	6024	" " " " Lever with 8077	2 50
9046	6006	" " " " " Stop Pin.	05
11066	6006	" " " " " Regulator with 8077 and 9046.....	1 50
164D	6006	Thread Take-up Spring Regulator Screw	04
43217	6025	" " " " Staple.....	20
690D	6025	" " " " " Screw.....	05
41544	6025	" " " " " Washer...	05

LIST OF PARTS COMPLETE FOR MACHINE NO. 5-7

TWO CYLINDER SHUTTLES, 1 INCH TO 1½ INCH GAUGE, RATCHET
FEED, SCREW GUIDE

NO.	PLATE	NAME	EACH
*43185	—	Arm.....	\$40 00
19785	6007	" Dowel Pin.....	20
573E	6008	" Screw.....	18
16962	5987	" Shaft.....	10 00
8704	5990	" " Bushing.....	1 00
434C	6009	" " " " Set Screw.....	04
11913	5996	" Side Cover.....	25
65D	6010	" " " " Hinge Screw.....	12
16963	5985	Balance Wheel and Pulley (tight) with two 344c.....	7 00
16964	5994	Balance Wheel and Pulley (tight) Key..	25
344C	6008	" " " " " " Set Screw.....	08
*43186	—	Bed.....	50 00
16951	5985	Belt Shifter Fork.....	75
432C	6009	" " " " Set Screw.....	04
16952	5985	" " " " Frame with 8804 and two 432c.....	1 75
8804	5985	Belt Shifter Frame Handle.....	30
11451	5985	" " " " Guide Rod.....	75
11453	5994	" " " " " Collar with two 448c.....	15
448C	6009	Belt Shifter Guide Rod Collar Set Screw.	03
3012	6007	" " " " " Pin.....	01
16966	5985	" " " " Sliding Rod.....	75
8808	5994	" " " " " Collar with two 448c.....	25
448C	6009	Belt Shifter Sliding Rod Collar Set Screw	03
8873	6007	" " " " " Pin.....	05
43187	5989	Crank Connecting Rod with 16968, 16969 and two 129E.....	3 00
*16968	—	Crank Connecting Rod Cap.....	75
129E	5994	" " " " " Screw.....	04
1151C	6010	" " " " " Hinge Screw....	20
1646E	5991	" " " " " " Nut	08
16969	5994	" " " " " Oil Cup.....	25

NO.	PLATE	NAME	EACH
16970	5989	Feed Connecting Rod with 16969.....	\$5 00
16969	5994	" " " Oil Cup.....	25
8712	5990	" Eccentric with two 432C.....	1 50
432C	6009	" " Set Screw.....	04
16933	5989	" Regulator with 8735.....	3 00
484E	6011	" " Adjusting Stud.....	40
1531E	6012	" " " " Thumb Nut.....	15
8715	5991	Feed Regulator Adjusting Stud Thumb Nut Washer.....	25
1503E	6012	Feed Regulator Nut.....	10
16928	5990	" " " Washer.....	50
16931	5990	" " Pawl with 8735.....	2 50
16932	5991	" " " Hinge Stud.....	50
1646C	5991	" " " " " Nut	08
8715	5991	" " " " " " Washer.....	25
2117	5991	Feed Regulator Pawl Pin.....	01
40060	5991	" " " Spring.....	10
8735	5991	" " " Hook.....	15
16935	5991	" " " Washer.....	25
16918	5985	" Roll (lower) with two 437C.....	20 00
8714	6007	" " " Pin.....	15
437C	5994	" " " Set Screw.....	04
16920	5985	" " (upper).....	20 00
16921	5985	" " " Arm with 344C and two 445C.....	7 00
16922	6007	Feed Roll (upper) Arm Pin.....	10
344C	6008	" " " " Set Screw.....	08
16971	5985	" " " " Shaft.....	2 50
8722	5990	" " " " " Collar with two 434C.....	75
434C	6009	Feed Roll (upper) Arm Shaft Collar Set Screw.....	04
16972	5985	Feed Roll (upper) Lifting Arm with 344C	4 00
16924	6007	" " " " " Pin.....	10
344C	6008	" " " " " Set Screw	08
16973	5985	" " " " " Lever with 483E, 11466 and 16975.....	2 50
16974	5990	Feed Roll (upper) Lifting Lever Bracket	1 25
3012	6007	" " " " " Dowel Pin.....	01
16975	5986	Feed Roll (upper) Lifting Lever Handle (wood).....	50
11466	6006	Feed Roll (upper) Lifting Lever Handle Washer.....	10
2117	5991	Feed Roll (upper) Lifting Lever Pin..	01
483E	5991	" " " " " Screw	40
		Stud.....	40

NO.	PLATE	NAME	EACH
16925	5991	Feed Roll (upper) Lifting Lever Screw Stud Roller.....	\$ 15
1585D	6012	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut.....	1 50
16976	5991	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut Washer.....	25
16976	5991	Feed Roll (upper) Lifting Lever Screw Stud Washer.....	25
8715	5991	Feed Roll (upper) Lifting Lever Washer	25
16926	5985	" " " Shaft.....	2 25
445C	6009	" " " " Set Screw.....	03
16927	5987	" Shaft.....	4 00
8718	5989	" " Bracket (intermediate)	2 00
8582	6007	" " " " Dowel Pin.....	02
338E	6008	Feed Shaft Bracket (intermediate) Screw.....	10
16919	5989	Feed Shaft Bracket (left).....	2 50
8582	6007	" " " " Dowel Pin..	02
338E	6008	" " " " Screw.....	10
16919	5989	" " " (right).....	2 50
8582	6007	" " " " Dowel Pin..	02
338E	6008	" " " " Screw.....	10
16929	5989	" Wheel.....	12 00
8731	5989	" " Hub with 344C.....	2 50
16930	6007	" " " Pin.....	10
344C	6008	" " " Set Screw.....	08
16977	5990	" " Retaining Pawl (long).....	1 00
16978	5990	" " " " (short)....	1 00
16979	5990	" " " " Bracket	1 50
2117	5991	" " " " " Dowel Pin.....	01
2117	5991	Feed Wheel Retaining Pawl Pin.....	01
16980	5997	" " " Separating Washer.....	10
16981	5997	Feed Wheel Retaining Pawl Washer...	15
123D	6010	" " Screw.....	06
43158	5992	Guide (left) with 344C.....	4 00
344C	6008	" " Set Screw.....	08
43159	5992	" (right) with 344C.....	4 50
344C	6008	" " Set Screw.....	08
43160	5988	" Adjusting Rod (screw).....	12 00
8841	5992	" " " " Bracket	1 00
3012	6007	" " " " " Dowel Pin.....	01
123D	6010	Guide Adjusting Rod (screw) Bracket Screw.....	06

NO.	PLATE	NAME	EACH
8842	6025	Guide Adjusting Rod (screw) Collar with two 446C.....	\$ 50
446C	6051	Guide Adjusting Rod (screw) Collar Set Screw.....	03
8843	5985	Guide Adjusting Rod (screw) Hand Wheel with 8844.....	3 00
8844	5985	Guide Adjusting Rod (screw) Hand Wheel Handle.....	50
3012	6007	Guide Adjusting Rod (screw) Hand Wheel Pin.....	01
43161	5988	Guide Connecting Rod.....	75
43162	5988	" Rod (lower, left).....	1 00
445C	6009	" " " " Set Screw.....	03
43163	5988	" " (lower, right).....	75
445C	6009	" " " " Set Screw.....	03
43164	5988	" " (upper).....	1 50
445C	6009	" " " " Set Screw.....	03
43165	5992	" " Bracket (intermediate) with three 445C.....	2 50
3012	6007	Guide Rod Bracket (intermediate) Dowel Pin.....	01
123D	6010	Guide Rod Bracket (intermediate) Screw.....	06
43166	5992	Guide Rod Bracket (left) with two 445C.....	2 25
3012	6007	" " " " Dowel Pin.....	01
123D	6010	" " " " Screw.....	06
8838	5992	" " " (right) with 445C.....	2 00
3012	6007	" " " " Dowel Pin.....	01
123D	6010	" " " " Screw.....	06
8915	6055	Leg (left).....	3 50
779E	6008	" " Screw.....	10
8916	6055	" (right).....	3 50
779E	6008	" " Screw.....	10
43190	6013	Needle Bar for 43191.....	5 00
43191	—	Needle Bar complete with adjustable clamps, for 1 in. and 1 1/8 in. gauges, Nos. 43190, 43195, 43196 and two 898D.....	9 10
43218	6013	Needle Bar for 43219.....	5 00
43219	—	Needle Bar complete with adjustable clamps, for 1 1/8 in. to 1 1/2 in. gauge, Nos. 43218, 43220, 43221 and two 898D.....	9 10
8849	6014	Needle Bar Connecting Link.....	1 25
370C	6010	" " " " Hinge Screw.....	18
1509E	6012	Needle Bar Connecting Link Hinge Screw Nut.....	06

NO.	PLATE	NAME	EACH
43192	6015	Needle Bar Connecting Stud with two 50124D.....	\$3 50
50124D	6015	Needle Bar Connecting Stud Clamping Screw.....	12
43195	6015	Needle Clamp (left) with 191F, for 43191.....	2 00
43196	6015	" " (right) " " " ".....	2 00
43220	6015	" " (left) " " " 43219.....	2 00
43221	6015	" " (right) " " " ".....	2 00
898D	6015	" " Screw.....	04
191F	6015	" Set Screw.....	03
8903	6016	" Plate, for 1 in. and 1 1/8 in. gauge.....	1 25
43222	6026	" " " 1 1/8 in. to 1 1/2 in. gauge.....	1 50
381D	6009	" " Screw.....	06
16989	6017	Oil Cup.....	80
43197	6017	" " Cover.....	25
9084	5997	" " " Hinge Pin.....	02
2205	5997	" " " Latch Spring.....	04
207F	6010	" " " " " Screw.....	02
11919	5997	" " Thread Eyelet.....	05
8953	5997	" or Wax Stripper (felt).....	03
8482	5997	" " " " Washer (steel) for 16989.....	01
11918	5997	Oil or Wax Stripper Washer (steel) for 43197.....	03
207F	6010	Oil or Wax Stripper Washer Screw.....	02
43198	6017	Oil Cup complete, Nos. 2205, 8482, 9084, 11918, 16989, 43197, two each 8953, 11919 and three 207F.....	1 40
134D	6051	Oil Cup Screw.....	05
16911	5996	Oscillating Rock Shaft.....	8 00
16912	—	Oscillating Rock Shaft complete, Nos. 654C, 8752, 16911 and two 1503E.....	10 00
8752	5996	Oscillating Rock Shaft Hinge Pin.....	1 25
1503E	6012	" " " " " Nut.....	10
654C	6009	" " " " " Screw.....	25
1503E	6012	Oscillating Rock Shaft Hinge Pin Screw Bearing Nut.....	10
8852	6017	Oscillating Shaft.....	2 00
16991	—	" " Crank.....	4 00
16992	5993	Oscillating Shaft Crank complete, Nos. 445C, 1513E, 16991 and 16993.....	4 65
8873	6007	Oscillating Shaft Crank Pin.....	05
445C	6009	" " " Set Screw.....	03
8917	5997	" " " Slide Block.....	35
16993	5997	" " " " " 8917 with 50038C.....	55

NO.	PLATE	NAME	EACH
50038C	5997	Oscillating Shaft Crank Slide Block	
		Screw Stud.....	\$ 20
1513E	5997	Oscillating Shaft Crank Slide Block	
		Screw Stud Nut.....	05
16994	5996	Presser Bar for 43223.....	1 25
43201	5996	" " " 43225.....	1 25
16995	5993	" " Guide Bracket with 145D and 965D.....	2 00
145D	6010	Presser Bar Guide Bracket Adjusting Screw.....	04
965D	6010	Presser Bar Guide Bracket Clamping Screw.....	04
8767	5993	Presser Bar Guide Bracket Guide.....	50
135D	6009	" " " " Screw.....	05
16996	5993	" " Lifter with 8761 and 8763..	1 25
8760	5997	" " Friction Washer.....	03
16C	6010	" " Hinge Screw.....	20
8761	5997	" " Stop Pin.....	05
16997	5993	" " Lifting Link.....	50
166D	6010	" " " " Cap Screw.....	07
8763	5997	" " " " Hinge Stud	25
8973	5997	" " " " " "	
		Pin.....	05
8765	5997	Presser Bar Lifting Link Hinge Stud Washer.....	04
11031	5996	Presser Bar Spring (flat).....	1 50
16998	5993	" " " " Bracket.....	25
381D	6009	" " " " Screw.....	06
4389	6007	" " " " Guide Pin.....	02
9021	5993	" " " (spiral).....	25
20251	5991	" " " " Collar with 456C.....	20
456C	5991	Presser Bar Spring (spiral) Collar Set Screw.....	02
43223	6027	Presser Foot with two 346D.....	5 00
346D	6001	" " Clamping Screw.....	08
609D	6011	Pressure Regulating Thumb Screw.....	45
1606C	6012	" " " " Lock Nut.....	05
16914	5985	Pulley (loose).....	1 50
8706	5999	" " Flanged Bushing with two 434C.....	1 00
434C	6009	Pulley (loose) Flanged Bushing Set Screw.....	04
16915	5999	Pulley (loose) Collar.....	50
1992	6001	Roller, 2 $\frac{5}{8}$ in. diam., with 370F and 1509E.....	3 00

NO.	PLATE	NAME	EACH
43203	6019	Roller Arm (left).....	\$3 00
43204	6019	" " (right).....	3 00
430C	6019	" " Adjusting Screw.....	04
1520E	6001	" " " " Nut.....	03
43224	6020	" " Bracket with two 346D.....	12 00
346D	6001	" " Clamping Screw.....	08
8859	6019	" " Hinge Pin.....	25
8773	6001	" " Lock Spring.....	10
327D	6001	" " " " Screw.....	05
43225	6021	Roller Presser complete, 2 $\frac{5}{8}$ in. roller, Nos. 43203, 43204, 43224 and two each 327D, 430C, 1520E, 1992, 8773 and 8859.....	25 00
370F	6001	Roller Screw.....	18
1509E	6001	" " Nut.....	06
16901	6003	Shuttle (inside) Bobbin.....	50
8892	6029	" " Cylinder.....	6 00
8777	6003	" " Hinge Pin.....	10
8893	6029	" " Latch Spring	25
330D	6003	" " " " "	
		Screw.....	02
8894	6029	Shuttle (inside) Frame.....	8 00
8895	6029	" " Tension Spring.....	1 00
1323F	6003	" " " Regulating Screw.....	05
8891	6028	Shuttle (inside) complete, Nos. 330D, 1323F, 8777, 8892 to 8895 and 16901..	13 50
16901	6003	Shuttle (outside) Bobbin.....	50
8897	6031	" " Cylinder.....	6 00
8777	6003	" " Hinge Pin.....	10
8778	6003	" " Latch Spring	25
330D	6003	" " " " "	
		Screw.....	02
8899	6031	Shuttle (outside) Frame.....	8 00
1323F	6003	" " Tension Regulating Screw.....	05
8900	6031	Shuttle (outside) Tension Spring.....	1 00
8896	6030	Shuttle (outside) complete, Nos. 330D, 1323F, 8777, 8778, 8897, 8899, 8900 and 16901.....	13 50
8901	6032	Shuttle Driver with two 445C.....	13 50 13 50
43209	6017	" " Bracket.....	1 50
20677	6007	" " " Dowel Pin.....	03
338E	6008	" " " Screw.....	10
8873	6007	" " Pin.....	05
445C	6009	" " Set Screw.....	03
8902	—	" Race Body.....	6 00

NO.	PLATE	NAME	EACH
16955	6017	Shuttle Race Ring (left).....	\$1 50
16956	6017	" " " (right).....	1 50
	660D 6010	" " " Screw.....	12
16957	5994	" " " Spring.....	03
16958	6032	Shuttle Race (flexible rings) complete, Nos. 8902, 16955, 16956 and six each 660D and 16957.....	10 00
	8055 6007	Shuttle Race Dowel Pin.....	03
50125E	6008	" " Screw.....	12
43211	6004	" " Cover (left) for 1 in. and 1½ in. gauge.....	50
43226	6004	Shuttle Race Cover (left) can be used for 1¼ in., 1½ in. and all gauges between these.....	50
	180F 6010	Shuttle Race Cover (left) Screw.....	03
43212	6004	" " " (right).....	50
	180F 6010	" " " " Screw.....	03
	8786 6005	Tension Disc.....	15
	1535E 6005	" Regulating Thumb Nut.....	10
	8787 6005	" " " " Washer.....	01
	406D 6005	" Screw Stud.....	25
	8788 6005	" Spring.....	25
11950	6024	" Thread Eyelet.....	05
8785	—	Tension complete, Nos. 406D, 1535E, 8787, 8788 and two 8786.....	90
43156	6006	Thread Eyelet (top of arm).....	25
	134D 6006	" " " " " Screw.....	05
11466	6006	" " " " " Washer.....	10
43154	6006	" Guard (front of arm).....	05
	164D 6006	" " " " " Screw.....	04
43213	6024	" Guiding Roller.....	1 00
	406D 6005	" " " " Screw Stud.....	25
43214	6024	" " " " " Washer.....	15
11241	6024	Thread Guiding Roller Separating Washer (cloth)..... per 100	25
19686	6024	Thread Guiding Roller Tension Spring..	10
	1535E 6005	" " " " " Regu- lating Thumb Nut.....	10
	8787 6005	Thread Guiding Roller Tension Regu- lating Thumb Nut Washer.....	01
11241	6024	Thread Guiding Roller Washer (cloth) per 100.....	25
8878	6024	Thread Guiding Roller Washer (steel)..	15
8796	5989	" Take-up Cam with two 432C....	8 00
8714	6007	" " " Pin.....	15
432C	6009	" " " Set Screw.....	04

NO.	PLATE	NAME	EACH
43215	6014	Thread Take-up Lever with 1513E and 1865.....	\$3 00
	10D 6010	Thread Take-up Lever Hinge Screw....	25
1865	6012	" " " Roller and Screw Stud.....	45
1513E	6001	Thread Take-up Lever Roller and Screw Stud Nut.....	05
8885	6024	Thread Take-up Spring.....	15
8077	6006	" " " Hook.....	01
43216	6024	" " " Lever with 8077.....	2 50
9046	6006	" " " Stop Pin.....	05
11066	6006	" " " Regulator with 8077 and 9046.....	1 50
	164D 6006	Thread Take-up Spring Regulator Screw	04
43217	6025	" " Staple.....	20
690D	6025	" " " Screw.....	05
41544	6025	" " " " Washer...	05

MACHINE NO. 5-10

RATCHET FEED, GREATEST DISTANCE FROM CENTRE OF NEEDLE BAR
TO INSIDE OF RIGHT HAND GUIDE 17 INCHES, SLIDING
GUIDE WITH SPECIAL SPRING CATCH

This Machine is the same as No. 5-1 with the following exceptions:

NO.	PLATE	NAME	EACH
43167	5988	Guide Rod, in place of 16984.....	\$7 00
43168	6032	" " Bracket (left) in place of 16985.....	1 50
43169	6032	Guide Rod Bracket (right) with 1364D and 43170, in place of 16985.....	2 75
43170	6025	Guide Rod Bracket (right) Gib.....	50
1364D	6025	" " " " " Screw..	05
16943	6025	" " Locking Stud.....	75
43171	6032	" " " " Bracket.....	2 00
3012	6007	" " " " " Dowel Pin.....	01
123D	6010	Guide Rod Locking Stud Bracket Screw	06
1533D	6025	" " " " Head.....	15
13218	6025	" " " " Spring.....	05

MACHINE NO. 5-11

TWO CYLINDER SHUTTLES, 1 INCH TO 1½ INCH GAUGE. RATCHET
FEED, SLIDING GUIDE WITH SPECIAL SPRING CATCH

This Machine is the same as No. 5-7 with the following exceptions:

NO.	PLATE	NAME	EACH
16982	5992	Guide (left) with 692D, for 43223, in place of 43158.....	\$2 50
43230	5992	Guide (left) with 692D, for 43225.....	2 00
692D	6008	" " Clamping Screw.....	10
16983	5992	" (right) with 692D, for 43223, in place of 43159.....	2 50
43231	5992	Guide (right) with 692D, for 43225.....	2 00
692D	6008	" " Clamping Screw.....	10
43167	5988	" Rod, in place of 43160.....	7 00
43168	6032	" " Bracket (left) in place of 43166.....	1 50
43169	6032	Guide Rod Bracket (right) with 1364D and 43170, in place of 8838.....	2 75
43170	6025	Guide Rod Bracket (right) Gib.....	50
1364D	6025	" " " " " Screw..	05
16943	6025	" " Locking Stud.....	75
43171	6032	" " " " Bracket.....	2 00
3012	6007	" " " " " Dowel Pin.....	01
123D	6010	Guide Rod Locking Stud Bracket Screw	06
1533D	6025	" " " " Head.....	15
13218	6025	" " " " Spring.....	05

ACCESSORIES

NO.	PLATE	NAME	EACH
25955	6047	Oiler with 25956.....	\$ 15
25956	6047	" Spout, 8½ in. long.....	07
26026	6047	Screw Driver (small).....	10
11831	6047	" " (large).....	20
1114E	6011	Screw to secure leg to floor.....	04
9281	6024	" Washer.....	01
21875	6048	Wrench for 1646.....	50
42089	6048	" " 346.....	10
21876	6048	" " 496, 573 and 1508.....	1 20
21874	6048	" " 344 and 779.....	25
43184	6048	" " 338, 692, 1114, 1509 and 1606.....	50

BOBBIN WINDERS

BOBBIN WINDER (Automatic)

FOR 16901

NO.	PLATE	NAME	EACH
22491	6051	Bobbin Position Pin.....	\$ 01
43172	6049	Bracket.....	1 50
338D	6008	" Screw.....	10
9281	6024	" " Washer.....	01
43173	6049	Frame.....	3 50
43174	6049	" Bracket.....	2 50
134D	6051	" " Screw.....	05
567D	6051	" Hinge Screw.....	15
43175	6051	" Plate.....	50
164D	6051	" " Screw.....	04
43176	6049	Pulley (leather) three pieces.....	75
43177	6050	" Flange with 446C.....	35
446C	6051	" " Set Screw.....	03
131D	6051	" Screw.....	04
43178	6050	" Washer.....	50
43179	6051	Spindle.....	50
454C	6051	" Set Screw.....	02
43180	6050	" Shaft with 454C and 22491.....	1 50
43181	6050	Stop Latch with 454C.....	1 25
43182	6050	" " Arm with 454C.....	75
2022	6051	" " " Pin.....	01
454C	6051	" " " Set Screw.....	02

BOBBIN WINDERS

43

NO.	PLATE	NAME	EACH
7585	6050	Stop Latch Hinge Pin.....	\$ 05
2022	6051	" " Pin.....	01
454C	6051	" " Set Screw.....	02
8790	6051	Tension Disc.....	10
1560C	6051	" Regulating Thumb Nut.....	04
8905	6051	" " " Washer.....	01
1224D	6051	" Screw Stud.....	25
8791	6051	" Spring.....	10
16945	—	Tension complete, Nos. 1224D, 1560C, 8791, 8905 and two 8790.....	60
43155	6051	Tension Thread Eyelet.....	05
43183	—	Bobbin Winder (automatic) complete, Nos. 164D, 567D, 7585, 43172 to 43182, two each 134D, 2022 and three 131D.....	14 00

BOBBIN WINDER (Automatic)

FOR 43207

This Bobbin Winder is the same as 43183 with the following exceptions

NO.	PLATE	NAME	EACH
43227	6051	Spindle, in place of 43179.....	\$ 50
43228	6050	Stop Latch with 454C, in place of 43181.....	1 25
43229	—	Bobbin Winder (automatic) complete, Nos. 164D, 567D, 7585, 43172 to 43178, 43180, 43182, 43227, 43228, two each 134D, 2022 and three 131D.....	14 00

BOBBIN WINDER (Automatic)

FOR 8775 AND 16901

(OBSOLETE)

NO.	PLATE	NAME	EACH
9062	6052	Stand with 178F.....	\$ 25
9063	6053	" Shaft.....	04
9064	6053	" " Collar.....	03
9065	6052	" " Pulley.....	25
178F	6053	" " Set Screw.....	03
9066	6053	Spindle.....	10
9067	6052	" Frame.....	15
9068	6053	" " Spring.....	10
7958	6053	" " " Pin.....	01
2448	6052	" Pulley.....	15
8907	6052	Stop Latch.....	25

NO.	PLATE	NAME	EACH
9070	6052	Stop Latch Bracket with 178F.....	\$ 20
178F	6053	" " " Set Screw.....	03
24D	6053	" " Hinge Screw.....	08
1541E	6053	Tension Regulating Thumb Nut.....	05
470E	6053	" Spool Pin with fixed cone.....	25
8018	6053	" " " Adjustable Cone.....	05
8019	6053	" " " Spring.....	02
9071	—	Tension Spool Pin complete, Nos. 470E, 1541E, 8018 and 8019.....	25
9074	6053	Tension Thread Guide Pin.....	03
8906	6052	Bobbin Winder (automatic) complete, Nos. 24D, 2448, 7958, 8907, 9062 to 9068, 9070, 9071, 9074 and two wood screws 1 in. No. 7.....	1 60

BOBBIN WINDER (Hand)

(OBSOLETE)

NO.	PLATE	NAME	EACH
11755	—	Belt.....	\$ 05
11756	—	" 11755 with 25028.....	05
25028	6039	" Hook.....	01
16950	6040	Bracket.....	40
135D	6009	" Screw.....	05
11758	6054	Frame.....	50
11759	6054	Pulley.....	25
11760	6054	" Driving Wheel.....	50
8380	6054	" " " Handle (wood)....	03
11762	6054	" " " " S t u d	10
8382	6039	" " " " " "	01
		Washer.....	01
11761	—	Pulley Driving Wheel Handle complete, Nos. 8380, 8382 and 11762.....	10
11763	6054	Pulley Driving Wheel Stud.....	10
2269	6039	" " " " Pin.....	01
11764	6039	" " " " Washer.....	01
11765	6054	Spindle.....	40
11754	6040	Bobbin Winder (hand) complete, Nos. 2269, 11756, 11758 to 11761 and 11763 to 11765.....	2 00
135D	6009	Bobbin Winder Screw.....	05

OBSOLETE PARTS**FOR MACHINE NO. 5-1**

NO.	PLATE	NAME	EACH
*8710	—	Bed.....	\$35 00
8717	6040	Feed Shaft Bracket (left).....	2 50
3012	6007	" " " " Dowel Pin....	01
8740	5992	Guide (left) with 354c.....	50
8741	5992	" (right) with 354c.....	50
8742	5988	" Rod.....	1 25
8743	5992	" " Bracket (left).....	1 50
8744	5992	" " " (right) with 708F....	1 00
708F	6011	" " Set Screw.....	25
8739	—	Guide complete, Nos. 8740 to 8744 and four 123D.....	5 00

FOR MACHINES NOS. 5-1 AND 5-3

NO.	PLATE	NAME	EACH
*8701	—	Arm.....	\$35 00
*8811	—	" Side Plate.....	1 00
8703	5987	" Shaft.....	9 00
8708	6034	" Spool Pin.....	05
8709	5986	Balance Wheel and Pulley (tight) with two 344c.....	5 00
8805	5986	Belt Shifter Fork.....	75
8803	5986	" " Frame with 8804 and two 432c.....	1 75
8806	5986	Belt Shifter Guide Rod.....	30
8807	5986	" " Sliding Rod.....	75
3012	6007	" " " " Pin.....	01
8809	6036	" " " " Spring.....	15
8808	5994	" " " " Collar with two 448c.....	25
448c	6009	Belt Shifter Sliding Rod Collar Set Screw	03
8802	—	Belt Shifter complete, Nos. 8803, 8805 to 8807 and two each 3012 and 8808.	5 00
8711	6033	Crank Connecting Rod with 16917 and two 129E.....	1 75
*16917	—	Crank Connecting Rod Cap.....	—
369c	6010	" " " Hinge Screw....	20
1509E	6012	" " " " Nut.....	06
8713	6033	Feed Connecting Rod.....	3 00
8714	6007	" Eccentric Pin.....	15

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
8733	6040	Feed Regulator with 8735.....	\$3 00
8726	6034	" " Nut Washer, use 8715..	25
8715	5991	" " " " " " " " " " " "	25
8732	6036	" " Pawl with 8735.....	2 50
	17D 6010	" " " Hjnge Screw.....	20
8914	6039	" " " Spring (heavy)...	10
8734	6039	" " " " (light)....	08
8716	5986	" Roll (lower) with two 437C.....	15 00
8719	5986	" " (upper).....	15 00
8720	5986	" " " Arm with 344c and two 445C.....	6 00
8714	6007	Feed Roll (upper) Arm Pin.....	15
8721	5986	" " " " Shaft.....	1 75
8723	5986	" " " Lifting Arm with 344c.....	2 50
8714	6007	Feed Roll (upper) Lifting Arm Pin.....	15
8724	5986	" " " " Lever with 483E, 11466 and 16975.....	2 50
8725	6035	Feed Roll (upper) Lifting Lever Bracket	1 00
8726	6034	" " " " " " " " " " " "	25
		Pin Washer, use 8715.....	25
8715	5991	Feed Roll (upper) Lifting Lever Bracket Pin Washer.....	25
8726	6034	Feed Roll (upper) Lifting Lever Washer, use 8715.....	25
8715	5991	Feed Roll (upper) Lifting Lever Washer	25
8728	5986	" " " Shaft.....	1 75
8729	5987	" Shaft.....	3 50
3012	6007	" " B r a c k e t (intermediate) Dowel Pin.....	01
8718	5989	Feed Shaft Bracket (right).....	2 00
3012	6007	" " " " Dowel Pin..	01
8912	6040	" Wheel.....	10 00
8730	—	" " 8912 with 8731 and three 123D.....	12 00
8736	6036	Feed Wheel Retaining Pawl (long).....	1 00
8737	6036	" " " " (short).....	1 00
8738	6036	" " " " Bracket...	1 50
	164D 6006	" " " " Cap Screw	04
8829	6034	" " " " " " " " " " " "	15
		Washer, use 11528.....	15
11528	6034	Feed Wheel Retaining Pawl Cap Screw Washer.....	15
16908	6036	Feed Wheel Retaining Pawl Hinge Stud	30
8745	6035	Needle Bar.....	1 50
8747	5994	" " Connecting Stud with 129D and 437C.....	2 00

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
	437C 5994	Needle Bar Connecting Stud Set Screw.	\$ 04
	257E 6009	" " Screw Bushing.....	20
8748	5994	" Clamp with 149E, 8749 and 8750	1 00
8750	5994	" " Thread Eyelet.....	08
11387	6033	Oil Cup.....	80
11920	6033	Oil Cup complete, Nos. 2205, 8482, 9084, 11387, 11917 to 11919, two 8953 and three 207E.....	1 25
	135D 6009	Oil Cup Screw.....	05
8751	6033	Oscillating Rock Shaft for 8752.....	8 00
8753	6033	" " " " 292c a n d 294c.....	5 00
	294c 6009	Oscillating Rock Shaft Screw Centre (left).....	18
	292c 6009	Oscillating Rock Shaft Screw Centre (right).....	25
1503E	6012	Oscillating Rock Shaft Screw Centre Nut.....	10
8830	6034	Oscillating Rock Shaft Washer.....	05
8754	6033	" Shaft.....	2 00
8755	6035	" " Crank with 445c and 8756, for 8774.....	1 50
8822	6036	Oscillating Shaft Crank with 445c and 8756, for 8812.....	1 50
8756	6034	Oscillating Shaft Crank Slide Block with 8918.....	50
8918	6034	Oscillating Shaft Crank Slide Block Stud	15
8758	6035	Presser Bar.....	1 25
8766	6035	" " Guide Bracket with 159D....	75
	159D 6010	" " " " Adjusting Screw.....	03
	166D 6010	Presser Bar Guide Bracket Set Screw....	07
8759	6035	" " Lifter with 8761, for 65.....	1 25
16960	6036	" " " " 8761 and 8763...	1 25
8762	6036	" " Lifting Link.....	50
	65D 6010	" " " " Hinge Screw..	12
	257E 6009	" " Screw Bushing.....	20
8792	6036	" " Spring.....	15
11023	6039	" " " Collar with 453C.....	25
	453C 6039	" " " " Set Screw.....	02
8768	5998	" Foot with 362D.....	1 00
	362D 6008	" " Set Screw.....	05
	572E 6009	Pressure Regulating Thumb Screw.....	50
8705	5986	Pulley (loose).....	1 50
16903	6036	" " Separating Collar.....	25
8772	6037	Roller Arm Bracket with 362D.....	3 50
	362D 6008	" " " " Set Screw.....	05

NO.	PLATE	NAME	EACH
8769	6037	Roller Presser complete, 2 $\frac{1}{2}$ in. roller, Nos. 327D, 423F, 1520E, 1992, 8771 to 8773 and two each 307F and 1513E.	\$10 00
8813	6041	Shuttle Bobbin, use 16902.	25
16902	6041	" "	50
*8814	—	" Body with 838E, 8819 and 43208	5 50
*8815	—	" Cover	3 00
8816	6022	" " Hinge Pin	10
8817	6023	" Delivery Eye Thread Guard	05
8818	6022	" " " " Rivet	01
8819	6023	" Main Spring	1 00
838E	6022	" " " Screw	05
43208	6022	" " " Steady Pin	01
452F	6022	" Tension Regulating Screw	04
8820	6023	" " Spring	25
330D	6022	" " " Screw	02
14222	6022	" " " Steady Pin	01
8812	6041	Shuttle (box) complete, Nos. 330D, 452F, 8814 to 8818, 8820, 14222 and 16902.	10 00
8821	6035	Shuttle Driver with two 445c.	2 00
8782	6038	" Race Ring	1 00
135D	6009	" " " Screw	05
8920	6038	Shuttle Race complete, Nos. 8782, 8919 and three 135D.	5 50
8783	5999	Shuttle Race Slide (left)	50
8784	5999	" " " (right)	50
8793	6039	Thread Eyelet (front of arm)	05
11425	6039	" " " " "	05
632D	6011	" Retaining Screw Stud	30
8789	—	Thread Retainer complete, Nos. 632D, 1560c, 8791, 8905 and two 8790.	65
8798	6039	Thread Take-up Spring	08
8799	6039	" " " Regulator	15
164D	6006	" " " " Screw	04
41544	6006	" " " " " Washer	05
8801	6039	Thread Take-up Staple	20
164D	6006	" " " " Screw	04
8908	6048	Wrench for 1520.	08
8909	6048	" " 1513 and 1518.	10
8910	6048	" " 611, 1508 and 1509.	25
8911	6048	" " 344 and 1503.	15

FOR MACHINES NOS. 5-2 AND 5-4

NO.	PLATE	NAME	EACH
*8811	—	Arm Side Plate	\$1 00
8822	6036	Oscillating Shaft Crank with 445c and 8756.	1 50
8813	6041	Shuttle Bobbin, use 16902.	25
16902	6041	" "	50
*8814	—	" Body with 838E, 8819 and 43208	5 50
*8815	—	" Cover	3 00
8816	6022	" " Hinge Pin	10
8817	6023	" Delivery Eye Thread Guard	05
8818	6022	" " " " Rivet	01
8819	6023	" Main Spring	1 00
838E	6022	" " " Screw	05
43208	6022	" " " Steady Pin	01
452F	6022	" Tension Regulating Screw	04
8820	6023	" " Spring	25
330D	6022	" " " Screw	02
14222	6022	" " " Steady Pin	01
8812	6041	Shuttle (box) complete, Nos. 330D, 452F, 8814 to 8818, 8820, 14222 and 16902.	10 00
8821	6035	Shuttle Driver with two 445c.	2 00

FOR MACHINE NO. 5-3

NO.	PLATE	NAME	EACH
*8831	—	Bed	\$35 00
*8832	—	" Extension	5 00
338E	6008	" " Screw	10
16904	6038	Guide (left, long) with 708F.	2 50
8834	6040	" (left, short) with 708F.	2 00
16905	6038	" (right, long) with 708F.	2 00
8835	6040	" (right, short) with 708F.	1 50
8840	5988	" Adjusting Rod (screw)	10 00
8836	6040	" Connecting Rod	35
708F	6011	" " " Set Screw	25
8837	5988	" Rod	75
8838	5992	" " Bracket (left) with 445c.	2 00
8839	6040	" " " (right) with 445c.	2 00
8833	—	Guide complete, Nos. 8834 to 8843, six 123D and seven 3012.	24 00

FOR MACHINE NO. 5-5

NO.	PLATE	NAME	EACH
8813	6041	Shuttle (inside) Bobbin, use 16902.	\$ 25
16902	6041	" " "	50
8813	6041	" (outside) Bobbin, use 16902.	25
16902	6041	" " " "	50

FOR MACHINES NOS. 5-5 AND 5-7

NO.	PLATE	NAME	EACH
*8845	—	Arm.....	\$35 00
8702	6007	" Dowel Pin.....	15
*8846	—	" Packing Plate.....	4 00
8703	5987	" Shaft.....	9 00
8709	5986	Balance Wheel and Pulley (tight) with two 344c.....	5 00
*8831	—	Bed.....	35 00
*8832	—	" Extension.....	5 00
338E	6008	" " Screw.....	10
8805	5986	Belt Shifter Fork.....	75
8803	5986	" " Frame with 8804 and two 432c.....	1 75
8806	5986	Belt Shifter Guide Rod.....	30
8807	5986	" " Sliding Rod.....	75
3012	6007	" " " " Pin.....	01
8809	6036	" " " " Spring.....	15
8808	5994	" " " " Collar with two 448c.....	25
448C	6009	Belt Shifter Sliding Rod Collar Set Screw.....	03
8802	—	Belt Shifter complete, Nos. 8803, 8805 to 8807 and two each 3012 and 8808.....	5 00
8847	6038	Crank Connecting Rod with 16917 and two 129E.....	2 00
*16917	—	Crank Connecting Rod Cap.....	—
369C	6010	" " " Hinge Screw.....	20
1509E	6012	" " " " Nut.....	06
8713	6033	Feed Connecting Rod.....	3 00
8714	6007	" Eccentric Pin.....	15
8733	6040	" Regulator with 8735.....	3 00
8726	6034	" " Nut Washer, use 8715.....	25
8715	5991	" " " ".....	25
8732	6036	" " Pawl with 8735.....	2 50
17D	6010	" " " Hinge Screw.....	20
8914	6039	" " " Spring (heavy).....	10
8734	6039	" " " " (light).....	08
8716	5986	" Roll (lower) with two 437C.....	15 00
8719	5986	" " (upper).....	15 00
8720	5986	" " " Arm with 344c and two 445c.....	6 00
8714	6007	Feed Roll (upper) Arm Pin.....	15
8721	5986	" " " " Shaft.....	1 75
8723	5986	" " " Lifting Arm with 344c.....	2 50
8714	6007	" " " " " Pin.....	15
8724	5986	" " " " Lever with 483E, 11466 and 16975.....	2 50

NO.	PLATE	NAME	EACH
8725	6035	Feed Roll (upper) Lifting Lever Bracket.....	\$1 00
8726	6034	" " " " " " " " Pin Washer, use 8715.....	25
8715	5991	Feed Roll (upper) Lifting Lever Bracket Pin Washer.....	25
8726	6034	Feed Roll (upper) Lifting Lever Washer, use 8715.....	25
8715	5991	Feed Roll (upper) Lifting Lever Washer.....	25
8728	5986	" " " Shaft.....	1 75
8729	5987	" Shaft.....	3 50
3012	6007	" " B r a c k e t (intermediate) Dowel Pin.....	01
8718	5989	Feed Shaft Bracket (left).....	2 00
3012	6007	" " " " " Dowel Pin.....	01
8718	5989	" " " " (right).....	2 00
3012	6007	" " " " " Dowel Pin.....	01
8912	6040	" Wheel.....	10 00
8730	—	" " 8912 with 8731 and three 123D.....	12 00
8736	6036	Feed Wheel Retaining Pawl (long).....	1 00
8737	6036	" " " " (short).....	1 00
8738	6036	" " " " Bracket.....	1 50
164D	6006	" " " " Cap Screw.....	04
8829	6034	" " " " " " " " Washer, use 11528.....	15
11528	6034	Feed Wheel Retaining Pawl Cap Screw Washer.....	15
16908	6036	Feed Wheel Retaining Pawl Hinge Stud.....	30
16904	6038	Guide (left, long) with 708F.....	2 50
8834	6040	" (left, short) with 708F.....	2 00
16905	6038	" (right, long) with 708F.....	2 00
8835	6040	" (right, short) with 708F.....	1 50
8840	5988	" Adjusting Rod (screw).....	10 00
8836	6040	" Connecting Rod.....	35
708F	6011	" " " Set Screw.....	25
8837	5988	" Rod.....	75
8838	5992	" " Bracket (left) with 445c.....	2 00
8839	6040	" " " (right) with 445c.....	2 00
8833	—	Guide complete, Nos. 8834 to 8843, six 123D and seven 3012.....	24 00
8848	6042	Needle Bar.....	1 50
8850	6043	" " Connecting Stud with 129D and 437C.....	2 00
437C	5994	Needle Bar Connecting Stud Set Screw.....	04
8851	6043	" Clamp with two each 191F and 453F.....	3 50
453F	6039	Needle Clamp Set Screw.....	02

NO.	PLATE	NAME	EACH
8884	6042	Needle Plate Loop Separator.....	\$ 50
11387	6033	Oil Cup.....	80
11917	6033	" " Cover.....	25
11920	6033	Oil Cup complete, Nos. 2205, 8482, 9084, 11387, 11917 to 11919, two 8953 and three 207F.....	1 25
135D	6009	Oil Cup Screw.....	05
8751	6033	Oscillating Rock Shaft for 8752.....	8 00
8753	6033	" " " " 292c and 294c.....	5 00
294c	6009	Oscillating Rock Shaft Screw Centre (left).....	18
292c	6009	Oscillating Rock Shaft Screw Centre (right).....	25
1503E	6012	Oscillating Rock Shaft Screw Centre Nut.....	10
8830	6034	Oscillating Rock Shaft Washer.....	05
8853	6042	" Shaft Crank (steel) with 445c and 8756.....	4 00
8756	6034	Oscillating Shaft Crank Slide Block with 8918.....	50
8918	6034	Oscillating Shaft Crank Slide Block Stud	15
8758	6035	Presser Bar.....	1 25
8766	6035	" " Guide Bracket with 159D....	75
159D	6010	" " " " Adjusting Screw.....	03
166D	6010	Presser Bar Guide Bracket Set Screw....	07
8759	6035	" " Lifter with 8761, for 65....	1 25
16960	6036	" " " " " and 8763.	1 25
8762	6036	" " Lifting Link.....	50
16959	6042	" " " " " ".....	50
65D	6010	" " " " Hinge Screw...	12
257E	6009	" " Screw Bushing.....	20
8792	6036	" " Spring.....	15
11023	6039	" " " Collar with 453c....	25
453C	6039	" " " " Set Screw....	02
8854	6044	" Foot with 362D.....	5 00
362D	6008	" " Set Screw.....	05
572E	6009	Pressure Regulating Thumb Screw.....	50
8705	5986	Pulley (loose).....	1 50
16903	6036	" " Separating Collar.....	25
8856	6045	Roller Arm (left).....	3 00
8857	6045	" " (right).....	3 00
8858	6045	" " Bracket with 354D.....	12 00
354D	6045	" " " Set Screw.....	06
8855	6014	Roller Presser complete, 2 $\frac{3}{4}$ in. roller, Nos. 8856 to 8858 and two each 327D, 430c, 1520E, 1992, 8773 and 8859....	25 00

NO.	PLATE	NAME	EACH
8869	6038	Shuttle Driver Bracket.....	\$2 00
123E	6010	" " " Screw.....	06
8871	6038	" Race Ring (left).....	1 00
8872	6038	" " " (right).....	1 00
135D	6009	" " " Screw.....	05
8873	6007	" " Dowel Pin.....	05
338E	6008	" " Screw.....	10
8783	5999	" " Slide (left).....	50
8784	5999	" " " (right).....	50
8875	6042	Tension Bracket.....	1 00
8874	---	Tension Bracket complete, Nos. 8875, two each 709D, 1535E, 8787, 8788 and four 8786.....	2 90
135D	6009	Tension Bracket Screw.....	05
709D	6011	" Screw Stud.....	25
8882	6039	Thread Eyelet (front of arm).....	05
8881	6046	" Guiding Roller.....	2 00
710D	6011	" " " Screw Stud.....	25
8880	6046	" " " Tension Spring, use 8788.....	30
8788	6005	Thread Guiding Roller Tension Spring..	25
1535E	6005	" " " " Regulat- ing Thumb Nut.....	10
8787	6005	Thread Guiding Roller Tension Regulat- ing Thumb Nut Washer.....	01
8888	6046	Thread Guiding Roller Washer (cloth) large.....	01
8879	6046	Thread Guiding Roller Washer (cloth) small.....	01
8878	6024	Thread Guiding Roller Washer (steel)..	15
8877	---	Thread Guiding Roller complete, Nos. 710D, 1535E, 8787, 8788, 8878, 8879, 8881 and 8888.....	2 80
16907	6042	Thread Take-up Lever with 1513E and 1865.....	3 00
18791	6046	Thread Take-up Spring Hook.....	01
8886	6046	" " " Lever with 18791.....	20
8887	6046	Thread Take-up Spring Lever Friction Washer (steel).....	15
8799	6039	Thread Take-up Spring Lever Regulator	15
164D	6006	" " " " " Screw.....	04
41544	6006	Thread Take-up Spring Lever Regulator Screw Washer.....	05
190D	6046	Thread Take-up Spring Screw.....	03
8889	6046	" " Staple.....	20

NO.	PLATE	NAME	EACH
164D	6006	Thread Take-up Staple Screw	\$ 04
41544	6006	" " " Washer	05
8908	6048	Wrench for 1520	08
8909	6048	" " 1513 and 1518	10
8910	6048	" " 611, 1508 and 1509	25
8911	6048	" " 344 and 1503	15

FOR MACHINE NO. 5-7

NO.	PLATE	NAME	EACH
8890	6042	Oscillating Shaft Crank (steel) with 445c, 8917 and 8918	\$4 00
8775	6043	Shuttle (inside) Bobbin, use 16901	50
8775	6043	" (outside) Bobbin, use 16901	50

FOR MACHINE NO. 5-10

NO.	PLATE	NAME	EACH
*8710	—	Bed	\$35 00
8745	6035	Needle Bar	1 50
8747	5994	" " Connecting Stud with 129D and 437c	2 00
437C	5994	Needle Bar Connecting Stud Set Screw	04
257E	6009	" " Screw Bushing	20
8748	5994	" Clamp with 149F, 8749 and 8750	1 00
8750	5994	" " Thread Eyelet	08
11387	6033	Oil Cup	80
11920	6033	Oil Cup complete, Nos. 2205, 8482, 9084, 11387, 11917 to 11919, two 8953 and three 207F	1 25
135D	6009	Oil Cup Screw	05
8755	6035	Oscillating Shaft Crank with 445c and 8756	1 50
8756	6034	Oscillating Shaft Crank Slide Block with 8918	50
8918	6034	Oscillating Shaft Crank Slide Block Stud	15
8768	5998	Presser Foot with 362D	1 00
362D	6008	" " Set Screw	05
8772	6037	Roller Arm Bracket with 362D	3 50
362D	6008	" " " Set Screw	05
8769	6037	Roller Presser complete, 2 5/8 in. roller, Nos. 327D, 423F, 1520E, 1992, 8771 to 8773 and two each 307F and 1513E	10 00
8782	6038	Shuttle Race Ring	1 00
135D	6009	" " " Screw	05
8920	6038	Shuttle Race complete, Nos. 8782, 8919 and three 135D	5 50

FOR MACHINES NOS. 5-10 AND 5-11

NO.	PLATE	NAME	EACH
*8701	—	Arm	\$35 00
16913	5987	" Shaft	9 00
8708	6034	" Spool Pin	05
16916	5987	Balance Wheel and Pulley (tight) with two 344c	5 00
8807	5986	Belt Shifter Sliding Rod	75
3012	6007	" " " " Pin	01
16953	—	Belt Shifter complete, Nos. 8807, 8808, 11451, 11453, 16951, 16952 and two 3012	4 50
8711	6033	Crank Connecting Rod with 16917 and two 129E	1 75
*16917	—	Crank Connecting Rod Cap	—
1151C	6010	" " " Hinge Screw	20
1646E	5991	" " " " Nut	08
8713	6033	Feed Connecting Rod	3 00
16934	6039	" Regulator Pawl Pin, use 2117	02
2117	5991	" " " "	01
8734	6039	" " " Spring	08
8721	5986	" Roll (upper) Arm Shaft	1 75
16923	5986	" " " Lifting Arm with 344c	4 00
8724	5986	Feed Roll (upper) Lifting Lever with 483E, 11466 and 16975	2 50
8725	6035	Feed Roll (upper) Lifting Lever Bracket	1 00
8726	6034	" " " " " " Pin Washer, use 8715	25
8715	5991	Feed Roll (upper) Lifting Lever Bracket Pin Washer	25
8726	6034	Feed Roll (upper) Lifting Lever Washer, use 8715	25
8715	5991	Feed Roll (upper) Lifting Lever Washer	25
3012	6007	" Shaft Bracket (intermediate) Dowel Pin	01
3012	6007	Feed Shaft Bracket (left) Dowel Pin	01
3012	6007	" " " (right) Dowel Pin	01
8736	6036	" Wheel Retaining Pawl (long)	1 00
8737	6036	" " " " (short)	1 00
16936	6036	" " " " Hinge Stud	50
13175	6039	" " " " Spring	01
16937	6039	" " " " " Hook	05
164D	6006	" " " " " " Screw	04
190D	6046	Feed Wheel Retaining Pawl Spring Screw	03

OBSOLETE PARTS

NO.	PLATE	NAME	EACH
8726	6034	Feed Wheel Retaining Pawl Washer, use 8715.....	\$ 25
8715	5991	Feed Wheel Retaining Pawl Washer....	25
16938	6032	Guide (left) with 708F.....	1 00
16939	6032	" (right) with 708F.....	1 00
16940	5988	Guide Rod.....	2 00
16941	6032	" " Bracket (left).....	1 00
16942	6032	" " " (right) with 1223C..	1 10
16944	6032	" " Locking Stud Bracket.....	60
2117	5991	" " " " " Dowel Pin.....	01
135D	6009	Guide Rod Locking Stud Bracket Screw	05
1223C	6009	" " Position Screw.....	06
708F	6011	" Set Screw.....	25
8758	6035	Presser Bar.....	1 25
8766	6035	" " Guide Bracket with 159D....	75
159D	6010	" " " " Adjusting Screw.....	03
166D	6010	Presser Bar Guide Bracket Set Screw....	07
8759	6035	" " Lifter with 8761, for 65.....	1 25
16960	6036	" " " " and 8763..	1 25
8762	6036	" " Lifting Link.....	50
65D	6010	" " " " Hinge Screw..	12
257E	6009	" " Screw Bushing.....	20
8792	6036	" " Spring.....	15
11023	6039	" " " Collar with 453c....	25
453C	6039	" " " " Set Screw....	02
572E	6009	Pressure Regulating Thumb Screw.....	50
8783	5999	Shuttle Race Slide (left).....	50
8784	5999	" " " (right).....	50
16946	6039	Thread Eyelet (front of arm).....	03
11950	6024	" " (side of arm).....	05
18791	6046	" Take-up Spring Hook.....	01
8886	6046	" " " Lever with 18791.....	20
16948	6046	Thread Take-up Spring Lever Collar (inside).....	15
16949	6046	Thread Take-up Spring Lever Collar (outside).....	15
8799	6039	Thread Take-up Spring Lever Regulator	15
164D	6006	" " " " " Screw.....	04
41544	6006	Thread Take-up Spring Lever Regulator Screw Washer.....	05

FOR MACHINE NO. 5-11

NO.	PLATE	NAME	EACH
*8831	---	Bed.....	\$35 00
*8832	---	" Extension.....	5 00
338E	6008	" " Screw.....	10
8848	6042	Needle Bar.....	1 50
8850	6043	" " Connecting Stud with 129D and 437C.....	2 00
437C	5994	Needle Bar Connecting Stud Set Screw.	04
8851	6043	" Clamp with two each 191F and 453F.....	3 50
453F	6039	Needle Clamp Set Screw.....	02
11387	6033	Oil Cup.....	80
11917	6033	" " Cover.....	25
11920	6033	Oil Cup complete, Nos. 2205, 8482, 9084, 11387, 11917 to 11919, two 8953 and three 207F.....	1 25
135D	6009	Oil Cup Screw.....	05
8853	6042	Oscillating Shaft Crank (steel) with 445c and 8756.....	4 00
8756	6034	Oscillating Shaft Crank Slide Block with 8918.....	50
8918	6034	Oscillating Shaft Crank Slide Block Stud	15
8854	6044	Presser Foot with 362D.....	5 00
362D	6008	" " Set Screw.....	05
8856	6045	Roller Arm (left).....	3 00
8857	6045	" " (right).....	3 00
8858	6045	" " Bracket with 354D.....	12 00
354D	6045	" " " Set Screw.....	06
8855	6014	Roller Presser complete, 2 5/8 in. roller, Nos. 8856 to 8858 and two each 327D, 430c, 1520E, 1992, 8773 and 8859....	25 00
8869	6038	Shuttle Driver Bracket.....	2 00
123E	6010	" " " Screw.....	06
8871	6038	" Race Ring (left).....	1 00
8872	6038	" " " (right).....	1 00
135D	6009	" " " Screw.....	05
8873	6007	" " Dowel Pin.....	05
338E	6008	" " Screw.....	10

NUMERICAL LIST OF PARTS

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
1D	6034	Feed Wheel Friction Brake Screw Stud for 5-2 and 5-4 Machines, obsolete...	\$ 25
10D	6010	Thread Take-up Lever Hinge Screw...	25
16C	6010	Presser Bar Lifter Hinge Screw...	20
17D	6010	Feed Regulator Pawl Hinge Screw for 5-1, 5-3, 5-5 and 5-7 Machines, obsolete...	20
24D	6053	Bobbin Winder Stop Latch Hinge Screw for 8906, obsolete...	08
65D	6010	Arm Side Cover Hinge Screw...	12
65D	6010	Presser Bar Lifting Link Hinge Screw, obsolete...	12
70D	6034	Feed Wheel Friction Brake Spring Screw for 5-2 and 5-4 Machines, obsolete...	06
116E	6010	Shuttle Race Body Clamping Screw for 5-1, 5-3 and 5-10 Machines...	08
123D	6010	Feed Wheel Screw...	06
123D	6010	Guide Adjusting Rod (screw) Bracket Screw for 5-3 to 5-5 and 5-7 Machines	06
123D	6010	Guide Rod Bracket (left) Screw	06
123D	6010	" " " (right) Screw	06
123D	6010	" " " (intermediate) Screw for 5-3, 5-5 and 5-7 Machines	06
123D	6010	Guide Rod Locking Stud Bracket Screw for 5-10 and 5-11 Machines...	06
123E	6010	Shuttle Driver Bracket Screw for 5-5, 5-7 and 5-11 Machines, obsolete...	06
129E	5994	Crank Connecting Rod Cap Screw for 8711, 8847, 16967 and 43187...	04
129D	5994	Feed Wheel Clutch Spring Screw for 5-2 and 5-4 Machines, obsolete...	04
129D	5994	Needle Bar Connecting Stud Clamping Screw for 8747, 8850 and 16987...	04
131D	6051	Bobbin Winder Pulley Screw for 43183 and 43229...	04
134D	6051	Bobbin Winder Frame Bracket Screw for 43183 and 43229...	05
134D	6051	Oil Cup Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines...	05
134D	6006	Thread Eyelet (top of arm) Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines...	05

NUMERICAL LIST OF PARTS

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
135D	6009	Bobbin Winder Bracket Screw for 11754, obsolete.....	\$ 05
135D	6009	Bobbin Winder Screw for 11754, obsolete.....	05
135D	6009	Guide Rod Locking Stud Bracket Screw for 5-10 and 5-11 Machines, obsolete.....	05
135D	6009	Oil Cup Screw, obsolete.....	05
135D	6009	Presser Bar Guide Bracket Guide Screw.....	05
135D	6009	Shuttle Race Ring Screw, obsolete.....	05
135D	6009	Tension Bracket Screw for 5-5 and 5-7 Machines, obsolete.....	05
145D	6010	Presser Bar Guide Bracket Adjusting Screw for 16995.....	04
149F	5994	Needle Clamp Screw for 8748 and 16988.....	06
159D	6010	Presser Bar Guide Bracket Adjusting Screw for 8766, obsolete.....	03
164D	6051	Bobbin Winder Frame Plate Screw for 43183 and 43229.....	04
164D	6006	Feed Wheel Retaining Pawl Cap Screw for 5-1, 5-3, 5-5 and 5-7 Machines, obsolete.....	04
164D	6006	Feed Wheel Retaining Pawl Spring Hook Screw for 5-10 and 5-11 Machines, obsolete.....	04
164D	6006	Thread Guard (front of arm) Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	04
164D	6006	Thread Take-up Staple Screw for 5-1 to 5-4 and 5-10 Machines and obsolete for 5-5 and 5-7 Machines.....	04
164D	6006	Thread Take-up Spring Regulator Screw.....	04
164D	6006	" " Lever Regulator Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines, obsolete.....	04
166D	6010	Presser Bar Guide Bracket Set Screw, obsolete.....	07
166D	6010	Presser Bar Lifting Link Cap Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	07
178F	6053	Bobbin Winder Stand Shaft Set Screw for 9062, obsolete.....	03
178F	6053	Bobbin Winder Stop Latch Bracket Set Screw for 9070, obsolete.....	03
180F	6010	Shuttle Race Cover (left) Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	03
180F	6010	Shuttle Race Cover (right) Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	03

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
190D	6046	Feed Wheel Retaining Pawl Spring Screw for 5-10 and 5-11 Machines, obsolete.....	\$ 03
190D	6046	Thread Take-up Spring Screw for 5-5 and 5-7 Machines, obsolete.....	03
191F	6015	Needle Set Screw for 8851, 43193 to 43196, 43220 and 43221.....	03
207F	6010	Oil Cup Cover Latch Spring Screw for 11920, 16990 and 43198.....	02
207F	6010	Oil or Wax Stripper Washer Screw for 11920, 16990 and 43198.....	02
257E	6009	Needle Bar Screw Bushing for 5-1 to 5-4 and 5-10 Machines, obsolete.....	20
257E	6009	Presser Bar Screw Bushing, obsolete.....	20
292C	6009	Oscillating Rock Shaft Screw Centre (right) for 5-1, 5-3, 5-5 and 5-7 Machines, obsolete.....	25
294C	6009	Oscillating Rock Shaft Screw Centre (left) for 5-1, 5-3, 5-5 and 5-7 Machines, obsolete.....	18
307F	6001	Roller Arm Screw Centre for 8769 and 43233.....	06
327D	6001	Roller Arm Lock Spring Screw for 8769, 8855, 43206, 43225 and 43233.....	05
330D	6003	Shuttle Cylinder Latch Spring Screw for 8771.....	02
330D	6003	Shuttle (inside) Cylinder Latch Spring Screw for 8891.....	02
330D	6003	Shuttle (outside) Cylinder Latch Spring Screw for 8896.....	02
330D	6022	Shuttle Tension Spring Screw for 8812, obsolete.....	02
330D	6022	Shuttle (inside) Tension Spring Screw for 8860.....	02
330D	6022	Shuttle (outside) Tension Spring Screw for 8866.....	02
338E	6008	Bed Extension Screw for 5-3 to 5-5, 5-7 and 5-11 Machines, obsolete.....	10
338D	6008	Bobbin Winder Bracket Screw for 43183 and 43229.....	10
338E	6008	Feed Shaft Bracket (intermediate) Screw.....	10
338E	6008	Feed Shaft Bracket (left) Screw.....	10
338E	6008	" " " (right) Screw.....	10
338E	6008	Shuttle Driver Bracket Screw for 5-5, 5-7 and 5-11 Machines.....	10
338E	6008	Shuttle Race Screw for 5-5, 5-7 and 5-11 Machines, obsolete.....	10

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
344c	6008	Balance Wheel and Pulley (tight) Set Screw for 8709 and 16963.....	\$ 08
344c	6008	Feed Roll (upper) Arm Set Screw for 8720 and 16921.....	08
344c	6008	Feed Roll (upper) Lifting Arm Set Screw for 8723, 16923 and 16972.....	08
344c	6008	Feed Wheel Hub Set Screw for 8731.....	08
344c	6008	Guide (left) Set Screw for 43158.....	08
344c	6008	" (right) Set Screw for 43159.....	08
346D	6001	Presser Foot Clamping Screw for 16999, 43202 and 43223.....	08
346D	6001	Roller Arm Bracket Clamping Screw for 43205, 43224 and 43232.....	08
354c	6045	Guide Set Screw for 8740 and 8741, obsolete.....	06
354D	6045	Roller Arm Bracket Set Screw for 8858, obsolete.....	06
362D	6008	Presser Foot Set Screw for 8768 and 8854, obsolete.....	05
362D	6008	Roller Arm Bracket Set Screw for 8772, obsolete.....	05
369c	6010	Crank Connecting Rod Hinge Screw for 5-1 to 5-5 and 5-7 Machines, obsolete.....	20
370c	6010	Needle Bar Connecting Link Hinge Screw.....	18
370F	6001	Roller Screw for 1992.....	18
381D	6009	Needle Plate Screw.....	06
381D	6009	Presser Bar Spring (flat) Bracket Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	06
406D	6005	Thread Guiding Roller Screw Stud for 5-5, 5-7 and 5-11 Machines.....	25
406D	6005	Tension Screw Stud for 8785.....	25
423F	6001	Roller Arm Adjusting Screw for 8769 and 43233.....	05
430c	6019	Roller Arm Adjusting Screw for 8855, 43206 and 43225.....	04
432c	6009	Belt Shifter Fork Set Screw for 8803 and 16952.....	04
432c	6009	Feed Eccentric Set Screw for 8712.....	04
432c	6009	Thread Take-up Cam Set Screw for 8796.....	04
434c	6009	Arm Shaft Bushing Set Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	04
434c	6009	Feed Roll (upper) Arm Shaft Collar Set Screw for 8722.....	04
434c	6009	Pulley (loose) Flanged Bushing Set Screw for 8706.....	04

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
437c	5994	Arm Shaft Bushing Set Screw for 5-2 and 5-4 Machines, obsolete.....	\$ 04
437c	5994	Feed Roll (lower) Set Screw for 8716 and 16918.....	04
437c	5994	Needle Bar Connecting Stud Set Screw for 8747 and 8850, obsolete.....	04
445c	6009	Feed Roll (upper) Shaft Set Screw for 8720 and 16921.....	03
445c	6009	Guide Rod Set Screw for 8838 and 8839, obsolete.....	03
445c	6009	Guide Rod (lower, left) Set Screw for 43165 and 43166.....	03
445c	6009	Guide Rod (lower, right) Set Screw for 8838 and 43165.....	03
445c	6009	Guide Rod (upper) Set Screw for 43165 and 43166.....	03
445c	6009	Oscillating Shaft Crank Set Screw for 8755, 8822, 8853, 8890, 16992 and 43200.....	03
445c	6009	Shuttle Driver Set Screw for 8781, 8868 and 8901.....	03
446c	6051	Bobbin Winder Pulley Flange Set Screw for 43177.....	03
446c	6051	Guide Adjusting Rod (screw) Collar Set Screw for 8842.....	03
448c	6009	Belt Shifter Guide Rod Collar Set Screw for 11453.....	03
448c	6009	Belt Shifter Sliding Rod Collar Set Screw for 8808.....	03
452F	6022	Shuttle (inside) Tension Regulating Screw for 8860.....	04
452F	6022	Shuttle (outside) Tension Regulating Screw for 8866.....	04
452F	6022	Shuttle Tension Regulating Screw for 8812, obsolete.....	04
453F	6039	Needle Clamp Set Screw for 8851, obsolete.....	02
453c	6039	Presser Bar Spring Collar Set Screw for 11023, obsolete.....	02
454c	6051	Bobbin Winder Spindle Set Screw for 43180.....	02
454c	6051	Bobbin Winder Stop Latch Arm Set Screw for 43182.....	02
454c	6051	Bobbin Winder Stop Latch Set Screw for 43181 and 43228.....	02
456c	5991	Presser Bar Spring (spiral) Collar Set Screw for 20251.....	02

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
470E	6053	Bobbin Winder Tension Spool Pin with fixed cone for 9071, obsolete.....	\$ 25
483E	5991	Feed Roll (upper) Lifting Lever Screw Stud for 8724 and 16973.....	40
484E	6011	Feed Regulator Adjusting Stud.....	40
496E	6008	Arm Screw (short) for 5-1 to 5-4 and 5-10 Machines.....	15
567D	6051	Bobbin Winder Frame Hinge Screw for 43183 and 43229.....	15
572E	6009	Pressure Regulating Thumb Screw, obsolete.....	50
573E	6008	Arm Screw (long) for 5-1 to 5-4 and 5-10 Machines.....	18
573E	6008	Arm Screw for 5-5, 5-7 and 5-11 Machines.....	18
609D	6011	Pressure Regulating Thumb Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	45
632D	6011	Thread Retaining Screw Stud for 8789, obsolete.....	30
654C	6009	Oscillating Rock Shaft Hinge Pin Screw Bearing.....	25
660D	6010	Shuttle Race Ring Screw for 16958, 43151 and 43210.....	12
690D	6025	Thread Take-up Staple Screw for 5-5, 5-7 and 5-11 Machines.....	05
692D	6008	Guide (left) Clamping Screw for 16982 and 43230.....	10
692D	6008	Guide (right) Clamping Screw for 16983 and 43231.....	10
692D	6008	Guide Rod Bracket (left) Clamping Screw for 16985.....	10
692D	6008	Guide Rod Bracket (right) Clamping Screw for 16985.....	10
708F	6011	Guide Connecting Rod Set Screw for 8834, 8835, 16904 and 16905, obsolete.....	25
708F	6011	Guide Rod Set Screw for 8744, obsolete.....	25
708F	6011	" Set Screw for 16938 and 16939, obsolete.....	25
709D	6011	Tension Screw Stud for 8874, obsolete.....	25
710D	6011	Thread Guiding Roller Screw Stud for 8877, obsolete.....	25
779E	6008	Leg (left) Screw.....	10
779E	6008	" (right) Screw.....	10
838E	6022	Shuttle Main Spring Screw for 8814, obsolete.....	05

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
838E	6022	Shuttle (inside) Main Spring Screw for 8861.....	\$ 05
838E	6022	Shuttle (outside) Main Spring Screw for 8867.....	05
898D	6015	Needle Clamp Screw for 43189, 43191 and 43219.....	04
965D	6010	Presser Bar Guide Bracket Clamping Screw for 16995.....	04
1114E	6011	Screw to secure leg to floor (Accessories).....	04
1151C	6010	Crank Connecting Rod Hinge Screw for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	20
1223C	6009	Guide Rod Position Screw for 16942, obsolete.....	06
1224D	6051	Bobbin Winder Tension Screw Stud for 16945.....	25
1224D	6005	Thread Retaining Screw Stud for 16945.....	25
1323F	6003	Shuttle Tension Regulating Screw for 8774.....	05
1323F	6003	Shuttle (inside) Tension Regulating Screw for 8891.....	05
1323F	6003	Shuttle (outside) Tension Regulating Screw for 8896.....	05
1364D	6025	Guide Rod Bracket (right) Gib Screw for 43169.....	05
1503E	6012	Feed Regulator Nut.....	10
1503E	6012	Oscillating Rock Shaft Hinge Pin Nut.....	10
1503E	6012	" " " " " Screw Bearing Nut.....	10
1503E	6012	Oscillating Rock Shaft Screw Centre Nut for 5-1, 5-3, 5-5 and 5-7 Machines, obsolete.....	10
1509E	6012	Crank Connecting Rod Hinge Screw Nut for 5-1 to 5-5 and 5-7 Machines, obsolete.....	06
1509E	6012	Needle Bar Connecting Link Hinge Screw Nut.....	06
1509E	6001	Roller Screw Nut for 1992.....	06
1513E	5997	Oscillating Shaft Crank Slide Block Screw Stud Nut for 16992 and 43200.....	05
1513E	6001	Roller Arm Screw Centre Nut for 8769 and 43233.....	05
1513E	6001	Thread Take-up Lever Roller and Screw Stud Nut for 8797, 16907 and 43215.....	05
1520E	6001	Roller Arm Adjusting Screw Nut for 8769, 8855, 43206, 43225 and 43233.....	03
1531E	6012	Feed Regulator Adjusting Stud Thumb Nut.....	15

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
1533D	6025	Guide Rod Locking Stud Head for 5-10 and 5-11 Machines.....	\$ 15
1535E	6005	Tension Regulating Thumb Nut for 8785 and 8874.....	10
1535E	6005	Thread Guiding Roller Tension Regulating Thumb Nut for 5-5, 5-7 and 5-11 Machines and 8877.....	10
1541E	6053	Bobbin Winder Tension Regulating Thumb Nut for 9071, obsolete.....	05
1560c	6051	Bobbin Winder Tension Regulating Thumb Nut for 16945.....	04
1560c	6005	Thread Retaining Regulating Thumb Nut for 8789 and 16945.....	04
1585D	6012	Feed Roll (upper) Lifting Lever Screw Stud Thumb Nut.....	1 50
1606C	6012	Pressure Regulating Thumb Screw Lock Nut for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	05
1646E	5991	Crank Connecting Rod Hinge Screw Nut for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	08
1646c	5991	Feed Regulator Pawl Hinge Stud Nut for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	08
1865	6012	Thread Take-up Lever Roller and Screw Stud for 8797, 16907 and 43215.....	45
1992	6001	Roller, 2 5/8 in. diam., with 370r and 1509E, for 8769, 8855, 43206, 43225 and 43233.....	3 00
2022	6051	Bobbin Winder Stop Latch Arm Pin for 43183 and 43229.....	01
2022	6051	Bobbin Winder Stop Latch Pin for 43183 and 43229.....	01
2117	5991	Feed Roll (upper) Lifting Lever Pin.....	01
2117	5991	" Regulator Pawl Pin for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	01
2117	5991	Feed Wheel Retaining Pawl Bracket Dowel Pin for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	01
2117	5991	Feed Wheel Retaining Pawl Pin for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	01
2117	5991	Guide Rod Locking Stud Bracket Dowel Pin for 5-10 and 5-11 Machines, obsolete.....	01
2205	5997	Oil Cup Cover Latch Spring for 11920, 16990 and 43198.....	04

NUMERICAL LIST OF PARTS

NO.	PLATE	NAME	EACH
2269	6039	Bobbin Winder Pulley Driving Wheel Stud Pin for 11754, obsolete.....	\$ 01
2448	6052	Bobbin Winder Spindle Pulley for 8906, obsolete.....	15
3012	6007	Belt Shifter Guide Rod Pin.....	01
3012	6007	" " Sliding Rod Pin for 8802 and 16953, obsolete.....	01
3012	6007	Feed Roll (upper) Lifting Lever Bracket Dowel Pin.....	01
3012	6007	Feed Shaft Bracket (intermediate) Dowel Pin, obsolete.....	01
3012	6007	Feed Shaft Bracket (left) Dowel Pin for 5-1, 5-2, 5-4, 5-5, 5-7, 5-10 and 5-11 Machines, obsolete.....	01
3012	6007	Feed Shaft Bracket (right) Dowel Pin, obsolete.....	01
3012	6007	Guide Adjusting Rod (screw) Bracket Dowel Pin for 5-3 to 5-5 and 5-7 Machines.....	01
3012	6007	Guide Adjusting Rod (screw) Hand Wheel Pin for 5-3 to 5-5 and 5-7 Machines.....	01
3012	6007	Guide Rod Bracket (intermediate) Dowel Pin for 5-3, 5-5 and 5-7 Machines.....	01
3012	6007	Guide Rod Bracket (left) Dowel Pin for 5-1, 5-3 to 5-5, 5-7, 5-10 and 5-11 Machines.....	01
3012	6007	Guide Rod Bracket (right) Dowel Pin for 5-1, 5-3 to 5-5, 5-7, 5-10 and 5-11 Machines.....	01
3012	6007	Guide Rod Locking Stud Bracket Dowel Pin for 5-10 and 5-11 Machines.....	01
4389	6007	Presser Bar Spring (flat) Guide Pin for 5-1, 5-3, 5-5, 5-7, 5-10 and 5-11 Machines.....	02
7585	6050	Bobbin Winder Stop Latch Hinge Pin for 43183 and 43229.....	05
7958	6053	Bobbin Winder Spindle Frame Spring Pin for 8906, obsolete.....	01
8018	6053	Bobbin Winder Tension Spool Pin Adjustable Cone for 9071, obsolete.....	05
8019	6053	Bobbin Winder Tension Spool Pin Spring for 9071, obsolete.....	02
8055	6007	Shuttle Race Dowel Pin for 5-5, 5-7 and 5-11 Machines.....	03
8077	6034	Feed Wheel Friction Brake Spring Hook for 8827, obsolete.....	01