

**HISTORICAL COPY**  
NUMBERING DEPARTMENT  
JUNE 13, 1912  
**DO NOT REMOVE**  
**COPY FOR M. T.**

**LIST OF PARTS**  
**COMPLETE**



**Machine No. 62-48**

---

**THE SINGER MANUFACTURING COMPANY**

HISTORICAL COPY  
REPRODUCED FROM THE ORIGINAL COPY  
 JUNE 13, 1912

DO NOT REMOVE

LIST OF PARTS COMPLETE

FOR

MACHINE NO. 62-48

For general work in light fabrics, for trimming and binding in one operation, has vertical shear trimmer operated by an eccentric on the Arm Rotary Shaft, trims from  $\frac{1}{16}$  to  $\frac{3}{16}$  inch from the needle.

*52607	Arm (upper and lower) solid.....	20 00
46216	" Rock Shaft.....	1 00
46217	" " " Crank (back) with two 1497c.....	00
1497c	" " " " " Set Screw.....	00
38412	" " " " (front) with 443c.....	1 00
23724	" " " " " Pin.....	01
443c	" " " " " Set Screw.....	03
46343	" Rotary Shaft.....	3 00
38329	" " " Collar with two 457c.....	25
457c	" " " " " Set Screw.....	02
23872	" " " " Flanged Bushing.....	1 00
159F	" " " " " Screw.....	03
4784	" " " " Oil Pad (felt).....	01
144D	" " " " " Screw.....	03
17509	" Side Cover (lower).....	10
286D	" " " " " Thumb Screw.....	10
52554	" " " " (upper).....	20
9533	" " " " " Pin.....	02
176D	" " " " " Screw.....	03
23873	Balance Wheel with two 430c.....	80
430c	" " " " " Set Screw.....	04
52608	Cloth Plate.....	2 50
52609	" " " Chute (hinged).....	1 25
330D	" " " " " Screw.....	02
691F	" " " " " Screw (left).....	04
1094F	" " " " " (right).....	03
46322H	" " " " Slide (left).....	40
38419	" " " " " Spring.....	05
725H	" " " " " " Screw.....	02
46323H	Cloth Plate Slide (left) complete, Nos. 38419, 46322H and two 725H.....	50
52610	Cloth Plate Slide (right) with 1602E.....	30
1602E	" " " " " Bushing.....	02
286D	" " " " " " Thumb Screw.....	10

52611	Cloth Plate complete, Nos. 286D, 46323H, 52608 to 52610 and two 330D.	470
46221	Crank Connecting Rod with 46222, 46223 and two each 896E and 1057E.	200
50069C	Crank Connecting Rod Ball Screw Stud.	20
1619E	" " " " " " Nut.	05
*46222	" " " " " " Cap (lower).	25
896E	" " " " " " Screw.	04
*46223	" " " " " " (upper).	35
1057E	" " " " " " Screw.	04
46225	" " " " " " Washer (fibre).	02
46179	Face Plate.	50
46111	" " Pin.	02
286D	" " Thumb Screw.	10
38425	Feed Bar with 231C and 460C.	250
23716	" " Bushing.	40
23726	" " Hinge Pin.	50
231C	" " Set Screw.	03
38426	" " Slide Block.	50
38427	" Connecting Rod with 23865 and three 1057E.	150
*23865	" " " " Cap.	30
1057E	" " " " " " Screw.	04
23866	" " " " " " Hinge Pin (eccentric).	20
1057E	" " " " " " Clamping Screw.	04
52612	" Dog.	100
898D	" " Screw.	04
460C	" " Stop Screw.	02
*38127	" Eccentric.	250
*23729	" " Body.	250
443C	" " " " Set Screw.	03
21331	" " " " Pressure Spring.	03
21332	" " " " " " Cap.	10
934D	" " " " " " Screw.	02
196F	" " " " " " Set Screw.	02
38128	Feed Eccentric (adjustable) complete, Nos. 196F, 934D, 1103C, 21331, 21332, 23729, 38127 and two 443C.	500
1103C	Feed Regulating Screw.	15
38431	" Rocking Frame.	125
52613	" " " " Bracket with two 465C.	50
123E	" " " " " " Screw.	06
38433	" " " " " " Hinge Pin.	50
465C	" " " " " " Set Screw.	02
52614	Knife.	10
52615	" Bar.	400
46350	" " Eccentric with two 457C.	100
457C	" " " " " " Set Screw.	02
52616	" Holder.	100

1259C	Knife Holder Adjusting Screw.	03
190C	" " " " Screw.	03
52617	" " Support.	50
206D	" " " " " " Screw.	02
52618	Looper with 590D and 38393.	225
46226	" Bell Crank with 1037C.	50
38436	" " " " " " Hinge Stud.	100
443C	" " " " " " Set Screw.	03
46227	Looper Bell Crank Pitman complete, Nos. 1706E, 1713E and 46233 to 46235.	325
50070C	Looper Bell Crank Pitman Ball Screw Stud (upper)	15
1636E	" " " " " " " " " " Nut.	03
46228	Looper Bell Crank Pitman Ball Stud (lower).	30
1037C	" " " " " " " " " " S e t S c r e w .	04
*46229	Looper Bell Crank Pitman Cap (lower).	—
171E	" " " " " " " " " " Screw.	03
*46230	" " " " " " " " " " (upper).	—
171E	" " " " " " " " " " Screw.	03
*46231	" " " " " " " " " " End Bearing (lower).	—
*46232	" " " " " " " " " " (upper).	—
46233	" " " " " " " " " " H e a d (lower) Nos. 46228, 46229, 46231 and two 171E.	150
46234	Looper Bell Crank Pitman Head (upper) Nos. 46230, 46232, 50070C and two 171E.	150
46235	Looper Bell Crank Pitman Rod.	20
1706E	" " " " " " " " " " Nut (lower).	03
1713E	" " " " " " " " " " (upper).	03
52619	" Carrier with three 1147C.	150
38440	" " " " " " Hinge Pin.	20
1147C	" " " " " " " " " " Set Screw.	03
52620	Looper Carrier Pitman complete, Nos. 1697C, 1698C, 38445, 38446 and 52621.	325
50016C	Looper Carrier Pitman Ball Screw Stud (right).	15
1518E	" " " " " " " " " " Nut	04
38442	" " " " " " " " " " Stud (left).	25
1147C	" " " " " " " " " " Set Screw.	03
*42525	" " " " " " " " " " Cap (left).	—
187D	" " " " " " " " " " Screw.	02
*42524	" " " " " " " " " " (right).	—
187D	" " " " " " " " " " Screw.	02
*38443	" " " " " " " " " " End Bearing (left).	—
*38444	" " " " " " " " " " (right).	—
38445	" " " " " " " " " " Head (left) Nos. 38442, 38443, 42525 and two 187D.	150
38446	Looper Carrier Pitman Head (right) Nos. 38444, 42524, 50016C and two 187D.	150

## PARTS FOR MACHINE NO. 62-48

52621	Looper Carrier Pitman Rod.....	10
1697C	" " " " Nut (left).....	03
1698C	" " " " (right).....	03
46042	" " Rock Shaft with two 175D.....	2 50
175D	" " " " Adjusting Screw.....	02
38450	" " " " Crank (forked) with 159E.....	2 00
159E	Looper Carrier Rock Shaft Crank Clamping Screw.....	03
38451	" " " " Slide Block.....	50
46043	" " " " Hinge Pin.....	75
1508C	" " " " " Nut.....	06
129E	" " " " " Set Screw.....	04
38452	" Eccentric with two 465C.....	1 00
465C	" " Set Screw.....	02
52622	" Needle Guard with 46105.....	40
46105	" " Pin.....	01
229D	" " " Screw.....	02
1147C	" Set Screw.....	03
46358	" Shaft and Feed Lifting Eccentric.....	2 50
38454	" " " " " Bracket.....	30
123E	" " " " " " Screw.....	06
391F	Looper Shaft Screw.....	02
38393	" Thread Guard.....	03
590D	" " " Screw.....	02
38455	Needle Bar (hollow) with 857H.....	1 00
38456	" " Bushing.....	50
1133E	" " " Set Screw.....	02
38458	" " Connecting Link.....	50
38459	" " " " Hinge Stud.....	30
1520E	" " " " " Nut.....	03
38460	" " " Stud with two 391E.....	1 00
391E	" " " " Clamping Screw.....	02
52623	" Guard.....	75
190D	" " Screw.....	03
857H	" Set Screw.....	02
17540	Presser Bar.....	30
38464	" " Bushing (lower).....	80
1133E	" " " " Set Screw.....	02
38456	" " " (upper).....	50
1133E	" " " " Set Screw.....	02
17541	" " Lifter.....	20
17542	" " " Hinge Pin.....	05
38466	" " Lifting Bracket with 453C and 892C.....	1 00
892C	" " " " Adjusting Screw.....	05
453C	" " " " Set Screw.....	02
38467	" " Spring (flat).....	50
38468	" " " Stud.....	03

## PARTS FOR MACHINE NO. 62-48

26276	Presser Foot Hinge Pin.....	01
52624	" " Plate.....	1 25
46099	" " Shank.....	60
52625	Presser Foot (hinged) complete, Nos. 26276, 46099, and 52624.....	1 85
190D	Presser Foot Screw.....	03
574D	Pressure Regulating Thumb Screw.....	15
1539D	" " " " Lock Nut.....	05
46169	Slack Thread Controller.....	05
211F	" " " " Set Screw.....	02
52626	" " Regulator.....	1 50
52569	" " " Bracket with 172C and 1823.....	1 25
172C	Slack Thread Regulator Bracket Clamping Screw.....	04
38474	" " " Bushing.....	20
1823	" " " Roller and Stud.....	18
50062D	" " " Screw.....	07
1620E	" " " " Nut.....	03
2102	Tension (under thread) Disc.....	05
1560C	" " " Regulating Thumb Nut.....	04
916F	" " " Screw Stud.....	08
10148	" " " Spring.....	03
17547	" " " Thread Guide.....	25
2102	" (upper thread) Disc.....	05
1560C	" " " Regulating Thumb Nut.....	01
916F	" " " Screw Stud.....	
2103	" " " Spring.....	
17547	" " " Thread Guide.....	25
38225	Thread (under) Eyelet (back).....	10
190D	" " " " Screw.....	03
38284	" " " (front).....	05
46049	" " Nipper Cam with 465C.....	50
465C	" " " " Set Screw.....	02
38210	" " " Spring (lower).....	15
38211	" " " " (upper).....	25
46247	" " " " Stop.....	10
176F	" " " " Screw.....	03
38475	" " Take-up with 465C.....	1 00
465C	" " " Set Screw.....	02
38478	" " " Staple with two each 590D, and 38481.....	75
46040	Thread (under) Take-up Staple Bracket with 910C.....	2 00
690D	" " " " " Screw.....	05
46041	" " " " " Spring.....	05
190D	" " " " " Screw.....	03
910C	" " " " " Stop Screw.....	03
38481	" " " " " Thread Guard.....	10
590D	" " " " " " Screw.....	02

38482	Thread (under) Take-up Stripper.....	60
207D	" " " " Screw.....	02
38476	" " " Thread Guard (left).....	15
207D	" " " " " Screw.....	02
38477	" " " " " (right).....	20
207D	" " " " " " Screw.....	02
38483	" (upper) Controller.....	40
206F	" " " " Screw.....	02
52627	" " Eyelet.....	25
190D	" " " Screw.....	03
46312	" " Take-up with 223D.....	80
223D	" " " Clamping Screw.....	02
52628	Throat Plate with 665D and 52629.....	175
52629	" " Cutting Bar.....	25
665D	" " " " Screw.....	02
691F	" " " Screw.....	04

### ACCESSORIES

2015	Machine Cushion (rubber).....	02
—	1 3/4 in. Wood Screw No. 16, to secure machine to table.....	
4718	Machine Rest (felt).....	01
35859	Oiler with Cap and 35861.....	07
35860	" 35859, filled with oil.....	10
35861	" Spout, 3 1/2 in. long.....	03
26026	Screw Driver.....	10
38487	Threading Wire.....	05
35095	Tweezers, 6 in.....	40
8908	Wrench for 1520, 1620 and 1706.....	08
23766	" " 1508 and 1636.....	10
19221	" " 1619.....	15
4822	" " 1697 and 1698.....	05

### BINDER

36473	Binder on Block with two 910F.....	4 00
910F	" Adjusting Screw.....	03
36474	" Pin (long).....	01
36475	" (short).....	01
36476	" Plate with 36474 and 36475.....	50
219F	" " Screw.....	02
26614	Ribbon Tension Pin (bent).....	05
26615	" " " (straight).....	05
26616	" " Plate.....	35
25717	Ribbon Tension complete, Nos. 26614, 26616 and four 26615.....	60
219F	Ribbon Tension Screw.....	02
7071	" " " Washer.....	01

### FOOT LIFTER PARTS

6439	Chain, 36 in. to 45 in.....	20
NOTE: When ordering No. 6439 give length required.		
4879	Chain Connecting Link for 4885.....	03
23759	Lifting Lever.....	25
802D	" " Hinge Screw.....	15
23761	" " Spring.....	10
1002D	" " Stop Screw.....	02
4881	Treadle.....	30
4882	" Shaft.....	05
4883	" Spring.....	10
4884	" Stand.....	25
4885	Treadle complete, Nos. 4879, 4881 to 4884 and two wood screws 1 in. No. 16.....	75
23769	Foot Lifter complete, Nos. 802D, 1002D, 4885, 6439, 23759 and 23761.....	135

### KNEE LIFTER PARTS

23759	Lifting Lever.....	25
23760	" " Connecting Rod for 23768.....	05
38384	" " " " " 38385.....	05
802D	" " Hinge Screw.....	10
23761	" " Spring.....	05
1002D	" " Stop Screw.....	03
2763	Rock Shaft.....	10
12242	" " Hanger with two wood screws 1 in. No. 10.....	08

## PARTS FOR MACHINE NO. 62-48

6335	Rock Shaft Knee Arm.....	10
6336	Rock Shaft Knee Arm complete, Nos. 2766, 2767 and 6335.....	40
2766	Rock Shaft Knee Arm Hub with 356c.....	15
356c	" " " " " Set Screw.....	06
2767	" " " " Plate with 356c.....	18
356c	" " " " " Set Screw.....	06
6337	" " " " Lifting Bracket with two 356c.....	20
7125	" " " " " Hook.....	15
356c	" " " " " " Set Screw.....	06
356c	" " " " " " Set Screw.....	06
2770	" " " " Stop Dog with 356c.....	12
356c	" " " " " " Set Screw.....	06
23767	Rock Shaft complete, Nos. 2763, 2770, 6336, 6337, 7125 and two 12242.....	110
23768	Knee Lifter complete (power table) Nos. 802D, 1002D 23759 to 23761 and 23767.....	155
38385	Knee Lifter complete (bench stand) Nos. 802D, 1002D, 23759, 23761, 23767 and 38384.....	160

### THREAD UNWINDER

#### FOR TWO LARGE SPOOLS OR TWO LARGE CONES OF THREAD

27623	Spool Pin.....	08
155c	" " " " Set Screw.....	03
41530	" Rest.....	30
41531	" " " 41530 with 1149c and two each 155c and 27623.....	50
1149c	Spool Rest Set Screw.....	04
27940	" Stand with 453c.....	20
41514	" Weight, 4 in. diam., with 41515.....	15
41515	" " Centre Pin.....	05
27739	Thread Cone (wood).....	05
41631	" Guard with 208E and two 41569.....	35
41569	" " " Eyelet.....	02
41637	" " " Rod (lower).....	10
41638	" " " " (upper).....	15
41639	" " " " Coupling with two 456c.....	20
456c	" " " " " Set Screw.....	02
41640	Thread Guard Rod complete, 30 in. long, Nos. 41637 to 41639.....	45
453c	Thread Guard Rod Set Screw.....	02
208E	" " " Screw.....	02
41533	Thread Unwinder complete, Nos. 27940, 41531, 41631, 41640, two each 27739, 41514 and three wood screws 1 in. No. 12.....	1.80