SINGER 251-12 AND 251-13

Operator's Guide SINGER* 251-12 and 251-13 machines

NEEDLES

Use **SINGER** Needles Catalog 2270 (16 x 257) with 251-12 and 251-13 Machines

Catalog 3066 (16 x 261) with 251-13 Machine adjusted for %16" clearance under presser foot.

—in sizes determined by weight of thread and type materials to be sewn. LONG GROOVE


LONG GROOVE

INSERT NEEDLE UP

AS FAR AS POSSIBLE

AND TIGHTEN SCREW


Setting the Needle

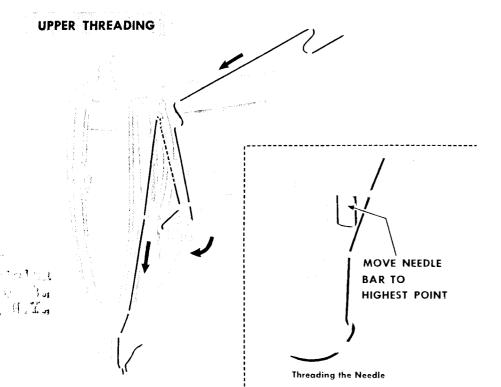



- 1. OPEN LATCH.
- 2. HOLD LATCH AND PULL CASE FROM HOOK


Removing Bobbin Case from Sewing Hook

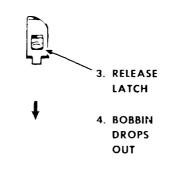

Removing Bobbin

TENSION CONTROL

BOBBIN CASE REPLACEMENT

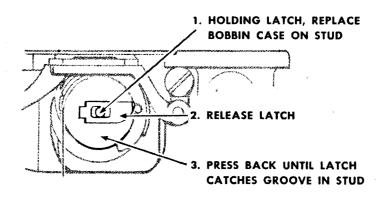



1. PLACE BOBBIN ON SPINDLE AS FAR AS IT WILL GO LOOSEN TO ADJUST FOR **EVEN WINDING**

3. PRESS DOWI TO PUSH PULLE AGAINST BELT

THEN START MACHINE

WIND THREAD AROUND BOBBIN

NOTE-TIGHTEN FOR MORE THREAD ON BOBBIN

THREAD TENSIONS

Bobbin Thread.....

 
MORE TENSION



LESS TENSION

Tension on threads should be as light as possible, while still sufficient to set stitch correctly in material. Needle Thread


MORE TENSION



Regulate needle thread tension only when presser foot is down.

Securely tighten lock nut when correct tension is obtained.

 THREADING BOBBIN CASE



1. PULL THREAD INTO SLOT 2. DRAW THREAD DOWN AND **UNDER SPRING**

3. TURN BOBBIN CASE OVER AND DRAW THREAD UP INTO DELIVERY EYE

STITCH LENGTH REGULATION


1. STOP MACHINE

2. DEPRESS PLUNGER

3. TURN PULLEY TOWARD YOU SLOWLY-

4. UNTIL PLUNGER **DROPS INTO NOTCH**

5. THEN TURN PULLEY TO DESIRED STITCH LENGTH AND RELEASE PLUNGER

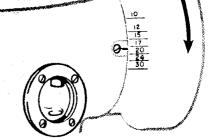


Never depress the plunger while the machine is running. Make certain that plunger is disengaged before starting machine.

PRESSER FOOT PRESSURE

The pressure on the material should be as **light** as possible, while still sufficient to insure correct feeding.


When correct pressure of presser foot on material is obtained, securely tighten lock nut.

MORE PRESSURE

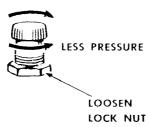


LUBRICATION

Use "TYPE A" or "TYPE C" OIL. Use "TYPE C" OIL when an oil is desired which will produce minimum stain on fabrics even after long period of storage.

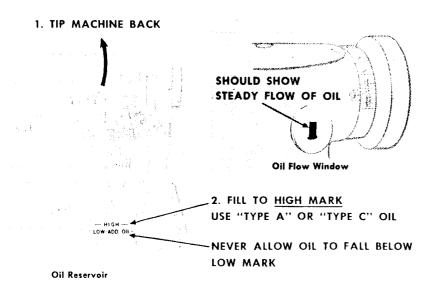

Should oil flow become erratic, **STOP machine** and **do not run machine again** until the cause has been corrected.

Clean out any lint or other waste around the hook and between the feed rows on the underside of the throat plate.

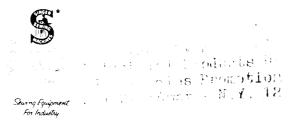

THE SINGER MANUFACTURING CO