



Union Special
INDUSTRIAL SEWING EQUIPMENT

STYLES

**ADJUSTING INSTRUCTIONS AND
ILLUSTRATED PARTS LIST**

52700

52800


52900

53500

LIST OF PARTS AND INSTRUCTION

**CATALOG
NO. 80L**

**FIRST
EDITION**



Catalog No. 80 L
THE FIFTY THOUSAND SERIES
LIST OF PARTS

STYLES IN CLASSES

52700 52800

52900 53500

The parts listed in this Catalog are
furnished at list prices for repairs only.

First Edition

Price \$2.00

Copyright 1938

By

Union Special Machine Co.
Rights Reserved In All Countries

Union Special Machine Company
Chicago

Printed in U.S.A.



Union Special®

INDUSTRIAL SEWING MACHINES

• Africa

BULAWAYO, SO. RHODESIA, FEDERATION OF RHODESIA and NYASALAND, Berzack Bros. Ltd., 16 14th Avenue. (Textile Machines).
CASABLANCA, MOROCCO, Etablissements Geissmann & Fils, 34 Blvd. de la Gare.
JOHANNESBURG, UNION OF SOUTH AFRICA, South African Scale Co., (Pty.) Ltd., P.O. Box 1463, 32 Van Brandis St., for bag closing machines. Branches also at Bloemfontein, (53 Zaston St.), Capetown, (Box 779), Durban, (22 Aliwal St.), East London (53A Cambridge St.) Pietermaritzburg, Port Elizabeth, (Box 611), Pretoria, Vereeniging and Worcester.
JOHANNESBURG, UNION OF SOUTH AFRICA, Berzack Bros. Ltd., Berbro House, 135/7 Pritchard St. Branches also at 487 West St., Durban; 78 Darling St., Capetown; 58 Queen St., Port Elizabeth. Textile machines.
MAURITIUS, Hall, Geneve, Langlois, Ltd., Port Louis, P.O. Box 77.
SALISBURY, SO. RHODESIA, FEDERATION OF RHODESIA and NYASALAND, So. African Scale Co., Corner of Forbes and Angwa Sts., Bag Closing Machines.

• Asia

CALCUTTA, INDIA, Don Watson & Co., Ltd., 19 British Indian St.
DACCA, PAKISTAN, Roberts & McLean & Co., Ltd., 91 Nawabpur Rd., Bag closing and Bag seaming machines.
DELHI 6, INDIA, Munshi Ram Bs. C., P.O. Box 1114, Kashmere Gate. Above Keventers.
HONGKONG, G. R. Coleman Co. (Hongkong) Ltd., Room 308, Bank of Canton Bldg., 6 Des Voeux Road, Central.
KARACHI 2, PAKISTAN, Universal Trading Corp., Textile Machines, 29 Zeenat Mansion, McLeod Road, P.O. Box 4635.
OSAKA, JAPAN, Mima Sewing Machine Mfg. Co. 29, 1-chrome, Ebi-kami, Fukushima—KU.
SEOUL, KOREA, Uebersee-Handel A. G., Iwang Wha Moon, P.O. Box 268.
TAIPEI, TAIWAN, G. R. Coleman, Hongkong, Ltd., 78 Po Ai Road.
TOKYO, JAPAN, Iwase Sewing Machine Co., Ltd., 39, 1-chrome, Kamezawa-cho, Sumida—KU.

• Australia

BRISBANE, AUSTRALIA, Capron, Carter (Pty.) Ltd., Rm. 55—Rex Bldg., Wickham St., Valley.
MELBOURNE, VICT., AUSTRALIA, Capron, Carter (Pty.) Ltd., 78 A'Beckett St.
SYDNEY, N.S.W., AUSTRALIA, Capron, Carter (Pty.) Ltd., 86 Liverpool St.

• British West Indies

KINGSTON, JAMAICA, B. W. I., Mr. Morris E. Parkin, 102 King St.

• Canada

Union Special Machine Co. of Canada, Ltd.
CALGARY, ALTA., 1809 24th Ave., N.W. N. W. Holt, Tel. 891690.
MONTREAL 14, QUE., 40 Moliere St., Clyde F. Amey, Tel. Victoria 2575.
QUEBEC, P. Q., Ave. Des Pins Ouest. Lucien Bouchard. Tel. 3-8126.
***TORONTO 2, ONT.**, 135 Peter St. S. J. Storey, Mgr. Tel. Empire 6-2939.
WINNIPEG, MAN., Room 201, Whitta Bldg., Frank Thierman. Tel. 934933.

• Europe

AMSTERDAM, THE NETHERLANDS, N. V. Machinehandel C. & H. Verbeek, Kloveniersburgwal 77. Also offices in: Rotterdam, Sittard, Groningen, Enschede, Eindhoven.
ATHENS, GREECE, Michel D. Dimoulis, Rue Deka, 4A.
BARCELONA, SPAIN, Rapida, S. A. Avino 9.
BERGEN, NORWAY, Jac. Jacobsen A/S, Bjørnsongst 24.
BORAS, SWEDEN, Rud. Nyström & Co., A/B, Lilla Bannerigatan 6.
BRUSSELS, BELGIUM, Union Special Machine Corporation of America, 23 Rue Philippe de Champagne. Henri Deloaf, Mgr.

COPENHAGEN, DENMARK, Rothenborg Special-maskiner for Sy-Industrian A/S, Nikolaj Plads 23. Also offices in: Herning, Kolding, Odense, Silkeborg, Riisakov.
DUBLIN, EIRE, Machines, Ltd., 24 Upper Abbey St. Textile Machines.
DUNDEE, SCOTLAND, Thomas C. Keay, Ltd., 15 Baltic St. Bag Closing and Bag Making.
HELSINKI, FINLAND, Suomen Koneilike O/Y, Vilhonkatu 9.
LEICESTER, ENGLAND, Union Special Machine Co., Ltd., 25 Bede St. Braunstone Gate, A. B. Fitzpatrick, Mgr. Textile Machines.
LONDON, E. C. 1, ENGLAND, Union Special Machine Co., Ltd., Parksworth House, 30, City Road. Textile Machines.
MALMO, SWEDEN, Rud. Nyström & Co., A/B Vargatan 10-A.
MILANO, ITALY, Giovanni Conti y Nipoti, Piazzale Marengo 6.
NOTTINGHAM, ENGLAND, Mr. W. Wilkes, Plantation Road, Wellaton. Textile Machines.
OPORTO, PORTUGAL, Rost & Janus, Succrs., Rua Barao de Forrester, 91A.
OREBRO, SWEDEN, Rud. Nyström & Co., A/B Skebacksvagen 17-19.
OSLO, NORWAY, Jac. Jacobsen A/S, Kr. Augustsgate 19 (Tullingarden).
PARIS, FRANCE, Cie. des Machines Union Special de France, 91 Avenue de la Republique, Georges Linotte, Mgr.
STOCKHOLM, SWEDEN, Rud. Nyström & Co., A/B, St. Nygatan 10-12.
STUTTGART, GERMANY, Union Special Maschinenfabrik, G.m.b.h., Schwabstrasse 33, A. W. Krieger, Managing Director.
VIENNA, VI, AUSTRIA, Firma Nahschuster, Mariahilferstr. 51.
ZURICH, 9/47, SWITZERLAND, M. L. Bourquin, Albisriederstrasse 226.

• Latin America

Union Special International, Inc.
BARRANQUILLA, COLOMBIA, C. Ceballos & Cia., Ltda., Almacenes "Carceco," Banco Comercial, Anticueno, OF. 401.
BOGOTA, COLOMBIA, C. Ceballos & Cia., Ltda., Avenida Caracas 17-18.
BUENOS AIRES, ARGENTINA, Kay, Grandjean & Cia., Bartolome Mitre 760.
CALI, COLOMBIA, C. Ceballos & Cia., Ltd., Calle 4, No. 9-21.
CARACAS, VENEZUELA, H. Blohm, S.A., Dr. Paul A. Charro 29.
CIUDAD TRUJILLO, DOMINICAN REPUBLIC, Luis Dominguez, Apartado 57, Hostos esq. El Conde.
GUADALAJARA, JAL., MEXICO, Talleres Perez Zazaya, S. A. Hidalgo 45 y 47.
GUATEMALA CITY, GUATEMALA, Cia. Agro Comercial S.A., 8a Ave. Sur. 10-43. Bag Closing Machines.
HAVANA, CUBA, Anilla Yarn & Supply Co., S. A. Factoria 70, Textile, Bag Seaming, and Shoe Machines.
HAVANA, CUBA, Mr. Miguel A. Vilato, Apartado No. 124, Bag Closing Machines.
LIMA, PERU, A. y F. Wiese, S.A., Esq. Nunez y Filipinas.
MANAGUA, NICARAGUA, Hentgen & Co., Ltd., Apartado 14. 5 A. Calle, N. O. 214.
MEDELLIN, COLOMBIA, C. Ceballos & Cia., Ltda., Carrera Junin 44-34.
MEXICO, D.F., MEXICO, Perez Zaragoza, S.A., Regina 26.
MONTERREY, N.L., MEXICO, Talleres Perez Zazaya, S.A., Apartado 197, Cuatemoc Norte 335.
MONTEVIDEO, URUGUAY, Carlos Dighiero e Hijos, Convencion 1424.
PORTO ALEGRE, RIO GRANDE DO SUL, BRAZIL, Casa de Maquinas Folk, Ltda., Rua Hoffman 533. Bag Closing and Bag Making Machines.
PORTO ALEGRE, RIO GRANDE DO SUL, Maquinas de Costura Panambra, S.A., Rua Siqueira de Campos 1172. Textile Machines.
RECIFE, PERNAMBUCO, Maquinas de Costura Panambra, S.A., Av. Guararopez 154. Textile Machines.

REPRESENTATIVES

RIO DE JANEIRO, D.F., Maquinas de Costura Panambra, S.A., Rua Alexandre Mackenzie 117. Textile Machines.
 SAN JOSE, COSTA RICA; Champion Co., Ltda., APDO. 2742.
 SAN JUAN, PUERTO RICO, Abarca Warehouse, Inc., P.O. Box 2352.
 SAN LUIS POTOSI, S.L.P., MEXICO, Talleres Perez Zozaya, J. de los Reyes 80.
 SAN SALVADOR, EL SALVADOR, Vairo Hermanos, Colonia Vairo.
 SANTIAGO, CHILE, Lowenstein & Stewart, S.A.C., P.O. Box 2195, Calle Santo Domingo 1140.
 SAO PAULO, BRAZIL, Casa de Maquinas Falk, Ltda., Av. Duque de Caxias 610. Bag Closing & Bag Making Machines.
 SAO PAULO, BRAZIL, Maquinas de Costura Panambra, S.A., Rua Brigadiero Tobias 388. Textile Machines

• Near East

BAGHDAD, IRAQ, Sons of O. O. Agopian, P.O. Box 121.
 BEIRUT, LEBANON, Sons of O. O. Agopian, P.O. Box 1165.
 CAIRO, EGYPT, Mr. A. Kavaldjian, 4, Midan El-Hami, Kasr el Nil Bridge.
 DAMAS, SYRIA, Elias Aractingi & Fils, Sidi Amoud.
 ISTANBUL, TURKEY, David ve Varber ve Seriki, Hamdi Bey Gecidi 36, 38, 40, Posta Kutusu 385.
 TEL AVIV, ISRAEL, L. Taube, Ltd., 15 Lilienblum St.

• New Zealand

Sole Distributors—H. A. Tuck & Co., Ltd.
 AUCKLAND, 171 Albert St., C. I. (Head Office)
 WELLINGTON, Ford Bldg., Courtenoy Place.
 CHRISTCHURCH, (Sub-Agents) Glendernid, Ltd 78 Lichfield St.
 DUNEDIN, (Sub-Agents) Glendernid, Ltd., 18 Dawling St.


• Pacific Islands

CEBU, THE PHILIPPINES, Atkins, Kroll and Co., Inc., Textile Machines.
 HONOLULU, HAWAII, Commercial Sewing Machine Service, Ltd., 732 Iianiwai St. Textile Machines.
 HONOLULU, HAWAII, H. S. Gray Company, P.O. Box 3016, 759 Puuloa Rd. Bag Closing Machines.
 MANILA, PHILIPPINE ISLANDS, Atkins, Kroll & Co., Inc., 124 Myers Bldg., Port Area. Textile Machines.
 MANILA, PHILIPPINE ISLANDS, Earnshaws Docks & Honolulu Iron Works Co., Corner of Tacoma and 2nd Sts., Port Area. Bag Closing Machines.

• United States

ALLENTOWN, PA., 1512 Catalina Ave., Box 542, L. D. Cassell, Tel. Hemlock 4-3900.
 ★ATLANTA, GA., 81 Peachtree Pl., N.W., M. O. Moulton, Mgr. Tel. Atwood 2733, 2734.
 BALTIMORE 15, MD., P.O. Box 2505 R. B. Foster. Tel. Sor. 7-8499.
 BELLEVILLE, N. J., 18 Preston St., D. C. Jenkins. Tel. Plymouth 1-0304.
 ★BOSTON 11, MASS., 179 Lincoln St., Wm. E. Palm, Mgr. Tel. Liberty 2-0147-48.
 ★CHICAGO 10, ILL., 404 N. Franklin St., O. A. Ullrick, Mgr., Tel. Superior 7-6920.
 ★CINCINNATI 25, O., 3372 Central Pkwy. A. E. Brauch, Mgr. Tel. Kirby 5558.

CLEVELAND 11, OHIO, 11902 Milligan Ave., David G. Lee. Tel. Clearwater 1-3462.
 COLUMBIA, S. C., 319 Howard St., C. A. Page, Tel. 6-8806.
 COMMERCE, GA., State St. J. T. Hanley. Tel. 3-6872.
 CONYNGHAM, PA., Box 46, Robert S. Vogt. Tel. Sunset 8-5556.
 DALLAS 2, TEXAS, P.O. Box 5013. Emmett Richards. Randolph 5722.
 DENVER 10, COLO., 1801 South Marion St. I. E. Carter, Tel. Spruce 7-7060.
 DETROIT 21, MICH., 16630 Ward Ave. John F. Lux, Tel. University 3-4948.
 GREENSBORO, N. C., P.O. Box 226. W. D. Harrod. Phone: 3-7648.
 GREENVILLE, S. C., 119 Phillips Lane, M. M. Ambrose, Tel. 3-4647.
 INDIANAPOLIS 1, IND., 3731 N. Tacoma Ave. B. L. Rogers. Tel. Liberty 6-2277.
 JACKSON, MISS., 327 Eastview St. J. A. Boyette. Tel. 5-1976.
 JOHNSON CITY, N. Y., 471 Main St., J. J. Laffer, Tel. 7-3994.
 KANSAS CITY 41, MO., P.O. Box 824, T. O. Biggers, Tel. South 5030.
 LATHAM (TROY), NEW YORK, 19 Aragon Ave., J. R. LeTourneur, Tel. State 5-6663.
 LYNCHBURG, VA., P.O. Box 1075. C. D. Mairs. Tel. 3-1215.
 ★LOS ANGELES 15, CAL., 119 E. Pico Blvd. P. M. Mason, Mgr. Tel. Richmond 7-9187, 7-9188.
 MEMPHIS, TENN., 4695 Dunn Rd., R. J. Lindhorst, Tel. Mutual 5-6750.
 MIAMI 37, FLA., 2101 Northwest 1st Ave., H. L. Simon, Tel. 82-0323.
 MINNEAPOLIS, MINN., 2800 Texas Ave., St. Louis Park, Minn. Leonard Koehler. Tel. Midway 6236.
 NASHVILLE 12, TENN., 1602 South Observatory Drive. W. J. Brauch. Tel. Cypress 2-5123.
 NEW ORLEANS, LA., 59 W. Claiborne Square, Chalmette, La., L. A. Van Hooser. Tel. Edgewood 1-3106.
 ★NEW YORK 16, N.Y., 116 E. 27th St. W. G. Booth, Mgr. Tel. Murray Hill 9-1266, 9-1267, 9-1268.
 ★PHILADELPHIA 7, PA., 1316 Arch St. B. W. Merz, Mgr. Tel. Locust 7-1023.
 PITTSBURGH 26, PA., 521 Brookline Blvd., Richard Marsh, Tel. Locust 3-3589.
 PLANT CITY, FLA., 214 N. Gordon St. J. C. Morgan. Tel. 3-2681.
 PORTLAND 7, ORE., P.O. Box 843, Marvin H. Corns. Capital 3-7500.
 RAYNHAM, MASS., P.O. Box 141. W. P. Godek. Tel. Tauton 2-5149.
 RUTHERFORD, N. J., 246 Sylvan St., Richard Whitson. Tel. Geneva 8-2178.
 ★ST. LOUIS, MO., 1517-21 Olive St., Z. X. Bennett, Mgr. Tel. Chestnut 1-2368.
 SALT LAKE CITY, UTAH, 1215 E. 13th South St. L. F. Rosvall.
 SAN ANTONIO, TEXAS, P.O. Box 201, H. E. Pearson. Tel. Pershing 2-2884.
 SAN FRANCISCO 7, CALIF., 1275 Mission St. R. J. Vail. Tel. Underhill 1-1580.
 SEATTLE, WASH., 808 Motor Pl. Paul Lockett. Tel. Seneca 8083.
 TUPELO, MISS., 831 Strauss St., Lloyd Baldwin. Tel. 1859-J.
 WAKEFIELD, MASS., 195 North Ave., H. Haberman Jr., Tel. Crystal 9-0455.
 YORK, PA., 444 South George St. Richard L. Smith. Tel. York 8-5592.

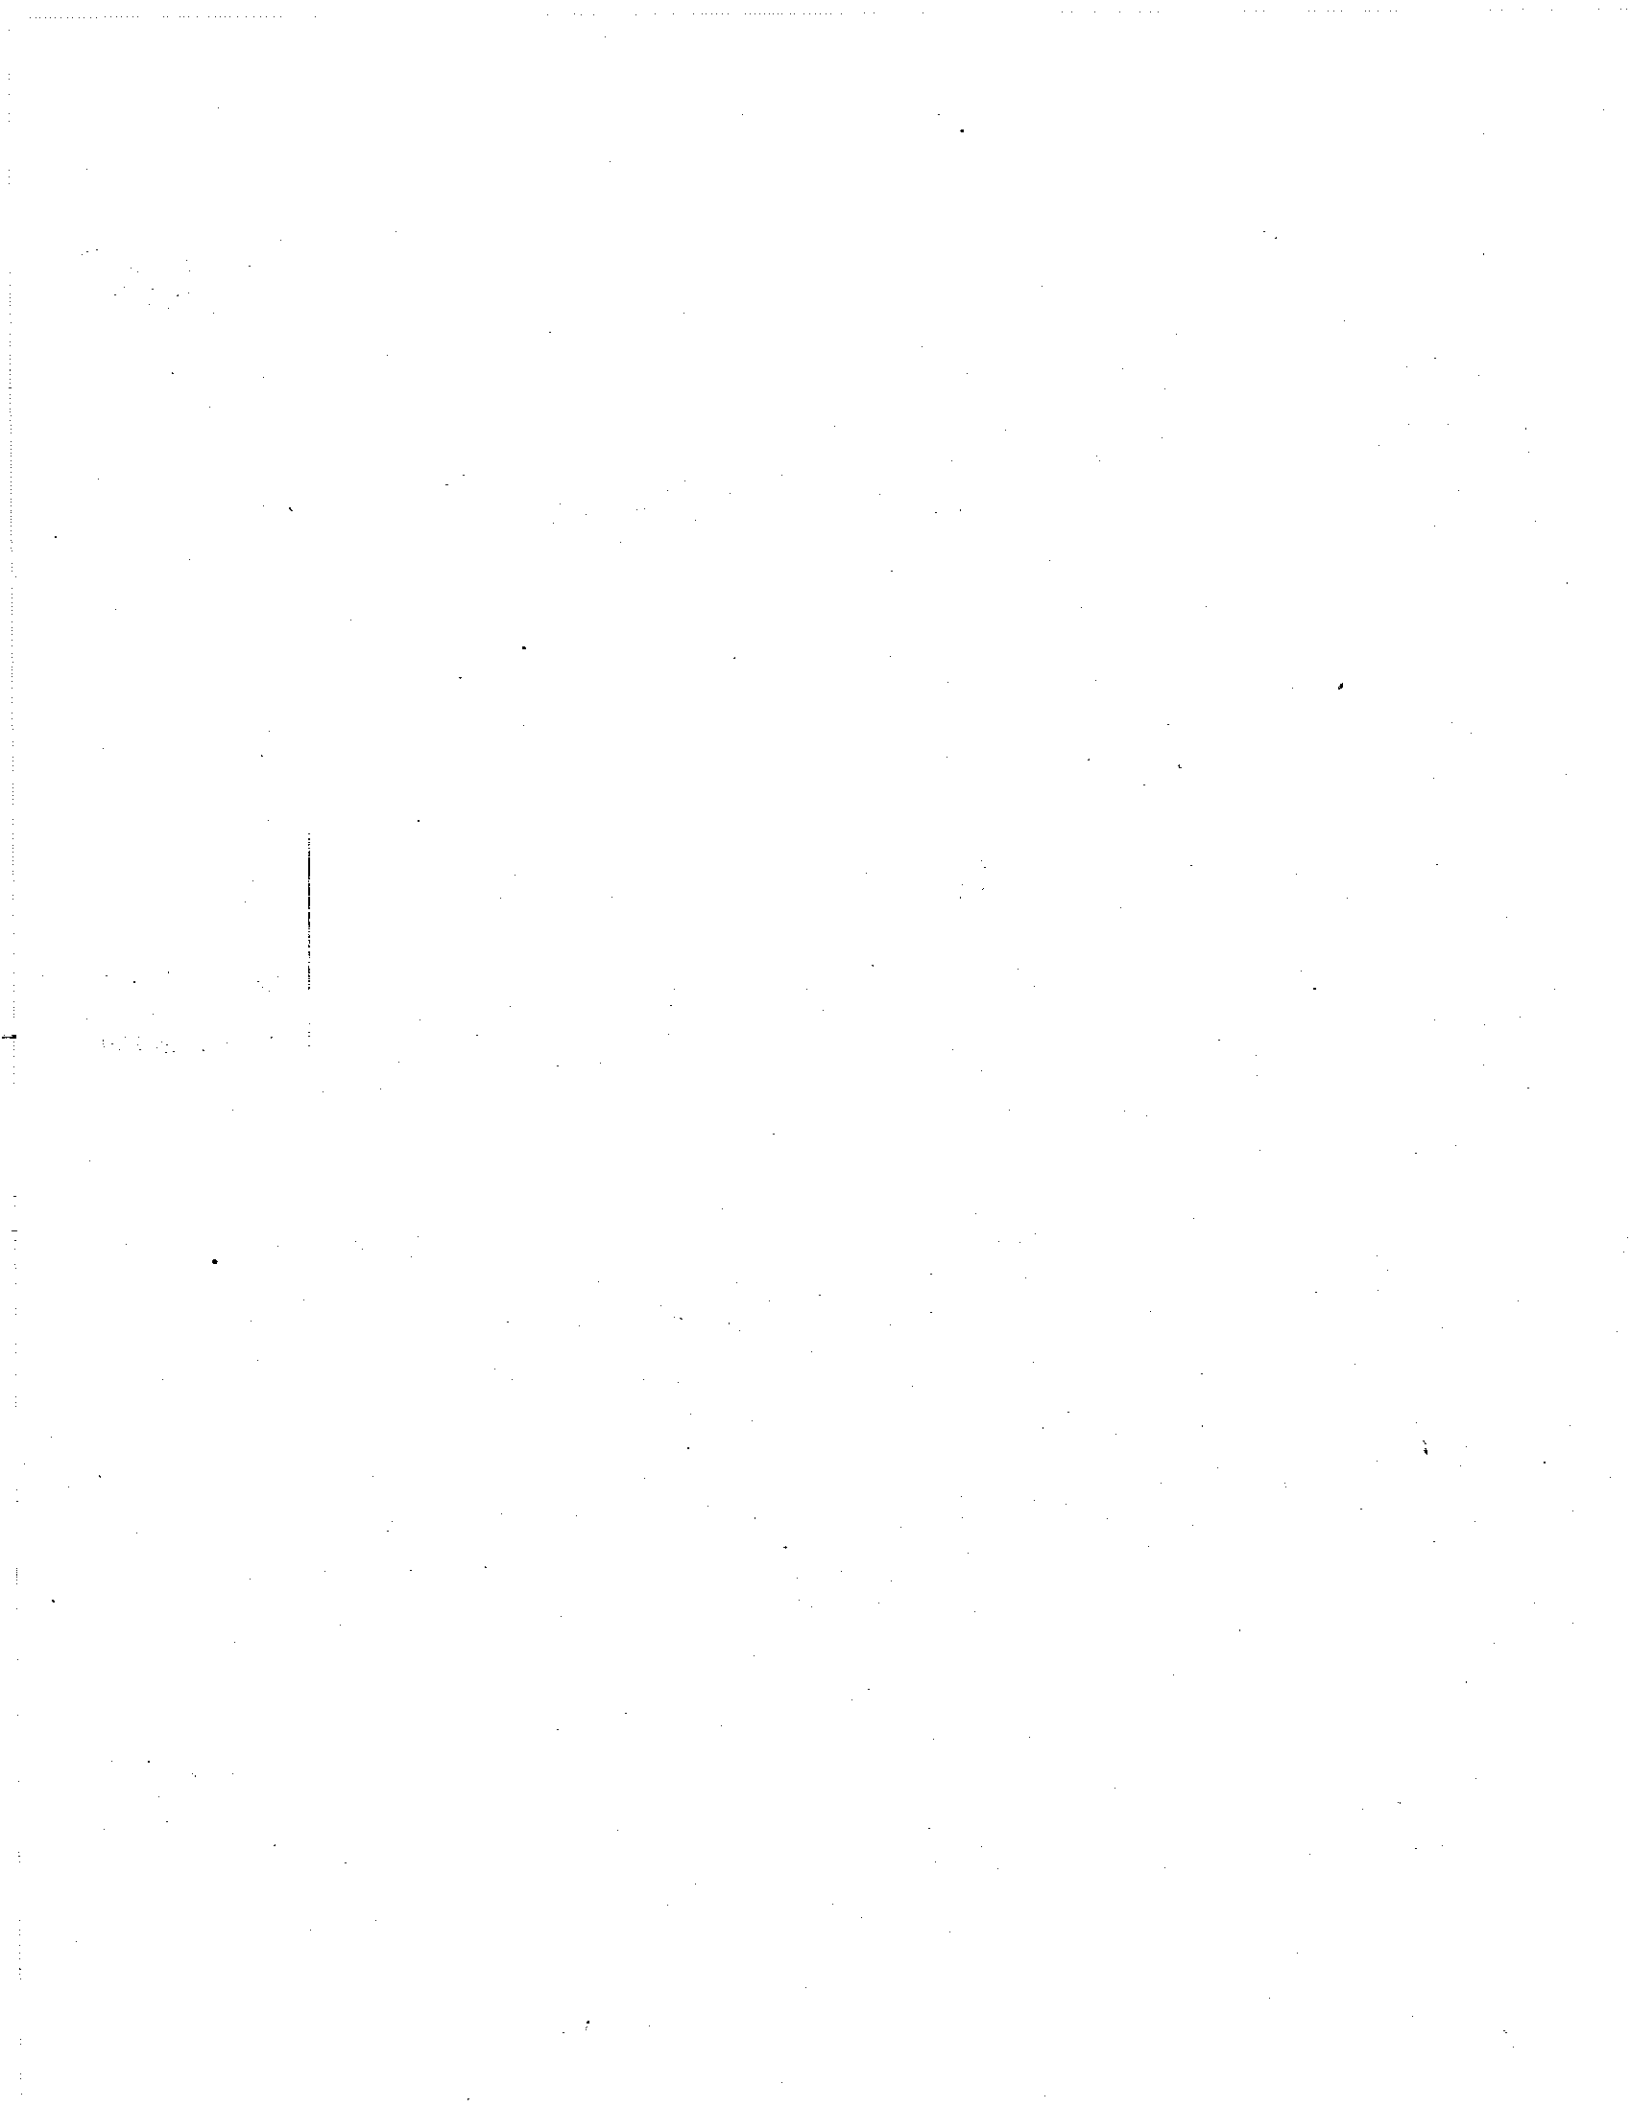

FOREWORD

The one dominating idea back of "Union Special" is to build the best industrial sewing machines in the world. Our new line of Enclosed Type Flat Bed Machines, known as the "Fifty-Thousand Series" marks an epoch in sewing machine design and construction.

All parts are made to gauges with exceedingly close limits. Oil Cups are provided for all important bearings, and a convenient oil drain catches the surplus. Repairs can be made with facility, as all parts are readily accessible, and are 100% interchangeable.

It is our constant aim to furnish carefully prepared information that will enable the customer to secure all possible economies and advantages from the use of Union Specials. On the pages which follow will be found illustrations and descriptions of the parts for styles in Classes 52700, 52800, 52900, 53500.

Additional catalogs, containing information relative to these machines, and which will be furnished on request, are listed below.

| | |
|------------------------------|---|
| Catalog No. 29 | List of Transmitter Parts |
| Catalog No. 45 | List and Description of Needles |
| Catalog No. 45 A Form 357 | Price List of Needles Engineering Department Adjusting Instructions. Specify the Style number of the machine for which the adjusting instructions are required |

In all manufacturing centers will be found Union Special representatives, who will co-operate with those who desire in planning and estimating their requirements.

UNION SPECIAL MACHINE COMPANY

Engineering Department

IDENTIFICATION OF MACHINES

Each Union Special carries a style number which is stamped in the name plate on the machine. Style numbers are classified as standard and special. Those which are standard have one or more letters suffixed, but never contain the letter "Z". Example: 52700 A. Style numbers which contain the letter "Z" are special. When only minor changes are made in a standard machine a "Z" is merely suffixed to the respective standard style number. Example: 52700 AZ.

Styles of machines similar in construction are grouped under a class number which differs from the style number in that it contains no letters. Example: 52700.

The overall width of the stitch in Classes 52700 and 52800 machines is represented by a gauge number measured in 64ths. of an inch, viz: 16 gauge represents a stitch measuring 1/4 inch wide.

The distance between the needles perpendicular to the line of feed in Class 52900 machines is represented by gauge numbers measured in 64ths. of an inch. The number following the first hyphen (-) represents the distance between the left and middle needle and the number following the second hyphen (-) represents the distance between the middle and right needle, viz: 52900 A-5-8 gauge represents a distance of 5/64 inch between the left and middle needle and 1/8 inch between the middle and right needle.

The distance between the rows of stitches in Class 53500 machines is represented by a gauge number measured in 64ths. of an inch, viz: 16 gauge represents a distance of 1/4 inch.

APPLICATION OF CATALOG

This catalog applies only to the standard styles of machines as listed herein. It can also be applied with discretion to the special machines in these classes.

STYLES OF MACHINES IN CLASS 52700

Enclosed Type Flat Bed Two and Three Needle One Looper Machines, External Presser Spring, Shielded Disc Take-up

52700 A (Succeeds 6900 H) For making belt loops for trousers, overalls, bathrobes, and similar garments; stitch Type 406, strips used in short lengths, non-differential feed, needles Type 126, standard gauges Nos. 12 and 16.

52700 B For hemming sides and bottoms of bathrobes made from woven fabrics, with fabric folded next to feed dog; stitch Type 406, adjustable folder which turns in from 1/2 to 1 inch of fabric, non-differential feed, needles Type 126, standard gauges Nos. 12 and 16.

STYLES OF MACHINES IN CLASS 52700- (Cont'd)

- 52700 F For attaching elastic in long lengths to full fashioned hosiery; three needle stitch Type 407, wrench adjustment tandem differential feed, needles Type 121, standard gauge No. 12.
- 52700 G For attaching elastic bands $7/8$ " to 2" wide, in long lengths, garment lengths, or with ends joined, to flat knit, warp knit and rib knit light weight garments made from rayon, silk, cotton, and wool; three needle stitch Type 407, non-differential feed, needles Type 121, standard gauge No. 16.
- 52700 H For attaching elastic bands $3/8$ " to $1\ 1/4$ " wide, in long lengths, garment lengths, or with ends joined, to flat knit, warp knit and rib knit light weight garments made from rayon, silk, cotton, and wool; twin needle stitch Type 406, non-differential feed, needles Type 121, standard gauges Nos. 8, 12 and 16.
- 52700 Z A special style, similar to the standard styles in Class 52700, but differing in some of its component parts.

STYLES OF MACHINES IN CLASS 52800

- Enclosed Type Flat Bed Four and Five Thread Interlock Machines, Stitch Types 602 and 605, Lateral Looper Travel, External Presser Spring, Shielded Disc Take-up
- 52800 B (Succeeds 5100 H) For attaching cuffs to knitted undergarments; one operation lap seam, Five Thread Interlock Stitch Type 605, three needles, wrench adjustment off-set differential feed, needles Type 121, standard gauge No. 16.
- 52800 D (Succeeds 5100 G) For seaming medium and heavy weight undergarments; one operation lap seam, Five Thread Interlock Stitch Type 605, three needles, three-section bottom presser foot, wrench adjustment tandem differential feed, needles Type 121, standard gauge No. 16.
- 52800 E (Succeeds 13100 F) For attaching split tube border to neck and armholes of athletic shirts made from light weight knitted cotton and rayon fabrics; Four Thread Interlock Stitch Type 602, two needles, long length light weight flat knit strip, cut parallel with wale, wrench adjustment off-set differential feed, folder has $3/64$ inch capacity, needles Type 121, standard gauge No. 8, standard finished widths $7/16$, $1/2$, $5/8$, and $3/4$ inch.

STYLES OF MACHINES IN CLASS 52800 (Cont'd)

- 52800 F (Succeeds 13100 C) For attaching split tube border to union suits, vests, step-ins, chemises, and similar garments made from light weight knitted cotton and rayon fabrics; Four Thread Interlock Stitch Type 602, two needles, long length light weight flat knit strip cut parallel with wale, wrench adjustment off-set differential feed, folder has $\frac{3}{64}$ inch capacity, needles Type 121, standard gauge No. 8, standard finished widths $\frac{1}{2}$, $\frac{5}{8}$, $\frac{3}{4}$, $\frac{7}{8}$, and 1 inch.
- 52800 G (Succeeds 13100 B) For attaching knitted tubing and previously made lace to knitted undergarments; lap seam, Four Thread Interlock Stitch Type 602, two needles, wrench adjustment tandem differential feed, needles Type 121, standard gauge No. 8.
- 52800 H (Succeeds 5000 L) For attaching collarettes to knitted undergarments; Four Thread Interlock Stitch Type 602, two needles, long length rib knit strip cut perpendicular to the wale or parallel with the wale, wrench adjustment off-set differential feed, folder has $\frac{1}{16}$ inch capacity, needles Type 121, standard gauge No. 12, standard finished widths $\frac{3}{4}$, $\frac{7}{8}$, 1, and $1\frac{1}{4}$ inches.
- 52800 J (Succeeds 5000 C) For the second part of the two operation process of attaching garment length collarettes to knitted undergarments; Four Thread Interlock Stitch Type 602, two needles, wrench adjustment tandem differential feed, needles Type 121, standard gauge No. 12.
- 52800 K For attaching collarettes to knitted undergarments; Five Thread Interlock Stitch Type 605, three needles, long length rib knit strip cut perpendicular to the wale or parallel with the wale, wrench adjustment off-set differential feed, folder has $\frac{1}{16}$ inch capacity, needles Type 121, standard gauges Nos. 14 and 16, standard finished widths $\frac{3}{4}$, $\frac{7}{8}$, 1, and $1\frac{1}{4}$ inches.
- 52800 Z A special style, similar to the standard styles in Class 52800, but differing in some of its component parts.

STYLES OF MACHINES IN CLASS 52900

Enclosed Type Flat Bed Three Needle Machines, Two Loopers, Left Needle in Rear, Dual Stitch, Double Locked Type 401 on Left and Four Thread Interlock Type 602 on Right, Vertical Trimming Mechanism, External Presser Spring, Shielded Disc Take-up

52900 A For simultaneous seaming and overedging of garment pockets, and similar articles, with the exclusive Union Special "Safety Stitch", needles Type 126, standard gauge No. 5-8.

52900 B For simultaneous seaming and overedging of street and house dresses, coat linings, pillow cases, and similar articles, with the exclusive Union Special "Safety Stitch", needles Type 126, standard gauges Nos. 5-8, 16-8.

52900 Z A special style, similar to the standard styles in Class 52900, but differing in some of its component parts.

STYLES OF MACHINES IN CLASS 53500

Enclosed Type Flat Bed Machines, Two Motion Ruffling Mechanism, Double Locked Stitch Type 401, Lateral Looper Travel, External Presser Spring, Single Disc Take-up

53500 C (Succeeds 9800 S) For attaching ruffles to lace curtains and similar articles; two needles set abreast, diagonal looper travel, continuous ruffling mechanism with knee press control for increasing fullness at corners, needles Type 106, standard gauge No. 16.

53500 D Without knee press control for increasing fullness at corners; otherwise same as 53500 C, standard gauge No. 16.

53500 Z A special style, similar to the standard styles in Class 53500, but differing in some of its component parts.

NEEDLES

TYPE NUMBERS AND SIZES

Each needle has a type number and size number. The former denotes the kind of shank, point, length, groove, finish, and other details. The latter denotes the largest diameter of the blade, measured in thousandths of an inch midway between the shank and eye, and is stamped in the needle shank. Collectively, the type number and size number is the complete symbol.

To have orders promptly and accurately filled, the empty package, a sample needle, or the type and size numbers should be given. See marks on packages. An intelligent order would read as follows "1000 Needles Type 121 Size 032".

NEEDLES

TYPE NUMBERS AND SIZES (Cont'd)

The type numbers of the needles most commonly used in the styles of machines covered by this catalog are listed below. Set opposite each type number is the description of the needle and the sizes available.

| Type No. | Description |
|----------|---|
| 101 | Round shank, round point, extra short, double groove, nickel plated- sizes 019, 022, 025, 027, 029, 032, 034, 036, 038, 040, 042, 044, 046, 049, 054. |
| 101 G | Same as Type 101, except finish is chromium plated- sizes 032, 036, 040. |
| 106 | Round shank, round point, extra short, double groove, ball eye, standard length blade, nickel plated- sizes 027, 029, 032, 036, 038, 040, 042, 044, 049. |
| 106 A | Same as Type 106, except blades are 1/16 inch shorter and shanks are 1/16 inch longer- sizes 032, 036. |
| 106 G | Same as Type 106, except finish is chromium plated- sizes 032, 036, 040, 044. |
| 121 | Round shank, round point, short, double groove, nickel plated- sizes 019, 022, 025, 027, 029, 032, 036, 038, 040, 042, 044, 049, 054. |
| 121 G | Same as Type 121, except finish is chromium plated- sizes 032, 036, 040, 049. |
| 124 | Round shank, round point, short, double groove, spotted, nickel plated- sizes 040, 044, 049. |
| 126 | Round shank, round point, short, double groove, ball eye, nickel plated- sizes 027, 032, 036, 040, 042, 044, 049, 054. |
| 128 | Round shank, round point, short, double groove, ball eye, spotted, nickel plated, standard length blade, standard width of eye and grooves- sizes 032, 036, 040, 044, 049, 054. |
| 128 F | Same as Type 128, except the width of the eye and grooves are under-size one step reduction- sizes 044, 049, 054. |
| 128 G | Same as Type 128, except the width of the eye and grooves are under-size one step reduction, and finish is chromium plated- sizes 044, 049, 054. |

NEEDLES (Cont'd)

Type No.

- 128 GA Same as Type 128, except finish is chromium plated-sizes 040, 044, 049, 054.
- 929 Round shank, spear point, short, double groove, ball eye, spotted, nickel plated, standard length blade, standard width of eye and grooves- sizes 044, 049, 054.

APPLICATION OF TYPE NUMBERS TO MACHINES

The standard type of needle applicable to each style is listed in the description of each style. The styles of machines covered by this catalog are listed below. Set opposite each style number is the type numbers of the needles that can be used. Type numbers are arranged numerically, as the variety of the materials sewed on each machine makes it impractical to show a preference.

| Machine Style | Type of Needles |
|---------------|---|
| 52700 A | 121, 121 G, 124, 126, 128, 128 F, 128 G, 128 GA, 929. |
| 52700 B | 121, 121 G, 124, 126, 128, 128 F, 128 G, 128 GA. |
| 52700 F | 121, 121 G. |
| 52700 G | 121, 121 G. |
| 52700 H | 121, 121 G. |
| 52800 B | 121, 121 G. |
| 52800 D | 121, 121 G. |
| 52800 E | 121, 121 G. |
| 52800 F | 121, 121 G. |
| 52800 G | 121, 121 G. |
| 52800 H | 121, 121 G. |
| 52800 J | 121, 121 G. |
| 52800 K | 121, 121 G. |
| 52900 A | 126, 128, 128 F, 128 G, 128 GA, 929. |
| 52900 B | 121, 121 G, 126, 128, 128 GA, 929. |

NEEDLES (Cont'd)

APPLICATION OF TYPE NUMBERS TO MACHINES (Cont'd)

| Machine Style | Type of Needles |
|---------------|--------------------------------|
| 53500 C | 101, 101 G, 106, 106 A, 106 G. |
| 53500 D | 101, 101 G, 106, 106 A, 106 G. |

ORDERING REPAIR PARTS

PLATES

Grouped, according to scale, will be found illustrations of parts similar in appearance, and, to some extent, component parts that go in the same subdivision of the mechanism.

When a given design of part is made in two or more sizes, only one illustration is usually shown. In ordering these pieces it is necessary that the additional information be furnished as requested under these illustrations.

LIST OF PARTS

Turning from the plates to the list of parts, the description of each part and its principal uses will be found. Always check the symbol against its description before ordering. It is not necessary to furnish the plate number.

When a part is used, or can be used, in all machines covered by this catalog, no specific use is mentioned in the description.

For convenience in ordering, minor parts such as screws, nuts and similar articles are repeated after each major part.

(-) A dash in the "plate number" column of the list of parts indicates the absence of an illustration.

(‡) A double dagger in the "symbol to order by" column indicates that the component parts cannot be furnished separately. Due to the high speed of these machines it is impossible for these associated parts to be fitted a second time and make a serviceable job.

IDENTIFYING PARTS

Where the construction permits, each part is stamped with its part number. Some of the smaller parts are stamped with an identification letter to distinguish them from parts similar in appearance.

All part numbers represent the same part, regardless of the catalog in which they appear.

SUPPLIES

All supplies, including taps, reamers, belting, belt hooks, belt fasteners, screw drivers, wrenches and powdered oil stone will be promptly furnished.

ORDERING REPAIR PARTS (Cont'd)

USE GENUINE NEEDLES AND REPAIR PARTS


Success in the operation of these machines can be secured only by the use of genuine Union Special Needles and Repair Parts as furnished by the Union Special Machine Company, its subsidiaries and authorized distributors. Obviously, it is to our interest to maintain the reputation of Union Specials by furnishing the very best goods obtainable. They are designed according to the most approved scientific principles, and are made with the utmost precision. The maximum efficiency and durability are assured.

Genuine needles are put up in packages marked at the top "Trade 'UNION SPECIAL' mark". Genuine repair parts are stamped with a reproduction of the well known two padlocks with a link connecting the shackles. Both trade marks are symbolic of superlative excellence. All other needles and parts are bogus.


TERMS

Prices are strictly "net cash" and subject to change without notice. All shipments are forwarded at the buyer's risk, f.o.b. shipping point. Parcel post shipments are insured, unless otherwise directed. A charge is made to cover the postage and insurance.


Plate 1 - Full Size

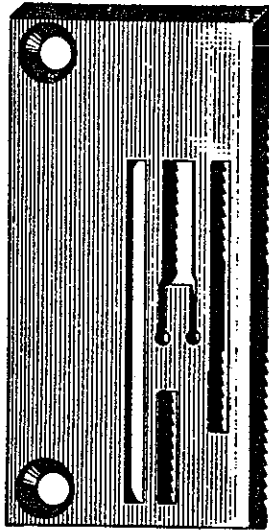


5024M
Specify
Gauge

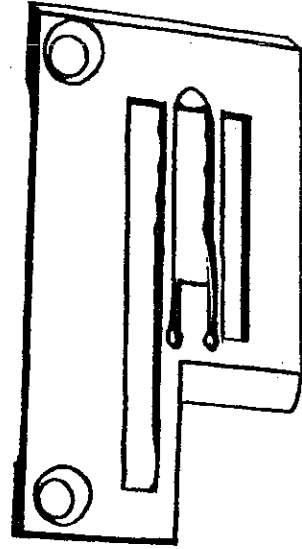


52824F
Specify
Gauge

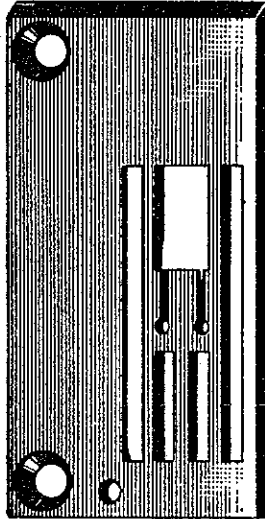


5024B
Specify
Gauge

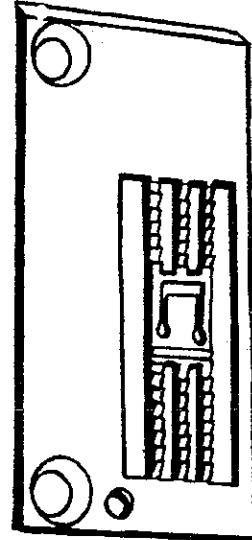

52724H
Specify
Gauge

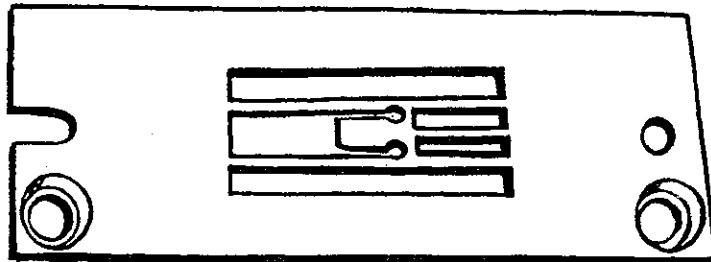

52724B
Specify
Gauge

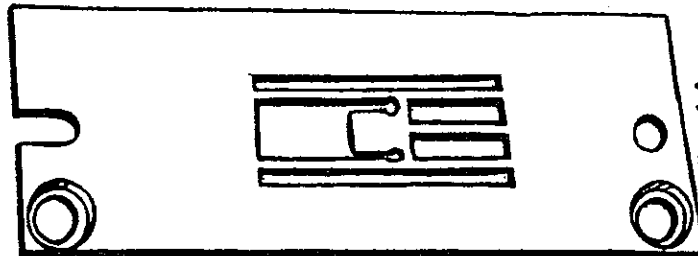

52724A
Specify
Gauge

Plate 2 - Full Size

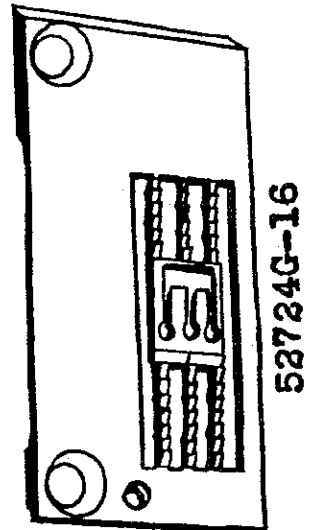
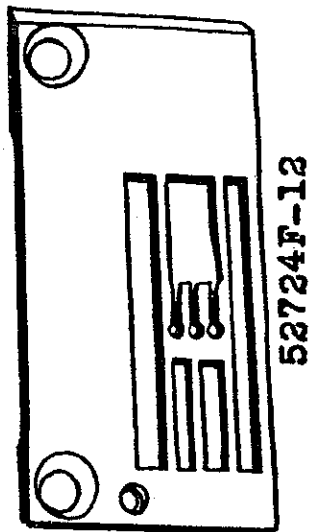
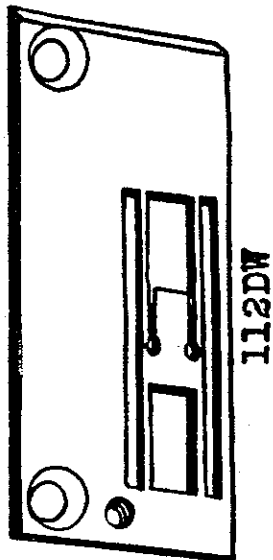
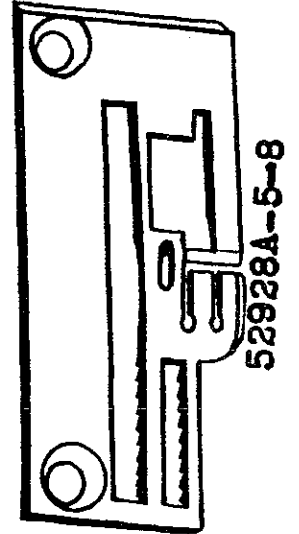
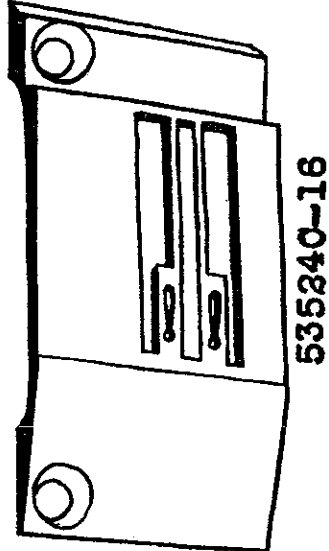
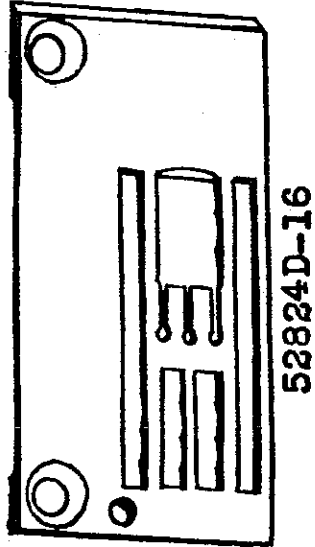
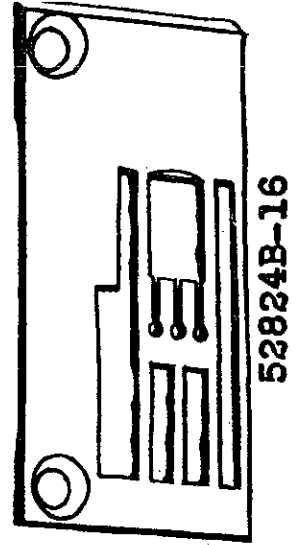
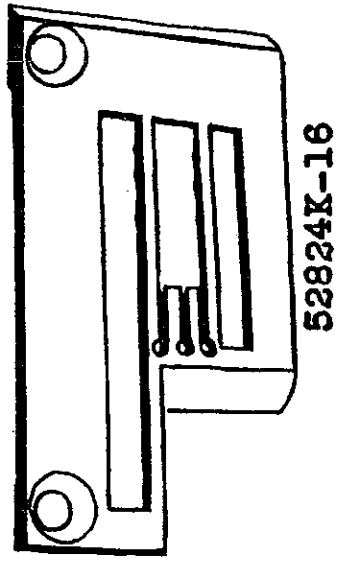
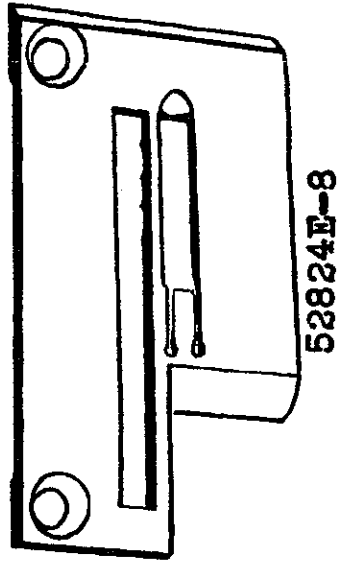


Plate 3 - Full Size

















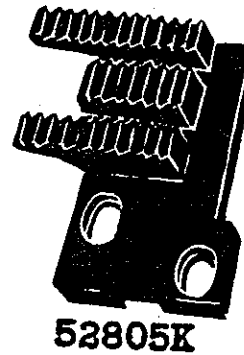



Plate 4 - Full Size

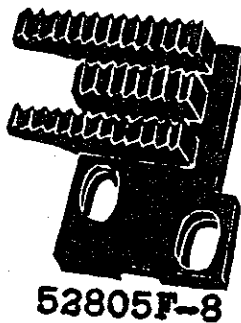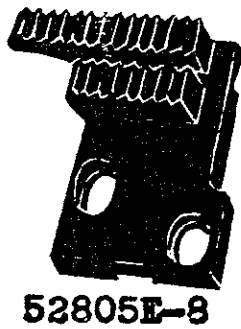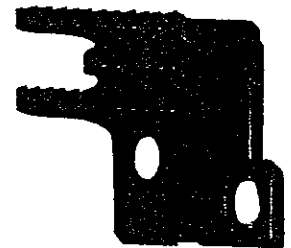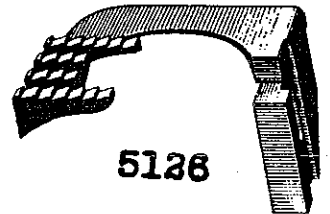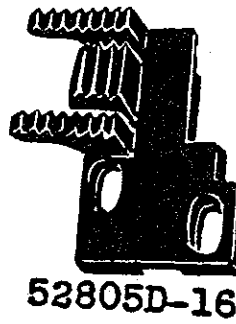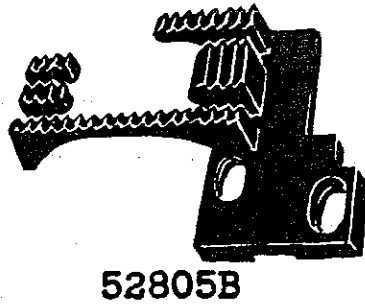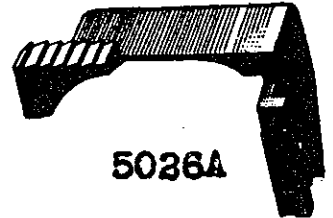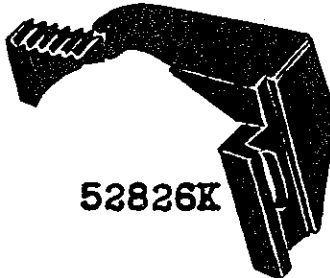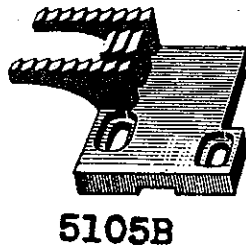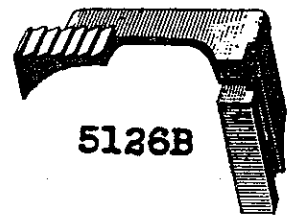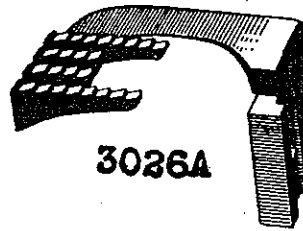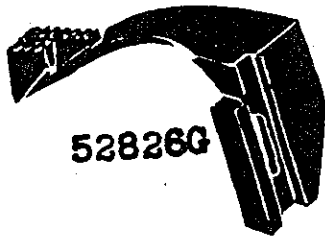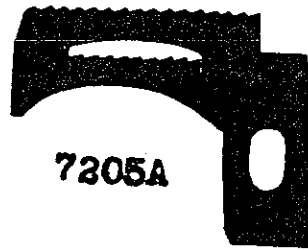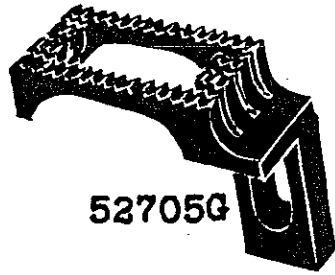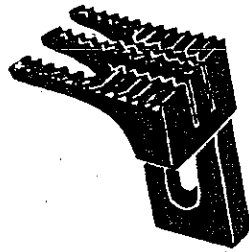


535050-16

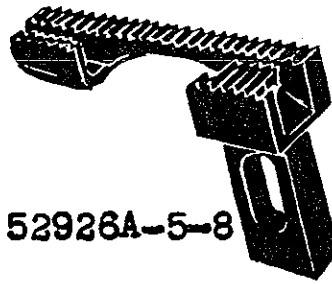


52926A-5-8

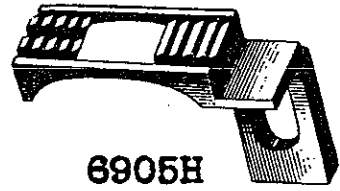


6905H
Specify
Gauge

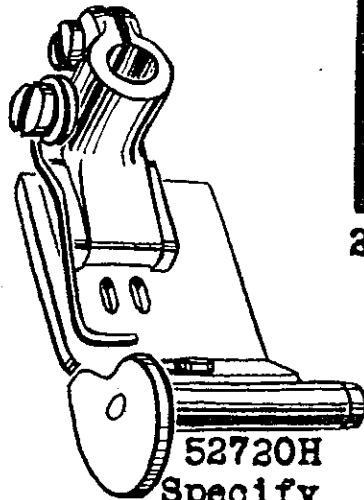


52720H
Specify
Gauge

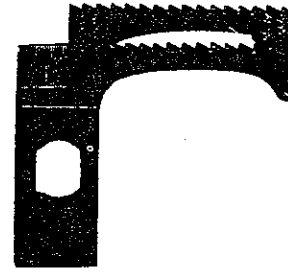


22JW

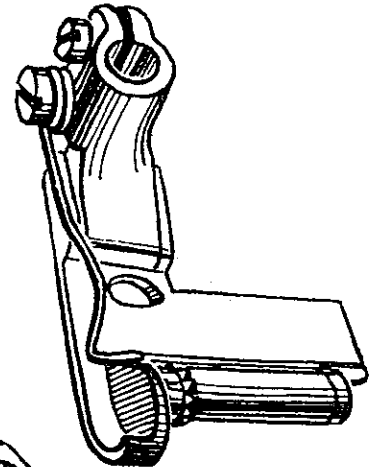


52820G-8

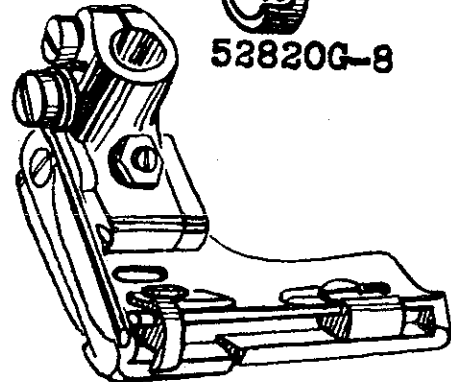


52720F-12

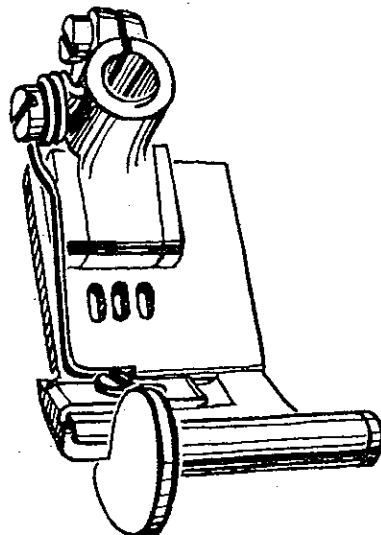

52720G-16

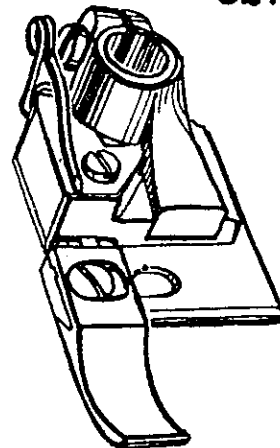


52820H-12

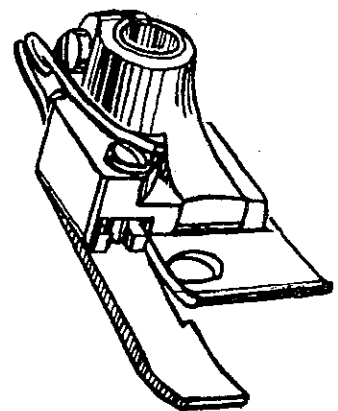


13120F-8


Plate 5 - Full Size

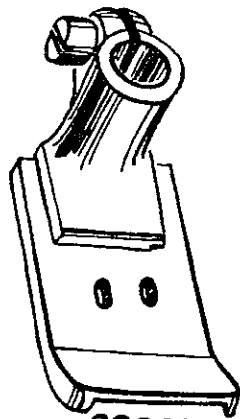


6920L
Specify
Gauge

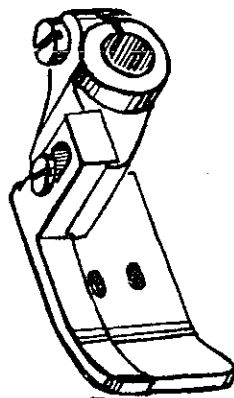


52720B
Specify
Gauge

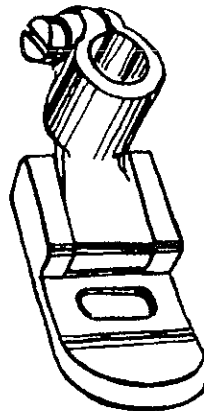


5127J

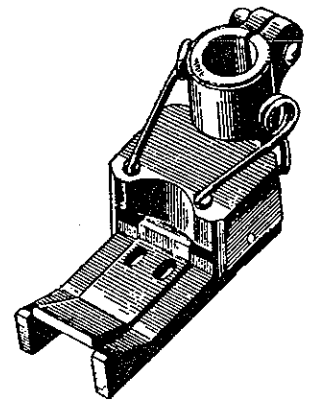


6920A
Specify
Gauge

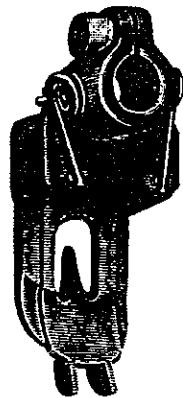


12320E
Specify
Gauge

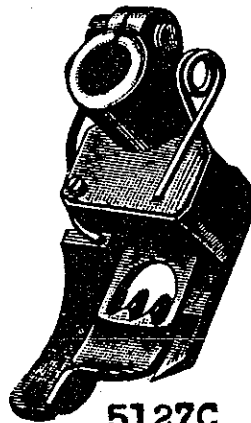


5127C

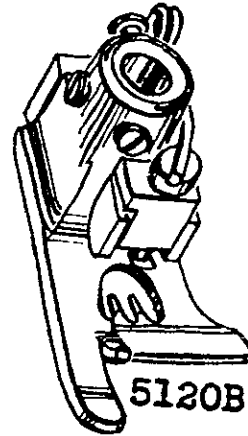


5120B

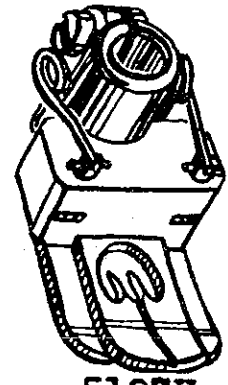


5127H

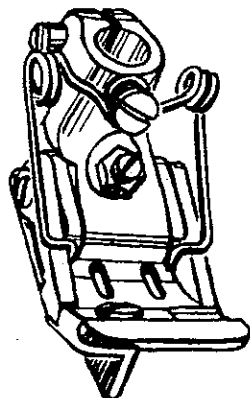

53520C-16

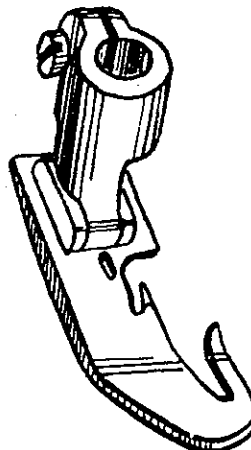


52920A-5-8

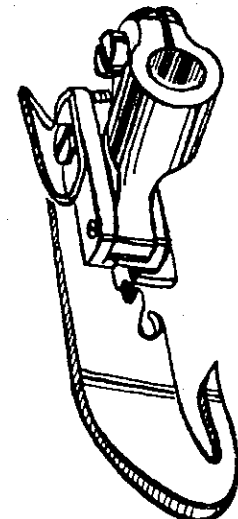


52920B-5-8


Plate 6 - Full Size

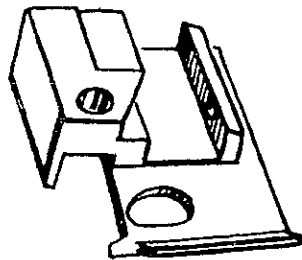


52830H-12

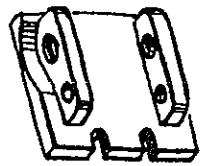


53530A-16

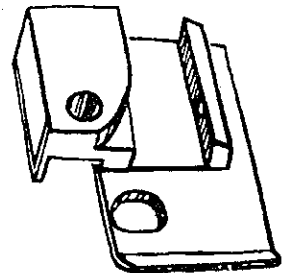


13130F-8

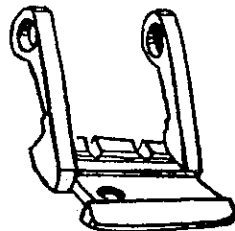


53530B-16

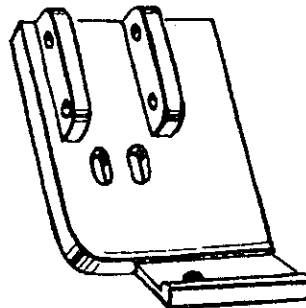


52730H
Specify
Gauge

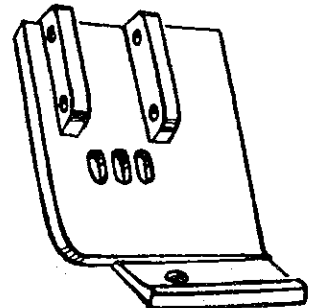


52730G-16

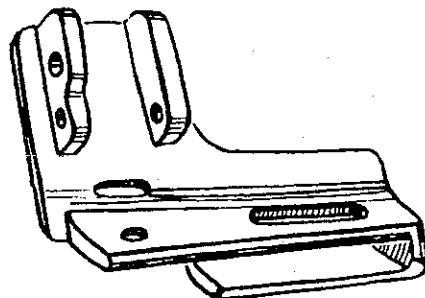

52730F-12

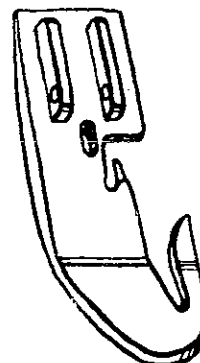


52930A

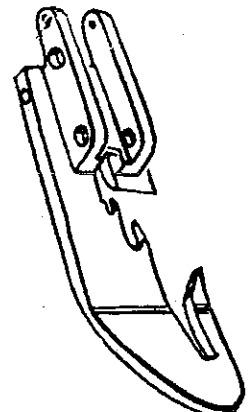

52930B




13130A

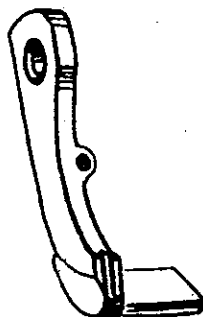

52730J



52830A

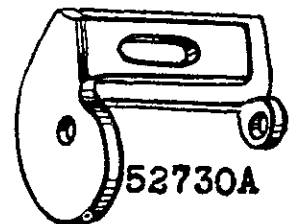

52730A

Plate 7 - Full Size






















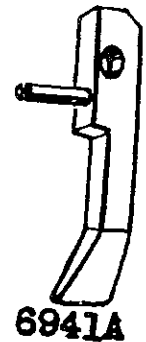


Plate 8 - Full Size

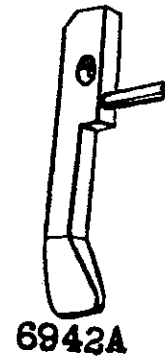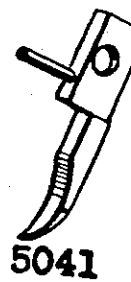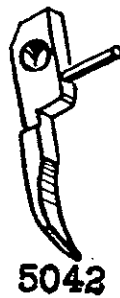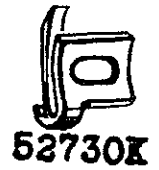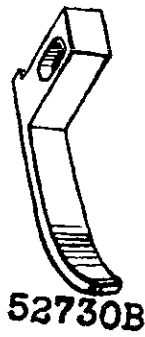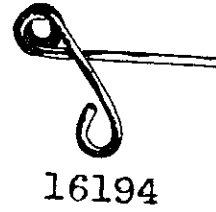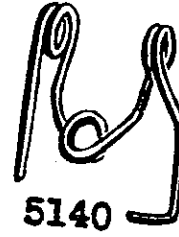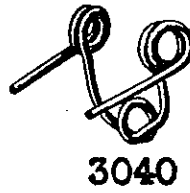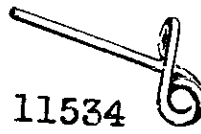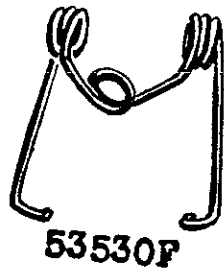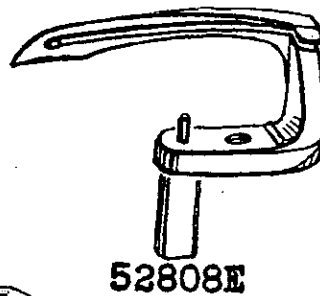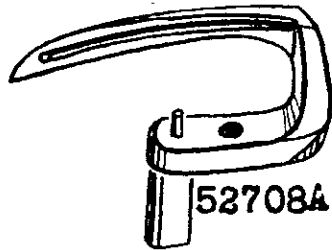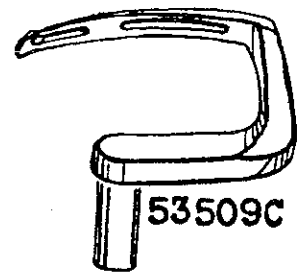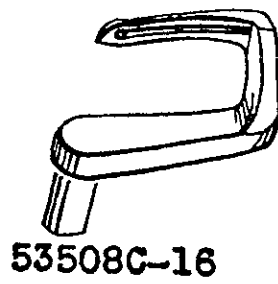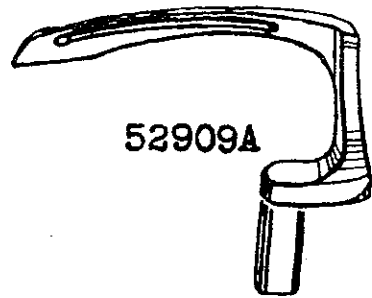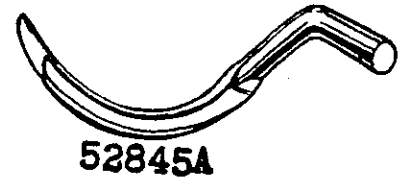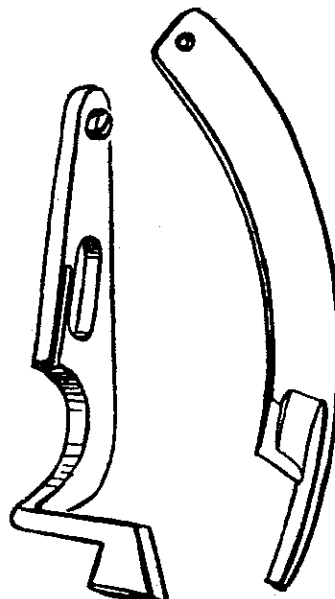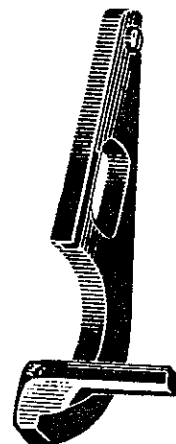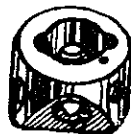

52949

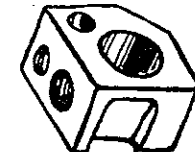

52970A

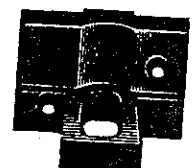
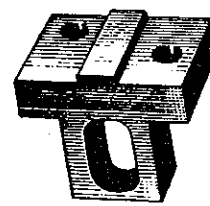


Plate 9 - Full Size

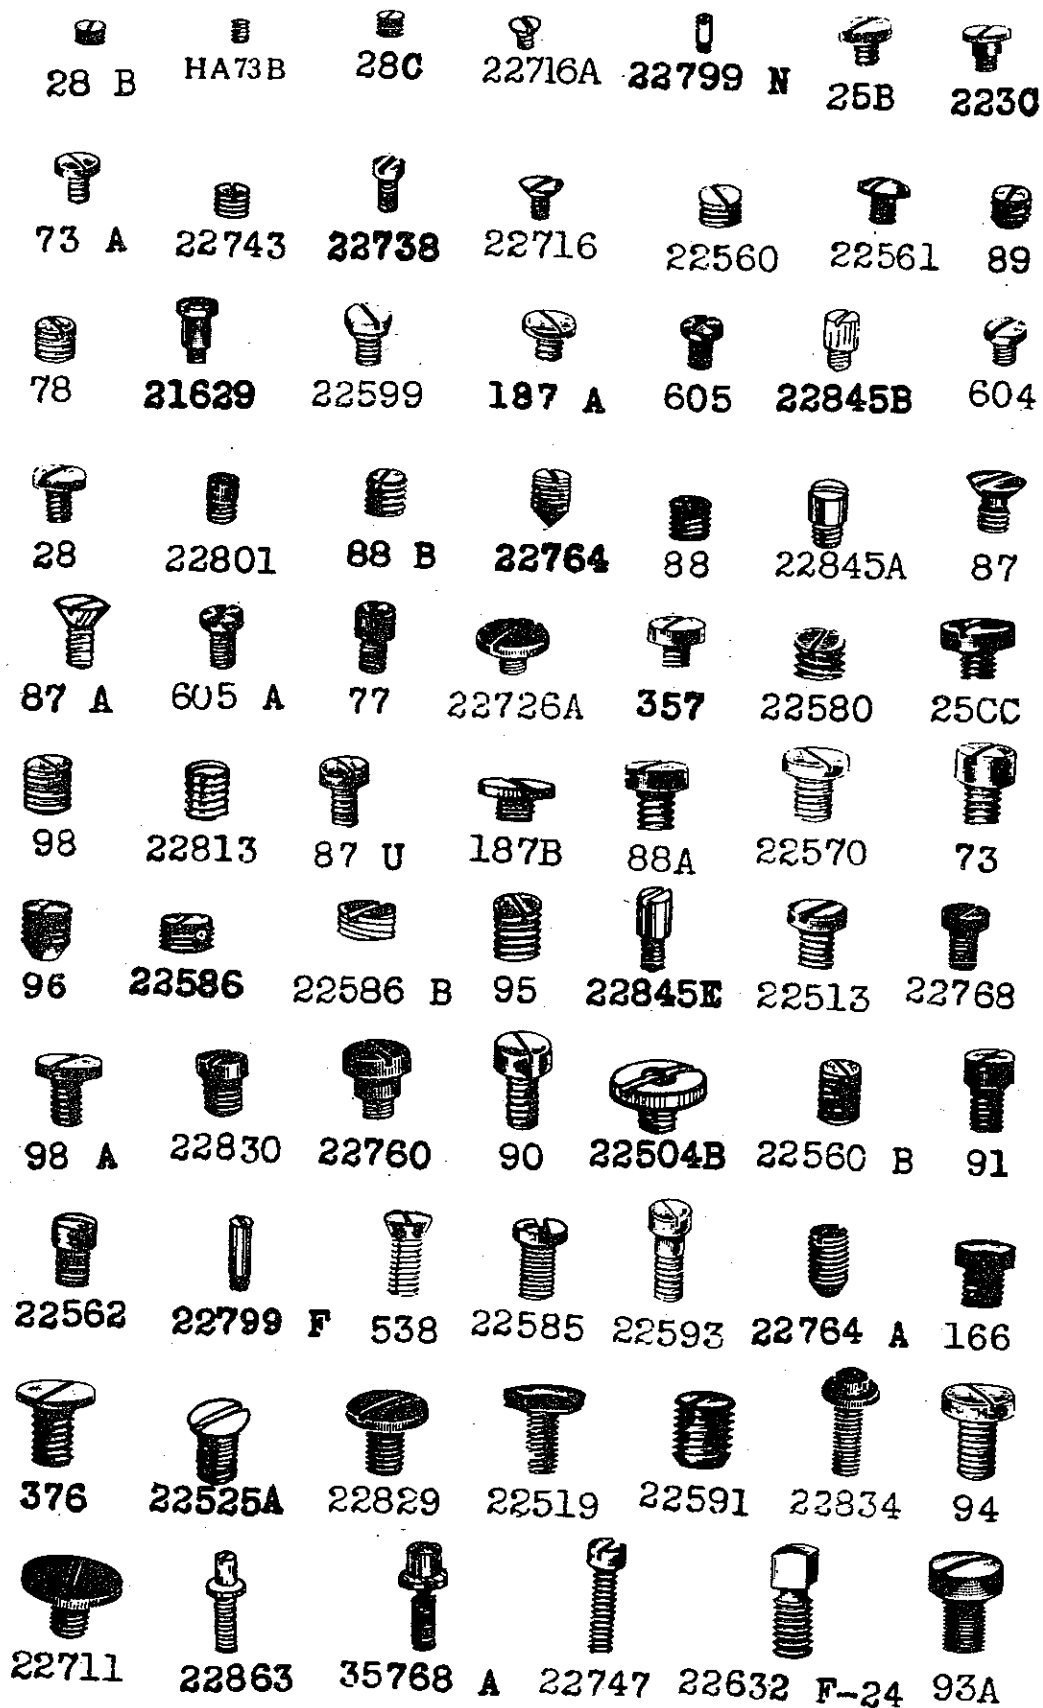


Plate 10 - Full Size



Plate 11 - Full Size



75



22541



22596



22569




9663



136



75 A



22864




22559 B



22559C



22587

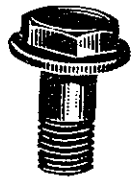


35766




22539C



22509

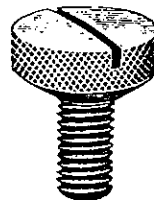

22728




74




22811




69 FD

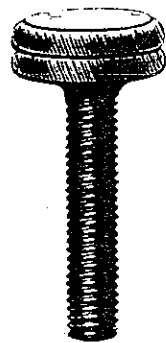


64 A

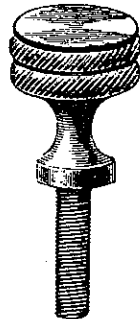


G10

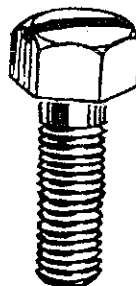


22788

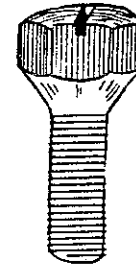


22823A

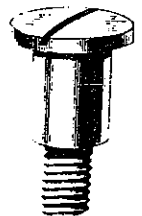


236

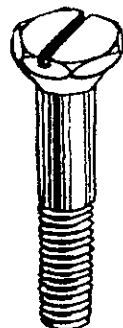


22823B

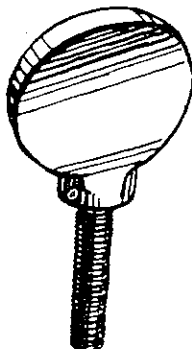


21745D

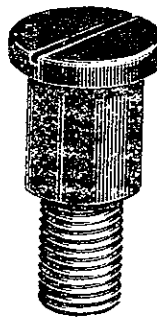

22566A

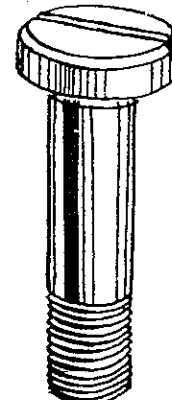

22865

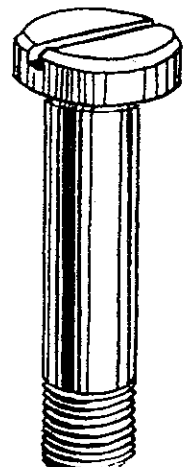

22865A

Plate 12 - Full Size



Plate 13 - Full Size


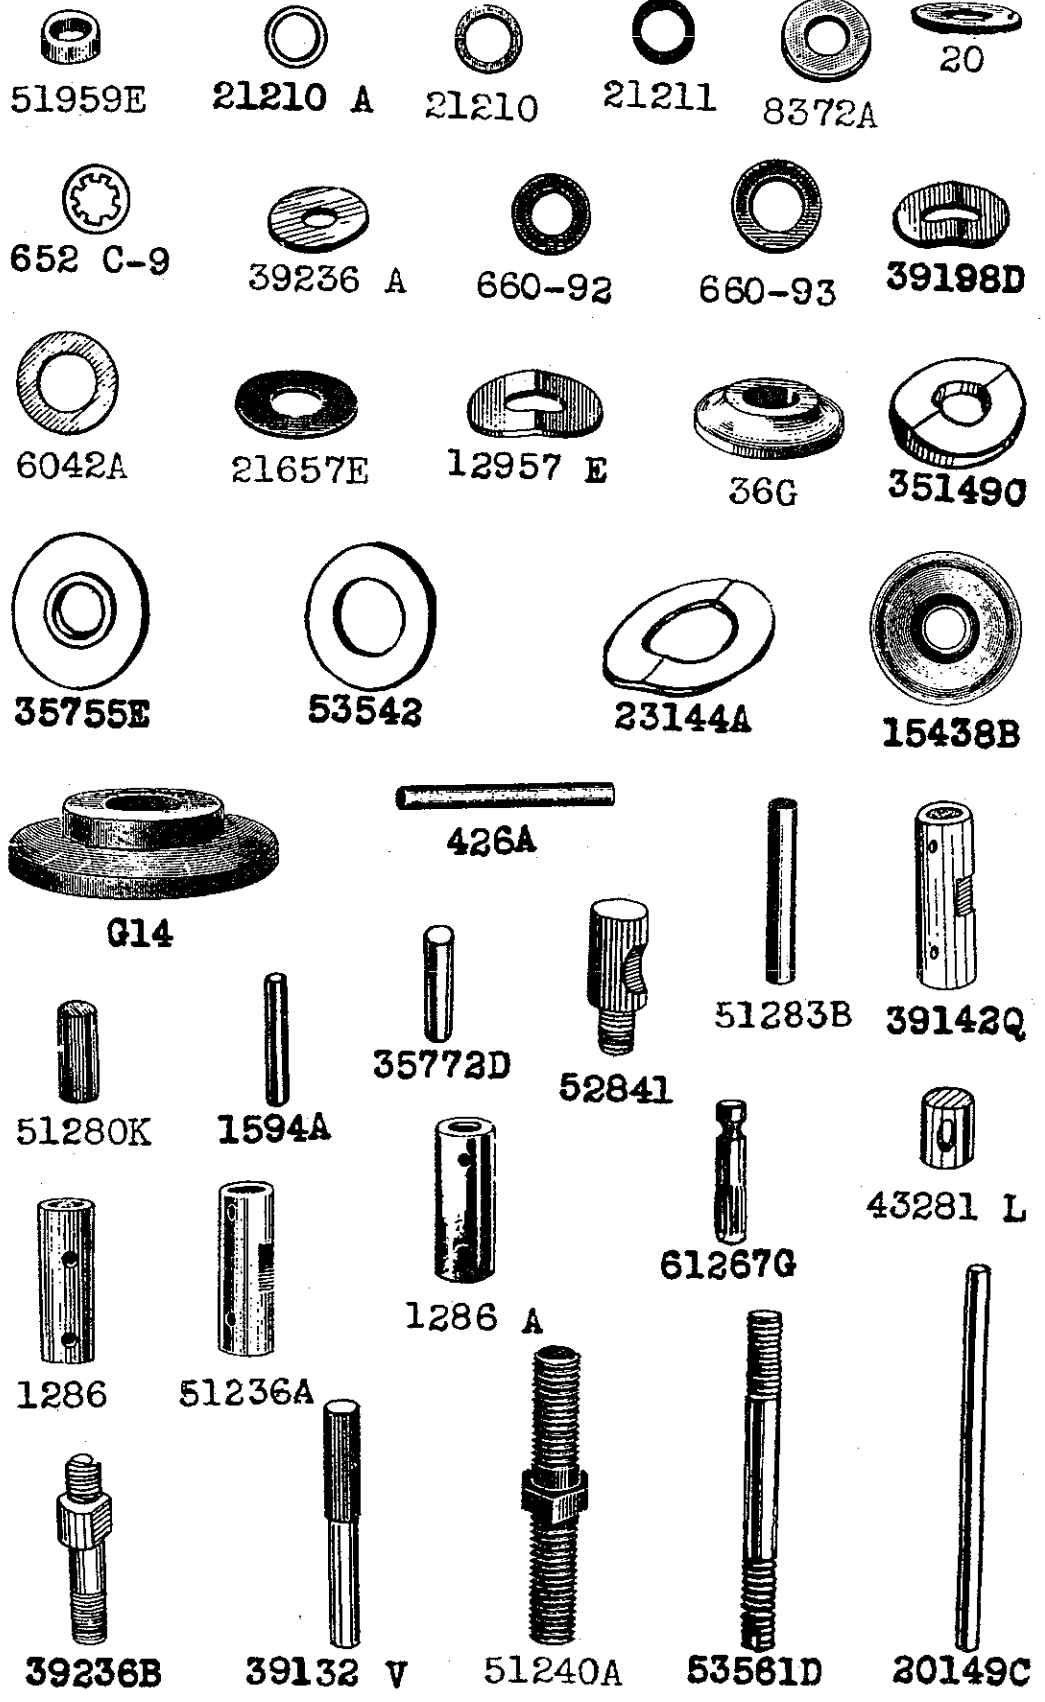



Plate 14 - Full Size



21225
SPECIFY
MEASUREMENT

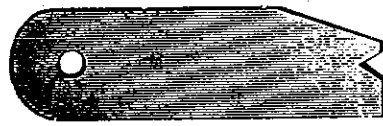

21227V

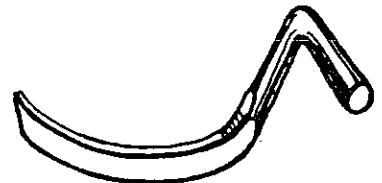


21227B-8



51283A



21227C
Specify
Gauge

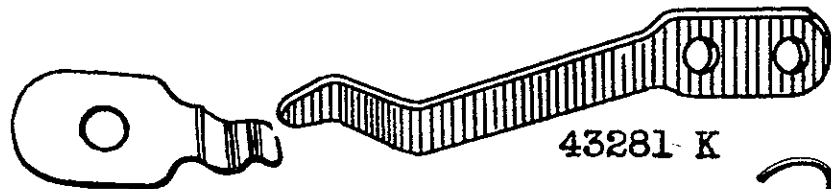

43281-K



15438C

52981G




51292 F-1



52978N



522



1286B




15872F



51959C



51292 F-4



51292 F-5



51292 F-8



51292 F-2



57WC



110-3



1349




51240C



53548C




11663



9471

Plate 15 - Full Size

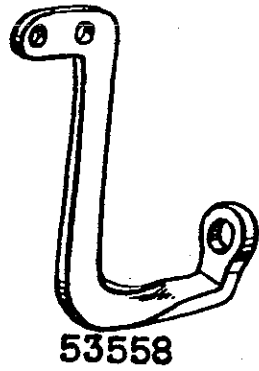


53558



51958B



52958

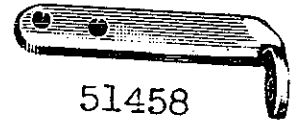

51458



51458A



51758




52 A




1288



41076D



51958



51958A




52842G




51158 D



57 WB

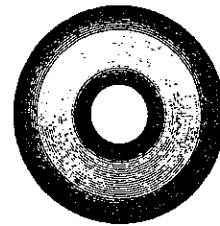

109 B

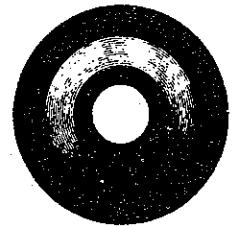


109



158B



158A

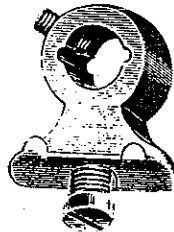

1287




51758A




668-12



668-7

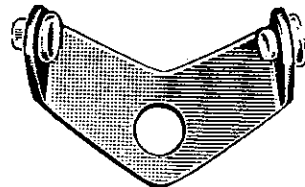

51292 D



51959B




51292



1346



11261A

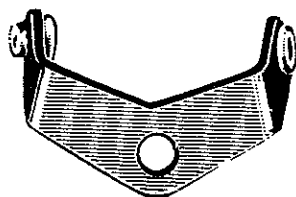


51292 E




35582B

Plate 16 - Full Size

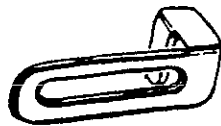


15180B

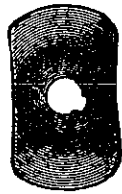


15498H




39237G

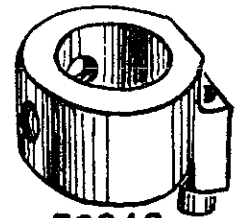

52846

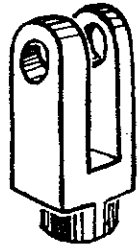


53552N

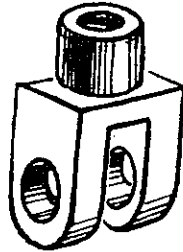


53552P



39236 V

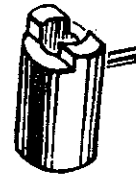


53553R

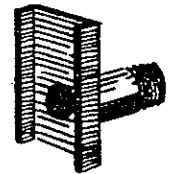

51134 G



53547

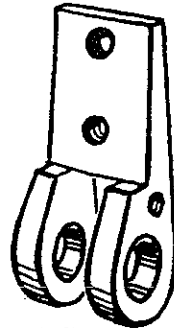

53548



23195




53548G



53548P



53540

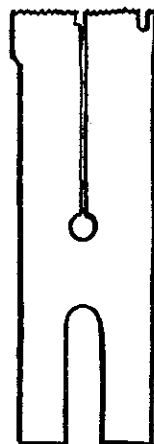

53546-16




53548S




15455


Plate 17 - Full Size

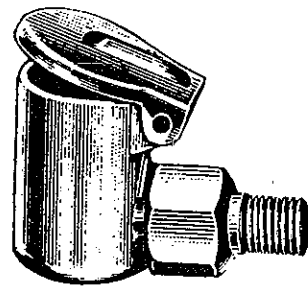


666-28

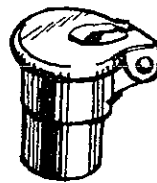

666-50

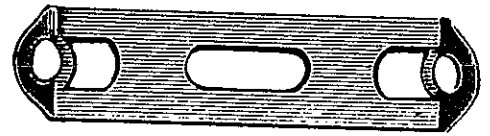

51243R

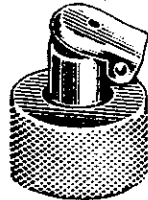

660-95



666-49




52981P




21351



61294 W

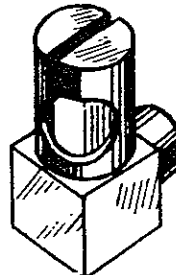

39193

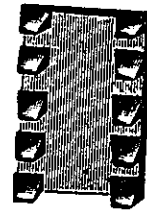

21350




51293B



666-11



660-90

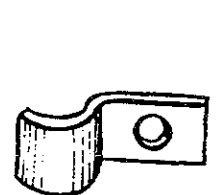

53593B



666-66



660-143




666-19



39193 A



52894 Z

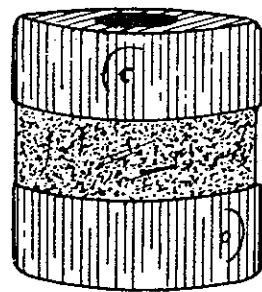

51295



51296



51296 A



666-53



666-13

Plate 18 - Full Size



35731A



51236B



39237D



53560D



52950G



52971H



52972



53541N




51242C




52887 G




51244E

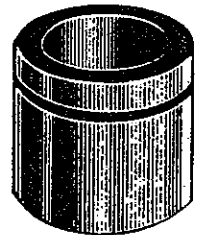


51250B

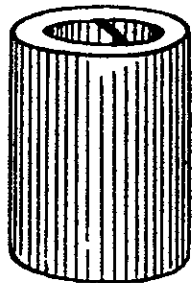


51290 E

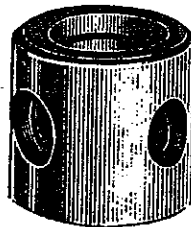

51290D

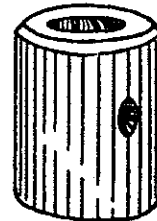


51242 B

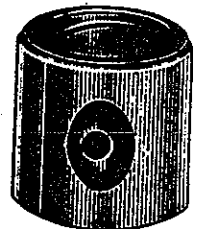

51290



52889




51254A



51254




53556C

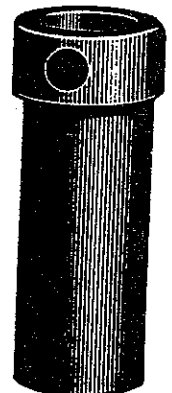

51244C


Plate 19 - Full Size

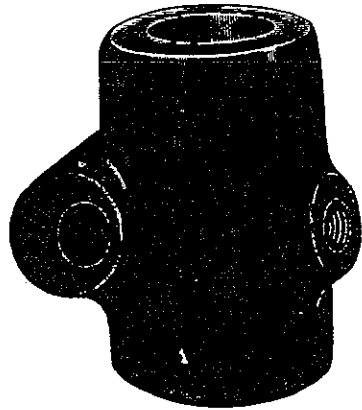


21217A



51170C

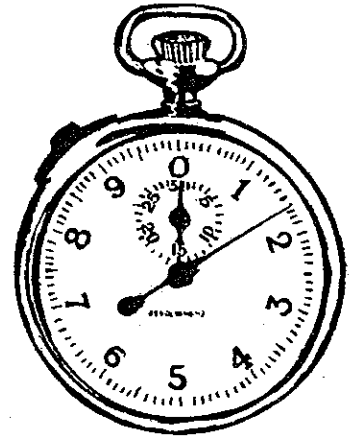


WA15

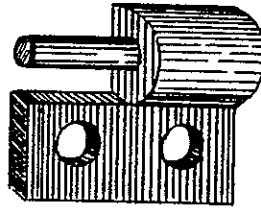


52885 G




35833 A

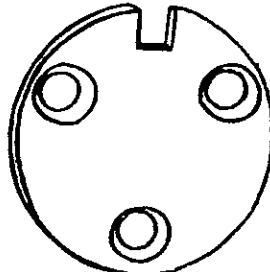


53595D

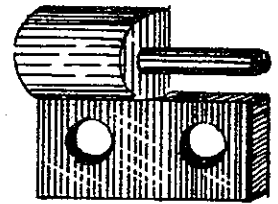

52885 H

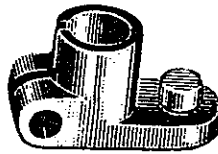


21657B

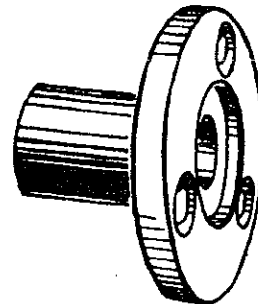

53554J



751A

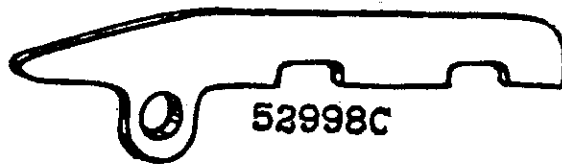

52998C




21113 B




V118


Plate 20 - Full Size

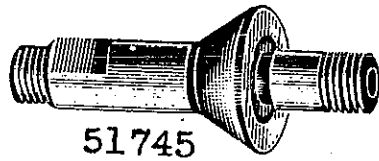


51745

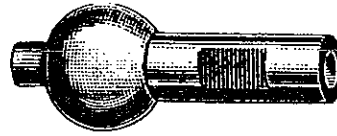


51243B

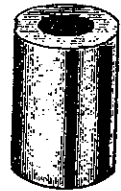


16

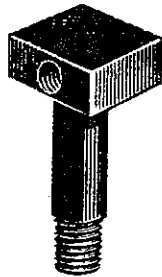

51236C

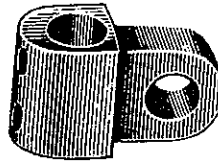


35759

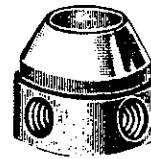


15465F




52842

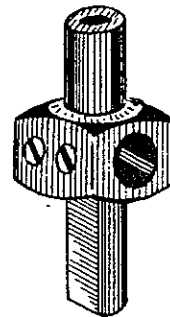

39237

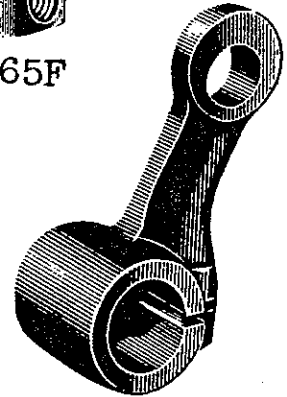

51244B

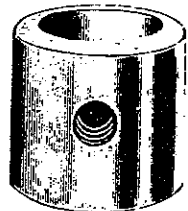

43




39236U




51243C




41255 B

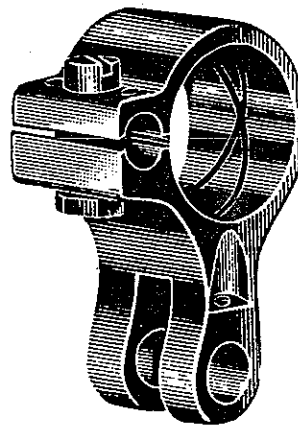


51245

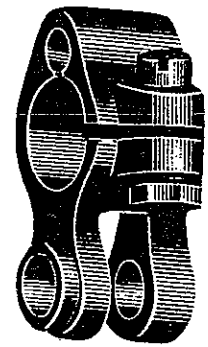


51236

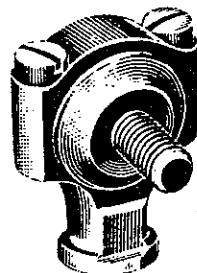


51741B

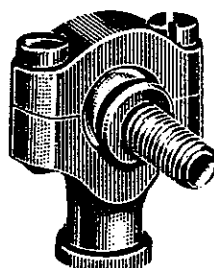

51241D

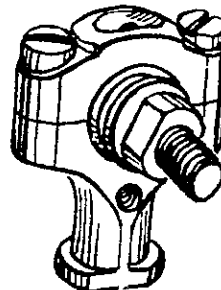


52854

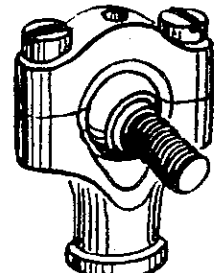


41043D


Plate 21 - One-half Size

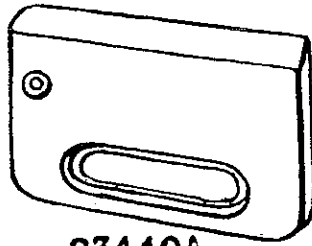

23440A

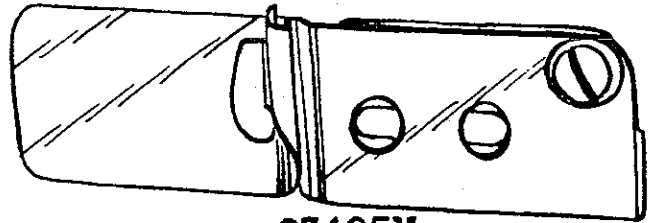


23405M

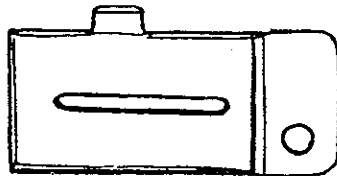


23440B




234400

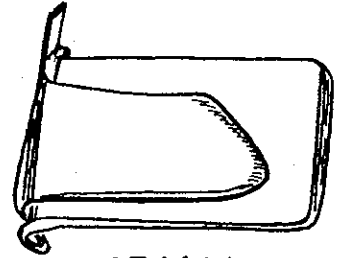

23442A

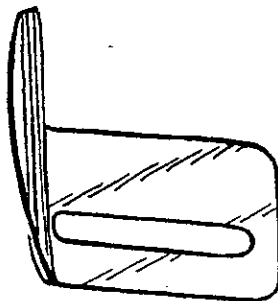


23440D

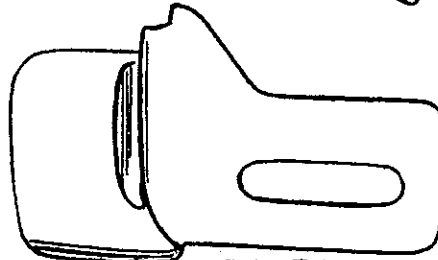

23443A




23425U

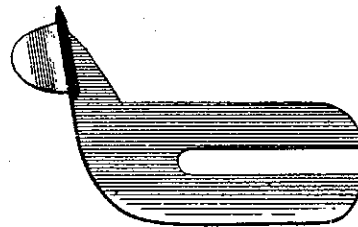

10303A




23425V

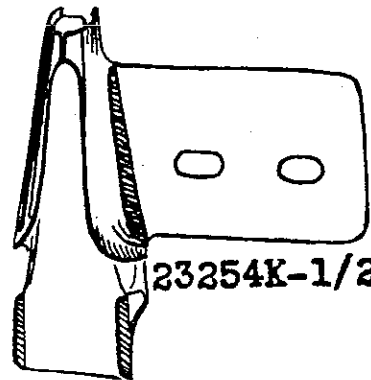


23254K-1/2




5003

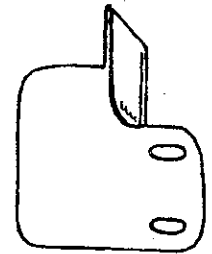


23133L

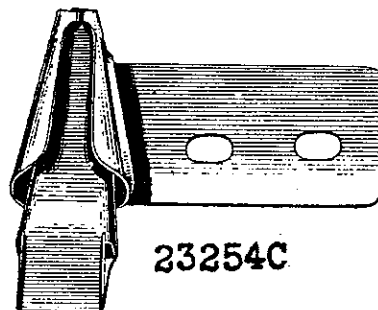

23254C

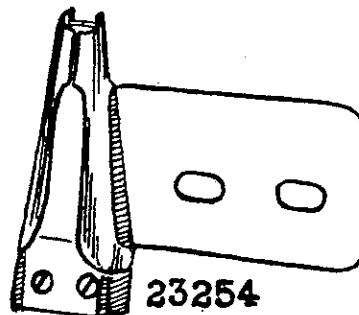


23254

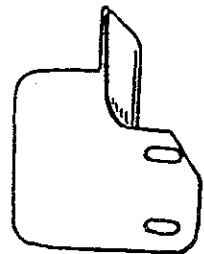


23133M

Plate 22 - One-half Size

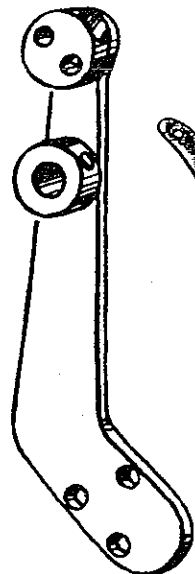


23306M



23432



23306Q

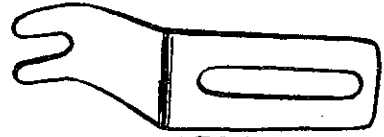

23306X




23306U



23306T



23306W




23306A




21657C

23279D



21657D



21657H



21657G

21657J



53592



52992



21657-3




21657-4



21657-5

Plate 23 - One-half Size

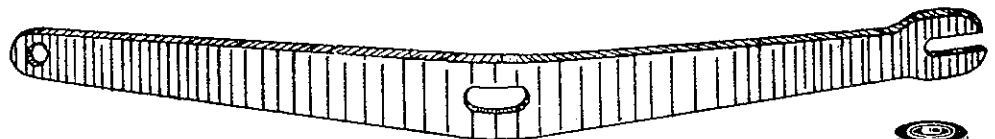

52887




21657A




21657F



G12



51250



51242A



52917-8



53517C-16



52817E-8



52817
Specify
Gauge



52717B
Specify
Gauge

Plate 24 - One-half Size



299



39135



424



39143G



15498L



8



51235B



51293A



15498G



35741A



53516



52888



51244A



51216



52816




HS35E




21113 A

Plate 25 - One-half Size

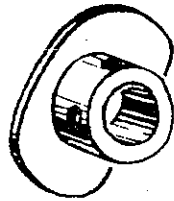


52723A

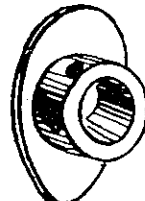

52823



52923

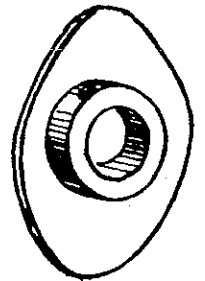


53523C



52844A



51104 D




52804A



52904



52804

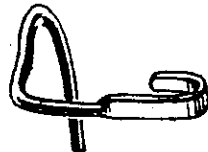

52770A




52855G



53552G



53559

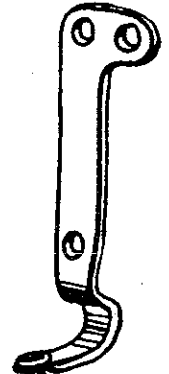


52855



52950




54

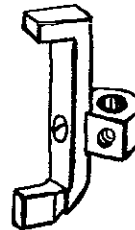


52883G




52971A

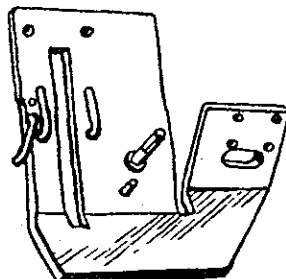

52857

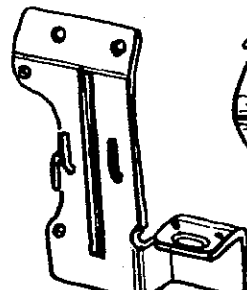

52957

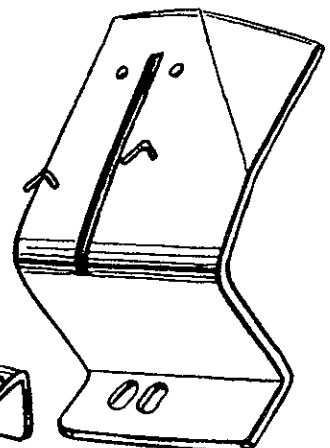

53557C

Plate 26 - One-half Size



356



243



482




9271




753



52802A




51202




35833 C



539

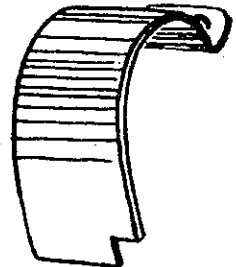

52852G

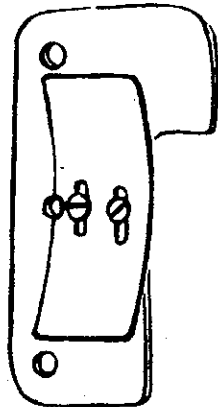


53582N



52882 D




52782H

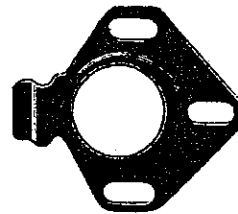


51281F




53595E

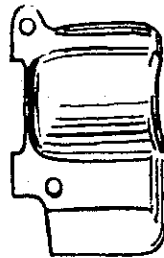


52994

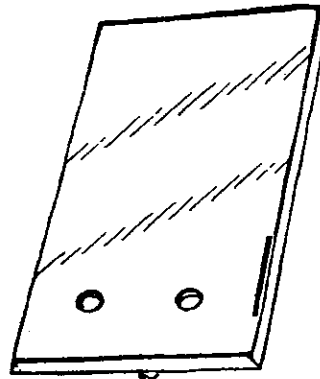


53502

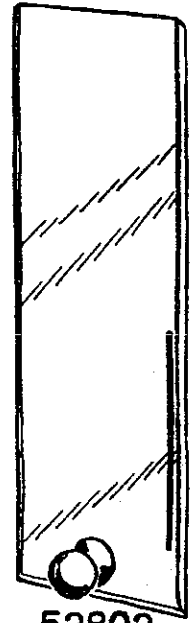


52802

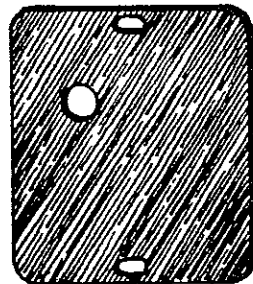

52882 B

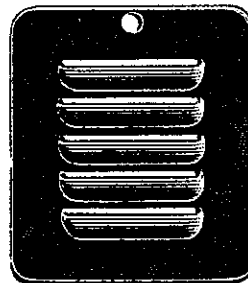


51282

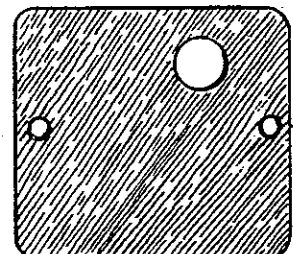


51282 H


Plate 27 - One-half Size

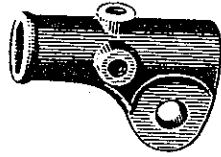


51244

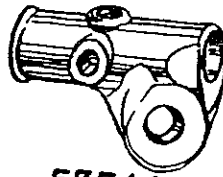


53544

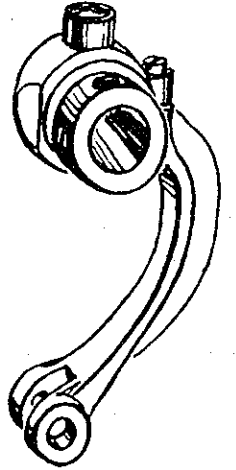


29132M

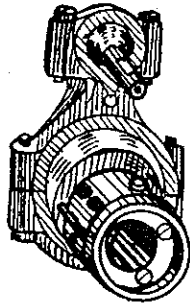

29105L

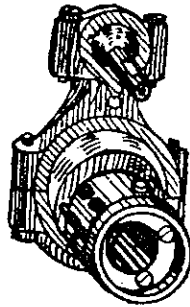

29105K

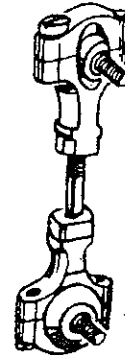

52848A




51216A



29066 F




53545

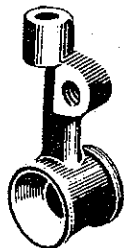


51213




52913

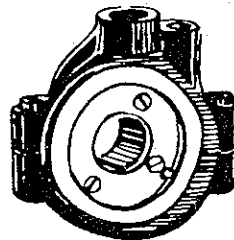


29126AK

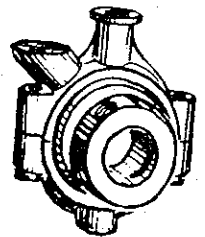


29114B

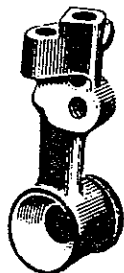


53513

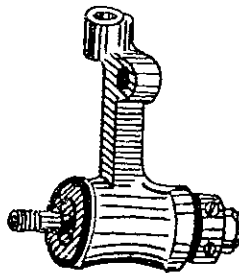

29192

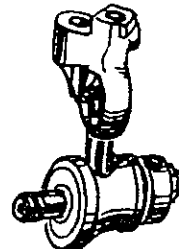

29192F

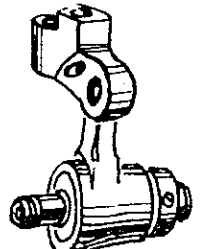

29192G

Plate 28 - One-half Size



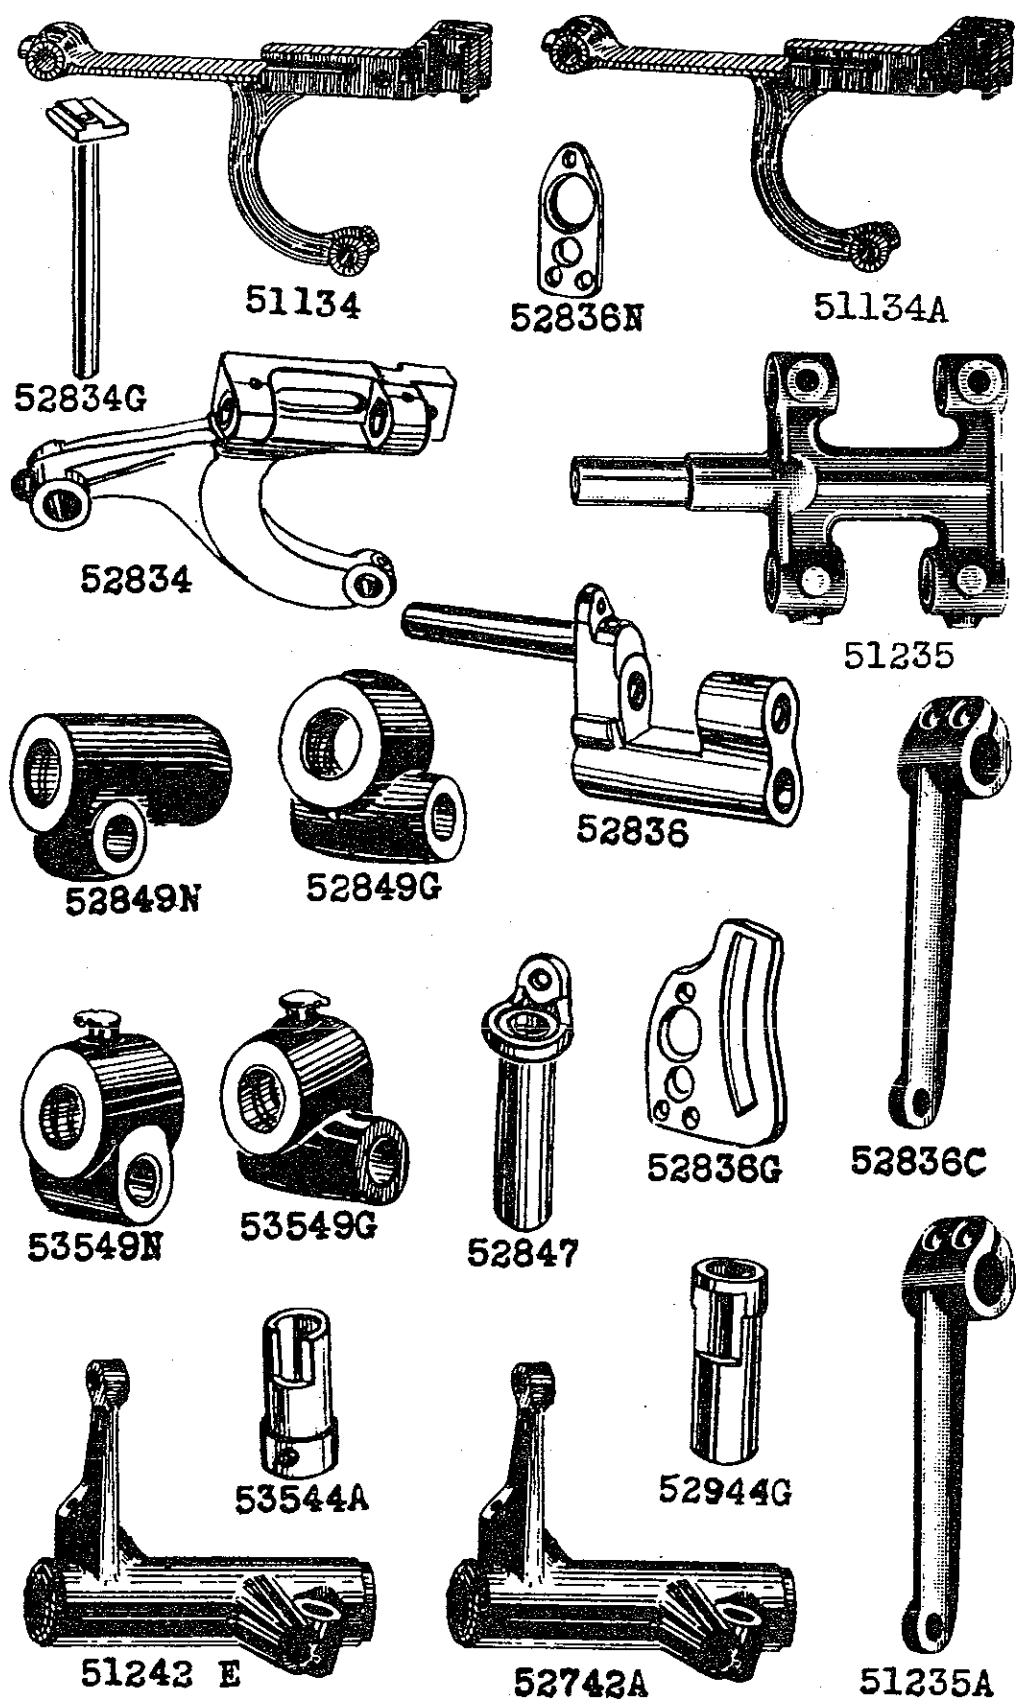



Plate 29 - One-half Size




51243K

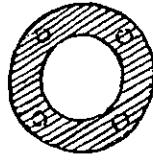

51243L

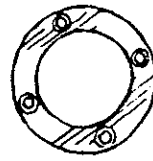

51243N

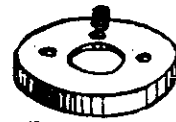

52816F



660-94



52894 J



52943A




52943B



35788B




660-148

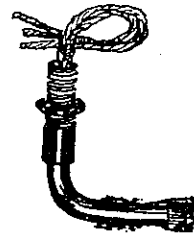


660-136



52894 Y



666-29

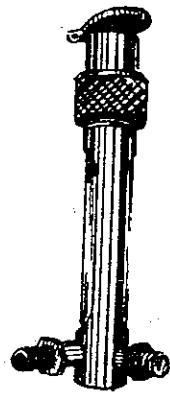


52795




51293K




52895

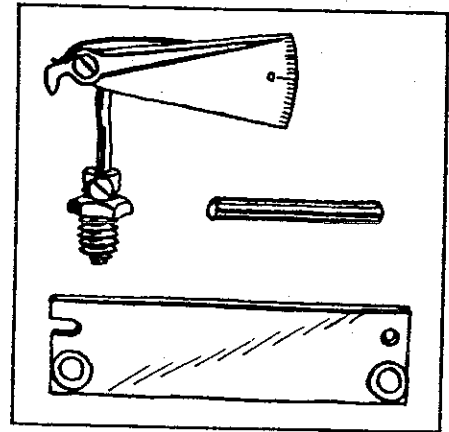

21227AC

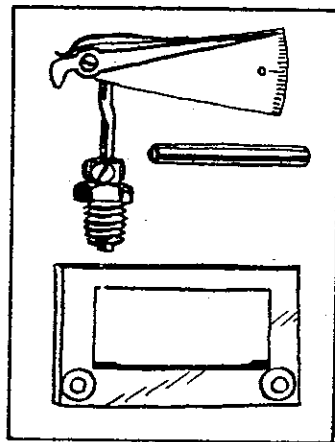


21227R

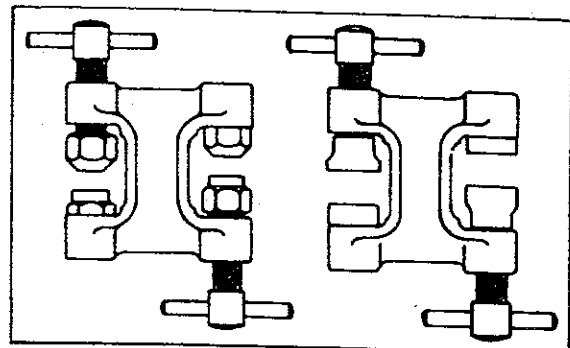


21227 HH


Plate 30 - One-half Size




53552

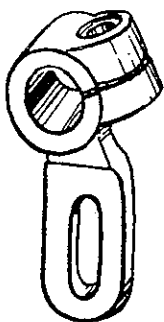

52852

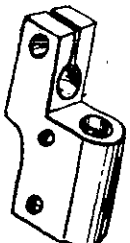


53554D

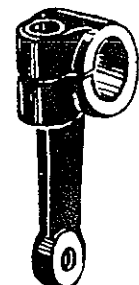

52849A



53548N

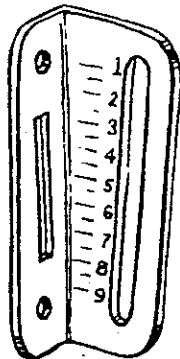


53553G




53553




53553D

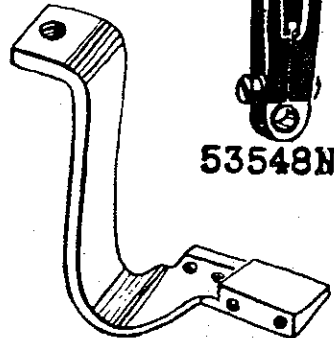


53541




53554

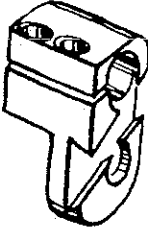


53552D




53552C

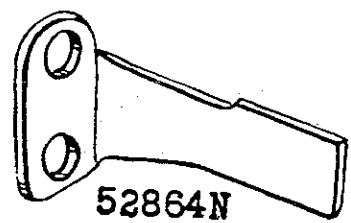


52864N

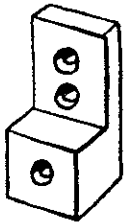


52864G

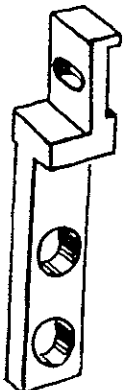

53541H

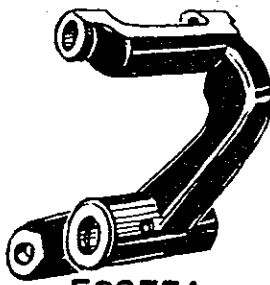


52973A

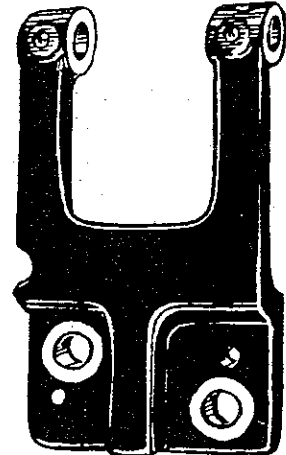


52973H


Plate 31 - One-half Size

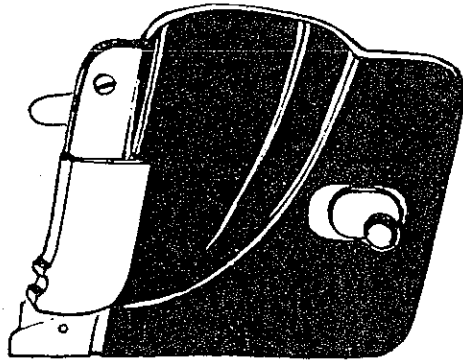


29435C

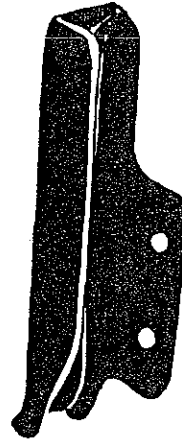


51491A

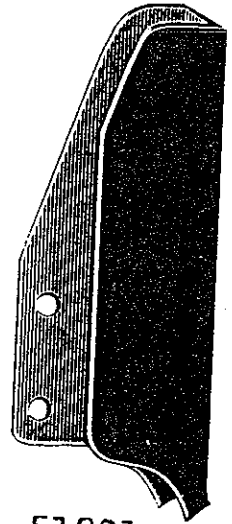


51291

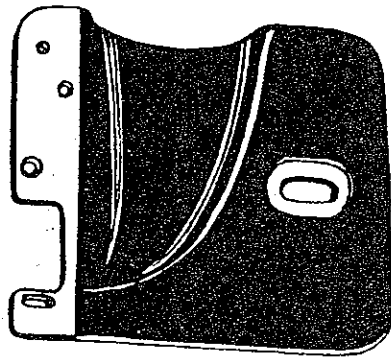


52981A

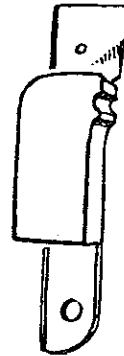


52978A-8

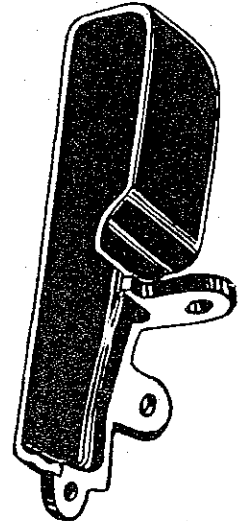


52848G

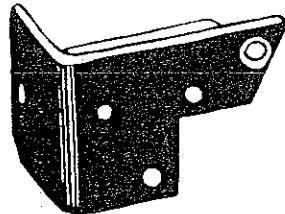

53582G

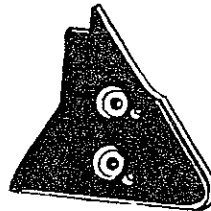

52864E

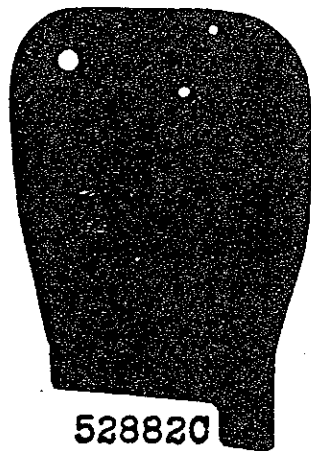

52882C




52882A




51282B


Plate 32 - One-half Size

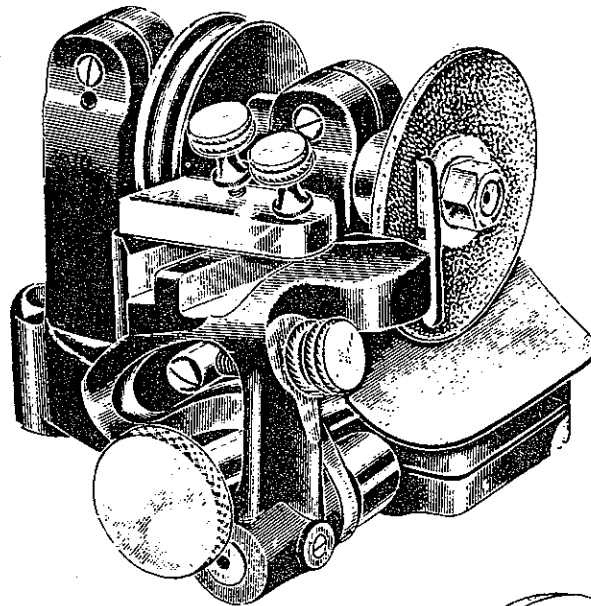


52998

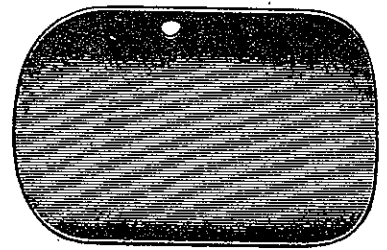


15498P

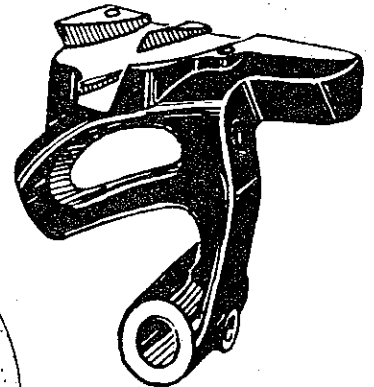


52998A

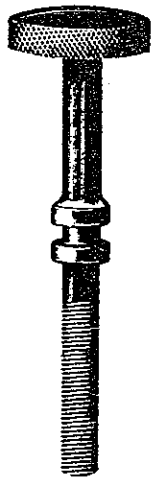


15498K



52998B

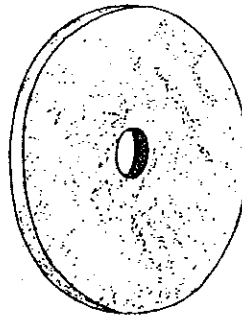


G16

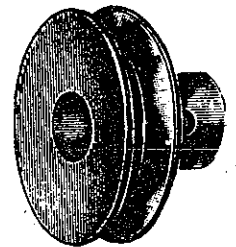

G11




15498J

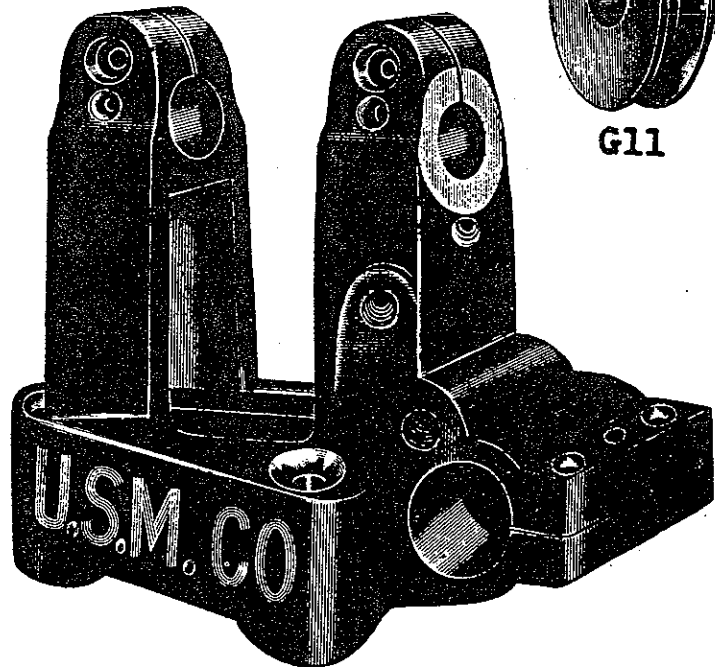


15498E


Plate 33 - One-half Size

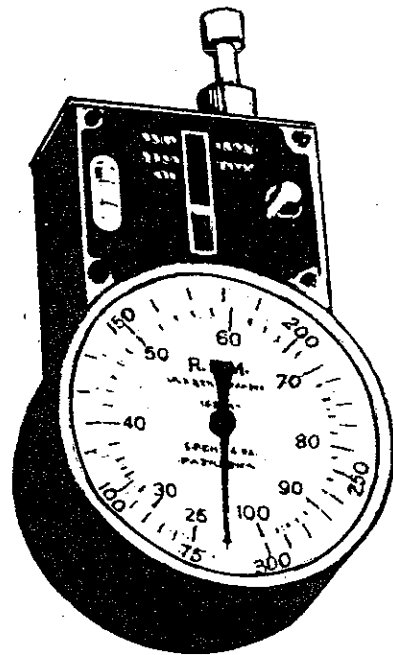


TA 55

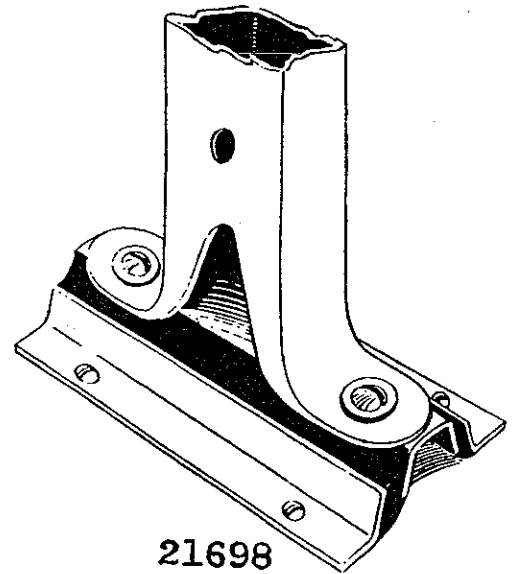

21698
Specify Length

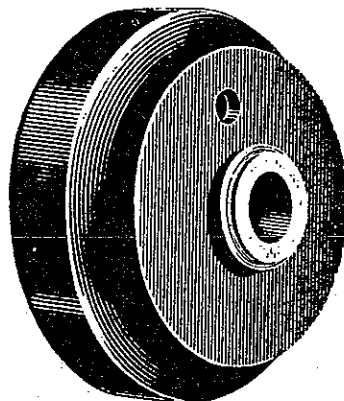

51321A




228410




423



22841B

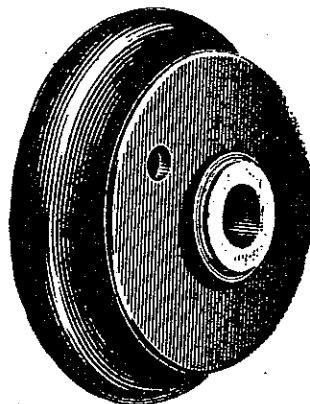

51221

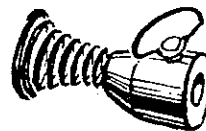

21177A



28505




43294E-108




43294 D


Plate 34 - One-half Size

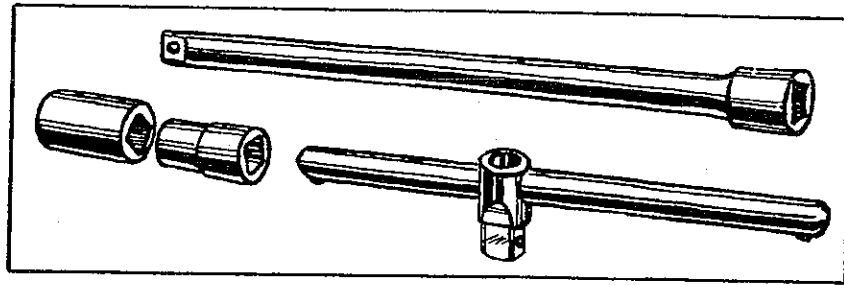


21388AE



21207

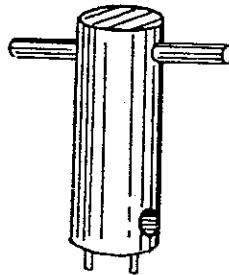

21388 Z

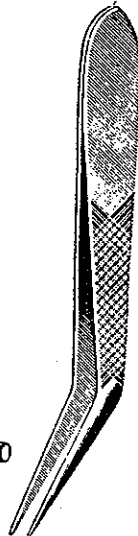


118B




21388




21388W

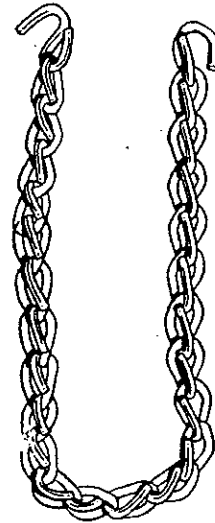


421 C
SPECIFY
LENGTH

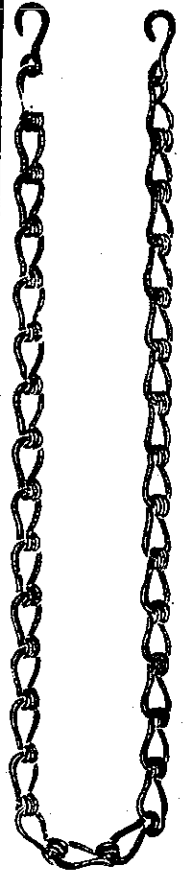

421

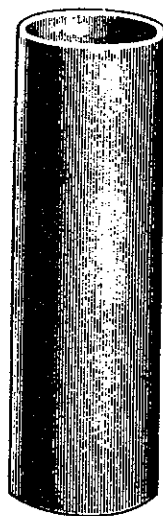


21355

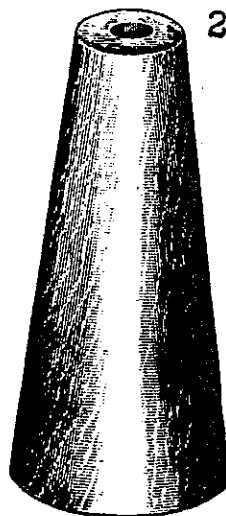

21145




21388 N

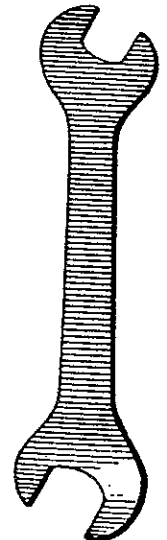

21388 R

Plate 35 - One-fourth Size

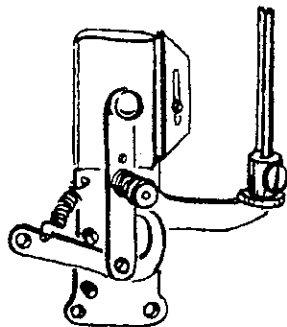

21182AA



23406K
Specify
Width




23406L
Specify
Width




23406M
Specify
Width




23439C

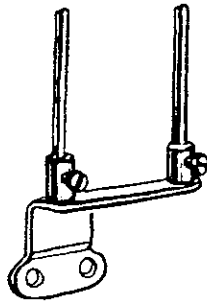


23439B

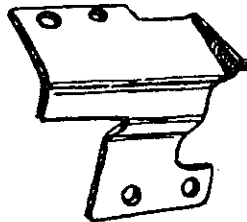


53501C

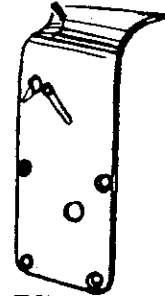


53543C

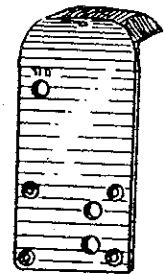


52894 G

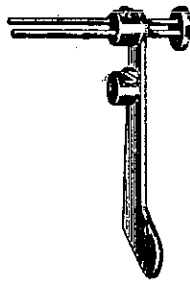


23306L

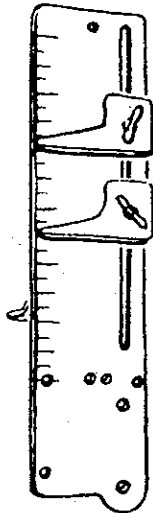


21198E

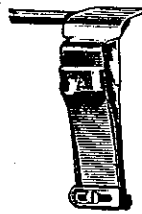

23306R

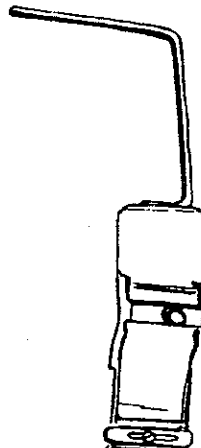


23306S

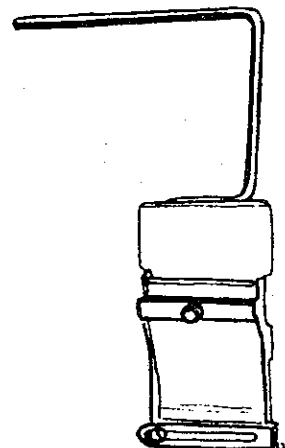


23306V


Plate 36 - One-fourth Size

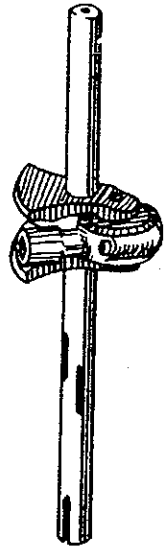

51222B

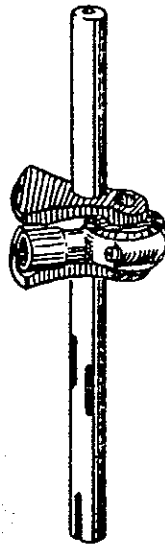


53522B



51222



52922

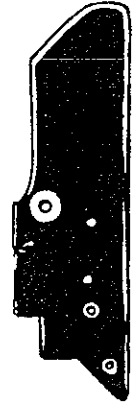

52864C



51282 J




52891




51290 N



52864B

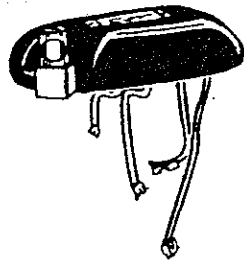

52882

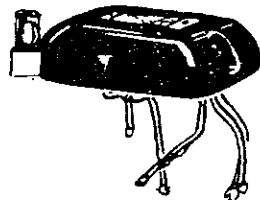

53582A



53549



52849




21104 B
Specify Length




21216


Plate 37 - One-fourth Size

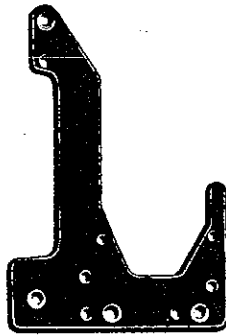


51280A

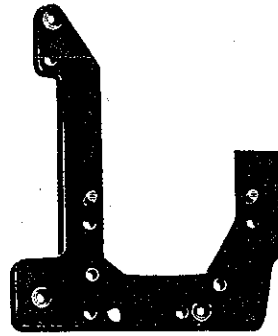


51480

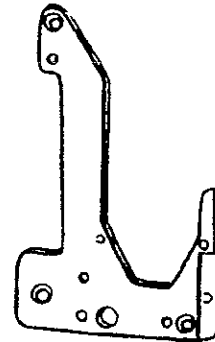


53580

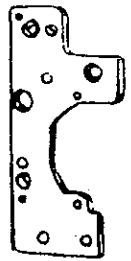


52980

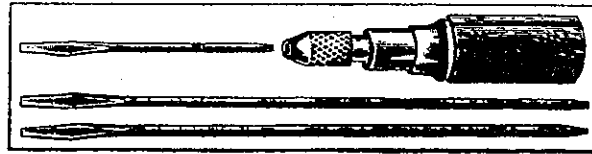

21208

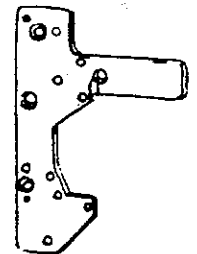

52880




21201




21202




21205 A

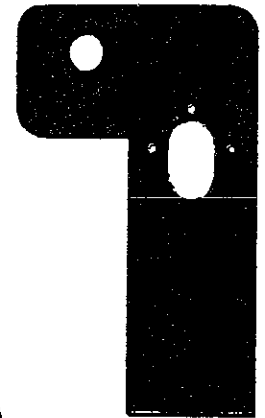

51281
Specify
Length



21203



21204

Plate 38 - One-fourth Size



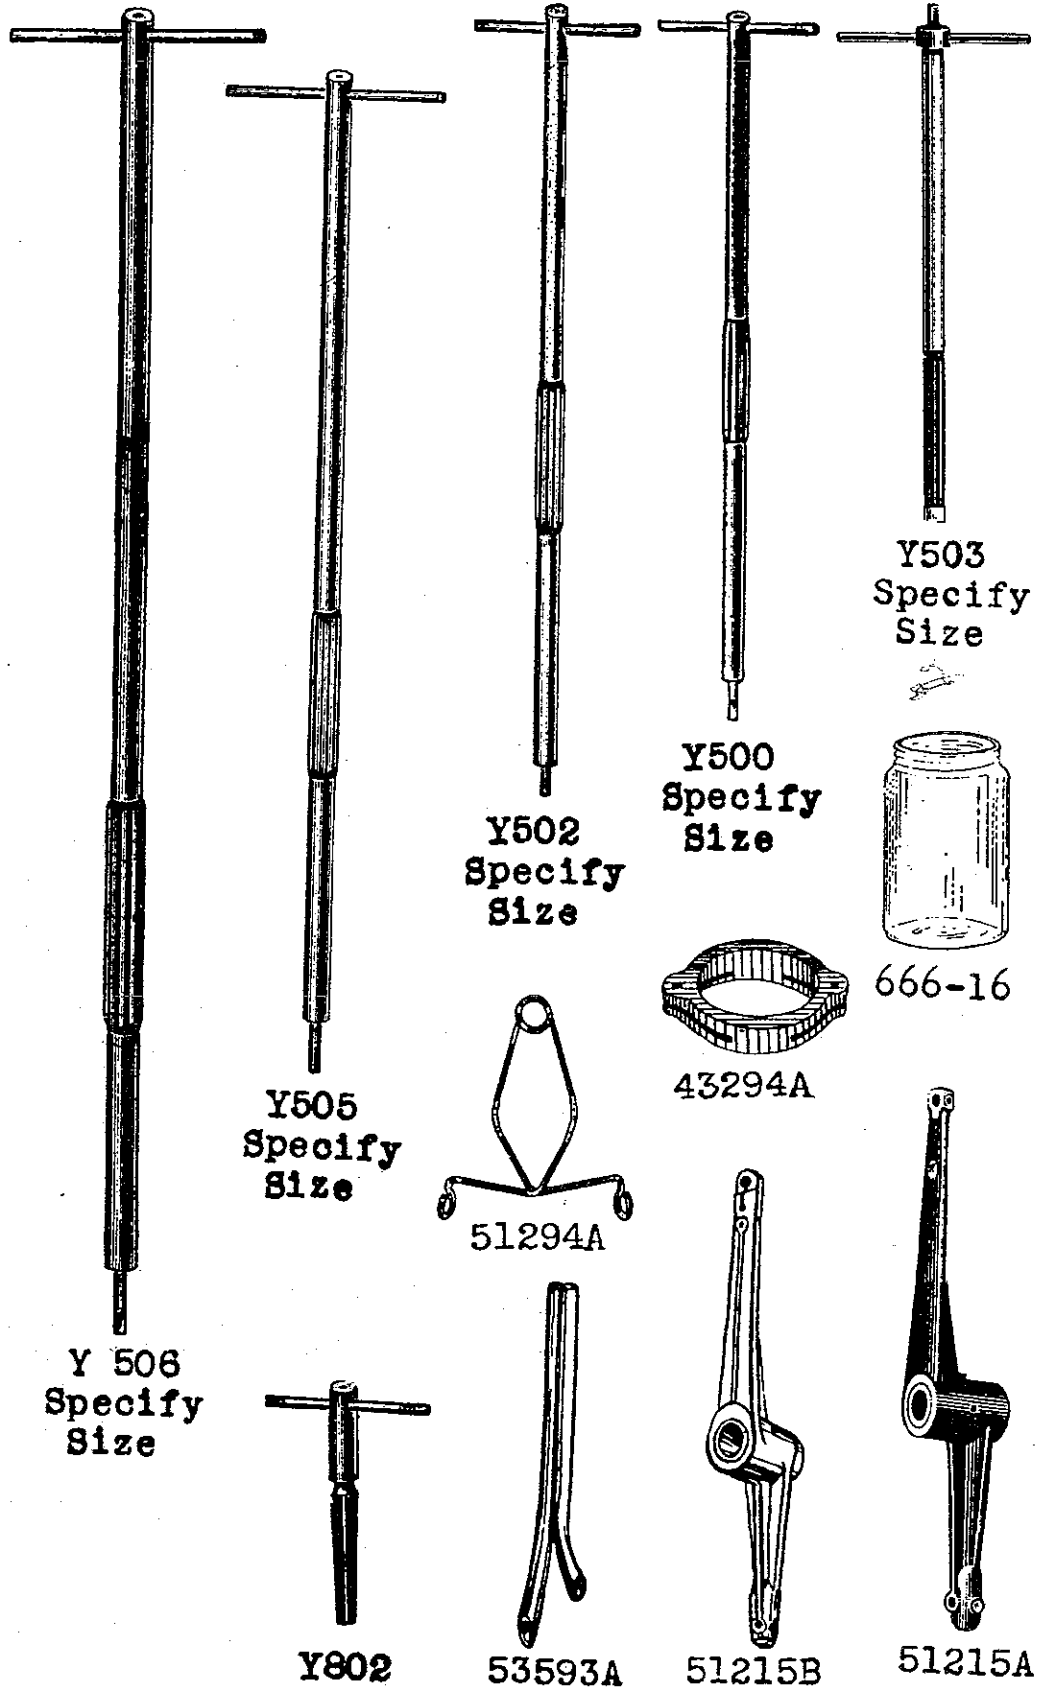



Plate 39 - One-fourth Size

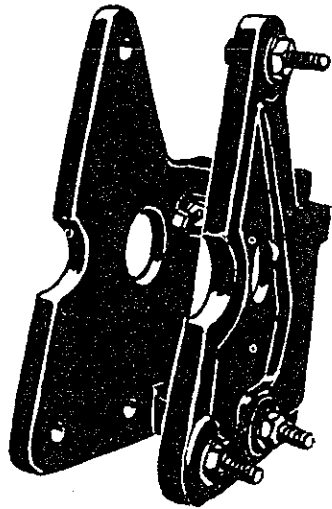



21697C

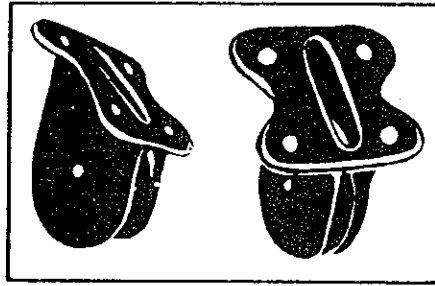


660-159

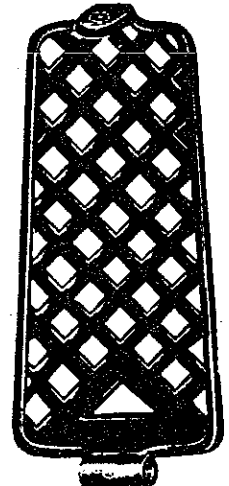


422

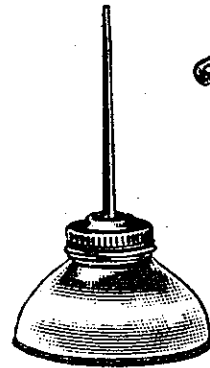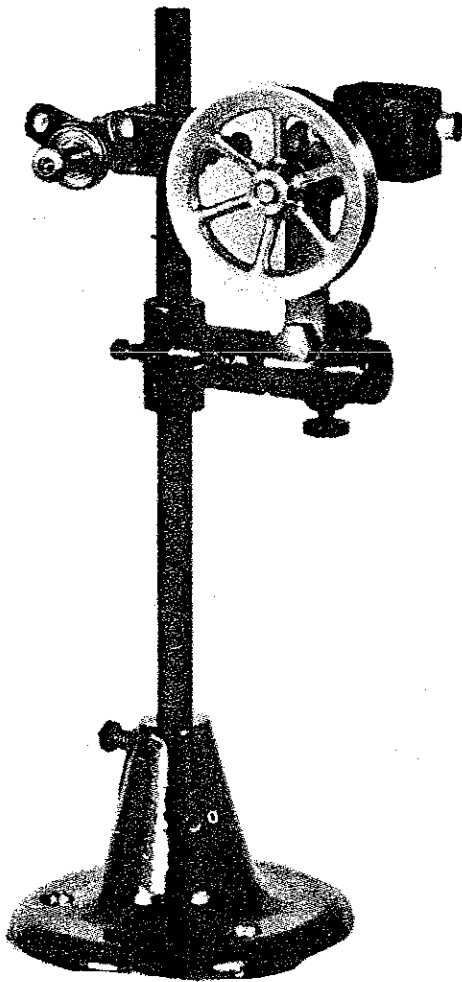

413





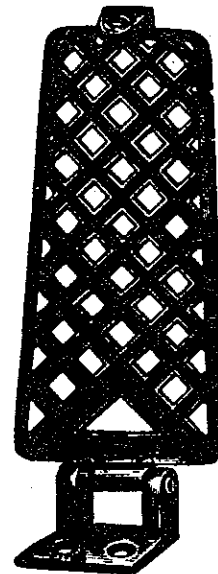


29402

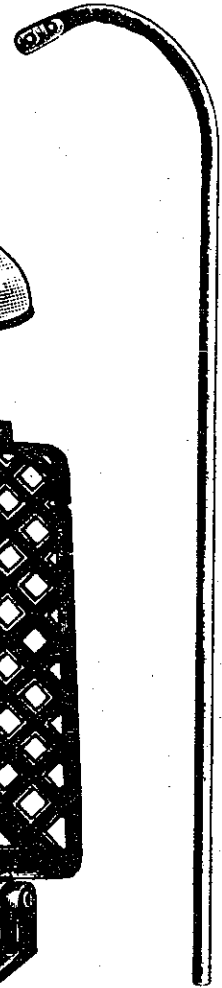


100 B

Plate 40 - One-fourth Size

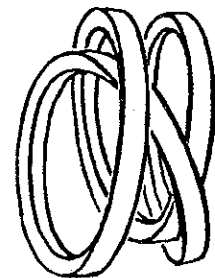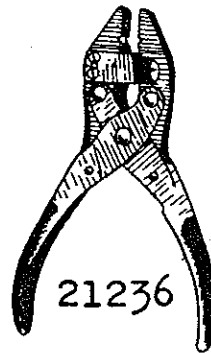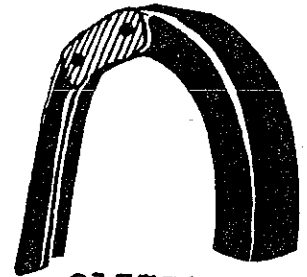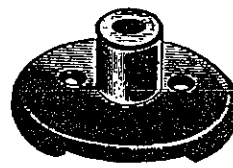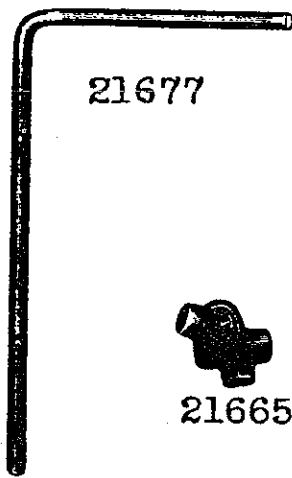

Specify Length


21661



21664




21662

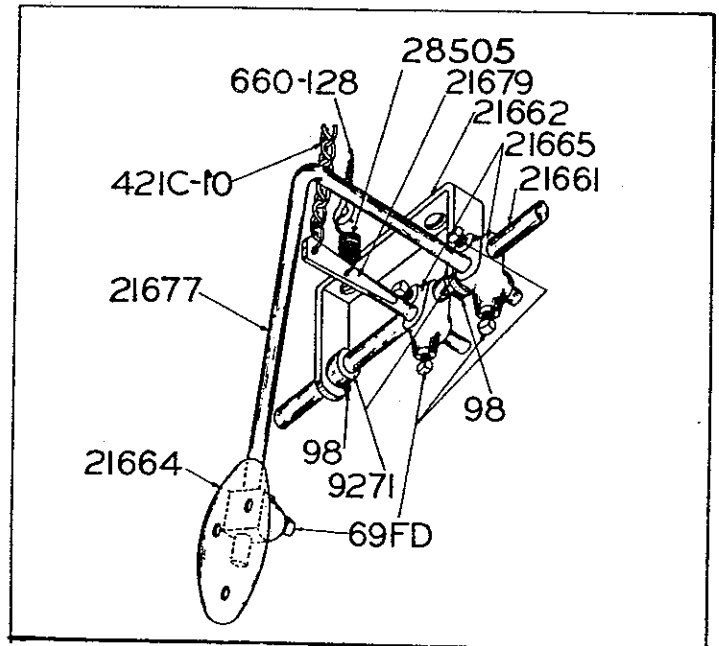


ASSEMBLY NO 21691


Plate 41 - One-eighth Size

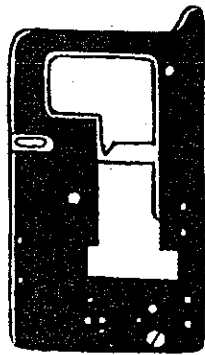


51201B

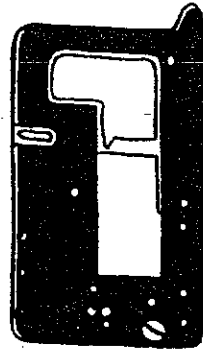


51301A

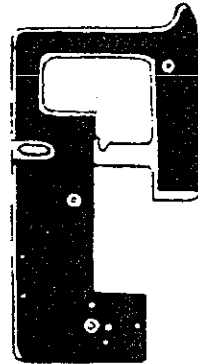

53501

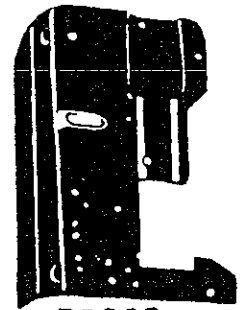

52801

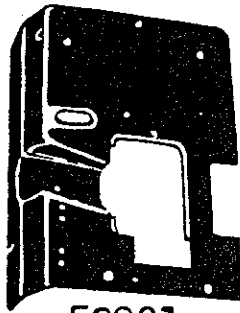


52901



52864




52885A

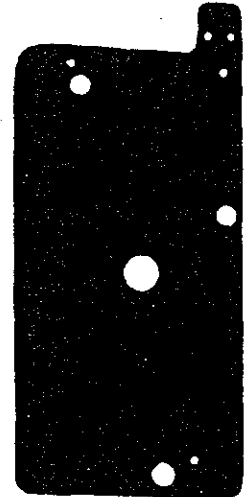


21680AK



52943C



52894A




51743B



52883




51283

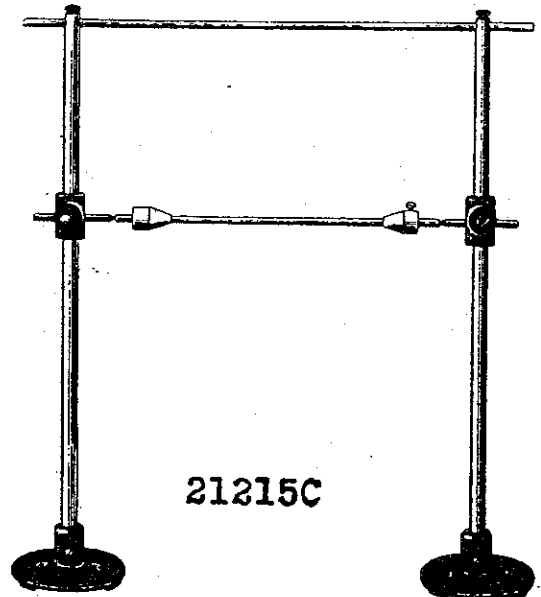

21215C


Plate 42 - One-eighth Size

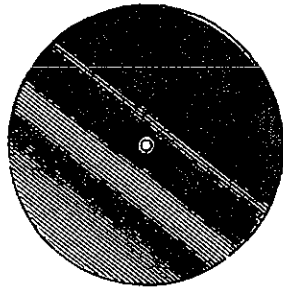

21178A



21169F

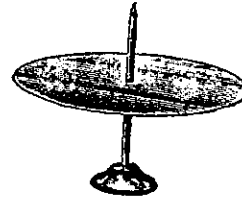

21169D



21169E



21104 A



69 S




21388 X




752




21102B

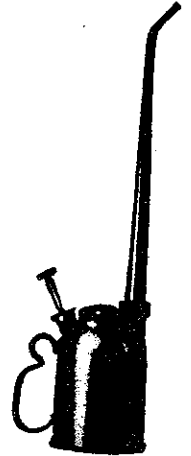


01-19

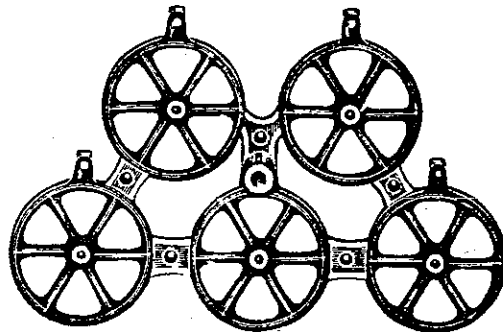


21130A-5

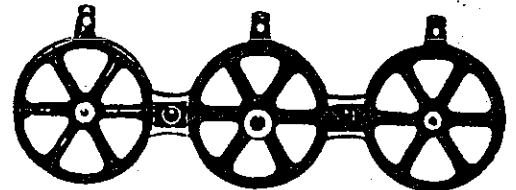

21130 A-3

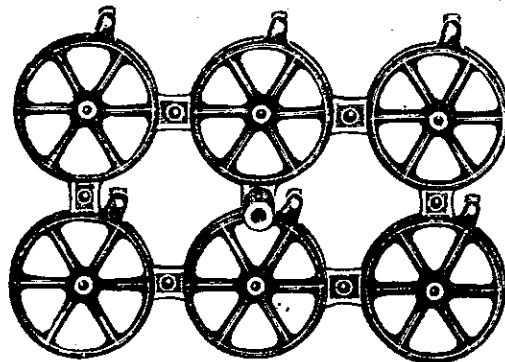


21130A-6

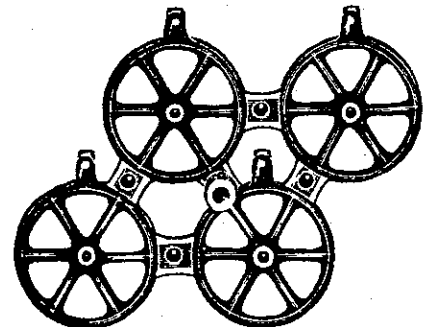


21130A-4


Plate 43 - One-eighth Size

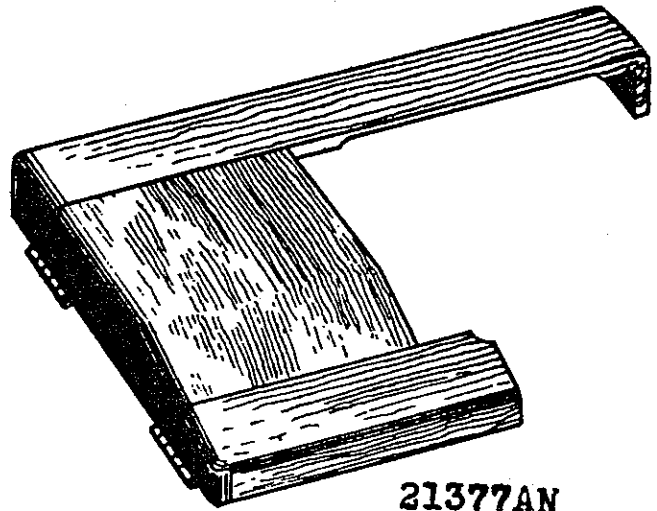


21377AN

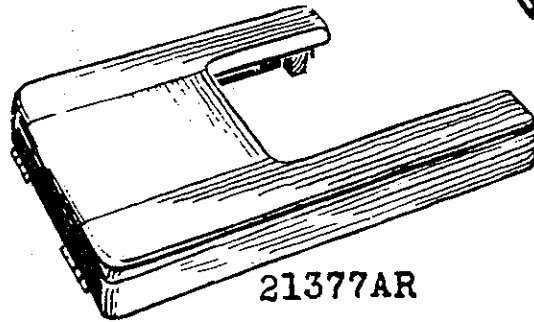

21377AR

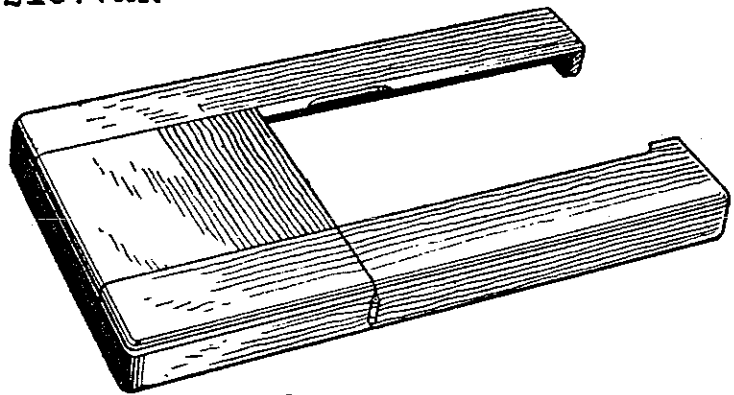

21377AL

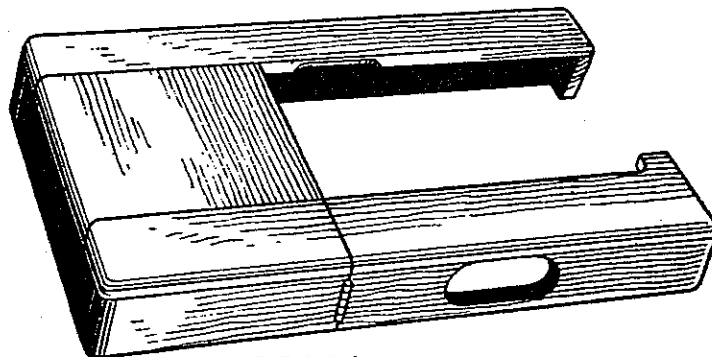

21377AK

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 8 | Feed Rocker Shaft, for styles in Classes 52800; 52900; Style 52700 F - - - - - | 24 |
| G10 | Thumbscrew, for holding knives in grinder No. 52998 - - - - - | 11 |
| G11 | Pulley, for knife grinder No. 52998 (screw No. 98) - - - - - | 32 |
| G12 | Pulley Spindle, for knife grinder No. 52998 (clamp screw No. 136) - - - - - | 23 |
| G14 | Pulley Spindle Washer, for knife grinder No. 52998 - - - - - | 13 |
| G15 | Pulley Spindle Nut, for knife grinder No. 52998 - - - - - | 12 |
| WA15 | Stop Watch - - - - - | 19 |
| 16 | Feed Crank Link Ferrule - - - - - | 20 |
| G16 | Emery Wheel, for knife grinder No. 52998 - - - - - | 32 |
| 18 | Looper Connecting Rod Nut, right thread; also for No. HS35 E - - - - - | 12 |
| OI-19 | Pressure Pump Oil Can, 1 1/2 pints capacity | 42 |
| 20 | Feed Crank Stud Washer; also for Nos. 539, 51758, 51958 B - - - - - | 13 |
| 22 JE | Feed Dog, for No. 16 gauge Style 52700 B - - - - - | 3 |
| 22 JW | " " for No. 16 gauge Style 52700 H - - - - - | 4 |
| | " " Screw No. 22528 | |
| 25 B | Screw, for stripper blade on styles in Class 53500; also for Nos. 23306 T, 23306 W - - - - - | 9 |
| 25 C | Screw, 9/32 inch long, for cloth plate attachments - - - - - | 10 |
| 25 S | Screw, for folder clamp on Styles 52800 E, 52800 F, 52800 H, 52800 K; also for No. 21198 E - - - - - | 10 |
| 25 CC | Screw, for folders on Styles 52800 E, 52800 F, 52800 H, 52800 K; also for Nos. 23306 R, 23306 S, 23306 V - - - - - | 9 |
| 28 | Screw, for cast-off plate; also for Nos. 53546-16, 53548 S - - - - - | 9 |
| 28 B | Set Screw, for needle holder thread guide on styles in Classes 52800, 52900 - - - - - | 9 |
| 28 C | Set Screw, for rear needle on styles in Class 52900; also for Nos. 52842 G, K55286 - - - - - | 9 |
| HS35 E | Ruffler Eccentric Connecting Rod, for Style 53500 D (nut, right thread, No. 18, nut, left thread, No. 269) - - - - - | 24 |
| 36 G | Looper Connecting Rod Ball Stud Washer; also for No. 52848 A - - - - - | 13 |
| 37 L | Ruffler Eccentric Upper Connecting Rod Nut, left thread, for Style 53500 C - - - - - | 12 |
| 37 R | Ruffler Eccentric Upper Connecting Rod Nut, right thread, for Style 53500 C - - - - - | 12 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 43 | Feed Lift Eccentric; also looper avoid eccentric (spot screw No. 96) - - - - - | 20 |
| 50 J-16 | Needle Stop Pin, 7/16 inch long, for styles in Class 52900- - - - - | 12 |
| 50 J-26 | Needle Stop Pin, 19/32 inch long, for styles in Class 53500- - - - - | 12 |
| 52 A | Frame Thread Eyelet; also for No. 52894 G (screw No. 98 A and 87 U) - - - - - | 15 |
| 54 | Needle Lever Link - - - - - | 25 |
| TA54 | Hand Tally- - - - - | -- |
| TA55 | Hand Tachometer, 4 speed type, 90 to 12000 R.P.M.- - - - - | 33 |
| 57 WB | Needle Bar Thread Nipper Plate, for styles in Class 53500 - - - - - | 15 |
| 57 WC | Needle Bar Thread Nipper Spring - - - - - | 14 |
| 57 WD | Needle Bar Thread Nipper Stud; also for Nos. 15480 C, 52730 M, 52830 G - - - - - | 10 |
| HA61 D | Screw, for ruffler adjusting lever stop bracket on Style 53500 C- - - - - | 10 |
| 64 A | Swinging Frame Adjusting Screw, for knife grinder No. 52998 - - - - - | 11 |
| 64 B | Swinging Frame Adjusting Screw Lock Nut, for knife grinder No. 52998 - - - - - | 12 |
| 69 S | Spool Pin, 4 inches long, for thread stand- - - - - | 42 |
| 69 FD | Screw, square head, cup point, 5/16 inch diameter, 18 threads, 5/8 inch long, for thread stand seat; also for Nos. 21664, 21665 - - - - - | 11 |
| 73 | Set Screw, for loopers- - - - - | 9 |
| 73 A | Screw, for looper needle guards; also for Nos. 41076 D, 53548 P - - - - - | 9 |
| HA73 B | Screw, for knife holder rocker arm on styles in Class 52900- - - - - | 9 |
| 74 | Clamp Screw, for ruffler adjusting segment lever on Style 53500 C- - - - - | 11 |
| 75 | Screw, for feed rocker segment slot plate on styles in Class 52800; Style 52700 F; also for No. 53548 N - - - - - | 11 |
| 75 A | Screw, for needle lever connecting rod bearing, lower- - - - - | 11 |
| 77 | Set Screw, for feed crank link pin; also for No. 39135 - - - - - | 9 |
| 78 | Set Screw, for lower needle lever link pin- - - - - | 9 |
| 79 | Screw, for cast-off wire support on styles in Class 53500; also for No. 52864 G - - - - - | 10 |
| 80 | Screw, for cloth plates; also throat plate support screw for Styles 52700 G, 52700 H, 53500 C, 53500 D- - - - - | 10 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 81 | Spot Screw, for ruffler operating lever on styles in Class 53500; also for No. 29114 B - - - | 10 |
| 87 | Screw, countersunk head, 1/4 inch long, for throat plates; also for No. 53595 D - - - - - | 9 |
| 87 A | Screw, countersunk head, for oil reservoir cover | 9 |
| 87 U | " for oil reservoir thread eyelet - - - - - | 9 |
| 88 | Screw, for looper rocker cone; also for Nos. 161, 1287, 1288, 5120 B, 12865, 21113 B, 52818-8, 52846, 53552 C- - - - - | 9 |
| 88 A | Set Screw, for needle bar - - - - - | 9 |
| 88 B | Screw, for looper rock shaft sleeves; also for Nos. 52818-8, 52918-5-8 - - - - - | 9 |
| 89 | Spot Screw, for needle holders; also for Nos. 52836, 52883 G, 53523 C - - - - - | 9 |
| 90 | Screw, for louver cover; also for Nos. 3026 A, 5026 A, 5126, 5126 B, 23306 L, 23306 M, 23442 A, 43281 K, 52770 A, 52826 G, 52826 K, 52844 A, 52864 B, 52864 C, 52864 E, 52882 B, K53189- - - - - | 9 |
| 91 | Clamp Screw, 3/8 inch long, for presser feet- - - | 9 |
| 93 | Screw, for main oil reservoirs; also for Nos. 5650, 13153, 21375 AH, 51235 A, 51244 B, 52836 C, 52849 A- - - - - | 10 |
| 93 A | Screw, for spreader connecting rod guard on styles in Classes 52800, 52900; also for Nos. 15498 H, 53559- - - - - | 9 |
| 94 | Screw, for measuring gauge brace on Style 52800 E | 9 |
| 95 | Set Screw, for main shaft collar; also for Nos. 29114 B, 29126 AK, 52855 G- - - - - | 9 |
| 96 | Spot Screw, for feed lift eccentrics; also for Nos. 29105 K, 29105 L, 29132 M, 51244, 52723 A, 52823, 52923, 53544 - - - - - | 9 |
| 97 | Screw, for needle lever ball stud guide fork; also for Nos. 53553, 53554 J- - - - - | 10 |
| 97 A | Screw, for looper drive connection; also for Nos. 41043 D, 51216 A, 51241 D, 51741 B, 52854, 53545 - - - - - | 10 |
| 98 | Set Screw, 3/16 inch long, without pilot, for needles; also for Nos. G11, 267, 482, 9271, 9660 B, 29105 K, 29105 L, 51235, 51244, 53544 | 9 |
| 98 A | Screw, for frame thread eyelets - - - - - | 9 |
| 100 B | Thread Stand Wire, 16 inches long (set screw No. 22632 F-24) - - - - - | 39 |
| 109 | Tension Disc, with contact surface 5/64 inch wide, for machines using needle threads the equivalent in size of No. 50 and smaller- - - - | 15 |
| 109 B | Tension Disc, with contact surface 1/8 inch wide, for machines using needle threads the equivalent in size of No. 40 and larger - - - - - | 15 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 110-3 | Tension Spring, .040 inch diameter wire, for needle threads on styles in Class 53500 - - - | 14 |
| 112 DW | Throat Plate, for No. 16 gauge Style 52700 H (screw No. 87)- - - - - | 2 |
| 118 B | Thread Tweezer- - - - - | 34 |
| V118 | Tap, marked "X2" for plus size cloth plate screw No. 22521 - - - - - | 19 |
| 136 | Screw, for ruffler indexed segment guide block on Style 53500 D; also for Nos. G12, 15498 J | 11 |
| 158 A | Frame Thread Eyelet, with three holes, for styles in Classes 52900, 53500, Styles 52700 F, 52800 B, 52800 D, 52800 K (screw No. 98 A) - - - - - | 15 |
| 158 B | Frame Thread Eyelet, with two holes, for Styles 52700 A, 52700 B, 52700 G, 52700 H, 52800 E, 52800 F, 52800 G, 52800 H, 52800 J, 52900 A, 52900 B (screw No. 98 A)- - - - - | 15 |
| 161 | Collar, for binding holder disc on Styles 52800 E, 52800 F, 52800 H, 52800 K (screw No. 88) - - - - - | 12 |
| 166 | Set Screw, hexagonal head, for feed bar on styles in Class 52900 - - - - - | 9 |
| 187 A | Screw, for knife eccentric oil guard on styles in Class 52900; also for Nos. 15180 B, 23195, 23440 C, 52782 H, K53259 - - - - - | 9 |
| 187 B | Screw, for presser foot edge guide on styles in Class 53500- - - - - | 9 |
| 188 D | Thumbscrew, for edging spool holder adjustable cone on Styles 52700 F, 52700 G, 52700 H; also for No. 23439 C- - - - - | 10 |
| 223 C | Pivot Screw, for presser foot hinged section on Style 52700 F- - - - - | 9 |
| 236 | Pivot Screw, for cloth plate swinging arm on styles in Class 52800; Style 52700 F- - - - - | 11 |
| 243 | Cloth Plate End Cover Spring, for styles in Classes 52800, 52900; Style 52700 F (screw No. 22711)- - - - - | 26 |
| 258 A | Looper Rocker Cone Nut; also for Nos. 35833 A, 51134 G - - - - - | 12 |
| 267 | Swinging Frame Pivot Pin Collar, for knife grinder No. 52998 (screw No. 98)- - - - - | 12 |
| 269 | Looper Connecting Rod Nut, left thread; also for Nos. HS35 E, 51236 C, 52816 - - - - - | 12 |
| 299 | Ruffler Adjusting Block Pivot Pin, for Style 53500 C - - - - - | 24 |
| 356 | Spring, for locating cloth plate cover on styles in Class 52900 (screw No. 22561)- - - | 26 |
| 357 | Screw, for edge guide on Styles 52700 F, 52800 G | 9 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------------|---|--------------|
| 358 B | Cloth Plate Sliding Cover Knob, for styles in Classes 52800, 53500 - - - - - | -- |
| 376 | Screw, for supplemental face plate on styles in Class 53500- - - - - | 9 |
| 402 | Stop Screw, for intermittent strip tension operating lever on Style 52800 E- - - - - | 10 |
| 413 | Oil Can, complete - - - - - | 39 |
| 421 | Lifter Lever Chain, 38 inches long- - - - - | 34 |
| 421 C-10 | Knee Press Chain, 10 inches long- - - - - | 34 |
| 422 | Lifter Treadle- - - - - | 39 |
| 423 | Lifter Treadle Base - - - - - | 33 |
| 424 | Lifter Treadle Pin (screw No. 22813)- - - - - | 24 |
| 426 A | Lifter Lever Spring Pin, for styles in Class 53500 - - - - - | 13 |
| 482 | Feed Rocker Shaft Collar (screw No. 98) - - - - - | 26 |
| Y500-257 | Expansion Reamer, for needle bar bearings, size .257 inch- - - - - | 38 |
| Y502-319 | Expansion Reamer, for upper presser bar bear- ing, size .319 inch - - - - - | 38 |
| Y503-319 | Expansion Reamer, for lower presser bar bear- ing, size .319 inch - - - - - | 38 |
| Y505-407 | Expansion Reamer, for looper rocker and feed rocker shaft bearings, size .407 inch - - - - - | 38 |
| Y506-530 | Expansion Reamer, for main shaft bearings, size .530 inch- - - - - | 38 |
| 522 | Face Plate Stop, for styles in Classes 52800, 52900 (screw No. 604) - - - - - | 14 |
| 538 | Screw, for supporting feed dogs on styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H - - - - - | 9 |
| 539 | Frame Thread Eyelet, 2 1/4 inches long, for styles in Classes 52900, 53500 (screw No. 22848, washer No. 20) - - - - - | 26 |
| 604 | Screw, for presser foot adjustable guide on Styles 52700 G, 52700 H; also for No. K54743 | 9 |
| 605 | Screw, for crank chamber oil reservoir cover; also for Nos. 3040, 5140, 11534, 16194, 52930 F - - - - - | 9 |
| 605 A | Adjusting Screw, for presser foot yielding section spring on Styles 52800 J, 52800 K | 9 |
| 650 A-16 | Stove Bolt, flat head, 5/16 x 2 inches- - - - - | -- |
| 650 A-18 | Stove Bolt, flat head, 5/16 x 2 1/4 inches- - - - - | -- |
| 650 A-20 | Stove Bolt, flat head, 5/16 x 2 1/2 inches- - - - - | -- |
| 650 B-26 | Stove Bolt, flat head, 3/8 x 3 1/4 inches, for table tops- - - - - | -- |
| 650 X-18 | Carriage Bolt, 5/16 x 2 1/4 inches, for attaching "Electro Drive" - - - - - | -- |
| 650 X-22 | Carriage Bolt, 5/16 x 2 3/4 inches, for attaching "Electro Drive" - - - - - | -- |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 650 X-32 | Carriage Bolt, 5/16 x 4 inches for attaching "Electro Drive" - - - - - | -- |
| 651 D-24 | Nut, 3/8 inch, square - - - - - | -- |
| 652-16 | Washer, 1/4 inch - - - - - | -- |
| 652-20 | " 5/16 inch - - - - - | -- |
| 652-24 | " 3/8 inch - - - - - | -- |
| 652 C-9 | Shake Proof Lock Washer, for needle bar eyelet | 13 |
| 660-90 | Felt Wiper, for looper drive eccentric connection - - - - - | 17 |
| 660-92 | Leather Washer, upper, 3/16 inch hole, for main shaft oil gauge; also for No. 39193 - - | 13 |
| 660-93 | Leather Washer, lower, 1/4 inch hole, for main shaft oil gauge; also for No. 39193 - - - - | 13 |
| 660-94 | Glass Tube, for main shaft oil gauge - - - - | 29 |
| 660-95 | Cap, for main shaft oil gauge - - - - - | 17 |
| 660-128 | Wood Screw Eye, for knee press assembly on Style 53500 C - - - - - | -- |
| 660-136 | Feed Crank Link Oil Tube - - - - - | 29 |
| 660-143 | Oil Tube, for looper drive eccentric assembly on styles in Classes 52700, 52800, 52900 - - | 17 |
| 660-148 | Isolated Insulator, for table top on line assembly individual power table (plain nut No. 651 D-24, cap nut No. 21371 CT, washer No. 652-24) - - - - - | 29 |
| 660-159 | Idle Pulleys, set of two, for leading floor treadle lifter chain away from transmitter or line shaft on American Safety Table installations - - - - - | 39 |
| 666-11 | Oil Cup, for upper rock shaft bearings on styles in Classes 52800, 52900, 53500 - - - - | 17 |
| 666-13 | Felt Wick, spring pressed, for main shaft bearings - - - - - | 17 |
| 666-16 | Reservoir Glass, for oil drain assembly - - - - | 38 |
| 666-19 | Felt Wick, for needle lever connecting rod bearing - - - - - | 17 |
| 666-28 | Oil Cup, for needle lever stud (nut No. 12987A) | 17 |
| 666-29 | Felt Wick, for needle lever stud - - - - - | 29 |
| 666-49 | Glass Tube, for oil level gauge No. 39193 - - - | 17 |
| 666-50 | Oil Cup, press fit, for upper oil reservoir cover - - - - - | 17 |
| 666-53 | Spreader Eccentric Connecting Rod Felt, for styles in Classes 52800, 52900 - - - - - | 17 |
| 666-66 | Oil Tube, for looper drive eccentric assembly on styles in Class 53500 - - - - - | 17 |
| 668-7 | Porcelain Thread Eyelet, 5/32 inch long, for tension thread eyelets; also for No. 52855 | 15 |
| 668-12 | Porcelain Thread Eyelet Locking Ferrule, for tension thread eyelets; also for No. 52855 | 15 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------------|--|--------------|
| 719 | Set Screw, for needle lever stud; also for No. 51250 B - - - - - | 10 |
| 751 A | Edging Spool Holder Pin, for Style 52800 G (thumbscrew No. 22728)- - - - - | 19 |
| 752 | Edging Spool Holder Axle, for Style 52800 G | 42 |
| 753 | Edging Spool Holder Adjustable Cone, for Style 52800 G; also elastic band spool holder adjustable cone, for Styles 52700 F, 52700 G, 52700 H (thumbscrew No. 188 D)- - - - - | 26 |
| Y802 | Taper Reamer, for needle lever link and feed crank link pins- - - - - | 38 |
| 907 | Differential Feed Regulating Stud Nut; also for Nos. 23306 R, 23306 S, 23306 V, K53259, 53548 N - - - - - | 12 |
| 1248 | Feed Crank Link Shim, leather - - - - - | 12 |
| 1286 | Needle Lever Link Pin Assembly; also feed crank link pin assembly; one each Nos. 1286 A, 1286 B, 12964 C, 22560- - - - - | 13 |
| 1286 A | Needle Lever Link Pin (set screw for upper link pin No. 77, clamp screw No. 22864, nut No. 51250 C, set screw for lower link pin No. 78) - - - - - | 13 |
| 1286 B | Needle Lever Link Pin Spring (screw No. 22560)- - - - - | 14 |
| 1287 | Needle Bar Thread Nipper Assembly, for styles in Class 53500; one each Nos. 57 WB, 57 WC, 57 WD, 88, 1288 - - - - - | 15 |
| 1288 | Needle Bar Thread Nipper Collar (screw No. 88) - - - - - | 15 |
| 1346 | Tension Post, 1 11/16 inches long, for styles in Class 53500 - - - - - | 15 |
| 1349 | Tension Spring, for intermittent strip ten- sion on Style 52800 E - - - - - | 14 |
| 1594 A | Ruffler Adjusting Lever Spring Pin, for Style 53500 C - - - - - | 13 |
| 3026 A | Differential Feed Dog, for Style 52800 D (screw No. 90)- - - - - | 3 |
| 3040 | Presser Foot Yielding Section Spring, for Styles 52700 A, 52800 B, 52800 D, 52800 J (screw No. 605) - - - - - | 7 |
| 3045 | Presser Foot Edging Roller, for Style 52800 G - - - - - | -- |
| K3892 | Feed Dog, for 1/2 inch belt loop on No. 16 gauge Style 52700 A (screw No. 22528) - - - - - | -- |
| 5003 | Edge Guide, for Style 52800 G (pivot screw No. 22735, pivot screw washer No. 12957 E, adjustable section screw No. 357) - - - - - | 21 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 5005 R | Main Feed Dog, for Style 52800 G (screw No. 22593) - - - - - | 3 |
| 5024 B-12 | Throat Plate, for No. 12 gauge Style 52800 J (screw No. 87) - - - - - | 1 |
| 5024 M-8 | Throat Plate, for No. 8 gauge Style 52800 G (screw No. 87) - - - - - | 1 |
| 5026 A | Differential Feed Dog, for Styles 52800 E, 52800 F, 52800 H (screw No. 90)- - - - - | 3 |
| 5041 | Presser Foot Yielding Section, right, for Style 52800 B, 52800 J - - - - - | 7 |
| 5042 | Presser Foot Yielding Section, left, for Style 52800 J- - - - - | 7 |
| 5105 B | Main Feed Dog, for Style 52800 G (screw No. 22593) - - - - - | 3 |
| G5105 B | Main Feed Dog, for Style 52700 F (screw No. 22593) - - - - - | 3 |
| 5120 B | Presser Foot, for Style 52800 K (set screw No. 88, yielding section spring No. 16194, yielding section spring pin No. 8041, yielding section attaching screw No. 605, yielding section spring adjusting screw No. 605 A) - - - - - | 5 |
| 5126 | Differential Feed Dog, for Styles 52700 F, 52800 J (screw No. 90) - - - - - | 3 |
| 5126 B | Differential Feed Dog, for Style 52800 B (screw No. 90) - - - - - | 3 |
| 5127 C | Presser Foot, for Style 52800 B (clamp screw No. 91, yielding section, right, No. 5041, yielding section, left, No. 5141, yielding section spring No. 5140, yielding section spring screw No. 605)- - - - - | 5 |
| 5127 H | Presser Foot, for Style 52800 D (clamp screw No. 91, yielding section spring No. 3040, yielding section spring screw No. 605) - - - - - | 5 |
| 5127 J | Presser Foot, for hemming flaps on No. 12 gauge two needle styles in Class 52800 (clamp screw No. 91) - - - - - | 5 |
| 5140 | Presser Foot Yielding Section Spring, for Style 52800 B (screw No. 605)- - - - - | 7 |
| 5141 | Presser Foot Yielding Section, left, for Style 52800 B- - - - - | 7 |
| 5650 | Main Feed Dog Holder, for Style 52800 K (screw No. 93) - - - - - | 8 |
| 6042 A | Tilting Feed Dog Holder Washer, for styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 13 |
| 6905 H-12 | Feed Dog, for No. 12 gauge Style 52700 A (screw No. 22528)- - - - - | 4 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 6905 H-16 | Feed Dog, for No. 16 gauge Style 52700 A (screw No. 22528)- - - - - | 4 |
| 6920 A-12 | Presser Foot, for No. 12 gauge Style 52700 A (clamp screw No. 91, yielding section, right, No. 6941 A, yielding section, left, No. 6942 A, yielding section spring No. 3040, yielding section spring screw No. 605) - - - - - | 5 |
| 6920 A-16 | Presser Foot, for No. 16 gauge Style 52700 A (clamp screw No. 91, yielding section, right, No. 6941 A, yielding section, left, No. 6942 A, yielding section spring No. 3040, yielding section spring screw No. 605) - - - - - | 5 |
| 6920 L-12 | Presser Foot, for making 1/2 inch belt loop on No. 12 gauge Style 52700 A (clamp screw No. 91)- - - - - | 5 |
| 6920 L-16 | Presser Foot, for making 1/2 inch belt loop on No. 16 gauge Style 52700 A (clamp screw No. 91)- - - - - | 5 |
| 6941 A | Presser Foot Yielding Section, right, for Style 52700 A- - - - - | 7 |
| 6942 A | Presser Foot Yielding Section, left, for Style 52700 A- - - - - | 7 |
| 7205 A | Feed Dog, for No. 12 gauge Style 52700 B; also Nos. 8 and 12 gauge Style 52700 H (screw No. 22528)- - - - - | 3 |
| 7947 | Feed Crank Link Nut; also for No. 51245- - - - - | 12 |
| 8041 | Presser Foot Yielding Section Spring Pin, for Style 52800 K- - - - - | 7 |
| 8372 A | Looper Drive Ball Joint Locking Stud Washer; also for No. 52981 P - - - - - | 13 |
| 9271 | Knee Press Shaft Collar (screw No. 98) - - - - - | 26 |
| 9471 | Ruffler Adjusting Lever Spring, for Style 53500 C- - - - - | 14 |
| 9660 B | Upper Rock Shaft Collar, for styles in Classes 52800, 52900, 53500 (screw No. 98) | 12 |
| 9663 | Screw, right, for cloth plate on styles in Class 53500- - - - - | 11 |
| 9937 | Ruffler Indexed Segment Clamp Sleeve Stud Nut, for Style 53500 D - - - - - | 12 |
| 10303 A | Edge Guide, for Style 52800 B (screw No. 25 C)- - - - - | 21 |
| 11261 A | Tension Post, 1 7/8 inches long, for styles in Class 53500 - - - - - | 15 |
| 11534 | Presser Foot Yielding Section Spring, for Styles 52800 E, 52800 F, 52800 H (screw No. 605) - - - - - | 7 |
| 11638 M | Main Shaft Oil Gauge Nut - - - - - | 12 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 11663 | Intermittent Strip Tension Operating Lever Spring- - - - - | 14 |
| 12320 E-12 | Presser Foot, for Style 52800 J (clamp screw No. 91, yielding section, right, No. 5041, yielding section, left, No. 5042, yielding section spring No. 3040, yielding section spring screw No. 605 A) | 5 |
| 12538 | Looper Rocker Ball Stud Nut - - - - - | 12 |
| 12865 | Presser Bar Stop Collar, for styles in Classes 52800, 52900 (screw No. 88) - - - | 12 |
| 12934 A | Nut, for front spreader connecting rod ball stud on styles in Classes 52800, 52900; also for Nos. 52981 P, 53552 G- - - - - | 12 |
| 12957 E | Edge Guide Spring Washer, for Styles 52700 F, 52800 G; also for No. 23405 M- - | 13 |
| 12964 C | Needle Lever Link Pin Ball- - - - - | 12 |
| 12982 | Nut, for rear spreader connecting rod ball stud on styles in Classes 52800, 52900- - | 12 |
| 12987 A | Nut, for needle lever stud oil cup; also for No. 15455 - - - - - | 12 |
| 12988 A | Plug Screw, for opening in top of bed on styles in Classes 52700, 53500- - - - - | 10 |
| 13120 F-8 | Presser Foot Assembly, for No. 8 gauge Styles 52800 E, 52800 F; one each Nos. 13130 F-8, 73 A, 91, 605, 11534, 13130 A, 13130 B, 22799 B- - - - - | 4 |
| 13130 A | Presser Foot Yielding Section, for Styles 52800 E, 52800 F- - - - - | 6 |
| 13130 B | Presser Foot Shank, for Styles 52800 E, 52800 F (clamp screw No. 91)- - - - - | -- |
| 13130 F-8 | Presser Foot Bottom, for No. 8 gauge Styles 52800 E, 52800 F (hinge screw No. 22799 B) | 6 |
| 13153 | Main Feed Dog Holder, for Styles 52700 F, 52800 B, 52800 D, 52800 E, 52800 F, 52800 G, 52800 H, 52800 J (screw No. 93) | 8 |
| 15180 B | Edging Guide, for Style 52800 G (screw No. 187 A)- - - - - | 16 |
| 15430 C | Needle Lever Connecting Rod Nut, left thread- - - - - | 12 |
| 15430 D | Needle Lever Connecting Rod Nut, right thread; also for No. 52816- - - - - | 12 |
| 15438 B | Supplementary Tension Disc, for spreader thread on styles in Classes 52800, 52900 | 13 |
| 15438 C | Supplementary Tension Spring- - - - - | 14 |
| 15438 D | " " Stud- - - - - | 10 |
| 15455 | Lower Knife Holder Support Pin, for styles in Class 52900 (nut No. 12987 A)- - - - - | 16 |
| 15465 F | Looper Rocker Cone (screw No. 88, nut No. 258 A)- - - - - | 20 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 15480 C | Presser Foot Bottom Spring, for Styles 52700 G, 52700 H (stud No. 57 WD)- - - - - | 7 |
| 15498 E | Grinder Head, for knife grinder No. 52998- - - - - | 32 |
| 15498 G | Grinder Swinging Frame Pivot Pin, for knife grinder No. 52998- - - - - | 24 |
| 15498 H | Grinder Swinging Frame Pivot Pin Friction Washer (screw No. 93 A)- - - - - | 16 |
| 15498 J | Grinder Swinging Frame Adjusting Sleeve (clamp screw No. 136)- - - - - | 32 |
| 15498 K | Grinder Swinging Frame Adjusting Thumbscrew | 32 |
| 15498 L | Grinder Swinging Frame Stop Pin- - - - - | 24 |
| 15498 P | Dust Guard, for knife grinder No. 52998 (screw No. 22570)- - - - - | 32 |
| 15872 F | Lifter Lever Spring, for styles in Classes 52800, 52900 - - - - - | 14 |
| 16194 | Presser Foot Yielding Section Spring, for Style 52800 K (attaching screw No. 605, adjusting screw No. 605 A) - - - - - | 7 |
| 20149 C | Knife Holder Clamp Plate Pin, for styles in Class 52900- - - - - | 13 |
| 21102 B | Elastic Band Holder Supporting Rod, 18 inches long, .250 inch diameter, for Styles 52700 G, 52700 H; also Edging Spool Holder Supporting Rod for Style 52800 G- - - - - | 42 |
| 21104 A | Thread Stand Base; also elastic band support base (screw No. 22509) - - - - - | 42 |
| 21104 B-11 | Thread Stand Rod, 11 inches long - - - - - | 36 |
| 21104 B-20 | Elastic Band Holder Supporting Rod, 20 inches long, for Styles 52700 G, 52700 H | 36 |
| 21113 A | Thread Stand Wire Extension, 6 inches long, (set screw No. 22632 F-24) - - - - - | 24 |
| 21113 B | Thread Stand Wire Coupling (screw No. 88)- - - - - | 19 |
| 21130 A-3 | Thread Stand Seat, 3 spools- - - - - | 42 |
| 21130 A-4 | " " " 4 spools- - - - - | 42 |
| 21130 A-5 | " " " 5 spools- - - - - | 42 |
| 21130 A-6 | " " " 6 spools- - - - - | 42 |
| | " " " Seat Set Screw No. 69 FD | |
| 21145 | Cone, wood, for thread stand - - - - - | 34 |
| 21169 D | Split Tube Border Holder Assembly, for Styles 52800 E, 52800 F, 52800 H, 52800 K; one each Nos. 88, 161, 21169 E, 21169 F (Specify component parts in ordering)- - - | 42 |
| 21169 E | Split Tube Border Holder Disc- - - - - | 42 |
| 21169 F | " " " " Base- - - - - | 42 |
| 21177 A | Elastic Band Holder Spring Tension Collar, for Styles 52700 G, 52700 H (wing screw No. 22647 K-16)- - - - - | 33 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 21178 A | Elastic Band Holder Disc, 11 inches diameter, for Styles 52700 G, 52700 H- - - - - | 42 |
| 21182 AA | Intermittent Strip Tension Assembly, for Style 52800 E; one each Nos. 188 D, 1349, 11663, 21182 AB, 21182 AC, 21182 AD, 21182 AE, 21182 AF, 22504 B, 22561, 22760, 22845 E, 23439 C; two each Nos. 402, 21185 (attaching screws No. 22548)- - - - - | 35 |
| 21182 AB | Intermittent Strip Tension Base (screw No. 22548) - - - - - | -- |
| 21182 AC | Intermittent Strip Tension Operating Lever (pivot stud No. 22504 B, stop screw No. 402) -- | -- |
| 21182 AD | Intermittent Strip Tension Operating Arm (pivot screw No. 22760)- - - - - | -- |
| 21182 AE | Intermittent Strip Tension Adjustable Strip Guide (screw No. 22561)- - - - - | -- |
| 21182 AF | Intermittent Strip Tension Plate (locating screw No. 22845 E) - - - - - | -- |
| 21185 | Intermittent Strip Tension Spring Nut- - - - - | 12 |
| 21198 B | Split Tube Border Measuring Gauge Brace, for Style 52800 E (screw No. 94) - - - - - | -- |
| 21198 E | Split Tube Border Measuring Gauge Assembly, for Style 52800 E; one each Nos. 94, 21198 B, 21198 F, 21198 G, 21198 H; two each Nos. 21198 J, 22756 (screw No. 25 S) - - - - - | 35 |
| 21198 F | Split Tube Border Measuring Gauge Base - - - - - | -- |
| 21198 G | Split Tube Border Measuring Gauge Slide, front (thumbscrew No. 22756, nut No. 21198 J)- - - - - | -- |
| 21198 H | Split Tube Border Measuring Gauge Slide, rear, (thumbscrew No. 22756, nut No. 21198 J)- - - - - | -- |
| 21198 J | Split Tube Border Measuring Gauge Slide Lock Nut- - - - - | 12 |
| 21201 | Screw Driver, 9/64 inch round blade, length overall 7 5/8 inches - - - - - | 37 |
| 21202 | Screw Driver, 7/32 inch round blade, length overall 11 1/4 inches- - - - - | 37 |
| 21203 | Screw Driver, 13/64 inch round blade, length overall 15 1/2 inches- - - - - | 37 |
| 21204 | Screw Driver, 9/32 inch round blade, length overall 15 inches- - - - - | 37 |
| 21205 A | Screw Driver, 3/8 inch round blade, length overall 14 inches- - - - - | 37 |
| 21207 | Screw Driver, 7/64 inch round blade, length overall 2 1/2 inches - - - - - | 34 |
| 21208 | Screw Driver Set, three detachable blades- - - - - | 37 |
| 21210 | Looper Collar, .040 inch thick - - - - - | 13 |
| 21210 A | " " .020 inch thick - - - - - | 13 |
| 21211 | " " .054 inch thick - - - - - | 13 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------------|--|--------------|
| 21215 C | Edging Spool Holder Assembly, for Style 52800 G; one each Nos. 752, 753, 21102 B; two each Nos. 81, 751 A, 21216, 21217, 21217 A, 22728 and five No. 188 D. (Specify component parts in ordering)- - - | 41 |
| 21216 | Edging Spool Holder Upright Rod, for Style 52800 G- - - - - | 36 |
| 21217 | Edging Spool Holder Support Base, for Style 52800 G- - - - - | 40 |
| 21217 A | Edging Spool Holder Pin Support, for Style 52800 G; also elastic band holder pin support, for Styles 52700 F, 52700 G, 52700 H- - - - - | 19 |
| 21225-3/16 | Looper Adjusting Gauge, 3/16 inch measure- ment - - - - - | 14 |
| 21225-7/32 | Looper Adjusting Gauge, 7/32 inch measure- ment - - - - - | 14 |
| 21225-1/4 | Looper Adjusting Gauge, 1/4 inch measurement | 14 |
| 21227 B-8 | Spreader Gauge, for adjusting spreader on styles in Class 52900- - - - - | 14 |
| 21227 C-8 | Spreader Gauge, for adjusting spreader on No. 8 gauge two needle styles in Class 52800- - - - - | 14 |
| 21227 C-12 | Spreader Gauge, for adjusting spreader on No. 12 gauge two needle styles in Class 52800- - - - - | 14 |
| 21227 C-14 | Spreader Gauge, for adjusting spreader on No. 14 gauge three needle styles in Class 52800- - - - - | 14 |
| 21227 C-16 | Spreader Gauge, for adjusting spreader on No. 16 gauge three needle styles in Class 52800- - - - - | 14 |
| 21227 R | Gauge, for synchronizing looper and needle motions on machines equipped with throat plates 2 1/4 inches long; component parts are shipped in leather case- - - - - | 29 |
| 21227 V | Gauge, for setting height of spreader and presser foot on styles in Classes 52800 and 52900- - - - - | 14 |
| 21227 AC | Gauge, for synchronizing looper and needle motions on machines equipped with throat plates 3 1/8 inches long; component parts are shipped in leather case- - - - - | 29 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 21227 HH | Porcelain Eyelet Replacement Tool Set, for assembling 1/16 inch internal diameter porcelain eyelets No. 668-7 and aluminum ferrules No. 668-12 in tension thread eyelet assembly. | |
| 21231 D | Ferrules should always be replaced- - - Thread Meter, for recording the consumption of thread in 1/10 yards as it passes into the sewing machine- - - - - | 29 |
| 21233 D | Light Fixture Assembly, including bulb, table mounting, for machines driven by "Electro Drive" - - - - - | 39 |
| 21233 N | Connector, with BX cable for D.C. "Electro Drives" - - - - - | --- |
| 21233 P | Connector, with BX cable for single and three phase A.C. "Electro Drives" - - - - - | --- |
| 21236 | Belt Plier, for 3/8 inch and smaller round belting - - - - - | 40 |
| 21260 | Emery Cord, 3/64 inch diameter, grade No. 120, fifty yard spool - - - - - | --- |
| 21260 A | Emery Cord, 3/64 inch diameter, grade No. 150, fifty yard spool - - - - - | --- |
| 21260 B | " " 1/32 inch diameter, grade No. 180, fifty yard spool - - - - - | --- |
| 21260 C | " " .025 inch diameter, grade No. 200, fifty yard spool - - - - - | --- |
| 21260 D | " Tape, 3/32 inch wide, grade No. 180, fifty yard spool - - - - - | --- |
| 21260 E | " Cord, .018 inch diameter, grade No. 200, fifty yard spool - - - - - | --- |
| 21261 | Leather Belt, flat, 1 inch wide, 63 inches long, includes belt fastener No. 21350 - - - - - | --- |
| 21262 | Leather Belt, round, 9/32 inch diameter, 44 inches long, includes wire belt hook No. 21351 - - - - - | --- |
| 21262 G-340 | "V" Belt, No. 2 size, 34 inches outside circumference - - - - - | 40 |
| 21262 G-350 | " " 35 inches outside circumference | 40 |
| 21262 G-370 | " " 37 inches outside circumference | 40 |
| 21262 G-380 | " " 38 inches outside circumference | 40 |
| 21300 C-5 3/4 | Carriage Bolt, countersunk head, 3/8 x 5 3/4 inches, for table tops- - - - - | --- |
| 21350 | Belt Fastener, malleable iron, for 1 inch flat belt - - - - - | 17 |
| 21351 | Belt Hook, wire, for 9/32 inch round belt | 17 |
| 21355 | Chair Leg Extension, 4 inches long- - - - - | 34 |
| 21371 Q | Table Drawer- - - - - | --- |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 21371 BR-42 | Table Top, 42" x 16" x 1 3/4", prepared completely for group semisubmerged isolated installation of Styles 52700 A, 52700 B, 52700 G, 52700 H, 53500 C, 53500 D - - - - - | -- |
| 21371 BR-48 | Table Top, 48" long - - - - - | -- |
| 21371 BR-54 | " " 54" long - - - - - | -- |
| 21371 BR-60 | " " 60" long - - - - - | -- |
| 21371 BT-48 | Blank Table Top, 48" long - - - - - | -- |
| 21371 BT-54 | " " " 54" long - - - - - | -- |
| 21371 BT-60 | " " " 60" long - - - - - | -- |
| 21371 CT | Cap Nut, for isolated insulator on line assembly individual power table - - - - - | 12 |
| 21371 CU-42 | Table Top, 42" x 16" x 1 3/4", includes base plate No. 21680 AK, for semisubmerged isolated installation of styles in Classes 52800, 52900, Style 52700 F - - - | -- |
| 21371 CU-48 | Table Top, 48" long - - - - - | -- |
| 21371 CU-54 | " " 54" long - - - - - | -- |
| 21371 CU-60 | " " 60" long - - - - - | -- |
| 21371 CX-42 | Table Top, 42" x 16" x 1 3/4", includes base plate No. 21680 AK, for nonsubmerged isolated installation of styles in Classes 52700, 52800, 52900 - - - - - | -- |
| 21371 CX-48 | Table Top, 48" long - - - - - | -- |
| 21371 CX-54 | " " 54" long - - - - - | -- |
| 21371 CX-60 | " " 60" long - - - - - | -- |
| 21371 FQ-42 | " " 42" x 16" x 1 3/4" for line assembly nonsubmerged isolated installations - - - - - | -- |
| 21371 FQ-48 | " " 48" long - - - - - | -- |
| 21371 FQ-54 | " " 54" long - - - - - | -- |
| 21371 FQ-60 | " " 60" long - - - - - | -- |
| 21371 FR-42 | Table Top 42" x 16" x 1 3/4", for line assembly semisubmerged isolated installations of Styles 52700 A, 52700 B, 52700 G, 52700 H, 53500 C, 53500 D- - - - - | -- |
| 21371 FR-48 | Table Top, 48" long - - - - - | -- |
| 21371 FR-54 | " " 54" long - - - - - | -- |
| 21371 FR-60 | " " 60" long - - - - - | -- |
| 21373 A-5 | General Utility Individual Power Table, for nonsubmerged installations of machines equipped with "Electro Drive", 1/2 H.P. A.C. 1 phase, 60 cycles, 105-115 volts, 3400 R.P.M. - - - - - | -- |
| 21373 A-5 D | For 1/2 H.P., A.C., 1 phase, 60 cycles, 220 volts, 3450 R.P.M.- - - - - | -- |
| 21373 A-7 | For 1/2 H.P., A.C., 3 phase, 60 cycles, 105-115 volts, 3500 R.P.M.- - - - - | -- |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 21373 A-7 B | For 1/2 H.P., A.C., 3 phase, 60 cycles, 210-230 volts, 3500 R.P.M. - - - - - | -- |
| 21373 A-7 D | For 1/2 H.P., A.C., 3 phase, 60 cycles, 440 volts, 3500 R.P.M. - - - - - | -- |
| 21373 A-8 | For 1/2 H.P., D.C., 105-115 volts, 3000 R.P.M. - - - - - | -- |
| 21373 A-8 A | For 1/2 H.P., D.C., 210-230 volts, 3000 R.P.M. - - - - - | -- |
| 21375 AH | Pulley Guard, machine mounting (screw No. (93) - - - - - | 40 |
| 21377 AK | Tray, 4 1/32" high, hinged body and front section, for nonsubmerged isolated installations of Styles 52700 A, 52700 B, 52700 G, 52700 H - - - - - | 43 |
| 21377 AL | Tray, 2 9/32" high, hinged body and front section, for semisubmerged isolated installations of Styles 52700 A, 52700 B, 52700 G, 52700 H - - - - - | 43 |
| 21377 AN | Tray, 2 9/32" high, hinged body, for semisubmerged isolated installations of styles in Class 53500- - - - - | 43 |
| 21377 AR | Tray, 2 15/32 inches high, hinged body, for semisubmerged isolated installation of styles in Class 52900 - - - - - | 43 |
| 21388 | Wrench, single end, 3/8 inch opening - - - | 34 |
| 21388 N | " double end, 3/16 and 5/16 inch openings - - - - - | 34 |
| 21388 R | " double end, 3/8 and 1/2 inch openings - - - - - | 34 |
| 21388 W | " double end, curved, 9/32 inch opening- - - - - | 34 |
| 21388 X | " for main shaft bearing housing - - | 42 |
| 21388 Z | Wrench, for setting needle lever stud with respect to oil groove, Stud is set correctly when the pin hole nearest the periphery is up and a line drawn between the two pin holes is 45 degrees to the right of the vertical- - - - - | 34 |
| 21388 AE | Socket Wrench Assembly, for 9/32 inch and 3/8 inch hexagonal nuts, for looper lever ball stud locking stud and tilting feed mechanism - - - - - | 34 |
| 21394 | Utility Grinder, including emery wheel, 5 inches diameter, 1/4 inch face, round belt drive, recommended speed 3000 R.P.M. - - - - - | -- |
| 21394 G | Emery Wheel, 5 inches diameter, 1/4 inch face, 3/8 inch hole, grade "M" emery 60 | -- |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 21394 H | Emery Wheel, 5 inches diameter, 1/2 inch face, 3/8 inch hole, grade "M" emery 60 - - - - | -- |
| 21394 K | Utility Grinder, including emery wheel, 5 inches diameter, 1/2 inch face, round belt drive, recommended speed 3000 R.P.M. - - - - | -- |
| 21629 | Screw, for chip guard tension spring on styles in Class 52900 - - - - - | 9 |
| 21657-3 | Tension Release Disc Separator, for Styles 52700 A, 52700 B, 52700 H, 52800 E, 52800 F, 52800 G, 52800 H, 52800 J- - - - - | 22 |
| 21657-4 | Tension Release Disc Separator, for styles in Class 53500, Styles 52700 F, 52700 G, 52800 B, 52800 D, 52800 K - - - - - | 22 |
| 21657-5 | Tension Release Disc Separator, for styles in Class 52900 - - - - - | 22 |
| 21657 A | Tension Release Rock Shaft, for styles in Classes 52700, 52800, 52900 - - - - - | 23 |
| 21657 B | Tension Release Rock Shaft Connection (clamp screw No. 22585)- - - - - | 19 |
| 21657 C | Tension Release Rock Shaft Lever, for styles in Classes 52700, 52800, 52900 (clamp screw No. 22596, stud No. 22594)- - - - - | 22 |
| 21657 D | Tension Release Rock Shaft Lever Link, for styles in Class 52700 (stud No. 22515)- - - - - | 22 |
| 21657 E | Tension Release Disc Separator Washer; also for No. 53541 H - - - - - | 13 |
| 21657 F | Tension Release Rock Shaft, for styles in Class 53500 - - - - - | 23 |
| 21657 G | Tension Release Rock Shaft Lever, for styles in Class 53500 (clamp screw No. 22596, stud No. 22594)- - - - - | 22 |
| 21657 H | Tension Release Rock Shaft Connection Link, for styles in Class 53500 (stud No. 22515) - - - - - | 22 |
| 21657 J | Tension Release Rock Shaft Lever Link, for styles in Classes 52800, 52900 (stud No. 22515)- - - - - | 22 |
| 21661 | Knee Press Shaft, for Style 53500 C - - - - - | 40 |
| 21662 | " " Shaft Hanger - - - - - | 40 |
| 21664 | " " Plate (set screw No. 69 FD)- - - - - | 40 |
| 21665 | " " " Rod Connection (screw No. 69 FD) - - - - - | 40 |
| 21677 | " " Bell Crank Arm - - - - - | 40 |
| 21679 | " " Pitman Lever - - - - - | 40 |
| 21680 AK | Base Plate, for nonsubmerged and semisubmerged installations on six isolators - - - - | 41 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 21691 | Knee Press Assembly, for Style 53500 C; also for operating intermittent strip tension on Style 52800 E; one each Nos. 421 C-10, 660-128, 21661, 21662, 21664, 21677, 21679, 28505; two each Nos. 9271 21665. | |
| 21697 C | (Specify component parts in ordering) - - - - - Belt Take-up Assembly, for "V" belt on "Electro Drive" installations- - - - - | 40 39 |
| 21698-2 | Vibration Insulator, two inches long, for tables - - - - - | 33 |
| 21698-4 | Vibration Insulator, four inches long- - - - - | 33 |
| 21698-5 | " " five inches long- - - - - | 33 |
| 21698-6 | " " six inches long - - - - - | 33 |
| | Note: Special lengths will be furnished on request. Part of the table leg is shown in the illustration for clarity | |
| 21745 B | Wing Nut, for ruffler indexed segment clamp sleeve stud on Style 53500 D - - - - - | 12 |
| 21745 D | Thumbscrew, for ruffler adjusting lever stop on Style 53500 C - - - - - | 11 |
| 22504 B | Pivot Stud, for intermittent strip tension operating lever on Style 52800 E - - - - - | 9 |
| 22509 | Set Screw, square head, cup point, 5/16 inch diameter, 18 threads per inch, 1/2 inch long, for thread stand base- - - - - | 11 |
| 22513 | Screw, for presser bar connection guide plate | 9 |
| 22514 | " 7/16 inch long, for cloth plate attachments - - - - - | 10 |
| 22515 | Stud, for tension release rock shaft lever link - - - - - | 10 |
| 22516 | Screw, for feed rocker segment slot plate on styles in Class 52800, Style 52700 F; also for No. 52971 A- - - - - | 10 |
| 22517 C | Screw, 5/16 inch long, for supplementary tension stud on styles in Classes 52800, 52900 | 10 |
| 22519 | Set Screw, hexagonal head, for needle lever ball stud- - - - - | 9 |
| 22521 | Screw, plus size, for cloth plate (tap No. V118)- - - - - | 10 |
| 22525 A | Screw, for supplementary face place on styles in Class 53500 - - - - - | 9 |
| 22528 | Screw, for feed dog on styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H; also for Nos. 23306 U, 23306 X, 52857 - - - - - | 10 |
| 22539 C | Plug Screw, for cloth plate on Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 11 |
| 22541 | Clamp Screw, for ruffler operating lever on styles in Class 53500- - - - - | 11 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 22548 | Screw, lower, for auxiliary cloth plate on styles in Class 53500; also for Nos. 21182 AA, 21182 AB, 23439 B, 53541- - - - - | 10 |
| 22559 A | Bearing Screw, lower, for looper drive connection- - - - - | 10 |
| 22559 B | Bearing Screw, upper, for looper drive connection- - - - - | 11 |
| 22559 C | Bearing Screw, for ruffler eccentric connection on styles in Class 53500- - - - - | 11 |
| 22560 | Screw, for needle lever link pin spring; also for No. 52842 - - - - - | 9 |
| 22560 B | Set Screw, headless, for feed bars; also for No. 39143 G - - - - - | 9 |
| 22561 | Screw, for cloth plate cover locating spring on styles in Class 52900; also for Nos. 21182 AE, 23133 L, 23133 M, 23306 Q, 52730 K, 52730 L, 52830 B, K53464, 53530 F - - - - - | 9 |
| 22562 | Screw, for folder swinging arm latch on styles in Class 52800, Style 52700 F - - - - - | 9 |
| 22566 A | Stud, for lifter lever- - - - - | 11 |
| 22567 | Screw, for folder support bracket on Styles 52800 E 52800 F, 52800 H, 52800 K - - - - - | 10 |
| 22568 | Screw, for lower knife holder block on styles in Class 52900; also for No. 23306 A- - - - - | 10 |
| 22569 | Screw, for feed crank link; also for Nos. 29132 M, 51245, 53554 D - - - - - | 11 |
| 22570 | Screw, fillister head, for throat plates; also for No. 15498 P - - - - - | 9 |
| 22571 | Plug Screw, for frame thread eyelet hole on Styles 52700 A, 52700 B, 53500 D- - - - - | 10 |
| 22571 A | Plug Screw, for spring pressed felt wick on main shaft bearings and main shaft oil reservoir - - - - - | 10 |
| 22574 | Screw, for throat plate support on styles in Classes 52800, 52900, Style 52700 F - - - - - | 10 |
| 22580 | Set Screw, for needles on Styles 52700 A, 52700 B, 52700 H, 53500 C, 53500 D; also for Nos. 29132 M, 39143 G, 52723 A, 52823, 52923 | 9 |
| 22585 | Clamp Screw, for tension release rock shaft connection; also for Nos. 52894 J, 52943 A, 52943 B, 52998 B- - - - - | 9 |
| 22585 B | Screw, for needle guard on styles in Classes 52900, 53500- - - - - | 10 |
| 22586 | Plug Screw, for ruffler eccentric bearing on styles in Class 53500 - - - - - | 9 |
| 22586 B | Plug Screw, for sight feed oiler hole on Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 9 |
| 22587 | Screw, for spreader eccentric bearing on styles in Classes 52800, 52900 - - - - - | 11 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------------|---|--------------|
| 22588 A | Screw, for lower knife clamp plate on styles in Class 52900- - - - - | 10 |
| 22591 | Set Screw, for knife grinder swinging frame on knife grinder No. 52998 - - - - - | 9 |
| 22593 | Screw, for main feed dog on styles in Class 52800, Style 52700 F; also for Nos. 39237 D, 51104 D, 51158 D, 52730 B, 52845, 52845 A - - - - - | 9 |
| 22594 | Stud, for tension release rock shaft lever | 10 |
| 22596 | Clamp Screw, for tension release rock shaft lever; also for No. 53541 H- - - - - | 11 |
| 22597 | Spot Screw, for pulleys- - - - - | 10 |
| 22597 A | Set Screw, for pulleys; also for No. 51242 A | 10 |
| 22599 | Pivot Screw, for chip guard on styles in Class 52900- - - - - | 9 |
| 22632 F-24 | Screw, square head, cup point, 3/16 inch diameter, 3/8 inch long, 24 threads per inch, for thread stand wires - - - - - | 9 |
| 22647 K-16 | Wing Screw, 1/4 inch long, for elastic band holder spring tension collar on Styles 52700 G, 52700 H - - - - - | 10 |
| 22703 | Thumbscrew, for regulating elastic band ten- sion on Styles 52700 F, 52700 G, 52700 H, 52800 G- - - - - | 10 |
| 22711 | Screw, for looper thread guard on styles in Class 53500; also for No. 243- - - - - | 9 |
| 22716 | Screw, for looper drive eccentric oil disc; also for No. K54742- - - - - | 9 |
| 22716 A | Screw, for looper drive eccentric oil disc washer; also for No. 52816 F - - - - - | 9 |
| 22726 | Pivot Screw, for hemmer swinging arm on Style 52700 B- - - - - | 10 |
| 22726 A | Screw, for cloth plate cover spring on styles in Class 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 9 |
| 22728 | Thumbscrew, for edging spool holder pin on Styles 52700 F, 52700 G, 52700 H, 52800 G | 11 |
| 22730 | Screw, for cloth plate on styles in Class 53500; also for Nos. 51758 A, 53595 E- - - | 10 |
| 22733 A | Plug Screw, for hole in top of bed on styles in Classes 52800, 52900, Style 52700 F - - | 10 |
| 22735 | Pivot Screw, for edge guide on Styles 52700 F, 52800 G - - - - - | 10 |
| 22738 | Stop Screw, for presser foot yielding sec- tion on Style 52700 F- - - - - | 9 |
| 22743 | Screw, for differential feed bar guide on styles in Class 52800, Style 52700 F - - - | 9 |
| 22747 | Screw, for spreader connecting rod ball joint stud fork on styles in Classes 52800, 52900 - - - - - | 9 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 22756 | Thumbscrew, for split tube border measuring gauge slide on Style 52800 E - - - - - | 10 |
| 22760 | Pivot Screw, for intermittent strip tension operating arm on Style 52800 E - - - - - | 9 |
| 22764 | Spot Screw, for ruffler adjusting segment lever clamping plate on Style 53500 C- - - - | 9 |
| 22764 A | Spot Screw, for take-up on styles in Class 53500- - - - - | 9 |
| 22768 | Screw, for needle bar and needle lever thread eyelets; also for Nos. 51134, 51134 A, 51236 B, 52958, 53548 G, K54900- - - - - | 9 |
| 22769 | Screw, for crank chamber oil tube clamp- - - - | 10 |
| 22788 | Screw, for upper knife holder rocker arm bracket on styles in Class 52900 - - - - - | 11 |
| 22795 | Stitch Regulating Screw- - - - - | 10 |
| 22799 A | Hinge Screw, length overall 33/64 inch, diameter .088 inch, for presser foot bottom on No. 16-8 gauge Style 52900 B - - - - - | 10 |
| 22799 B | Hinge Screw, length overall 19/32 inch, diameter .088 inch, for presser foot bottom on Styles 52700 F, 52800 E, 52800 F, 52800 H, 53500 C, 53500 D - - - - - | 10 |
| 22799 F | Hinge Screw, length overall 5/16 inch, for presser foot bottom on No. 5-8 gauge styles in Class 52900; also for No. 53553 R - - - - | 9 |
| 22799 N | Screw, for cloth plate slide No. 51202; also for Nos. 52802 A, 52971 H- - - - - | 9 |
| 22801 | Stop Screw, for stitch regulating screw; also for Nos. 51225, 52925- - - - - | 9 |
| 22811 | Clamp Screw, for spreader rock shaft adjusting segment lever on styles in Classes 52800, 52900- - - - - | 11 |
| 22812 | Screw, for knife positioning lever on knife grinder No. 52998 (washer No. 39198 A) - - - | 10 |
| 22813 | Screw, headless, for lifter treadle pin- - - - | 9 |
| 22823 A | Screw, 11/16 inch long, hexagonal head, for attaching machine to base plate No. 21680 AK | 11 |
| 22823 B | Screw, 1 9/32 inches long, hexagonal head, for attaching machine to base plate No. 21680 AK | 11 |
| 22829 | Locking Screw, for looper rocker cone nut- - - | 9 |
| 22830 | Screw, for knife holder guide collar on styles in Class 52900 - - - - - | 9 |
| 22834 | Screw, for regulating needle guards on styles in Classes 52900, 53500- - - - - | 9 |
| 22837 | Thumbscrew, for face plate - - - - - | 10 |
| 22839 | Screw, fillister head, for throat plate support on Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 10 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 22840 | Adapter Screw, for frame needle thread eyelet on styles in Classes 52800, 52900, 53500, Styles 52700 F, 52700 G - - - - - | 10 |
| 22840 A | Screw, for regulating presser foot bottom on Styles 52700 F, 53500 C, 53500 D- - - - - | 10 |
| 22841 B | Cloth Plate Supporting Stud, for styles in Classes 52800, 52900, Style 52700 F - - - - - | 33 |
| 22841 C | Cloth Plate Supporting Stud, for styles in Class 53500 - - - - - | 33 |
| 22845 A | Stop Screw, for ruffler indexed segment on Style 53500 D - - - - - | 9 |
| 22845 B | Hinge Screw, for presser foot bottom front section on styles in Class 53500 - - - - - | 9 |
| 22845 E | Screw, for intermittent strip tension plate on Style 52800 E - - - - - | 9 |
| 22848 | Screw, for end cover hinge bracket on styles in Classes 52800, 52900, Style 52700 F; also for Nos. 539, 51491 A, 51758, 51958 B, 52957- - - | 10 |
| 22849 | Screw, right, for upper crank chamber oil reservoir- - - - - | 10 |
| 22863 | Adjusting Screw, for feed dog holder on styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H - - - - - | 9 |
| 22864 | Needle Lever Link Pin Clamp Screw (nut No. 51250 C)- - - - - | 11 |
| 22865 | Stud, 1 7/16 inches long, for left rock shaft bearing on styles in Classes 52800, 52900, 53500 - - - - - | 11 |
| 22865 A | Stud, 1 7/16 inches long, for right rock shaft bearing - - - - - | 11 |
| 22867 | Screw, for ruffler adjusting segment lever sliding block on Style 53500 C (nut No. 12934 A)- - - - - | 10 |
| 22872 | Screw, for spreader adjusting segment lever and rock shaft cover on styles in Classes 52800, 52900; also for No. 52855 - - - - - | 10 |
| 23133 L | Edge Guide, 3/64 inch capacity for body of garment on Style 52800 F (screw No. 22561) - - - | 21 |
| 23133 M | Edge Guide, 3/32 inch capacity for body of garment on Styles 52800 H, 52800 K (screw No. 22561)- - - - - | 21 |
| 23144 A | Spring Washer, for folder swinging arm on styles in Class 52800, Style 52700 F- - - - - | 13 |
| 23195 | Edge Guide, for Style 52800 D (screw No. 187 A) | 16 |
| 23254 | Folder, for making 11/32 inch belt loops on No. 16 gauge Style 52700 A, uses strip 7/8 inch wide- - - - - | 21 |
| 23254 C | Folder, for making 9/32 inch belt loops on No. 12 gauge Style 52700 A, uses strip 11/16 inch wide- - - - - | 21 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 23254 K-1/2 | Folder, for making 1/2 inch belt loops on Style 52700 A, uses strip 1 inch wide - - Folder Screw No. 25 C | 21 |
| 23279 D | Folder Threader - - - - - | 22 |
| 23306 A | Elastic Guide, for Styles 52700 F, 52700 G, 52700 H (screw No. 22568) - - - - - | 22 |
| 23306 L | Elastic Guide and Tension Support Assembly, for Styles 52700 G, 52700 H; one each Nos. 25 CC, 22568, 23306 A, 23306 M (screw No. 90) - - - - - | 35 |
| 23306 M | Elastic Guide and Tension Support, for Styles 52700 F, 52700 G, 52700 H; also Edging Guide and Tension Support for Style 52800 G (screw No. 90) - - - - - | 22 |
| 23306 Q | Edging Guide, for Style 52800 G (screw No. 22561) - - - - - | 22 |
| 23306 R | Edging Guide and Tension Assembly, for Style 52800 G (adjustable guide No. 15180 B, adjustable guide screw No. 187 A, tension regulating screw No. 22703, tension regulating screw lock nut No. 907, set screw No. 25 CC) - - - - - | 35 |
| 23306 S | Elastic Guide and Tension Assembly, for Style 52700 H (adjustable guide No. 23306 T, adjustable guide screw No. 25 B, tension regulating screw No. 22703, tension regulating screw lock nut No. 907, set screw No. 25 CC) - - - - - | 35 |
| 23306 T | Adjustable Elastic Guide, for Style 52700 H (screw No. 25 B) - - - - - | 22 |
| 23306 U | Elastic Guide and Tension Assembly Brace, for Style 52700 H (screw No. 22528) - - - | 22 |
| 23306 V | Elastic Guide and Tension Assembly, for Style 52700 G (adjustable guide No. 23306 W, adjustable guide screw No. 25 B, tension regulating screw No. 22703, tension regulating screw lock nut No. 907, set screw No. 25 CC) - - - - - | 35 |
| 23306 W | Adjustable Elastic Guide, for Style 52700 G (screw No. 25 B) - - - - - | 22 |
| 23306 X | Elastic Guide and Tension Assembly Brace, for Style 52700 G (screw No. 22528) - - - | 22 |
| 23405 M | Folder, swing out type, for turning edge of garment upwardly, 1/8 inch fold, 1/16 inch capacity on Styles 52700 G, 52700 H (pivot screw No. 22726, spring washer No. 12957 E, attaching screw No. 25 C) - - - - | 21 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 23406 K-1/2 | Folder, 3/64 inch strip capacity, for attaching split tube borders on Style 52800 F, 1/2 inch finish, strip cut 1 inch wide- | 35 |
| 23406 K-1 | Folder, for 1 inch finish, strip cut 2 inches wide- | 35 |
| 23406 L-1/2 | Folder, 1/32 inch strip capacity, for attaching split tube borders on Style 52800 E, 1/2 inch finish, strip cut 1 inch wide- | 35 |
| 23406 L-5/8 | Folder, for 5/8 inch finish, strip cut 1 1/4 inches wide- | 35 |
| 23406 L-3/4 | Folder, for 3/4 inch finish, strip cut 1 1/2 inches wide- | 35 |
| 23406 M-5/8 | Folder, 3/64 inch strip capacity, for attaching split tube borders on Style 52800 F, 5/8 inch finish, strip cut 1 1/4 inches wide- | 35 |
| 23406 M-3/4 | Folder, for 3/4 inch finish, strip cut 1 1/2 inches wide- | 35 |
| 23425 U | Folder Attaching Screw No. 25 CC Washer Plate, for cloth plate attachments on styles in Class 53500 - | 21 |
| 23425 V | Washer Plate, for folder support on Styles 52800 E, 52800 F, 52800 H, 52800 K - | 21 |
| 23432 | Folder Clamp, for Styles 52800 E, 52800 F, 52800 H, 52800 K (screw No. 25 S)- | 22 |
| 23439 B | Pin Tension Assembly, for Styles 52800 F, 52800 H, 52800 K (attaching screw No. 22548) - | 35 |
| 23439 C | Pin Tension Adjustable Pin, for Styles 52800 E, 52800 F, 52800 H, 52800 K (thumbscrew No. 188 D) - | 35 |
| 23440 | Hemmer Assembly, for hemming bath robes on Style 52700 B; one each Nos. 22726, 23440 A, 23440 B, 23440 C, 23440 D; two No. 187 A (attaching screw No. 25 C). (Specify component parts in ordering)- | -- |
| 23440 A | Hemmer Base (attaching screw No. 25 C) - | 21 |
| 23440 B | Hemmer Swinging Arm (pivot screw No. 22726) | 21 |
| 23440 C | Hemmer Blade, adjustable (screw No. 187 A) | 21 |
| 23440 D | Hemmer Scroll Guide (screw No. 25 C) - | 21 |
| 23442 A | Folder, upper, for attaching ruffles to lace curtains on styles in Class 53500 (screw No. 90) - | 21 |
| 23443 A | Folder, lower, for attaching ruffles to lace curtains on styles in Class 53500 (screw No. 25 C) - | 21 |
| 28505 | Knee Press Pitman Lever Spring, for Styles 52800 E, 53500 C - | 33 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 28604 | Transmitter Lubricant, No. 3 Arctic Cup Grease, 5 lb. package - - - - - | |
| 28606-1/2 | Powdered Oil Stone, 1/2 lb. package - - - - - | |
| 28606-1 | " " " 1 lb. package - - - - - | |
| 28705 | "Electro Drive", 1/2 H.P., A.C., 1 phase, 60 cycles, 105-115 volts, 3400 R.P.M. - - - - - | |
| 28705 D | "Electro Drive", 1/2 H.P., A.C., 1 phase, 60 cycles, 220 volts, 3450 R.P.M. - - - - - | |
| 28707 B | "Electro Drive", 1/2 H.P., A.C., 3 phase, 60 cycles, 210-230 volts, 3500 R.P.M. - - - - - | |
| 28707 D | "Electro Drive", 1/2 H.P., A.C., 3 phase, 60 cycles, 440 volts, 3500 R.P.M. - - - - - | |
| 28708 | "Electro Drive", 1/2 H.P., D.C., 105-115 volts, 3000 R.P.M. - - - - - | |
| 28708 A | "Electro Drive", 1/2 H.P., D.C., 210-230 volts, 3000 R.P.M. - - - - - | |
| 29066 F | Needle Lever Connecting Rod Upper Bearing Assembly; one each Nos. 51216 A, 51243 B lapped together - - - - - | |
| ‡29105 K | Looper Drive Eccentric Assembly, internal and external oiling, includes eccentric No. 52840 G, for styles in Classes 52700, 52800, 52900 (set screw No. 98, spot screw No. 96, bearing screw, upper, No. 22559 B, bearing screw, lower, No. 22559 A) - - - - - | 27 |
| ‡29105 L | Looper Drive Eccentric Assembly, internal and external oiling, includes eccentric No. 51243 P, for styles in Class 53500 (set screw No. 98, spot screw No. 96, bearing screw, upper, No. 22559 B, bearing screw, lower, No. 22559 A) - - - - - | 27 |
| ‡29114 B | Ruffler Eccentric Assembly, for styles in Class 53500; includes eccentric No. 53551 A (spot screw No. 81, set screw No. 95, bearing screw No. 22559 C) - - - - - | 27 |
| ‡29126 AK | Spreader Eccentric Assembly, for styles in Classes 52800, 52900, includes eccentric No. 52851 B (set screw No. 95, bearing screw No. 22587) - - - - - | 27 |
| ‡29132 M | Knife Eccentric Assembly, for styles in Class 52900, includes eccentric No. 52975 (set screw No. 22580, spot screw No. 96, shim No. 52974 G, clamp screw No. 22569) - - - - - | 27 |

‡See Page 10

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plate illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 29192 | Looper Rocker Assembly, for styles in Classes 52700, 52800; one each Nos. 51213, 15465 F, 51745 lapped together; also one each Nos. 258 A, 22829 and two No. 88- - - - - | 27 |
| 29192 F | Looper Rocker Assembly, for styles in Class 53500; one each Nos. 53513, 15465 F, 51745 lapped together; also one each Nos. 258 A, 22829 and two No. 88 - - - - - | 27 |
| 29192 G | Looper Rocker Assembly, for styles in Class 52900; one each Nos. 52913, 15465 F, 51745 lapped together; also one each Nos. 258 A, 22829 and two No. 88 - - - - - | 27 |
| 29264 S-16 | Needle Bar Assembly, for No. 16 gauge Styles 52700 G, 52800 B, 52800 D, 52800 K | -- |
| 29264 S-5-8 | Needle Bar Assembly, for No. 5-8 gauge styles in Class 52900; one each Nos. 52917-8, 52918-5-8- - - - - | -- |
| 29402 | Lifter Treadle Assembly; one each Nos. 422, 423, 424, 22813 - - - - - | 39 |
| 29435 C | Cloth Plate Cover and Chip Guard Assembly, for styles in Class 52900; one each Nos. 52978 A-8, 356, 8372 A, 12934 A, 22561, 22599, 52978 N, 52981 A, 52981 G, 52981 P | 31 |
| 35149 C | Looper Connecting Rod Ball Stud Washer, for styles in Class 53500 - - - - - | 13 |
| 35582 B | Supplementary Tension Disc Thread Guide, for spreader thread on styles in Classes 52800, 52900- - - - - | 15 |
| 35731 A | Presser Bar Connection Guide Plate (screw No. 22513)- - - - - | 18 |
| 35733 B | Presser Spring Regulating Screw Lock Nut- - | 12 |
| 35741 A | Looper Connecting Rod, for styles in Classes 52700, 52800, 52900 (nut, right thread, No. 18, nut, left thread No. 269) | 24 |
| 35755 E | Ruffler Eccentric Connecting Rod Ball Stud Washer, for Style 53500 D - - - - - | 13 |
| 35759 | Needle Bar Connection - - - - - | 20 |
| 35766 | Screw, for lower knife holder block on styles in Class 52900; also for No. 53552 C - - - - - | 11 |
| 35768 A | Screw, left, for crank chamber oil reservoir; also for No. 52887- - - - - | 9 |
| 35772 D | Stop Pin, for edge guide on Styles 52700 F, 52800 G - - - - - | 13 |
| 35788 B | Crank Chamber Oil Reservoir Cover (screw No. 605)- - - - - | 29 |
| 35833 A | Presser Spring Regulating Stud (nut No. 258 A)- - - - - | 19 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 35833 C | Presser Spring Plate - - - - - | 26 |
| 39132 V | End Cover Hinge Pin, for styles in Classes 52800, 52900, Style 52700 F- - - - - | 13 |
| 39135 | Feed Bar Shaft, 2 inches long (set screw No. 77)- - - - - | 24 |
| 39142 Q | Ruffler Blade Holder Pin, for styles in Class 53500 (clamp screw No. 75, clamp screw nut No. 907) - - - - - | 13 |
| 39143 G | Knife Holder Rocker Arm Shaft (plug screw No. 22580, set screw No. 22560 B)- - - - - | 24 |
| 39193 | Crank Chamber Oil Reservoir Sight Gauge Assembly; one each Nos. 660-92, 660-93, 666-49, 39193 A, 39193 B - - - - - | 17 |
| 39193 A | Crank Chamber Oil Reservoir Sight Gauge Glass Tube Cover - - - - - | 17 |
| 39193 B | Crank Chamber Oil Reservoir Sight Gauge Base | -- |
| 39198 D | Knife Positioning Lever Spring Washer, for knife grinder No. 52998- - - - - | 13 |
| 39236 A | Differential Feed Regulating Stud Washer, for styles in Class 52800, Style 52700 F; also for Nos. 51225, 52925- - - - - | 13 |
| 39236 B | Differential Feed Regulating Stud (nut No. 907) - - - - - | 13 |
| 39236 C | Differential Feed Regulating Stud Stop - - - - - | 12 |
| 39236 U | Differential Feed Driving Link - - - - - | 20 |
| 39236 V | Differential Feed Control Rear Lever Link Bushing- - - - - | 16 |
| 39237 | Differential Feed Bar Guide (screw No. 22743) | 20 |
| 39237 D | Differential Feed Bar Guide Plate (screw No. 22593) - - - - - | 18 |
| 39237 G | Differential Feed Bar Bushing- - - - - | 16 |
| 41043 D | Ruffler Eccentric Connecting Rod Ball Joint Assembly, for Style 53500 D (screw No. 97 A) | 20 |
| 41071 G | Nut, for oil tube brace on styles in Classes 52700, 52800, 52900- - - - - | 12 |
| 41076 D | Needle Bar Thread Eyelet, for spreader thread on styles in Classes 52800, 52900 (screw No. 73 A)- - - - - | 15 |
| 41255 B | Spreader Rock Shaft Connecting Rod Ball Joint Stud Fork, for styles in Classes 52800, 52900 (screw No. 22747)- - - - - | 20 |
| 43266 | Spreader Thread Tension Post Nut, for styles in Classes 52800, 52900; also upper needle thread tension post nut for Styles 52700 F, 52700 G, 52800 B, 52800 D, 52800 K - - - - - | 12 |
| 43281 K | Folder Swinging Arm Spring, for styles in Class 52800, Style 52700 F (screw No. 90)- - - - - | 14 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 43281 L | Folder Swinging Arm Latch, for styles in Class 52800, Style 52700 F (screw No. 22562) - - - - - | 13 |
| 43294 A | Oil Drain Support- - - - - | 38 |
| 43294 D | " " Pipe, 3 inches long- - - - - | 33 |
| 43294 E-108 | Oil Drain Pipe, 6 3/4 inches long, for machines installed on table tops ranging from 2 1/4 to 5 inches thick - - - - - | 33 |
| K44956 | Feed Dog, for making 1/2 inch belt loops on No. 12 gauge Style 52700 A (screw No. 22528) - - - - - | -- |
| 51104 D | Cast-off Guide Wire, for styles in Class 53500 (screw No. 22593)- - - - - | 25 |
| ‡51134 | Feed Bar, including tiltable feed dog holder, for styles in Class 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H (set screw No. 22560 B, feed dog supporting screw No. 538, feed dog holder adjusting screw No. 22863, link pin screw No. 22768) - - - - - | 28 |
| ‡51134 A | Feed Bar, including tiltable feed dog holder, for styles in Class 52900 (set screw No. 166, feed dog supporting screw No. 538, feed dog holder adjusting screw No. 22863, link pin screw No. 22768) - - - - - | 28 |
| 51134 G | Feed Dog Holder, tiltable (nut No. 258 A, washer No. 6042 A) - - - - - | 16 |
| 51147 | Main Shaft Collar (screw No. 95) - - - - - | 12 |
| 51158 D | Looper Thread Take-up Eyelet, for styles in Class 53500 (screw No. 22593)- - - - - | 15 |
| 51170 C | Needle Thread Take-up Post, for styles in Class 53500; Styles 52700 A, 52700 B, 52700 H- - - - - | 19 |
| 51170 D | Needle Thread Take-up Post Lock Nut- - - - - | 12 |
| 51201 B | Cloth Plate, for Styles 52700 A, 52700 B, using throat plates 3 1/8 inches long (screw No. 80) - - - - - | 41 |
| 51202 | Cloth Plate Slide, rear, 1 1/2 inches long, for styles in Class 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H (stop screw No. 22799 N) - - - - - | 26 |
| 51213 | Looper Rocker, for styles in Classes 52700, 52800 - - - - - | 27 |
| ‡51215 A | Needle Lever, steel, for styles in Classes 52800, 52900, Styles 52700 A, 52700 B, 52700 G, 52700 H (set screw for link pin No. 77)- - - - - | 38 |

‡See Page 10

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| ‡51215 B | Needle Lever, lynite, for styles in Class 53500, Style 52700 F (clamp screw for link pin No. 22864, clamp screw nut No. 51250 C) | 38 |
| 51216 | Needle Lever Connecting Rod Tube (nut, left thread, No. 15430 C, nut, right thread, No. 15430 D- - - - -) | 24 |
| ‡51216 A | Needle Lever Connecting Rod Upper Bearing (screw No. 97 A) - - - - - | 27 |
| 51221 | Pulley, working diameter 2 1/2 inches, for styles in Class 53500 (spot screw No. 22597, set screw No. 22597 A)- - - - - | 33 |
| 51222 | Main Shaft, left section, for styles in Classes 52700, 52800, 53500- - - - - | 36 |
| ‡51222 B | Crankshaft Assembly, for styles in Classes 52700, 52800, 52900, includes crankshaft No. 51222 A (bearing screw No. 75 A) - - - - - | 36 |
| 51225 | Needle Guard, for styles in Class 53500 (attaching screw No. 22585 B, washer No. 39236 A) - - - - - | 8 |
| 51235 | Feed Rocker, for styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H (screw No. 98) - - - - - | 28 |
| 51235 A | Feed Rocker Arm, for styles in Classes 52900, 53500, Styles 52700 A, 52700 B, 52700 G, 52700 H (clamp screw No. 93) - - - - - | 28 |
| 51235 B | Feed Rocker Shaft, 4 7/16 inches long, for styles in Class 53500; Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 24 |
| 51236 | Feed Crank Link (oil wick No. 666-19, shim No. 1248, screw No. 22569, nut No. 7947) - - - - - | 20 |
| 51236 A | Feed Crank Link Pin (screw No. 77) - - - - - | 13 |
| 51236 B | Stitch Regulating Stud Cap (screw No. 22768) | 18 |
| 51236 C | Feed Crank Stud (nut No. 269)- - - - - | 20 |
| 51240 A | Looper Connecting Rod, adjusting section, for styles in Class 53500; also ruffler eccentric connecting rod, lower, for Style 53500 C (nut, right thread, No. 18, nut, left thread, No. 269)- - - - - | 13 |
| 51240 C | Upper Knife Spring, for styles in Class 52900; also for No. 53545 - - - - - | 14 |
| ‡51241 D | Looper Connecting Rod Ball Joint Assembly, left (bearing screw No. 97 A)- - - - - | 20 |
| ‡51242 A | Looper Drive Lever Shaft, 4 9/16 inches long, with bushing (screw No. 22597 A) - - - - - | 23 |
| 51242 B | Looper Drive Lever Shaft Bushing, rear, for Styles 52700 A, 52700 B, 52700 G, 52700 H- - - - - | 18 |
| 51242 C | Looper Drive Lever Bushing - - - - - | 18 |
| 51242 E | Looper Drive Lever, lynite, for styles in Class 53500- - - - - | 28 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------------|---|--------------|
| 51243 B | Needle Lever Ball Stud; also looper drive lever ball stud on styles in Class 53500 (set screw, hexagonal head, No. 22519)- - - | 20 |
| 51243 C | Looper Drive Lever Ball Stud Guide Fork; also for No. 51243 B (screw No. 97)- - - - - | 20 |
| 51243 K | Looper Drive Eccentric Oil Disc (screw No. 22716)- - - - - | 29 |
| 51243 L | Looper Drive Eccentric Oil Disc Gasket- - - - | 29 |
| 51243 N | Looper Drive Eccentric Oil Disc Washer, steel (screw No. 22716 A) - - - - - | 29 |
| 51243 R | Looper Drive Eccentric Oil Pad Clip - - - - - | 17 |
| 51244 | Looper Rocker Frame, for styles in Classes 52700, 52800, 52900 (spot screw No. 96, set screw No. 98) - - - - - | 27 |
| 51244 A | Looper Rock Shaft - - - - - | 24 |
| 51244 B | " " " Arm (clamp screw No. 93)- - - | 20 |
| 51244 C | Looper Rock Shaft Sleeve, for styles in Classes 52700, 52800 (screw No. 88 B) - - - | 18 |
| 51244 E | Looper Rock Shaft Bushing - - - - - | 18 |
| 51245 | Looper Avoid Eccentric Link and Feed Lift Eccentric Link (shim No. 51245 A, screw No. 22569, nut No. 7947)- - - - - | 20 |
| 51245 A | Looper Avoid Eccentric Link Oil Retaining Pad | 12 |
| 51246 | Looper Rocker Stud Nut- - - - - | 12 |
| 51250 | Needle Lever Stud (screw No. 719) - - - - - | 23 |
| 51250 B | " " Thrust Collar (screw No. 719)- - - | 18 |
| 51250 C | Needle Lever Link Pin Clamp Screw Nut, for styles in Class 53500, Style 52700 F- - - - | 12 |
| 51254 | Needle Bar Bushing, upper - - - - - | 18 |
| 51254 A | " " " lower - - - - - | 18 |
| 51280 A | Throat Plate Support, for Styles 52700 G, 52700 H, using throat plates 2 1/4 inches long (screw No. 80) - - - - - | 37 |
| 51280 K | Dowel Pin, for main shaft oil gauge assembly | 13 |
| 51281-157 | Cloth Plate Cover, 4 59/64 inches long, for styles in Class 53500 - - - - - | 37 |
| 51281-226 | Cloth Plate Cover, 7 1/16 inches long, for Styles 52700 A, 52700 B - - - - - | 37 |
| 51281-233 | Cloth Plate Cover, 7 9/32 inches long, for Styles 52700 G, 52700 H - - - - - | 37 |
| 51281 F | Cloth Plate Cover Spring (screw No. 22726 A) | 26 |
| 51282 | Louver Cover (screw No. 90) - - - - - | 26 |
| 51282 B | Face Plate, for styles in Class 53500, Styles 52700 A, 52700 B (thumbscrew No. 22837) - - | 31 |
| 51282 H | Crank Chamber Oil Reservoir Gasket- - - - - | 26 |
| 51282 J | Crank Chamber Oil Reservoir, including tubes and sight gauge No. 39193, for styles in Class 52700 (attaching screw, right, No. 22849, attaching screw, left, No. 35768 A) | 36 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 51283 | Lifter Lever, for styles in Classes 52700, 53500 (stud No. 22566 A)- - - - - | 41 |
| 51283 A | Lifter Lever Spring, for styles in Classes 52700, 53500- - - - - | 14 |
| 51283 B | Lifter Lever Spring Pin, for styles in Classes 52700, 53500- - - - - | 13 |
| 51290 | Main Shaft Bushing, inner, left, 3/4 inch long- - - - - | 18 |
| 51290 D | Main Shaft Bushing, left, 3/4 inch long - - | 18 |
| 51290 E | " " " middle- - - - - | 18 |
| ‡51290 N | Main Shaft Bushing Housing, includes bushing, for styles in Class 52700- - - - - | 36 |
| 51291 | Looper Thread Guard, for styles in Class 53500 (screw No. 22711) - - - - - | 31 |
| 51292 | Tension Post- - - - - | 15 |
| 51292 A | " " Ferrule- - - - - | 12 |
| 51292 C | " Regulating Nut- - - - - | 12 |
| 51292 D | " Thread Eyelet, for styles in Classes 52700, 52800, 52900 - - - - | 15 |
| 51292 E | " Thread Eyelet, for styles in Class 53500 - - - - - | 15 |
| 51292 F-1 | " Spring, .016 inch diameter wire, for looper threads- - - - - | 14 |
| 51292 F-2 | " Spring, .022 inch diameter wire, for looper threads; also spreader thread on styles in Class 52800 - - | 14 |
| 51292 F-4 | " Spring, .026 inch diameter wire, for needle threads; also spreader thread on styles in Class 52900 - - | 14 |
| 51292 F-5 | " Spring, .031 inch diameter wire, for needle threads- - - - - | 14 |
| 51292 F-8 | " Spring, .037 inch diameter wire, for needle threads- - - - - | 14 |
| 51293 A | Crank Chamber Oil Tube, for outer right main shaft bearing on styles in Classes 52700, 52800, 52900 - - - - - | 24 |
| 51293 B | Crank Chamber Oil Tube Clamp, for styles in Classes 52700, 52800, 52900 (screw No. 22769)- - - - - | 17 |
| 51293 K | Crank Chamber Oil Tube, for inner left main shaft bearing on styles in Class 53500- - | 29 |
| 51294 A | Oil Drain Clamp Spring- - - - - | 38 |
| 51295 | Isolated Insulators, for "II" installation | 17 |
| 51296 | Machine Base Dowel Pin, front - - - - - | 17 |
| 51296 A | Machine Base Dowel Pin, rear- - - - - | 17 |
| 51301 A | Cloth Plate, for Styles 52700 G, 52700 H, using throat plate 2 1/4 inches long (screw No. 80)- - - - - | 41 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 51321 A | Pulley, working diameter 2 1/2 inches, for styles in Classes 52700, 52800, 52900 (spot screw No. 22597, set screw No. 22597 A) - - | 33 |
| 51430 F | Presser Foot Regulating Screw Lock Nut, for Styles 52700 F, 53500 C, 53500 D- - - - - | 12 |
| 51458 | Needle Lever Thread Eyelet, for Styles 52700 A, 52700 B, 52700 H, 52800 E, 52800F, 52800 G, 52800 H, 52800 J (screw No. 22768) | 15 |
| 51458 A | Needle Bar Thread Eyelet, for styles in Class 53500, Styles 52700 A, 52700 B, 52700 H, 52800 E, 52800 F, 52800 G, 52800 H, 52800 J (screw No. 22768, lock washer No. 652 C-9) | 15 |
| 51480 | Throat Plate Support, for Styles 52700 A, 52700 B, using throat plates 3 1/8 inches long (screw No. 22839)- - - - - | 37 |
| 51491 A | Looper Thread Guard, for Styles 52700 A, 52700 B, 52700 G, 52700 H (screw No. 22848) | 31 |
| ‡51741 B | Looper Connecting Rod Ball Joint Assembly, right, for styles in Classes 52700, 52800, 52900 (bearing screw No. 97 A)- - - - - | 20 |
| ‡51743 B | Main Oil Reservoir, for styles in Class 53500 (screw No. 93)- - - - - | 41 |
| 51745 | Looper Rocker Cone Stud - - - - - | 20 |
| 51758 | Frame Needle Thread Eyelet, intermediate, for styles in Classes 52800, 52900 (attaching screw No. 22848, adapter screw No. 22840, washer No. 20)- - - - - | 15 |
| 51758 A | Frame Needle Thread Guide, for Style 52700 F (screw No. 22730) - - - - - | 15 |
| 51773 | Looper Rocker Frame Spacing Collar, for styles in Class 53500 - - - - - | 12 |
| K51893 | Presser Foot, for No. 16 gauge Style 52700 H (clamp screw No. 91 - - - - -) | -- |
| K51896 | Face Plate, for Styles 52700 G, 52700 H (thumb screw No. 22837) - - - - - | -- |
| 51958 | Needle Lever Thread Eyelet, for Styles 52700 F, 52700 G, 52800 B, 52800 D, 52800 K, 52900 A, 52900 B (screw No. 22768) | 15 |
| 51958 A | Needle Bar Thread Eyelet, for Styles 52700 F, 52700 G, 52800 B, 52800 D, 52800 K, 52900 A, 52900 B (screw No. 22768, lock washer No. 652 C-9) - - - - - | 15 |
| 51958 B | Frame Needle Thread Eyelet, for Styles 52700 F, 52700 G (attaching screw No. 22848, adapter screw No. 22840, washer No. 20) - - - - - | 15 |
| 51959 B | Looper Thread Nipper Disc, for styles in Classes 52700, 52800- - - - - | 15 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 51959 C | Looper Thread Nipper Spring, for styles in Classes 52700, 52800 - - - - - | 14 |
| 51959 D | Looper Thread Nipper Stud Nut, for styles in Classes 52700, 52800- - - - - | 12 |
| 51959 E | Looper Thread Nipper Stud Spacing Collar, for styles in Classes 52700, 52800 - - - | 13 |
| K52499 | Table Top, 48" x 16" x 1 3/4", prepared completely for nonsubmerged group installations- - - - - | -- |
| 52705 G | Feed Dog, for Style 52700 G (screw No. 22528) - - - - - | 3 |
| 52708 A | Looper, for Styles 52700 A, 52700 B (set screw No. 73)- - - - - | 8 |
| 52710 | Looper Needle Guard, marked "AJ" for Styles 52700 A, 52700 B (screw No. 73 A) | 8 |
| 52710 F | Looper Needle Guard, for Styles 52700 F, 52800 K (screw No. 73 A) - - - - - | 8 |
| 52717 B-12 | Needle Bar, marked "BH-12", for No. 12 gauge Styles 52700 A, 52700 B, 52800 H, 52800 J (set screw No. 88 A) - - - - - | 23 |
| 52717 B-16 | Needle Bar, marked "BH-16", for No. 16 gauge Styles 52700 A, 52700 B, 52700 H (set screw No. 88 A) - - - - - | 23 |
| 52718-12 | Needle Holder, marked "F-12", for No. 12 gauge Styles 52700 A, 52700 B, 53500 C, 53500 D (spot screw No. 89, needle set screw No. 22580) - - - - - | 8 |
| 52720 B-12 | Presser Foot, for No. 12 gauge Style 52700 B (clamp screw No. 91, adjustable section No. 52730 B, adjustable section screw No. 22593) - - - - - | 5 |
| 52720 B-16 | Presser Foot, for No. 16 gauge Style 52700 B (clamp screw No. 91, adjustable section No. 52730 B, adjustable section screw No. 22593) - - - - - | 5 |
| 52720 F-12 | Presser Foot Assembly, for No. 12 gauge Style 52700 F; one each Nos. 52730 F-12, 57 WD, 91, 223 C, 22738, 22799 B, 22840 A, 51430 F, 52730 J, 52730 K, 52730 L, 52730 M, 52730 N; two No. 22561) - - - - - | 4 |
| 52720 G-16 | Presser Foot Assembly, for No. 16 gauge Style 52700 G; one each Nos. 52730 G-16, 57 WD, 91, 604, 15480 C, 52730, 52730 A, 52730 C- - - - - | 4 |
| 52720 H-8 | Presser Foot Assembly, for No. 8 gauge Style 52700 H; one each Nos. 52730 H-8, 57 WD, 91, 604, 15480 C, 52730, 52730 A, 52730 C- - - - - | 4 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52720 H-12 | Presser Foot Assembly, for No. 12 gauge Style 52700 H; one each Nos. 52730 H-12, 57 WD, 91, 604, 15480 C, 52730, 52730 A, 52730 C- - - - - | 4 |
| 52723 A | Shielded Disc Take-up, for Style 52700 F (spot screw No. 96, set screw No. 22580) | 25 |
| 52724 A-12 | Throat Plate, for No. 12 gauge Style 52700 A- - - - - | 1 |
| 52724 A-16 | Throat Plate, for No. 16 gauge - - - - - | 1 |
| 52724 B-12 | " " for No. 12 gauge Style 52700 B | 1 |
| 52724 B-16 | " " for No. 16 gauge - - - - - | 1 |
| | Throat Plate Screw No. 22570 | |
| 52724 F-12 | " " for No. 12 gauge Style 52700 F | 2 |
| 52724 G-16 | " " for No. 16 gauge Style 52700 G | 2 |
| 52724 H-8 | " " for No. 8 gauge Style 52700 H | 1 |
| 52724 H-12 | " " for No. 12 gauge- - - - - | 1 |
| | " " Screw No. 87 | |
| 52730 | Presser Foot Shank, for Styles 52700 G, 52700 H (clamp screw No. 91) - - - - - | -- |
| 52730 A | Presser Foot Adjustable Guide, for Style 52700 G; also for Nos. 8 and 12 gauge Style 52700 H (screw No. 604)- - - - - | 6 |
| 52730 B | Presser Foot Adjustable Section, for Style 52700 B (screw No. 22593)- - - - - | 7 |
| 52730 C | Presser Foot Adjustable Guide Roller, for Style 52700 G; also for Nos. 8 and 12 gauge Style 52700 H- - - - - | 7 |
| 52730 F-12 | Presser Foot Bottom, for No. 12 gauge Style 52700 F- - - - - | 6 |
| 52730 G-16 | Presser Foot Bottom, for No. 16 gauge Style 52700 G- - - - - | 6 |
| 52730 H-8 | Presser Foot Bottom, for No. 8 gauge Style 52700 H- - - - - | 6 |
| 52730 H-12 | Presser Foot Bottom, for No. 12 gauge- - - - - | 6 |
| 52730 J | Presser Foot Hinged Section, for Style 52700 F (pivot Screw No. 223 C)- - - - - | 6 |
| 52730 K | Presser Foot Adjustable Guide, left, for Style 52700 F (screw No. 22561)- - - - - | 7 |
| 52730 L | Presser Foot Adjustable Guide, right, for Style 52700 F (screw No. 22561)- - - - - | 7 |
| 52730 M | Presser Foot Bottom Spring, for Style 52700 F (stud No. 57 WD) - - - - - | 7 |
| 52730 N | Presser Foot Shank, for Style 52700 F (clamp screw No. 91) - - - - - | -- |
| 52742 A | Looper Drive Lever, for styles in Classes 52700, 52800, 52900- - - - - | 28 |
| 52770 A | Needle Thread Take-up, for Styles 52700 A, 52700 B, 52700 H (screw No. 90)- - - - - | 25 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52782 H | Crank Shaft Chamber Cover Oil Catch Plate, for styles in Class 53500 (screw No.187 A) | 26 |
| 52795 | Main Shaft Oil Gauge Assembly, for styles in Classes 52700, 53500; one each Nos. 52895 G, 660-92, 660-93, 660-94, 660-95, 51280 K- | 29 |
| 52801 | Cloth Plate, for styles in Class 52800, Style 52700 F (screw No. 80) | 41 |
| 52802 | Cloth Plate Sliding Cover, for styles in Class 52800, Style 52700 F | 26 |
| 52802 A | Cloth Plate Slide, rear, 1 3/4 inches long, for styles in Classes 52800, 52900, Style 52700 F (stop screw No. 22799 M) | 26 |
| 52804 | Cast-off Plate, for styles in Class 52800 (screw No. 28) | 25 |
| 52804 A | Cast-off Plate, for styles in Class 52700 (screw No. 28) | 25 |
| 52805 B | Main Feed Dog, for Style 52800 B | 3 |
| 52805 D-16 | " " " for Style 52800 D | 3 |
| 52805 E-8 | " " " for Style 52800 E | 3 |
| 52805 F-8 | " " " for Styles 52800 F, 52800 H | 3 |
| 52805 K | " " " for Style 52800 K " " " Screw No. 22593 | 3 |
| 52808 E | Looper, for styles in Class 52800, Styles 52700 F, 52700 G, 52700 H; also front looper for styles in Class 52900 (set screw No. 73) | 8 |
| 52810 E | Looper Needle Guard, for styles in Class 52800, Styles 52700 G, 52700 H (screw No. 73 A) | 8 |
| 52816 | Spreader Eccentric Connecting Rod, for styles in Classes 52800, 52900 (nut, left thread, No. 269, nut, right thread, No. 15430 D) | 24 |
| 52816 F | Spreader Eccentric Oil Retaining Disc (screw No. 22716 A) | 29 |
| 52817-12 | Needle Bar, marked "BD-12", for No. 12 gauge Style 52700 F | 23 |
| 52817-16 | Needle Bar, marked "BD-16", for No. 16 gauge Styles 52800 B, 52800 D, 52800 K | 23 |
| 52817 E-8 | Needle Bar, marked "BG-8", for No. 8 gauge Styles 52700 H, 52800 E, 52800 F, 52800 G | 23 |
| 52818-8 | Needle Bar Set Screw No. 88 A Needle Holder, for styles in Class 52800, Styles 52700 F, 52700 H (thread guide No. 52842 G, thread guide screw No. 28 B, needle holder set screw No. 88, needle set screw No. 88 B) | 8 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52820 G-8 | Presser Foot Assembly, for No. 8 gauge Style 52800 G (clamp screw No. 91, edging roller No. 3045, bottom spring No. 52830 G, spring stud No. 57 WD) - - - - - | 4 |
| 52820 H-12 | Presser Foot Assembly, for No. 12 gauge Style 52800 H; one each Nos. 52830 H-12, 73 A, 91, 605, 11534, 13130 B, 22561, 22799 B, 52830 A, 52830 B - - - - - | 4 |
| 52823 | Shielded Disc Take-up, for styles in Class 52800, Styles 52700 A, 52700 B, 52700 G, 52700 H (spot screw No. 96, set screw No. 22580)- - - - - | 25 |
| 52824 B-16 | Throat Plate, for No. 16 gauge Style 52800B | 2 |
| 52824 D-16 | " " for No. 16 gauge Style 52800D | 2 |
| 52824 E-8 | " " for No. 8 gauge Style 52800 E | 2 |
| 52824 F-8 | " " for No. 8 gauge Style 52800 F | 1 |
| 52824 F-12 | " " for No. 12 gauge Style 52800H | 1 |
| 52824 K-16 | " " for No. 16 gauge Style 52800K " " Screw No. 87 | 2 |
| 52826 G | Differential Feed Dog, for No. 8 gauge Style 52800 G (screw No. 90)- - - - - | 3 |
| 52826 K | Differential Feed Dog, for Style 52800 K (screw No. 90)- - - - - | 3 |
| 52830 A | Presser Foot Yielding Section, for No. 12 gauge Style 52800 H - - - - - | 6 |
| 52830 B | Presser Foot Adjustable Guide, for No. 12 gauge Style 52800 H (screw No. 22561) - - | 7 |
| 52830 G | Presser Foot Bottom Spring, for Style 52800 G (stud No. 57 WD)- - - - - | 7 |
| 52830 H-12 | Presser Foot Bottom, for No. 12 gauge Style 52800 H - - - - - | 6 |
| 52834 | Main Feed Bar, for styles in Class 52800, Style 52700 F (set screw No. 22560 B) - - | 28 |
| 52834 G | Differential Feed Bar, for styles in Class 52800, Style 52700 F- - - - - | 28 |
| 52834 N | Looper Drive Ball Joint Locking Stud Nut- - | 12 |
| 52836 | Feed Rocker, for styles in Class 52800, Style 52700 F (screw No. 89)- - - - - | 28 |
| 52836 C | Feed Rocker Arm, for styles in Class 52800, Style 52700 F (clamp screw No. 93)- - - - | 28 |
| 52836 G | Feed Rocker Segment Slot Plate, for styles in Class 52800, Style 52700 F (screw, upper, No. 22516, screw, lower, No. 75) | 28 |
| 52836 N | Feed Rocker Segment Slot Plate Shim, for styles in Class 52800, Style 52700 F- - - | 28 |
| 52841 | Looper Drive Ball Joint Locking Stud (washer No. 8372 A, nut No. 52834 N)- - - | 13 |
| 52842 | Needle Bar Spreader Thread Eyelet Support, for styles in Classes 52800, 52900 (screw No. 22560)- - - - - | 20 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52842 G | Needle Holder Needle Thread Guide, for styles in Classes 52800, 52900, Styles 52700 F, 52700 H (screw No. 28 B)- - - - - | 15 |
| 52844 A | Spreader Thread Guide, for styles in Classes 52800, 52900 (screw No. 90) - - - - - | 25 |
| 52845 | Spreader, for styles in Class 52900 (set screw No. 22593)- - - - - | 8 |
| 52845 A | Spreader, for styles in Class 52800 (set screw No. 22593)- - - - - | 8 |
| 52846 | Spreader Holder, for styles in Classes 52800, 52900 (set screw No. 88)- - - - - | 16 |
| 52847 | Spreader Holder Carrier and Lower Presser Bar Bushing, for styles in Classes 52800, 52900 | 28 |
| ‡52848 A | Spreader Connecting Rod Assembly, for styles in Classes 52800, 52900 (ball stud washer No. 36 G) - - - - - | 27 |
| 52848 G | Spreader Connecting Rod Guard (screw, upper, No. 90, screw, lower, No. 93 A) - - - - - | 31 |
| 52849 | Spreader Rock Shaft - - - - - | 36 |
| 52849 A | " " " Arm (clamp screw No. 93) | 30 |
| 52849 G | " " " Bearing, left (screw No. 22865 A)- - - - - | 28 |
| 52849 N | " " " Bearing, right (screw No. 22865)- - - - - | 28 |
| 52852 | Spreader Rock Shaft Adjusting Segment Lever (clamp screw No. 22811) - - - - - | 30 |
| 52852 G | Spreader Rock Shaft Segment Lever Guard (screw No. 22872) - - - - - | 26 |
| ‡52854 | Spreader Rock Shaft Connecting Rod Ball Joint Assembly (bearing screw No. 97 A) - - - - - | 20 |
| 52855 | Spreader Thread Take-up Eyelet (screw No. 22872)- - - - - | 25 |
| 52855 G | Spreader Thread Take-up (screw No. 95)- - - - - | 25 |
| 52857 | Cast-off Wire Support, for styles in Classes 52700, 52800 (screw No. 22528)- - - - - | 25 |
| 52864 | Cloth Plate Swinging Arm, for styles in Class 52800, Style 52700 F (pivot screw No. 236) | 41 |
| 52864 B | Cloth Plate Swinging Arm Platform, for Styles 52800 B, 52800 D, 52800 J - - - - - | 36 |
| 52864 C | Cloth Plate Swinging Arm Platform, for Styles 52700 F, 52800 G- - - - - | 36 |
| 52864 E | Cloth Plate Swinging Arm Platform, for Styles 52800 E, 52800 F, 52800 H, 52800 K- - - - - | 31 |
| 52864 G | Folder Swinging Arm Platform Screw No. 90 | |
| 52864 N | Cloth Plate Swinging Arm Base, for styles in Class 52800, Style 52700 F (screw No. 79) | 30 |
| | Folder Support Bracket, for Styles 52800 E, 52800 F, 52800 H, 52800 K (screw No. 22567) | 30 |

‡See Page 10

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| K52867 | Folder, 3/64 inch strip capacity, for attaching split tube borders on Style 52800 F, 7/8 inch finish, strip cut 1 3/4 inches wide (screw No. 25 CC)- - - - - | -- |
| 52880 | Throat Plate Support, for styles in Class 52800, Style 52700 F (screw No. 22574) - - - | 37 |
| ‡52882 | Crank Chamber Oil Reservoir, including tubes and sight gauge No. 39193, for styles in Classes 52800, 52900 (attaching screw, right, No. 22849, attaching screw, left, No. 35768A) | 36 |
| 52882 A | Face Plate, for styles in Class 52900, Styles 52800 B, 52800 D, 52800 E, 52800 F, 52800 H, 52800 J, 52800 K (thumbscrew No. 22837)- - - | 31 |
| 52882 B | Crank Chamber Cover, rear (screw No. 90) - - - | 26 |
| 52882 C | Face Plate, for Style 52800 G (thumbscrew No. 22837) - - - - - | 31 |
| 52882 D | Crank Chamber Oil Reservoir Cover Assembly; one each Nos. 666-50, 35788 B (screw No. 605) | 26 |
| 52883 | Lifter Lever, for styles in Classes 52800, 52900 (stud No. 22566 A) - - - - - | 41 |
| 52883 G | Presser Bar Lifter Bracket and Guide (screw No. 89)- - - - - | 25 |
| 52885 A | Cloth Plate End Cover, for styles in Classes 52800, 52900, Style 52700 F- - - - - | 41 |
| 52885 G | Cloth Plate End Cover Hinge, front, including pin (screw No. 22848)- - - - - | 19 |
| 52885 H | Cloth Plate End Cover Hinge, rear (screw No. 22848) - - - - - | 19 |
| 52887 | Cloth Plate End Cover Hinge Pin No. 39132 V | |
| 52887 | Presser Spring (locating screw No. 35768 A)- - | 23 |
| 52887 G | " " Rest- - - - - | 18 |
| 52888 | " Bar- - - - - | 24 |
| 52889 | " " Bushing, upper - - - - - | 18 |
| ‡52891 | Main Shaft Bushing Housing, includes bushing, for styles in Classes 52800, 52900 - - - - - | 36 |
| ‡52894 A | Main Oil Reservoir, for styles in Classes 52700, 52800 (screw No. 93)- - - - - | 41 |
| 52894 G | Main Oil Reservoir Cover, for styles in Classes 52700, 52800, 52900 (screw No. 87 A) | 35 |
| 52894 J | Oil Tube Brace, for styles in Classes 52700, 52800 (screw No. 22585, nut No. 41071 G) - - | 29 |
| 52894 Y | Oil Line "T" Coupling, for inner right main shaft bearing- - - - - | 29 |
| 52894 Z | Oil Tube, leading from oil gauge to right main bearing "T" coupling (coupling No. 61294 X) | 17 |
| 52895 | Main Shaft Oil Gauge Assembly, for styles in Classes 52800, 52900 (frame No. 52895 G, glass tube No. 660-94, cap No. 660-95, washer, upper, No. 660-92, washer, lower, No. 660-93)- - - - - | 29 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52895 G | Main Shaft Oil Gauge Frame- - - - - | -- |
| 52901 | Cloth Plate, for styles in Class 52900 (screw No. 80)- - - - - | 41 |
| 52904 | Cast-off Plate, for styles in Class 52900 (screw No. 28)- - - - - | 25 |
| 52909 A | Looper, rear, for No. 5-8 gauge styles in Class 52900 (set screw No. 73)- - - - - | 8 |
| 52913 | Looper Rocker, for styles in Class 52900- - - - - | 27 |
| 52917-8 | Needle Bar, for styles in Class 52900 (set screw No. 88 A) - - - - - | 23 |
| 52918-5-8 | Needle Holder, for No. 5-8 gauge styles in Class 52900 (thread guide No. 52842 G, thread guide screw No. 28 C, needle holder set screw No. 89, needle set screw, front, No. 88 B, needle set screw, rear, No. 28 C) - - - - - | 8 |
| 52920 A-5-8 | Presser Foot Assembly, for No. 5-8 gauge Style 52900 A; one each Nos. 91, 22799 F, 52930, 52930 A- - - - - | 5 |
| 52920 B-5-8 | Presser Foot Assembly, for No. 5-8 gauge Style 52900 B; one each Nos. 91, 605, 22799 F, 52930, 52930 B, 52930 C, 52930 D, 52930 E, 52930 F - - - - - | 5 |
| 52922 | Main Shaft, left section, for styles in Class 52900 - - - - - | 36 |
| 52923 | Shielded Disc Take-up, for styles in Class 52900 (spot screw No. 96, set screw No. 22580)- - - - - | 25 |
| 52925 | Needle Guard, for styles in Class 52900 (screw No. 22585 B, washer No. 39236 A) | 8 |
| 52926 A-5-8 | Feed Dog, for No. 5-8 gauge Styles 52900 A, 52900 B (screw No. 22528) - - - - - | 4 |
| 52928 A-5-8 | Throat Plate, for No. 5-8 gauge Styles 52900 A, 52900 B (screw No. 87))- - - - - | 2 |
| 52930 | Presser Foot Shank, for No. 5-8 gauge Styles 52900 A, 52900 B (clamp screw No. 91) - - - - - | -- |
| 52930 A | Presser Foot Bottom, for No. 5-8 gauge Style 52900 A (hinge screw No. 22799 F) | 6 |
| 52930 B | Presser Foot Bottom, for No. 5-8 gauge Style 52900 B (hinge screw No. 22799 F) | 6 |
| 52930 C | Presser Foot Needle Hole Section, for No. 5-8 gauge Style 52900 B - - - - - | 7 |
| 52930 D | Presser Foot Needle Hole Section Spring, for No. 5-8 gauge Style 52900 B - - - - - | 7 |
| 52930 E | Presser Foot Needle Hole Section Spring Spacing Sleeve, for No. 5-8 gauge Style 52900 A - - - - - | 7 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| 52930 F | Presser Foot Chain Cutting Knife, for Style 52900 B (screw No. 605)- - - - - | 7 |
| 52943 A | Oil Tube Brace, 1 5/8 inch centers, for styles in Class 52900 (screw No. 22585, nut No. 41071 G) - - - - - | 29 |
| 52943 B | Oil Tube Brace, 1 1/8 inch centers, for styles in Class 52900 (screw No. 22585, nut No. 41071 G) - - - - - | 29 |
| ‡52943 C | Main Oil Reservoir, for styles in Class 52900 (screw No. 93) - - - - - | 41 |
| 52944 G | Looper Rock Shaft Sleeve, for styles in Class 52900 (screw No. 88 B) - - - - - | 28 |
| 52949 | Lower Knife, double end, for styles in Class 52900- - - - - | 8 |
| 52950 | Lower Knife Holder (clamp screw No. 35766, adjusting screw No. 22568) - - - - - | 25 |
| 52950 G | Lower Knife Clamp Plate (screw No. 22588 A) | 18 |
| 52957 | Cast-off Wire Support, for styles in Class 52900 (screw No. 22848)- - - - - | 25 |
| 52958 | Looper Thread Cast-off Support Thread Eyelet, for No. 5-8 gauge styles in Class 52900 (screw No. 22768)- - - - - | 15 |
| 52970 A | Upper Knife, for styles in Class 52900 - - - | 8 |
| 52971 A | " " Holder (screw No. 22516)- - - - | 25 |
| 52971 H | " " Clamp Plate (screw No. 22799 N) | 18 |
| 52972 | " " Holder Guide Collar (screw No. 22830)- - - - - | 18 |
| 52973 A | " " Holder Rocker Arm (screw No. HA73 B) - - - - - | 30 |
| 52973 H | " " Holder Rocker Arm Bracket (screw No. 22788) - - - - - | 30 |
| 52974 G | " " Holder Rocker Arm Connecting Rod Shim- - - - - | 12 |
| 52978 A-8 | Chip Guard, flexible, for styles in Class 52900 (pivot screw No. 22599, tension spring No. 52978 N, tension spring screw No. 21629) - - - - - | 31 |
| 52978 N | Chip Guard Tension Spring (screw No. 21629) | 14 |
| 52980 | Throat Plate Support, for styles in Class 52900 (screw No. 22574)- - - - - | 37 |
| 52981 A | Cloth Plate Cover, for styles in Class 52900 | 31 |
| 52981 G | " " " Locking Spring- - - - - | 14 |
| 52981 P | Cloth Plate Cover Locking Spring Knob (nut No. 12934 A, washer No. 8372 A)- - - - - | 17 |
| 52992 | Tension Post Support, for styles in Class 52900- - - - - | 22 |
| 52994 | Knife Eccentric Oil Guard for styles in Class 52900 (screw No. 187 A)- - - - - | 26 |
| 52998 | Knife Grinder, complete, for knives Nos. 52949, 52970 A - - - - - | 32 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 52998 A | Knife Grinder Swinging Frame, for knife grinder No. 52998 (screw No. 22591) - - - | 32 |
| 52998 B | Knife Grinder Swinging Frame Top Plate (screw No. 22585) - - - - - | 32 |
| 52998 C | Knife Positioning Lever, for knife grinder No. 52998 (screw No. 22812) - - - - - | 19 |
| K53189 | Needle Thread Take-up, for styles in Class 53500 (screw No. 90) - - - - - | -- |
| K53259 | Elastic Guide and Tension Assembly, for Style 52700 F (tension regulating screw No. 22703, tension regulating screw lock nut No. 907, adjustable guide screw No. 187 A) - - - - - | -- |
| K53260 | Edge Guide, for Style 52700 F (pivot screw No. 22735, pivot screw washer No. 12957 E, adjustable section screw No. 357) | -- |
| K53273 | Folder, 1/16 inch strip capacity, for attaching collarettes on Styles 52800 H, 52800 K, 7/8 inch finish, strip cut 1 3/4 inches wide (attaching screw No. 25 CC) - - - - - | -- |
| K53274 | Folder, 1/16 inch strip capacity, for attaching collarettes on Styles 52800 H, 52800 K, 1 inch finish, strip cut 2 inches wide (attaching screw No. 25 CC) | -- |
| K53423 | Table Board, 48" x 16" x 1 3/4", includes base plate No. 21680 AK, prepared completely for semisubmerged isolated line assembly installation with "Electro Drive", for styles in Classes 52800, 52900, Style 52700 F - - - - - | -- |
| K53441 | Face Plate, for Style 52700 F (thumbscrew No. 22837) - - - - - | -- |
| K53464 | Needle Guard, attaches to under side of feed dog shank, for Style 52700 F (screw No. 22561) - - - - - | -- |
| 53501 | Cloth Plate, for styles in Class 53500 (screw, left, No. 22730, screw, right, No. 9663) - - - - - | 41 |
| 53501 C | Auxiliary Cloth Plate, for styles in Class 53500 (screw, lower, No. 22548, screw, upper, No. 80) - - - - - | 35 |
| K53501 | Folder, 3/64 inch strip capacity, for attaching split tube borders on Style 52800 E, 7/16 inch finish, strip cut 7/8 inch wide (screw No. 25 CC) - - - - - | -- |
| 53502 | Cloth Plate Slide, for styles in Class 53500 - - - - - | 26 |
| 53505 C-16 | Feed Dog, for No. 16 gauge styles in Class 53500 (screw No. 22528) - - - - - | 4 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 53508 C-16 | Looper, right, for No. 16 gauge styles in Class 53500 (set screw No. 73)- - - - - | 8 |
| 53509 C | Looper, left, for styles in Class 53500 (set screw No. 73)- - - - - | 8 |
| 53513 | Looper Rocker, marked "G" for styles in Class 53500 - - - - - | 27 |
| 53516 | Ruffler Eccentric Connecting Rod, upper, for Style 53500 C (nut, left thread, No. 37 L, nut, right thread, No. 37 R)- - - - | 24 |
| 53517 C-16 | Needle Bar, marked "AZ-16" for No. 16 gauge styles in Class 53500 (set screw No. 88 A) | 23 |
| 53520 C-16 | Presser Foot Assembly, for No. 16 gauge styles in Class 53500; one each Nos. 53530 A-16, 53530 B-16, 91, 187 B, 22561, 22799 B, 22840 A, 51430 F, 53530, 53530 E, 53530 F; two No. 22845 B - - - - | 5 |
| ‡53522 B | Crankshaft Assembly, for styles in Class 53500; includes crankshaft No. 53522 A (bearing screw No. 75 A)- - - - - | 36 |
| 53523 C | Single Disc Take-up, for styles in Class 53500 (spot screw No. 22764 A, set screw No. 89) - - - - - | 25 |
| 53524 C-16 | Throat Plate, for No. 16 gauge styles in Class 53500 (screw No. 22570) - - - - - | 2 |
| 53530 | Presser Foot Shank, for styles in Class 53500 (clamp screw No. 91)- - - - - | -- |
| 53530 A-16 | Presser Foot Bottom, rear section, for No. 16 gauge styles in Class 53500 (hinge screw No. 22799 B)- - - - - | 6 |
| 53530 B-16 | Presser Foot Bottom, front section, for No. 16 gauge styles in Class 53500 (hinge screw No. 22845 B)- - - - - | 6 |
| 53530 E | Presser Foot Edge Guide, for styles in Class 53500 (screw No. 187 B) - - - - - | 7 |
| 53530 F | Presser Foot Bottom Spring, for styles in Class 53500 (screw No. 22561) - - - - - | 7 |
| 53540 | Stripper Blade, for styles in Class 53500 (screw No. 25 B)- - - - - | 16 |
| 53541 | Stripper Blade and Folder Support, for styles in Class 53500 (screw No. 22548) | 30 |
| 53541 H | Stripper Blade and Folder Support Bracket, for styles in Class 53500 (screw No. 22596, washer No. 21657 E)- - - - - | 30 |
| 53541 N | Stripper Blade Washer Plate, for styles in Class 53500 - - - - - | 18 |
| 53542 | Looper Drive Lever Shaft Washer, for styles in Class 53500 - - - - - | 13 |
| 53543 C | Main Oil Reservoir Cover, for styles in Class 53500 (screw No. 87 A)- - - - - | 35 |

LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 53544 | Looper Rocker Frame, for styles in Class 53500 (spot screw No. 96, set screw No. 98) | 27 |
| 53544 A | Looper Rock Shaft Sleeve, for styles in Class 53500 (screw No. 88 B)- - - - - | 28 |
| ‡53545 | Looper Connecting Rod, jointed section and ball joint assembly, for styles in Class 53500 (ball stud washer No. 35149 C, bearing screw No. 97 A) - - - - - | 27 |
| 53546-16 | Ruffler Blade, for No. 16 gauge styles in Class 53500 (screw No. 28)- - - - - | 16 |
| 53547 | Ruffler Blade Tension Plate, for Style 53500C | 16 |
| 53548 | " " Holder, for styles in Class 53500 - - - - - | 16 |
| 53548 C | " " Holder Spring - - - - - | 14 |
| 53548 G | " " " " Connection (screw No. 22768)- - - - - | 16 |
| 53548 N | " " Operating Lever (spot screw No. 81, clamp screw No. 22541)- - - - - | 30 |
| 53548 P | " " Holder Tilting Lever (screw No. 73 A) - - - - - | 16 |
| 53548 S | " " Lifter (screw No. 28) - - - - - | 16 |
| 53549 | " Rock Shaft, for styles in Class 53500 | 36 |
| 53549 G | " " " Bearing, left (screw No. 22865 A)- - - - - | 28 |
| 53549 N | " " " Bearing, right (screw No. 22865)- - - - - | 28 |
| 53552 | " Adjusting Segment Lever, for Style 53500 C (clamp screw No. 74)- - - - - | 30 |
| 53552 C | " Adjusting Segment Lever Clamping Plate, for Style 53500 C (set screw No. 88, spot screw No. 22764, adjusting screw No. 35766)- - - - - | 30 |
| 53552 D | " Indexed Segment Guide Block, for Style 53500 D (clamp screw No. 136) | 30 |
| 53552 G | Ruffler Adjusting Segment Lever Sliding Block, for Style 53500 C (screw No. 22867, nut No. 12934 A)- - - - - | 25 |
| 53552 N | Ruffler Adjusting Segment Lever Clevis, upper, for Style 53500 C- - - - - | 16 |
| 53552 P | Ruffler Adjusting Segment Lever Clevis, lower | 16 |
| 53553 | Ruffler Adjusting Lever, for Style 53500 C (screw No. 97)- - - - - | 30 |
| 53553 D | Ruffler Indexed Segment, for Style 53500 D (stop screw No. 22845 A)- - - - - | 30 |
| 53553 G | Ruffler Adjusting Lever Stop Bracket and Index, for Style 53500 C (screw No. HA61 D) | 30 |
| 53553 R | Ruffler Adjusting Lever Stop Sleeve (stop screw No. 22799 F, thumbscrew No. 21745 D) | 16 |
| 53554 | Ruffler Adjusting Guide Plunger, for Style 53500 C - - - - - | 30 |


LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plate illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|--|-----------|
| 53554 D | Ruffler Adjusting Block, for Style 53500 C (clamp screw No. 22569)- - - - - | 30 |
| 53554 J | Ruffler Adjusting Block Pivot Pin Bushing (screw No. 97) - - - - - | 19 |
| 53556 C | Presser Bar Bushing, lower, for styles in Class 53500- - - - - | 18 |
| 53557 C | Cast-off Wire Support, for styles in Class 53500 (screw No. 79) - - - - - | 25 |
| 53558 | Needle Lever Thread Eyelet, for styles in Class 53500 (screw No. 22768)- - - - - | 15 |
| 53559 | Frame Looper Thread Eyelet, for styles in Class 53500 (screw No. 93 A) - - - - - | 25 |
| 53560 D | Ruffler Indexed Segment Clamping Sleeve, for Style 53500 D- - - - - | 18 |
| 53561 D | Ruffler Indexed Clamping Sleeve Stud - - - - - | 13 |
| 53580 | Throat Plate Support, for styles in Class 53500 (screw No. 80) - - - - - | 37 |
| ‡53582 A | Crank Chamber Oil Reservoir, including tubes and sight gauge No. 39193, for styles in Class 53500 (attaching screw, right, No. 22849, attaching screw, left, No. 35768 A) | 36 |
| 53582 G | Supplemental Face Plate, for styles in Class 53500 (screw, upper, No. 376, screw, lower, No. 22525 A) - - - - - | 31 |
| 53582 N | Crankshaft Chamber Cover, upper, rear, includes oil catch plate No. 52782 H for styles in Class 53500- - - - - | 26 |
| 53592 | Tension Post Support, for styles in Class 53500, Styles 52700 F, 52700 G, 52800 B, 52800 D, 52800 K - - - - - | 22 |
| 53593 A | Oil Tube, for right main shaft bearing and ruffler eccentric on styles in Class 53500 | 38 |
| 53593 B | Oil Tube Clamp, for styles in Class 53500 (screw No. 22769)- - - - - | 17 |
| 53595 D | Cover, for ruffler adjusting block pivot pin bushing hole on Style 53500 D (screw No. 87) | 19 |
| 53595 E | Cover, for ruffler adjusting segment lever slot on Style 53500 D (screw No. 22730)- - - | 26 |
| K53665 | Pulley, working diameter 2 1/2 inches, grooved for "V" belt (spot screw No. 22597, set screw No. 22597 A) - - - - - | -- |
| K53964 | Folder, 1/16 inch strip capacity, for attaching collarettes on Styles 52800 H, 52800 K, 1 1/4 inch finish, strip cut 2 1/2 inches wide (attaching screw No. 25 CC) - - - - - | -- |
| K54079 | Needle Bar, for No. 14 gauge Style 52800 K (set screw No. 88 A) - - - - - | -- |


‡See Page 10


LIST OF PARTS

| Symbol to Order by | The figures in the last column refer only to the plates illustrating the parts and are not to be used in ordering. Refer to pink insert for prices. | Plate No. |
|--------------------|---|-----------|
| K54080 | Presser Foot, for No. 14 gauge Style 52800 K (clamp screw No. 91, presser foot shank No. 13130 B, yielding section No. 13130 A, yielding section spring screw No. 605, hinge screw No. 22799 B - - - - -) | -- |
| K54081 | Throat Plate, for No. 14 gauge Style 52800 K (screw No. 87)- - - - - | -- |
| K54111 | Folder, 1/16 inch strip capacity, for attaching collarettes on Styles 52800 H, 52800 K, 3/4 inch finish, strip cut 1 1/2 inches wide (attaching screw No. 25 CC)- - - - - | -- |
| K54459 | Looper, for Style 52800 K; also front looper for No. 16-8 gauge Style 52900 B (set screw No. 73) - - - - - | -- |
| K54741 | Looper, back, for No. 16-8 gauge Style 52900 B (set screw No. 73)- - - - - | -- |
| K54742 | Needle Holder, for No. 16-8 gauge Style 52900 B (thread guide No. K55286, thread guide screw No. 28 C, needle holder set screw No. 89, needle set screw No. 88 B, needle stop plate screw No. 22716)- - - - - | -- |
| K54743 | Presser Foot, for No. 16-8 gauge Style 52900 B (clamp screw No. 91, shank No. 52930, needle hole section No. 52930 C, needle hole section spring screw No. 604, hinge screw No. 22799 A)- - - - - | -- |
| K54744 | Throat Plate, for No. 16-8 gauge Style 52900 B (screw No. 87)- - - - - | -- |
| K54745 | Feed Dog, for No. 16-8 gauge Style 52900 B (screw No. 22528) - - - - - | -- |
| K54758 | Table Top, 48" x 16" x 1 3/4", prepared completely for semisubmerged isolated group installation with "Electro Drive" for Styles 52700 A, 52700 B, 52700 G, 52700 H | -- |
| K54900 | Looper Thread Take-up Wire, for No. 16-8 gauge Style 52900 B (screw No. 22768) - - - - - | -- |
| K55286 | Needle Holder Thread Guide, for No. 16-8 gauge Style 52900 B (screw No. 28 C)- - - - - | -- |
| 61267 G | Lifter Lever Spring Pin, for styles in Classes 52800, 52900- - - - - | 13 |
| 61294 W | Oil Tube Coupling, for oil gauge tube and middle main bearing oil tube- - - - - | 17 |
| 61294 X | Oil Tube Coupling, for main oil reservoir - - - - - | 12 |

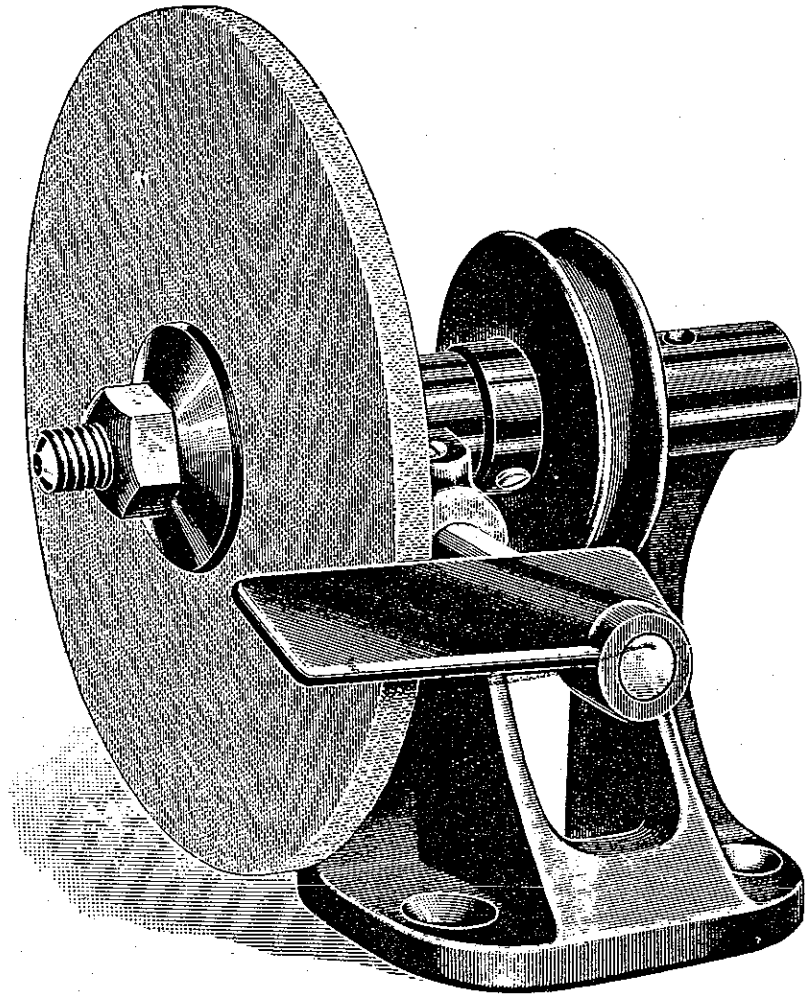

21394
Utility Grinder



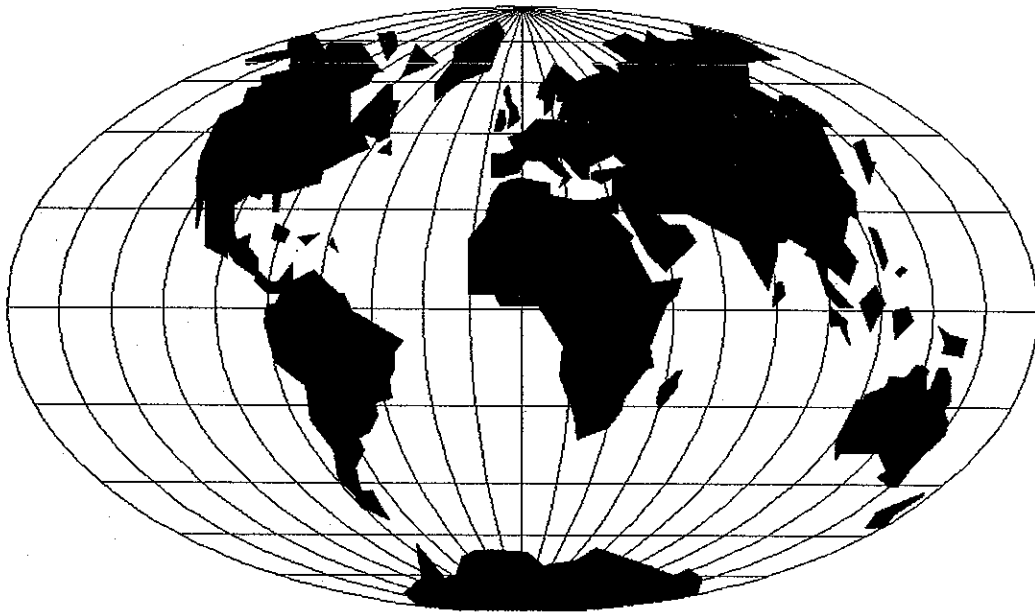

WORLDWIDE SALES AND SERVICE

Union Special Corporation maintains sales and service facilities throughout the world. These offices will aid you in the selection of the right sewing equipment for your particular operation. Union Special Corporation representatives and service technicians are factory trained and are able to serve your needs promptly and efficiently. Whatever your location, there is a qualified representative to serve you.

Corporate Office: One Union Special Plaza
Huntley, IL 60142
Phone: 847•669•5101
Fax: 847•669•1096

European Distribution Center: Union Special GmbH
Raiffeisenstrasse 3
D-71696 Möglingen, Germany
Tel: 49•07141•247•0
Fax: 49•7141•247•100

Brussels, Belgium
Charlotte, N.C.
El Paso, TX
Hong Kong, China
Huntley, IL
Leicester, England
Lille, France
Miami, FL
Milan, Italy
Möglingen, Germany
Montreal, Quebec
Osaka, Japan
Santa Fe Springs, CA

Other Representatives throughout
all parts of the world.


Finest Quality

Union Special
INDUSTRIAL SEWING EQUIPMENT